

3. Configuration

3.1 Set your Bluetooth headset to discoverable and connectable.
Note: Please refer to the user manual of the Bluetooth headset.

3.2 Start up BlueSoleil and VoIP plug-in.

Note: BlueSoleil and VoIP plug-in are set to start up with system by default.
Or on desktop, please click Start > Programs > IVT BlueSoleil > BlueSoleil/BlueSoleil VoIP Plugin.

3.3 Click OK to close update-checking tip message.



17

3.4 On the BlueSoleil main window, single-click the red central ball to search the Bluetooth headset. It'll be found and displayed as a headset device icon on the orbit.



18

3.5 Double click this headset icon to browse its service.

Note: A dialog will pop up to ask you input the passkey to make the relationship between BlueSoleil and the Bluetooth headset. You can find the passkey and the guide of the related operations in the user manual of the Bluetooth headset.



19

3.6 Right click the Bluetooth device icon and select Default Audio Device.



20

4 Receive a VoIP Call

4.1 An incoming VoIP call arrives, then the VoIP software rings. Meanwhile, BlueSoleil auto-connect to the headset or handsfree. You can hear the beep in the earpiece that indicates the incoming call.



4.2 Press the answer/call key on Bluetooth headset, then the ring stops and the call is started.

5 Receive a VoIP when listening stereo music

5.1 For some Bluetooth headset, you can find 2 services icons are highlighted after browsing its service. Besides receiving/sending the call, it supports listening stereo music wirelessly. In this case, when the VoIP call is coming, the stereo music can be paused and pick up the call.



Note: Please read the user manual of your Bluetooth headset to get more information about the related operations.

21

22

5.2 BlueSoleil connects to the A2DP service of the headphone to start listening stereo music.



23

5.3 An incoming VoIP call arrives, then the VoIP software rings, and the music pauses. BlueSoleil connects to the headset service of the headphone simultaneously, so you can hear the beep to indicate the incoming call.



24

6 Make a VoIP call

6.1 Click the service button of Audio Device, you could hear the headset rings, meanwhile there is a mute icon on its left hand corner.



6.2 Press the answer/call button on the headset, then the mute icon disappears.

6.3 Call your contacts.

Note:

1 You are unable to make calls with the headsets which don't support Handsfree profile.
2 After terminating the call, if you press the answer/call button on the headset, the mute icon will appear again and the headset will not ring if you make calls once more.

25

26

1.1 Start up BlueSoleil

1.2 On the BlueSoleil main window, single-click the red central ball to start searching the Bluetooth devices in range. They'll be found and displayed as various device icons on the orbit.



27

28

1.4 After the pairing procedure succeeds, a tick sign will appear beside the device icon. The available services icons will be highlighted.



1.5 Single click one of the highlighted service icons, BlueSoleil will establish a Bluetooth connection to the remote device. The device icon changes to green color and a line appears between the red ball and the device icon.



2 Notice for Windows 2000/XP

2.1 Installed devices:

- 11 Bluetooth Serial ports (e.g. COM3-COM13)
- Bluetooth PAN Network Adapter
- 4 Bluetooth virtual Modem
- Bluetooth AV Audio Device
- Bluetooth SCO Audio Device
- Bluetooth HID Enum device
- Bluetooth Vcomm Manager
- Bluetooth HID Manager

29

30

31