

User Manual

Model : 5B100-3



5" MID with 3D Video Player Function without Glasses
Ice Cream Sandwich Version

3DNURI Co., Ltd.

WWW.3DNURI.COM

The screen and the picture in the User's manual may differ from the actual.

Hello: Thank you for choosing the company produces the **Mobile Internet Device** (below **MID**) which is able to 3D Display, you can fully understand the use of the MID by reading this manual.,

Cautions and Warnings



Note : "Note" help you make better use of the MID.



Be careful : "Be careful" if instructions are not followed, there may be damage to hardware or loss of data.



Warning : "Warning" indicates a potential for property damage, personal injury, or death.

Remark : Google, Android, Android Market, Gmail, Google Calendar, Google Maps, Google Latitude, YouTube is trademarks or registered trademarks of Google Inc.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Directory

1. Safety Precautions-----	4
2. About your MID-----	5
3. Network Services-----	5
4. MID Components Description-----	6
5. Launch MID-----	7
5-1. Charging the MID-----	7
5-2. Turn on the MID-----	7
5-3. Turn off the MID-----	7
6. Know your MID-----	7
6-1 The main interface-----	8
6-2 Status Bar-----	10
7. Use MID-----	12
7-1. Browser-----	12
7-2. Set up-----	13
7-3. E-mail-----	17
7-4. Astro File Manager-----	18
7-5. Calculator-----	19
7-6. Recorder-----	19
7-7. Calendar-----	20
7-8. Clock-----	21
7-9. Gallery-----	21

7-10. Video Player-----	22
7-11. Download content-----	243
7-12. Camera-----	243
7-13. Music-----	24
7-14. Map-----	24
7-15. Play Store-----	25
8. HDMI Connection and USB Connection-----	26
9. Genuine Parts-----	25
10. Maintenance-----	26
11. Important Safety Information-----	28
11-1. Safety precautions-----	28
11-2. Pacemaker-----	29
11-3. Hearing aids-----	29
11-4. Other medical equipment-----	29
12-5 while car driving-----	29
12-6. May cause an explosion-----	29
12-7. Precautions for Children-----	29
12-8. Precautions when enjoy 3D Display -----	29

Note: If the function described in this manual does not match the actual function of the product, whichever is the actual function of the product. The company reserves the right to modify the contents of this manual without an any prior notice, and without prior notice.

1. Safety Precautions

Please read these simple guidelines. Failure to comply with these rules may result in dangerous or illegal. This user manual provides more detailed information on security matters .

	Safe Boot: When using the MID's time, will cause interference or danger, do not boot.
	First, pay attention to traffic safety: Obey all local laws and regulations. Please keep your hands free to operate the vehicle while driving. While driving should be road safety
	Interference: wireless MID may be subject to interference, which could affect performance.
	SWITCH OFF IN HOSPITALS: Please comply with any restrictions. In medical facilities nearby, please MID shutdown.
	SWITCH OFF IN AIRCRAFT: Please comply with any restrictions. MID cause interference in aircraft.
	Fuel should be shut down: Do not use the MID within the gas station. Do not use the MID near fuel or chemicals.
	SWITCH OFF NEAR BLASTING: Please comply with any restrictions. Do not use the MID during the blasting operation.
	The use qualified maintenance services: Only qualified personnel can install or repair the MID.
	Accessories and batteries: Use only approved accessories and batteries. Do not connect incompatible products.
	Waterproof: The MID is not water-resistant. Keep it dry.
	Make a backup: Remember to back up or keep a written record of all important information stored in the MID.
	Connect other external devices: connecting to other devices, please read the MID User's Manual for detailed safety instructions. Do not connect incompatible products.

2. About your MID

Use the various functions of the device, obey all laws and respect local customs, as well as other people's privacy and legitimate rights and interests (including copyright).

To use the various functions of the device must be switched on. Do not switch on when wireless device use may cause interference or danger.


3. Network Services

You must subscribe to the necessary services to the wireless service providers before they can use the wireless capabilities of the device. Many of the features require special network features support. These features may not apply to all network; Other networks may require that you first necessary agreements with wireless service providers can use the network services. Your service provider may provide you with the necessary instructions and explain what charges will apply. Some networks may have some limitations that will affect the way you can use network services. For example, in some networks, not all language-dependent characters and services are supported. Your service provider may be required to disable or turn off some of the features of the device. If so, these features will not appear on your device menu. Your device may have a special configuration, such as menu names, menu order, and icons. For more information, please consult your service provider.

4. MID Components Description

1	Body	2	Display
3	HOME key (the key the virtual icon), return to the Home screen	4	BACK key (key for virtual icon), return to the previous screen
5	SEARCH button (this button is a virtual icon), click on this button to search	6	MENU key (this key for a virtual icon), any interface short press to return to the main desktop
7	POWER key (this key physical key), switch machine, lock screen and light up the screen	8	Headphone jack
9	Camera (Front)	10	MID back cover
11	USB interface	12	Volume keys (+) (this key is physical key)
13	Volume keys (-)	14	Speaker holes

	(this key is physical key)		
15	HDMI Connector	16	SD Card Socket
17	DC jack (5V 1A)	18	Mic
19	Reset	20	3DD key (the key the virtual icon) Playback the 3D contents
21	2D/3D key (the key the virtual icon) Convert a specified content, 2D to 3D	22	Charger 5V 1A
23	Data Cable	24	OTG Cable
25	User Manual		

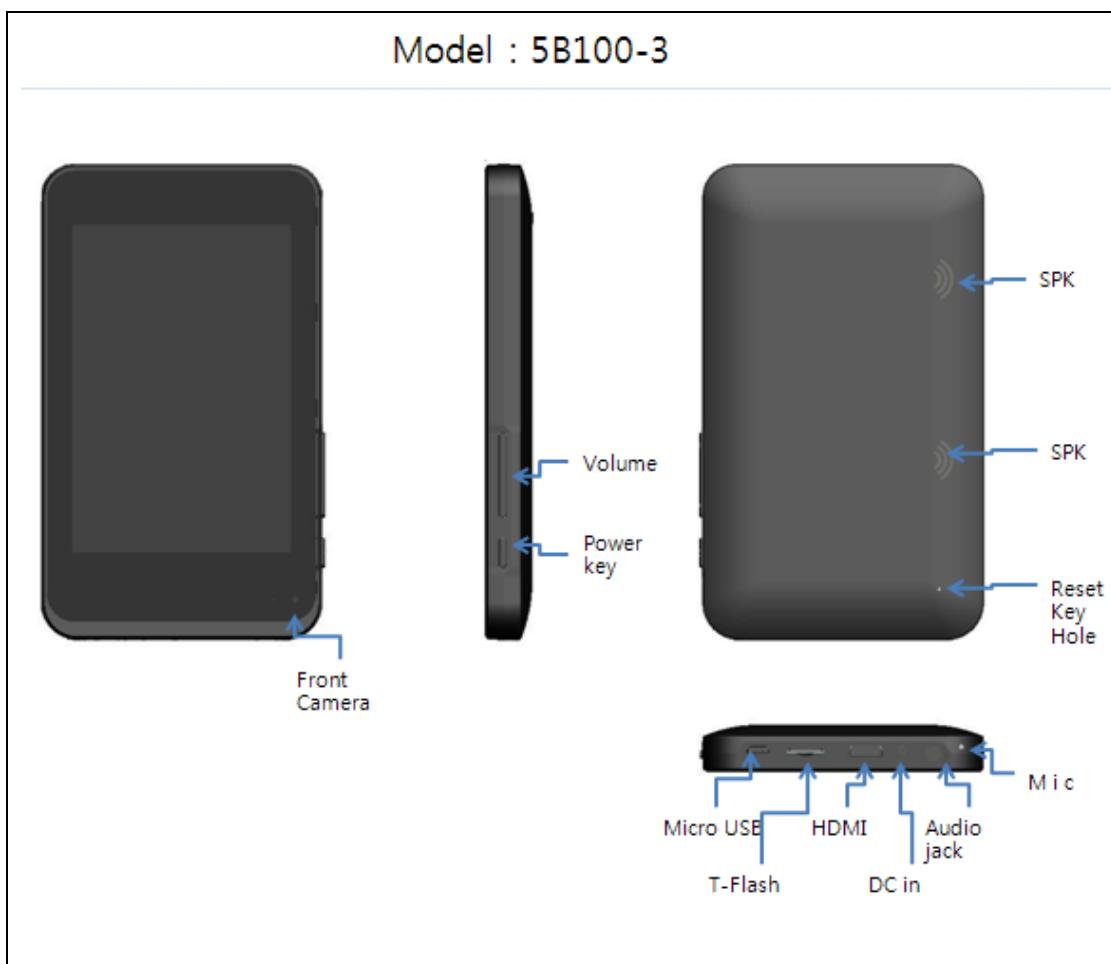

5. Launch MID

5-1. Charging MID

 Battery charging, ambient temperature range between 0 ° C and 45 ° C

1. Please, provide charging cable inserted into the MID connector, insert the charger into an electrical outlet to start charging.
2. If the charge is turned on, the lower right corner of the screen will charge level indicator is flashing cycle.
3. If the charge off, the screen is black
4. After charging is completed, disconnect the MID charger and unplug the charger from the power outlet.

 the MID's USB port and charging port are separate USB interface can not be charged.

 Using other types of chargers and accessories may be in violation of the recognition of the MID or warranty and may be dangerous. Disconnect the power cord of any accessory, grasp and pull the plug rather than the cord

5-2. Turn on the MID

 MID ambient temperature range between 0 ° C and 40 ° C .

1. Long press the power button for 5 seconds to turn on the MID.
After the operating system starts, short press the power button to switch the screen sleep and wake.
2. If the screen pattern lock pattern unlock sliding screen tap

5-3. Turn off the MID

1. Short press the power button for 5 seconds, the shutdown option on the touch screen, click OK to shutdown.
Short press the power button for 1 second, the system lock screen.
2. If the MID and the screen is open, short press the power button to turn off the screen.
If the MID is turned on, the screen is off, press power button will open the screen (short press the power button for 1 second).

6. Know your MID

6-1. Main Interface

The bottom of the main interface have a fixed home, return to the main menu 3D switch icon, as shown:



1. The main interface screen

The MID supports multiple main interface, so you can have more space to display the widget, shortcut or folder.

2. Switch between the main interface screen the sliding main interface with your fingers along the horizontal direction, until the desired main interface.

3. Browse the main interface screen

The main interface from multiple interfaces, to enter the main interface, use your finger to slide on the interface, you can slide into the left or right of the main interface. In the current interface, press the Home Menu button to return to the main interface. Each interface can easily add shortcuts, widgets, folders (for more information, please refer to add the main screen)


4. Add Home screen shortcuts

Press any module function icon to the main interface, add the function module shortcuts. (ex: add music, you have to do is press and hold the "Music" icon to the main interface).


5. Delete home screen shortcuts

Long press icon on the main interface to delete shortcuts, Icons become larger at the same time appear "Delete" icon. And drag the icon to the right, When "Delete" Turn red, release, and that is to remove this feature icons shortcuts.

6. Widgets: small applications that reside on the main interface, it can help you to quickly and easily access information. As shown:

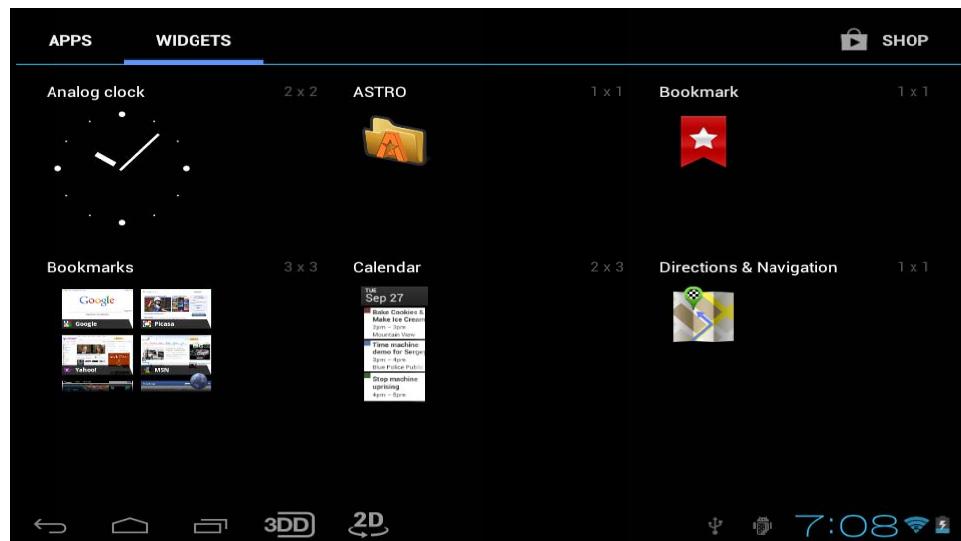

7. **Shortcuts** : Links can be placed on the main interface, It can help you to quickly access applications or bookmarks folder.
8. **Add a shortcut to the steps of the main interface:**
Scroll through the applications menu, locate the desired application.
Touch the desired application, pushing them to the main surface,
In the main interface to create a shortcut.
For example: Touch and hold music icon, then onto the main interface to let go.
9. **Replacement of wallpaper**
Touch and hold the home screen: Change the wallpaper of the main interface, you can use the pictures stored in the MID as wallpaper. You can select wallpaper gallery, dynamic wallpaper, the Gallery option wallpaper set. As shown:

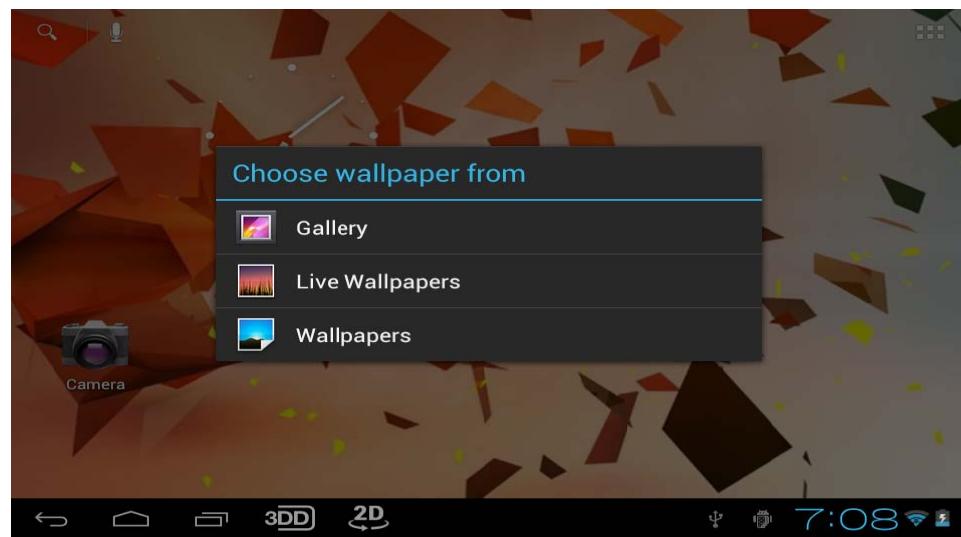

6-2. Status bar

The status area may display the following icon:

1.		WIFI signal strength -no
		WIFI signal strength - Low
		WIFI signal strength - High
		Available Wi-Fi network
		Has been set up alarm clock
		Are downloading
		Connected USB debugging
		Battery Status - 100% of full power
		Battery power Relatively high
		Battery power Higher
		The battery is in general
		The battery is running low, and needs to be charged
		Battery power is very low, you need to immediately charge
		Battery runs out, immediately charge
		Battery is very low state of charge
		The battery is charged lower state
		Battery charge under normal circumstances
		Upcoming calendar event
		Muted

Status Notification

The notification area displays notification icons, such as the connection of USB devices. As shown:



2. Clear status notification

Notification message, press and hold the status bar, then sliding the finger up the screen to open the Notifications panel, touch the upper right corner of the "Clear" button.

3. Open the Notifications panel

Press and hold the status bar, then slide your finger up, you can open the Notifications panel. If there is more than one notification, slide down to view more notifications. You can also press the notification message bar, you can open the relevant information (such as: upcoming calendar message, you can touch the calendar message View Calendar details)

4. Closing the Notifications panel

Method 1: Hold down the notification panel at the bottom of the control column, and then slide down on the screen with your finger.

Method 2: Click the "Back" virtual key.

7. Use MID

7-1. browser

1. How to enter a website

Enter the main menu.URL input box click on the browser icon to open he browser click on the top of the screen, Enter the URL of the page, click on the virtual keyboard "Enter key"

2. How to open a new window in the current screen,

Click on the title bar on the right of the "+", a new window pops up.


3. Such as refresh the current page in the current screen

Click on the left side of he title bar refresh icon ,

Will be able to refresh the current page.

4. How to stop, open a web page in the web

Click on the URL on the right  Push button, Will be able to stop the pages continue to open. Browser page the following diagram:

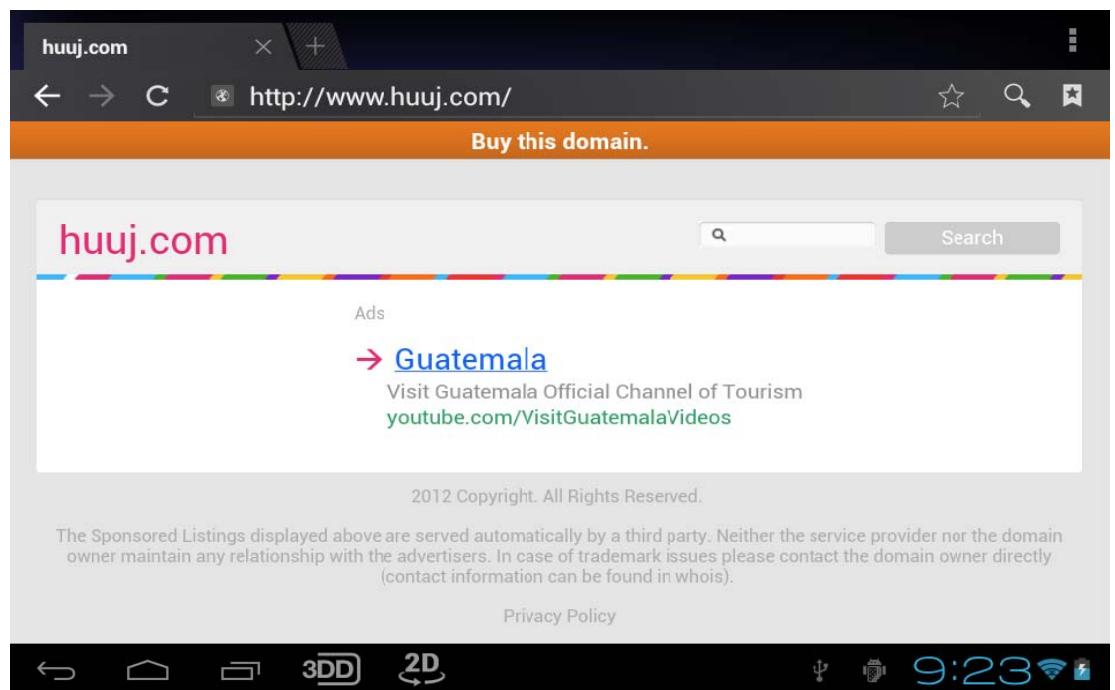

7-2. Set up.


Click the "Settings" icon in the main menu, To open the system setup interface.

1. WIFI

MID with wifi function, easy to get ultra high-speed data transmission over a wireless network.


1.1 How to open and close the wifi.

Close to click on the wifi the right side of the Open button

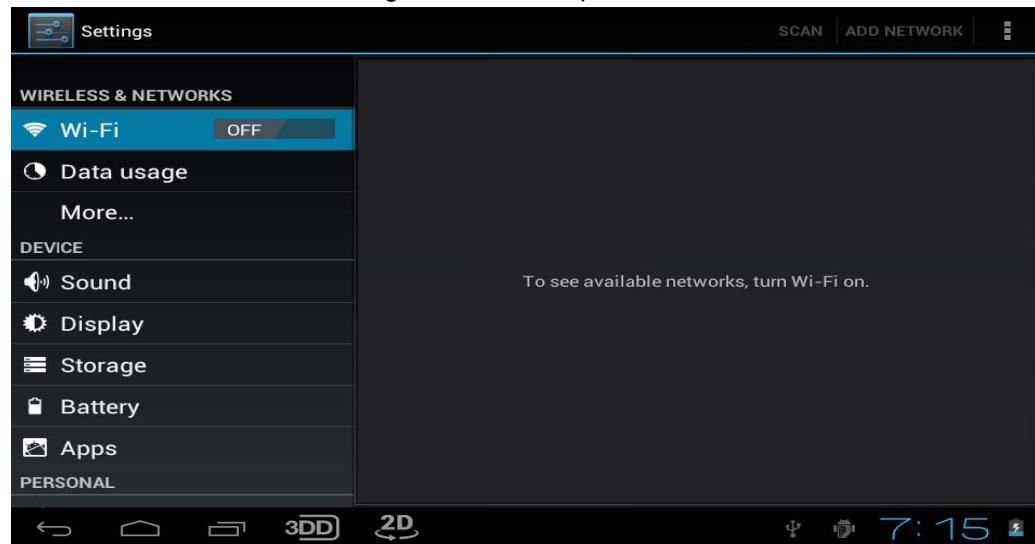

1.2 Connected to Wi-Fi network

Wait for a period of time, turn Wi-Fi MID to automatically search for open nearby Wi-Fi networks in range. It can connect to a Wi-Fi network connection, it would need to enter a password if the network lock icon and then select the Wi-Fi settings menu. As shown:

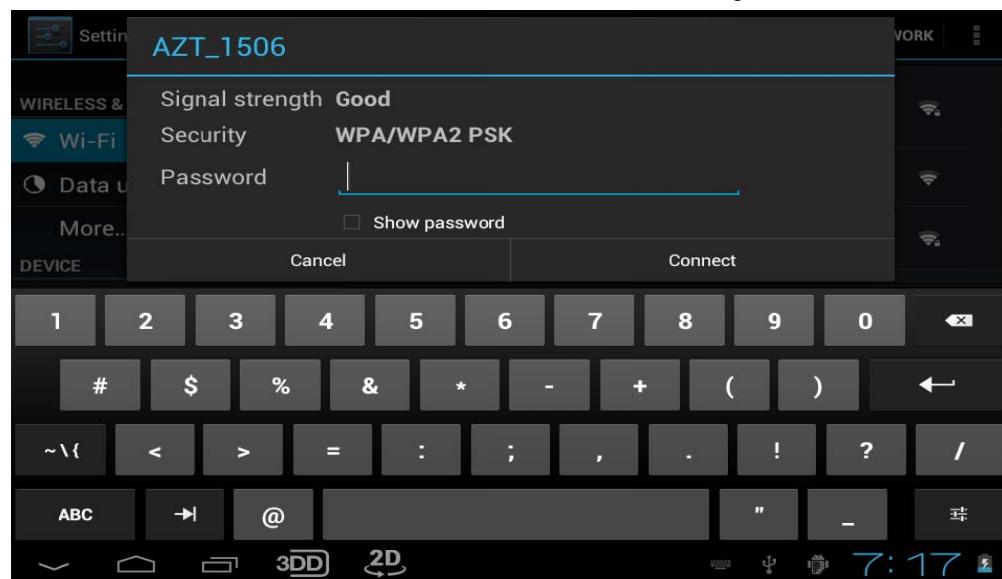

Wi-Fi network is connected, Will appear in the status bar of the right of the main interface icon, On behalf of the Wi-Fi signal strength.


1.3 Add, delete the Wi-Fi network

Enter the set→Wireless and networking→Wi-Fi settings→Add Wi-Fi network, Enter the available network SSID, Select security automatically add a Wi-Fi network to "Wi-Fi network list.

"Wi-Fi network list, press and hold a Wi-Fi network, In the pop-up dialog box, select the "Do not save the network, Will be able to disconnect the Wi-Fi network connection, Wi-Fi connection password will not be saved.


1.4 Modify network settings

Long press search to the Wi-Fi network, You can search the Wi-Fi network to be set. As shown

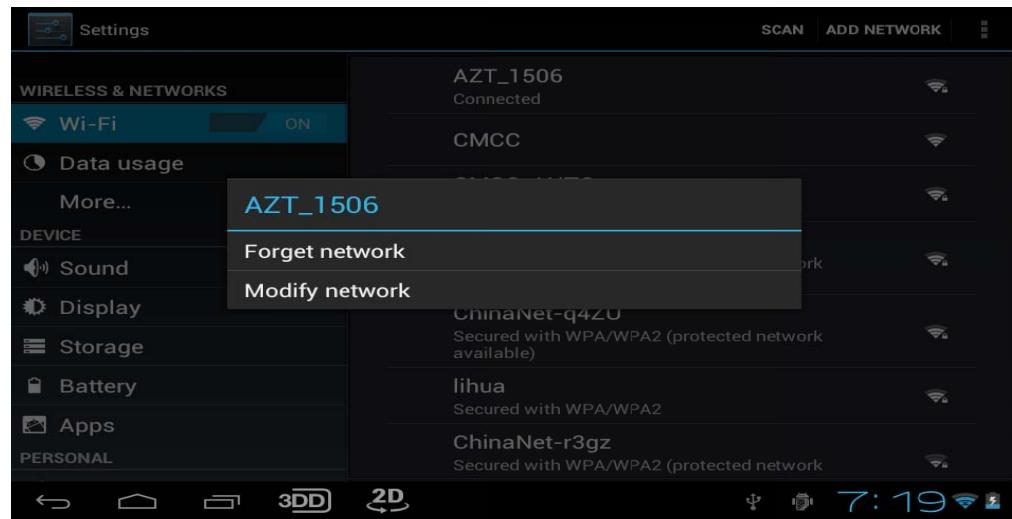


2. Sound

Click Settings in the sound options, You can adjust the system volume, Media volume, And alarm volume Figure

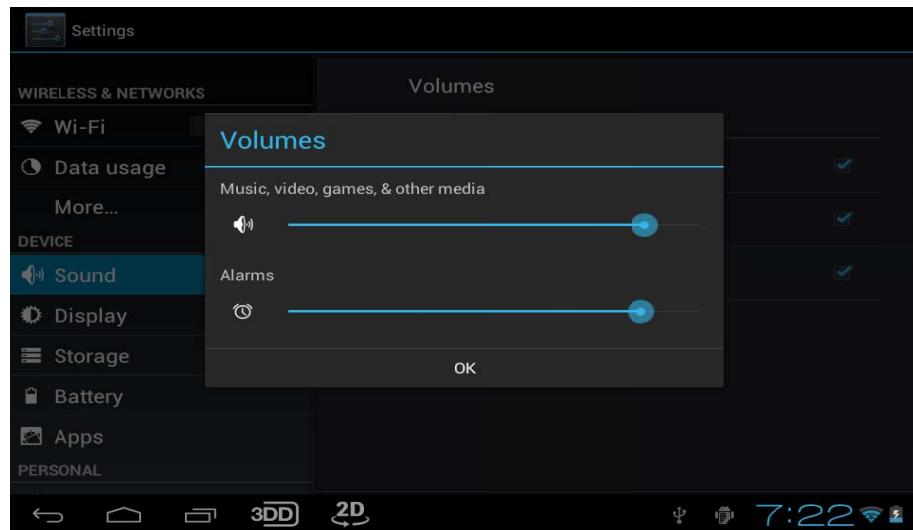

3. Display

You may need to adjust the brightness of the MID. You can also turn on / off the "Auto-rotate screen" function, Set animation, screen timeout. As shown:

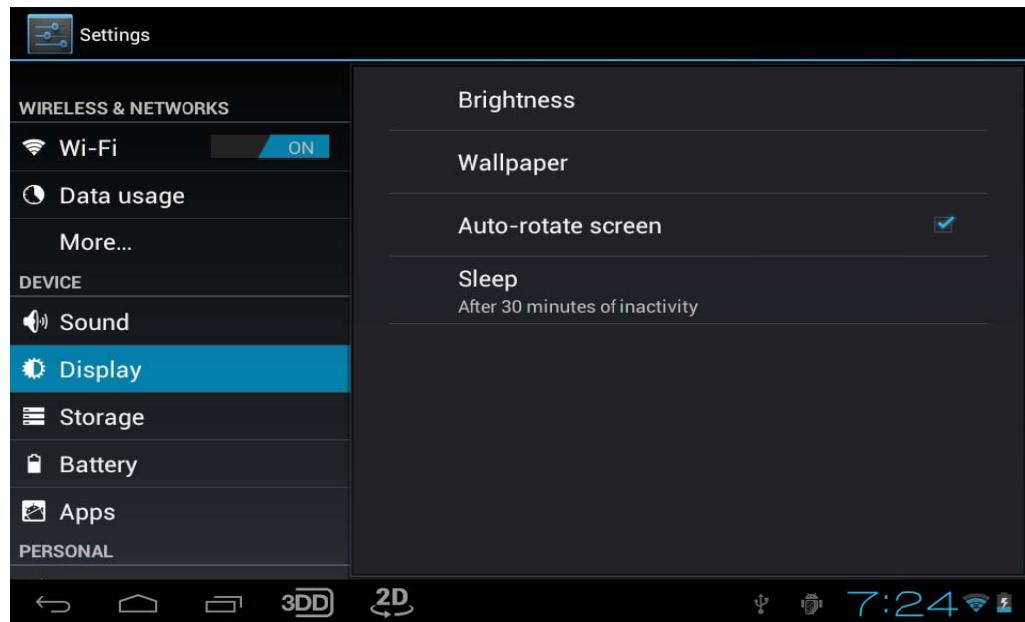

4. Application

Enter the menu can be opened. Close unknown source application installation, Management application, View running services, View running services, The set application development options

As shown:




5. Accounts and Synchronization

Login or canceled social networking account, you can also manage synchronization and other account settings.

6. Location-based services


Into the set→Location-based services, Check the Google's location services, The "Location & Google search ", Into the map can locate

As shown:

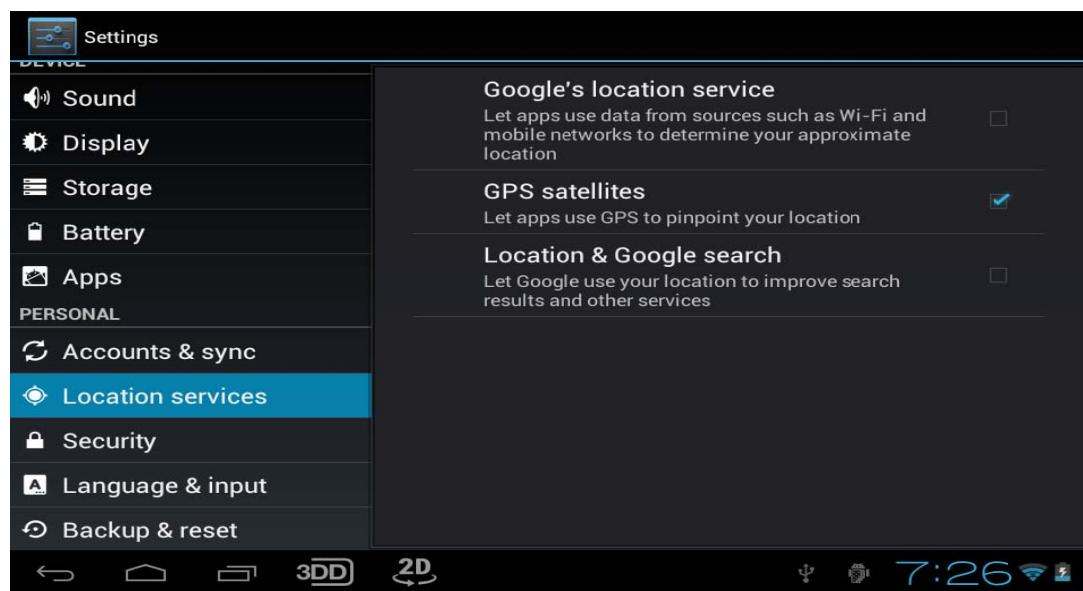

6. Security

Into the set→Location-based services. Screen security protection, Encrypt MID, To set unknown source installation, And other functions. As shown:

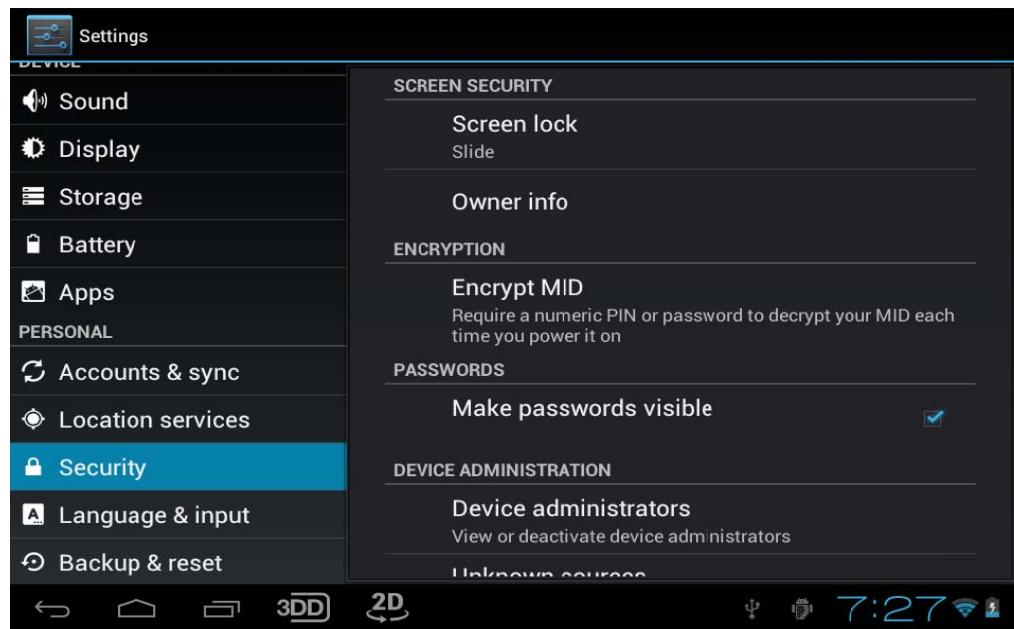

7. Language and input method

Setting the language of the operating system, Setting screen keyboard option and create a personal dictionary. Note: 1. Create a personal dictionary, You can set→Language and Keyboard→Personal dictionary


→Add→Enter the entry→OK or Cancel(Touch OK, add success; touch cancel, the entry is not added)2. Press and add a good entry, Options menu will pop up this term, You can edit or delete you have to add a good entry.

8. Date and Time

In the "Settings" interface to select "Date" and "Time", and enter the setup interface. Can choose to automatically determine the (network time), you can also choose to manually set

the time and date. Select the time zone, time format, date format.

For example, choose to set the date, as shown:

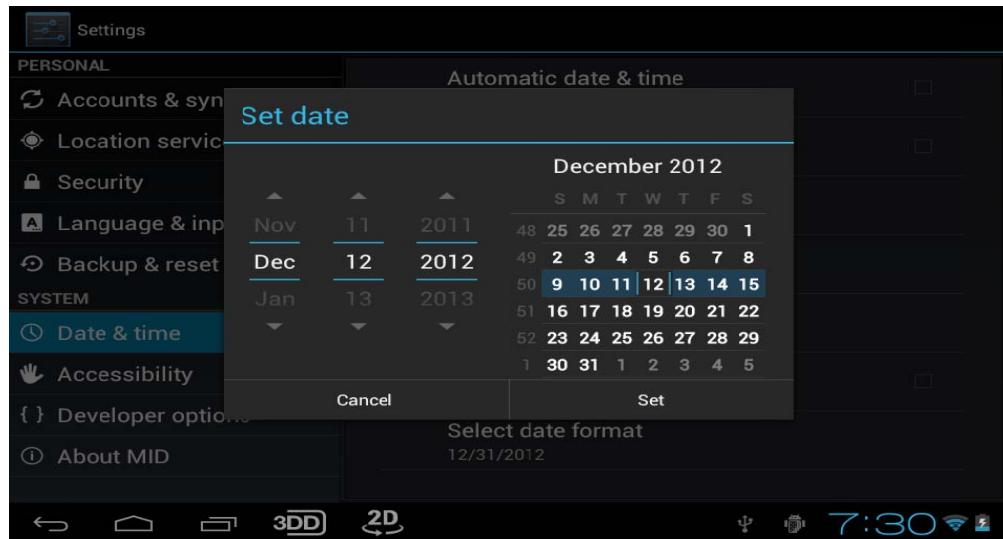


Users can click the up and down two small triangle icon. To adjust the date. You can also double-click the need to change the date. The keyboard digital input. As shown:



9. MID.

Users can learn about the power situation, legal news, MID status. View legal information and MID hardware and software version information.


7-3. E-mail

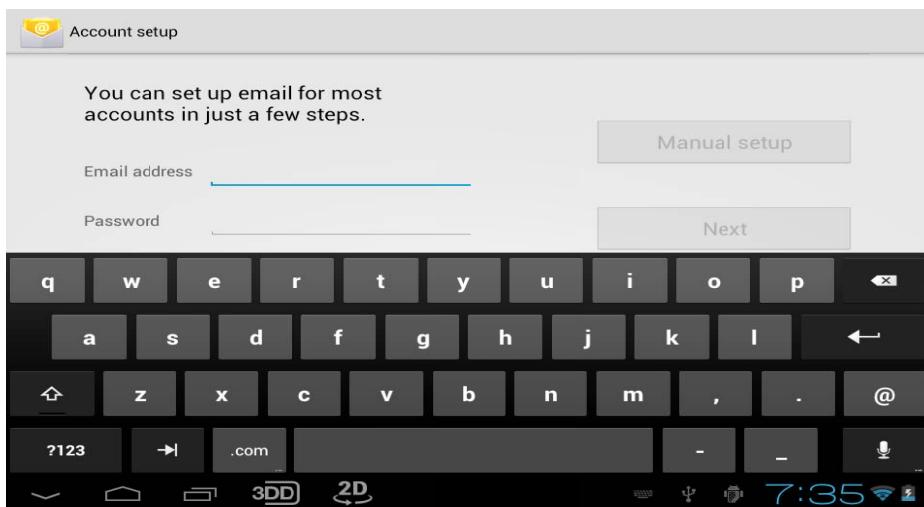


Enter the e-mail address and password. Finished, click on the manual settings, select the communication protocol, edit landing mailbox password and save the settings. Click Next to enter the mailbox, you can compose and send and receive mail.

Note: The communication protocol for different merchants mail account may be different, the communication protocol selection error will cause you to not be able to send and receive e-mail.

Open the e-mail application to touch the application button on the main menu edit the e-mail. Enter the recipient address, subject, and content. When finished click the send icon at the top of the interface. As shown:

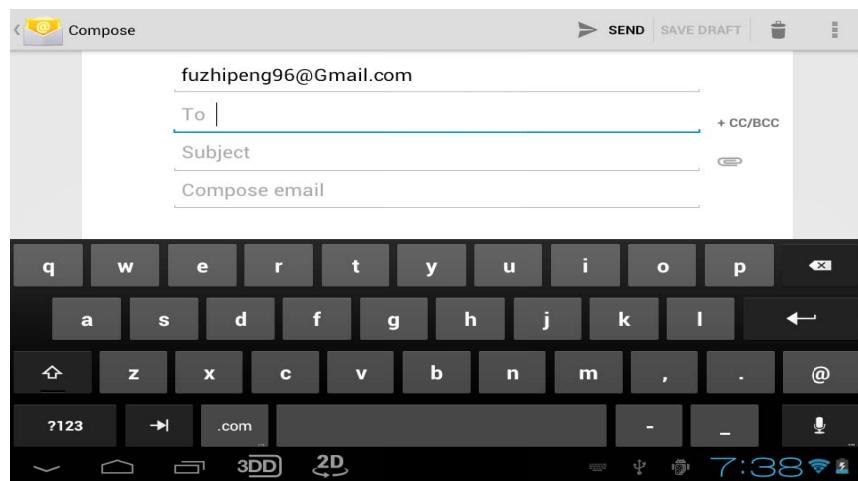

If you want a copy of the e-mail CC or BCC copies sent to other recipients, select Add Cc / Bcc. If you want to save a message as a draft and later modified, touch the "Save Draft", the system is automatically saved as a draft.

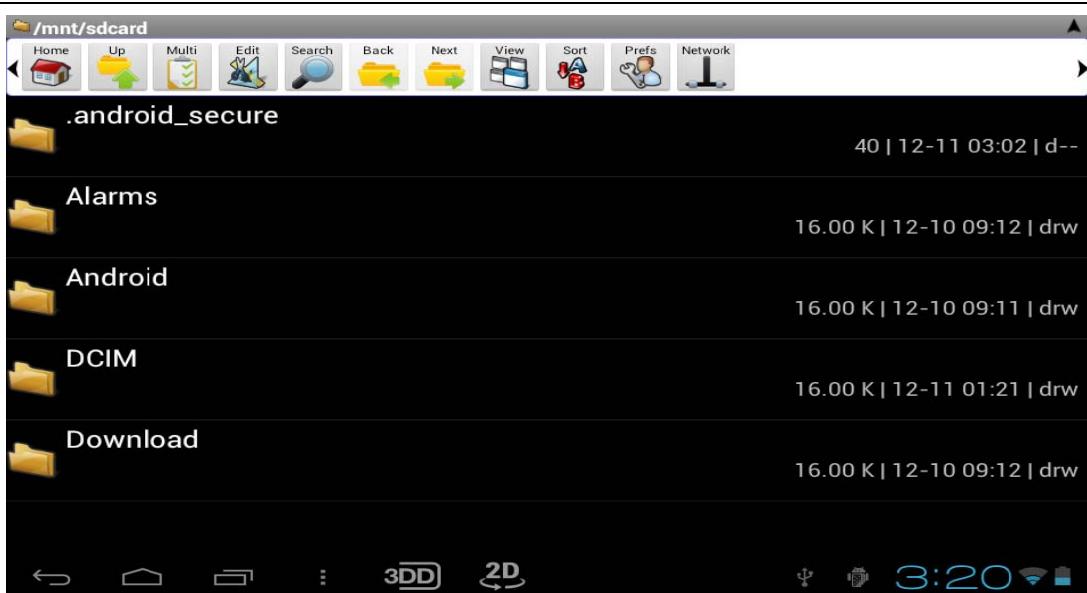

ASTRO File Manager The File Manager is powerful and easy-to-use resource management software. Card file rename, copy, move, delete, and can also browse the pictures, music, video, the most important of which is directly can also back up the existing software on the MID to the SD card, but also from the installed on the memory card directly install the apk.

7-5 Calculator



Support for basic math, also supports trigonometric functions, inverse trigonometric, exponential, and calculate elementary functions number. Touch the Calculator icon, Enter the calculator interface, and use the screen on the calculator button to enter numbers and operator.


7-6. Recorder



Touch the Application button→Recorder, Turn on the tape recorder.

Recorder interface click the icon to open the recording, select the recording file type, click the icon to pause recording, click the icon again to continue recording, stop recording click on the icon, click the icon audition recording file, click Save and abandon the icon to save and give up to save the recording file. Press the Menu key, you can view the list of recordings, save path, and so on.

7-7. Calendar

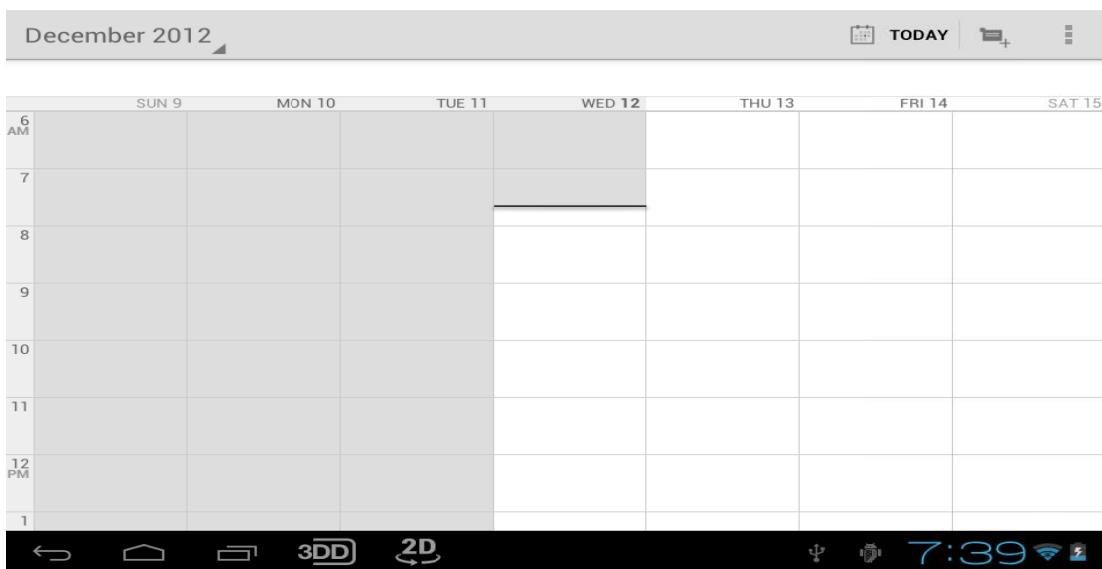

1. Touch the Application button → Calendar.
2. The calendar interface, click the Add icon, select New activities. Press the Menu key to select the day, week, month, or event view shows.
3. Select a calendar date, enter the Calendar interface, view the event interface, press the Menu key → Edit to enter edit calendar.
4. Press the Menu key, select "delete activities" in the events interface can delete activities.


5. If you set the event to remind event approaches, upcoming events icon in the notification area of the status bar will display
⌚, Upcoming activities will ring to remind you.

7-8. Clock.



1. Open the alarm clock: Touch 'clock' application button → alarm clock.
2. Alarm interface, select "Add alarm" to enter the alarm setting interface, set the alarm time, repeat cycle, ringtones, vibration, label. Repetition period is not set, the alarm will only remind one.
3. If you have already set up one or more alarm in the alarm list screen, click the Clock icon to turn off / on the alarm clock.
4. You can also click "Enable alarm in the alarm edit interface to turn on / turn off the alarm.

7-9. Gallery

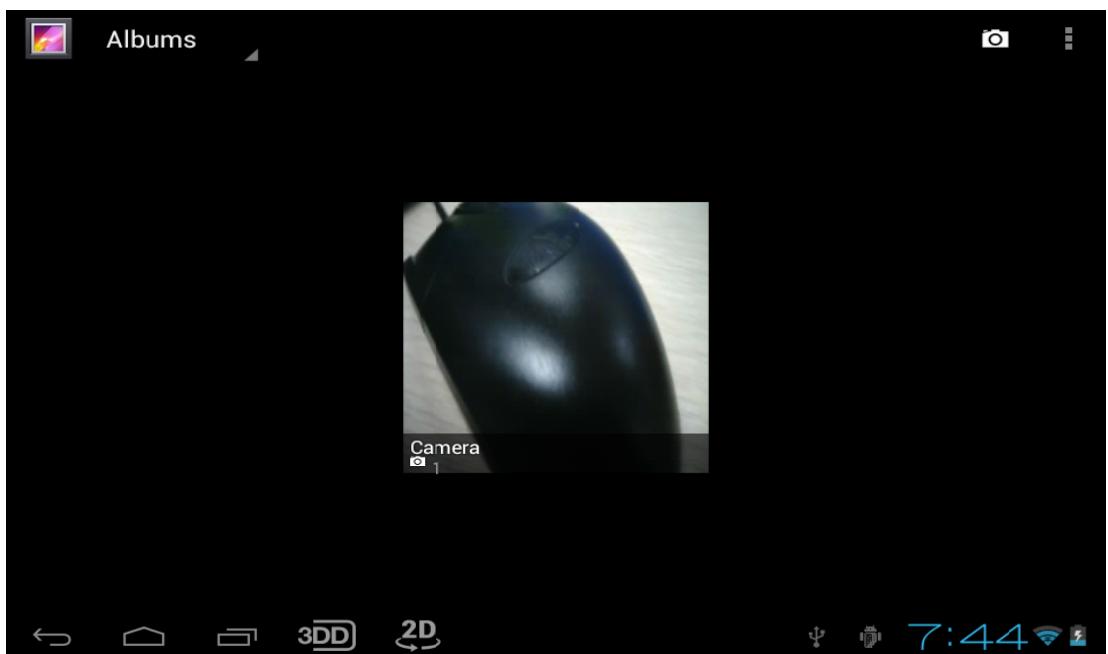

1. Touch the Application button → Gallery, Start Gallery, the first time you start the gallery menu system will automatically go to search all the pictures in the memory card, and generate the folder thumbnail.
2. Touch the Application button → Gallery → the folder thumbnails → Click to view pictures, enter the View interface.
3. Picture to see the interface Click on an image to enlarge and shrink operations around sliding switch on a next picture.

Note: the gallery does not support video playback

7-10. Video Player




1. Video Player supports 3D without Glasses, video player to create exciting visual.
2. Click on the video player in the main menu automatically loads all the video in the SD card. Users can freely choose their favorite video Click to watch. Click 3D video

playback, default 2D screen, you must click on the 3D toggle icons appear 3D effect. You can play the video side buttons to adjust the volume, but also through the soft button click on the player to control the playback of the movie. Figure:



7-11.Download content

When users use the main menu after the browser download network resources can view the downloadable content menu, click Download good will pop up an option operator interface resources of resources to operate. Users can also ASTRO file browser view. Not download content when the display is "downloadable content". As shown below:

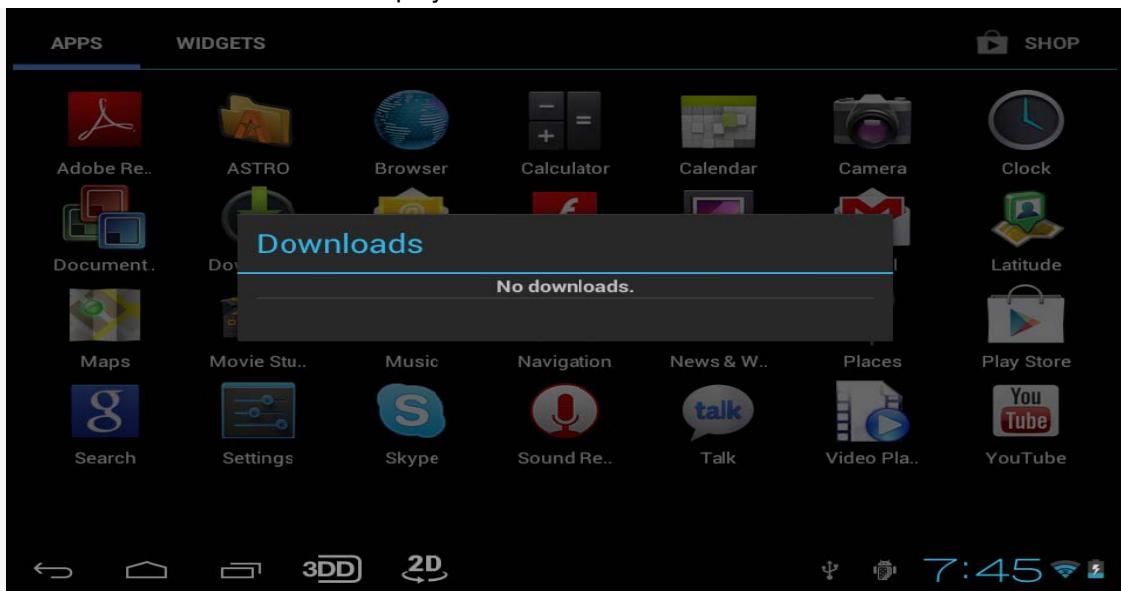

7-12.Camera

1. Touch the Application button → camera, start the camera, the camera button Touch the viewfinder interface to framing camera.
2. If you want to shoot a video, you can click on the corresponding icon on the bottom right of the screen, will be able to adjust to the camera mode.

3. Icon, the user can enter the settings, set the relevant parameters, shooting clearer, and through e-mail, MMS, Bluetooth and friends to share.

7-13.Music




1. Sections of the music player can be easily installed to support the mainstream and lossless audio formats, easy operation songs list, modify music information, adjust the music efficiency.
2. You can own personal hobbies Download albums and different types of the format of the song, the system will be carried out according to the artist, album, and song automatically classified display of song, find user-friendly.
3. The music application only plays audio files stored in your memory card. Open music, make sure that the audio file has been copied to your memory card.

7-14.Map


Previously introduced to open the map positioned to enter the first set to open settings -> settings and security settings, check Google location services and location and "Google search". Then open the map application, Click on the map on the button, you can locate.

As shown below

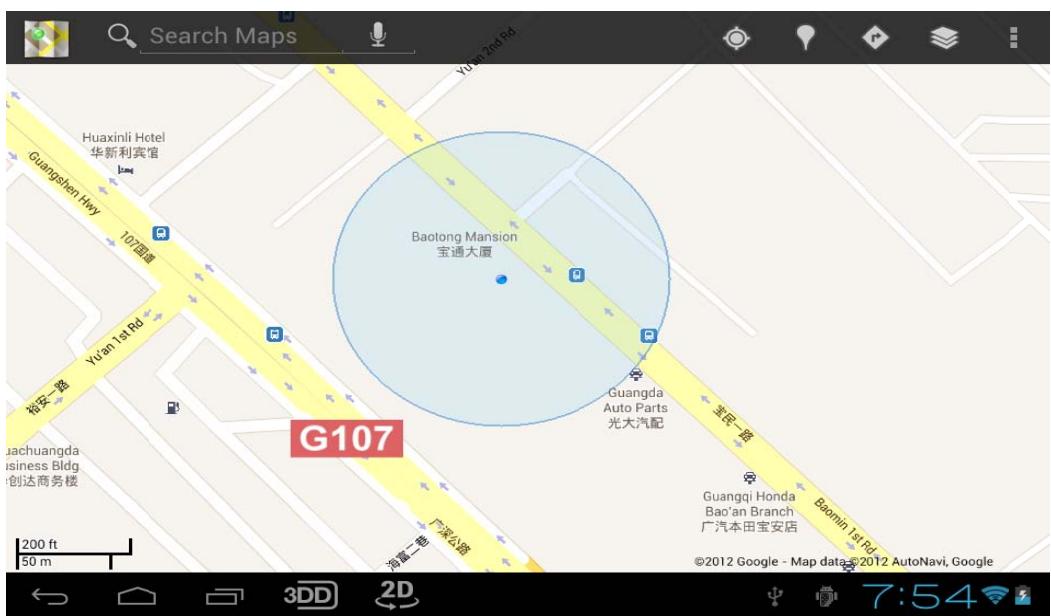


7-15. Play Store

Click on the play store "icon in the main menu, enter" play store "main interface. As shown in the following figure:

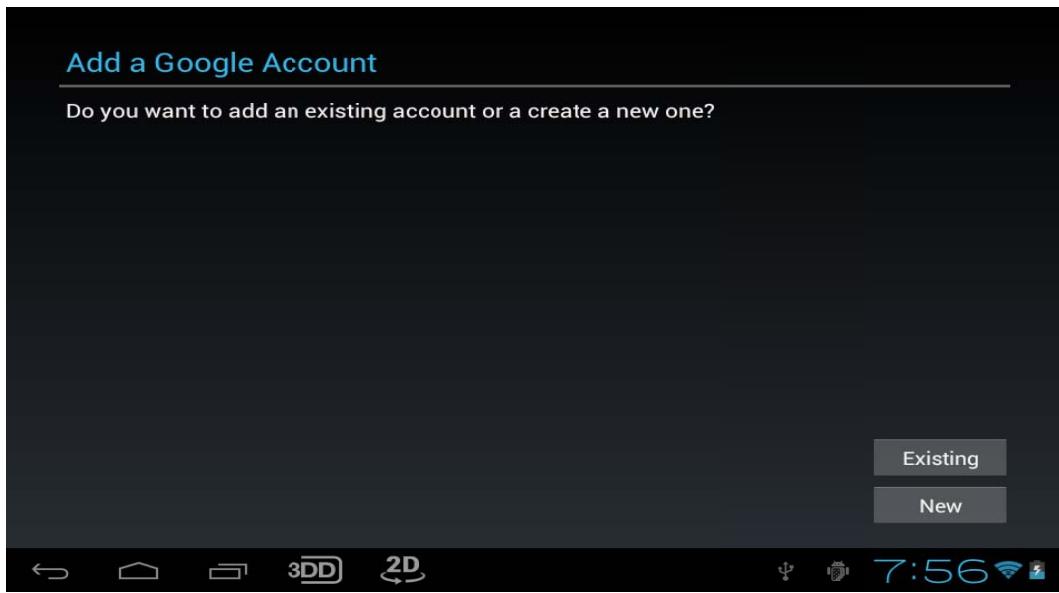

If you do not have a Gmail account, you need to create a Gmail account, select "New". Set after the completion of the mailbox, and then select "Next" to create a password. After you have created your password, enter Market following screen will appear:

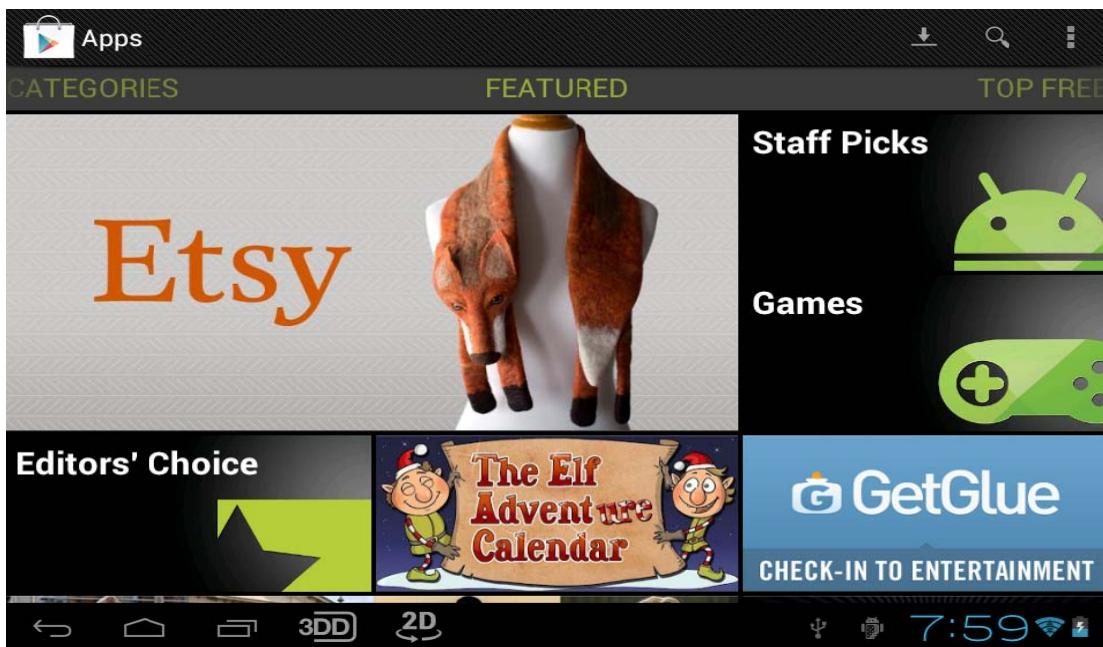

To reach this step. You can download and install the applications you like.

Note.

some applications exist, download applications that support only a specific resolution when these applications in order to download, it may not operate smoothly at the resolution of the LCD, so be careful.

May become unstable depending on the application, you are installing.
 Location or personal information, such as via the Internet has the potential to be used as an illegal exit outside.
 Therefore, use after enough to verify applications providers, such as in a work situation.

8. HDMI connection and USB Connection

1. HDMI Connection

This product supports HDMI output cable, connect the MID and external devices, HDMI output, and LCD content automatically output to an external device.

2. Open the USB storage

MID connected to the computer, MID's status notification area will appear USB notification information. The Click USB notification bar → USB connected → open USB storage function: Touch to open USB storage, you can turn on USB storage. Can import / export to the memory

card music, games, videos and other documents interaction.

3. Turn off USB storage

MID connected to the computer, you need to turn off the USB memory. You also need to remove computer to turn off USB storage function in the MID. Open the "notification area" on the status bar to open the notification menu, touch Turn off USB storage mode, you can turn off USB storage.

Note: Turn off USB storage mode, and then disconnect the USB cable.

9. Genuine Parts

Availability of accessories, please consult your local dealer. The following accessories Note:

*.Put out of the reach of children.

*. When cut off the power cord of any accessory, grasp and pull the plug, not the cord.

*Note: Use only batteries, chargers and accessories approved by the manufacturer. Use other types of batteries, chargers and accessories would be contrary to endorse or warranty, and may be dangerous.

9-1.Why use Genuine Parts

Battery and charger is a key part of the MID, and plays a vital role in the protection of the normal work of the MID, and your safety. Our long-term customer surveys and after-sales service practice MID failure in many cases due to the use of substandard parts, especially the battery and charger.

9-2. using unqualified battery and charger is the cause of the risk.

- itself shorten the life of the battery charge and discharge times significantly less than the original battery.
- greatly shorten the life of the MID, unstable voltage will seriously affect the MID circuit work properly, permanent damage.
- affect the performance and reliability of the MID

Warning: not certified accessories combustion or explosion may occur endangering the personal safety of consumers.

10. Maintenance

Your MID is a product of superior design and craftsmanship and should be used with care. The following suggestions will help you protect your warranty coverage.

1. maintain the drying of the MID. Rain, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
2. Do not use or store in dusty, dirty place MID. This will damage its moving parts and electronic components.
3. This MID, Do not store in hot areas.
4. Do not store the MID in a cold place. When the MID reaches normal temperature, its internal temperature, moisture can form inside, which may damage the circuit board.
5. Do not open the MID as described in this manual, do not try the other methods.
6. Do not drop, knock or shake the MID. Rough handling MID will break internal circuit board.
7. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the MID.
8. Do not paint the MID. Paint can disturb the moving parts and prevent proper operation.
9. to use clean, dry & soft cloth to clean the lens
(for example, camera lens)
10. Please use the charger indoors.
if you can not then boot failure occurred, advice clients to re-firm version.
These suggestions apply equally to your MID, chargers and various accessories. If any of the MID is not working properly, take it to your nearest authorized service facility for repair.

11. Important Safety Information

11-1 Safety precautions

*** Precautions when hand carrying

Remember to follow any special regulations in force, In place to prohibit the use of the MID may cause interference or danger, be sure to turn off the MID.

Whether it is in the normal operating position of the ear, or at least 2.5 centimeters location use and body position to use the MID. The MID meets RF exposure guidelines. If you are using a MID clip to carry the MID, you should ensure that such accessories not contain metal and should maintain this

MID with the physical distance of at least 2.5 cm.

*** RF energy leakage

Your MID is a low-power radio transmitter and receiver. Boot will receive and transmit radio signals intermittently. The network system will control the transmit power of the MID. This unit conforms to your country for RF energy leakage provisions.

***RF interference compatibility

Your MID might be not properly shielded design or not RF interference RF compatibility configuration of electronic equipment.

*** in public places

Please turn off the MID, with a notice of the place, in accordance with the regulations of the MID. These places include hospitals and rest homes and other medical establishments, because these facilities may be using equipment sensitive to external RF signal.

11-2. Pacemaker

If you use a pacemaker, Do not open on the breast pocket, the distance between the MID and the pacemaker should be maintained at more than 15 cm. Please use the MID in the other side of the pacemaker location, in order to reduce the potential for interference. If you suspect that interference may occur, immediately turn off the MID.

11-3. hearing aids

MID may interfere with some hearing aids, if there is interference, hearing aid manufacturers to seek solutions.

11-4. other medical equipment

If you are also using other personal medical devices, please consult the manufacturer of these devices, to confirm that they are adequately shielded from around the RF signal. You can also ask your doctor about.

11-5 while car driving

When you drive using the MID, to comply with the relevant provisions of the traffic laws, if your vehicle is equipped with airbags, then please do not place the MID can reach in the airbag deployment area, Otherwise, if the airbag inflates, it will result serious injury.

11-6 May cause an explosion

Prone to explosion potential factors before you turn off the MID. May explode area including: Fueling areas (such as below the deck of the ship, fuel or chemical products transportation and storage facilities)

A place where the air contains chemicals or particles (such as grain, dust or metal powders). The explosion hazard usually has signs, but not all places have such signs.

11-7. Precautions for Children

Please MID on the children's hard-to-reach places, to avoid children as a toy, causing personal injury. Unconscious and may damage the MID or its accessories. Some small parts of the MID or accessories may be demolished, there will be the risk of swallowing mouth.

11-8. Precautions when enjoy 3D Display

3D images feel, there are individual differences.

Thank you for your understanding in advance. If you do not see 3D images by the situation,

condition or constitution, caution of the contents of the video.

You wear glasses and your vision corrected by glasses, You can see it easier to 3D feel.

Difficulties when there is too strong for viewing three-dimensional images of the screen and leave some distance. If that helps. So, even if you have difficulty viewing, please use the 2D display.

If tired or not feeling well, please refrain from the use of.

If you feel discomfort, please stop using immediately.

If you enjoy 3D images, it is recommended that approximately every 30 minutes to relax.

Children under 6 years of age, the growth of the eye, enjoy 3D display over a long period of time, likely to adversely affect, so please use the switch to the 2D display.

Device : MID (Mobile Internet Device)

Model : 5B100-3

CE : Certificated

FCC ID : QMV-3DNURI-A500

Company : 3DNURI Co., Ltd

Tel : +82-70-8611-7836

Fax : +82- 2-6911-9999

Address : 202, HEAJU BLDG, 7, GANGNAM-DEARO 62 GIL,
GANGNAM-GU, SEOUL, KOREA 135-937

Web Site : www.3dnuri.com

<End of Pages>