


ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS – MAIN UNIT

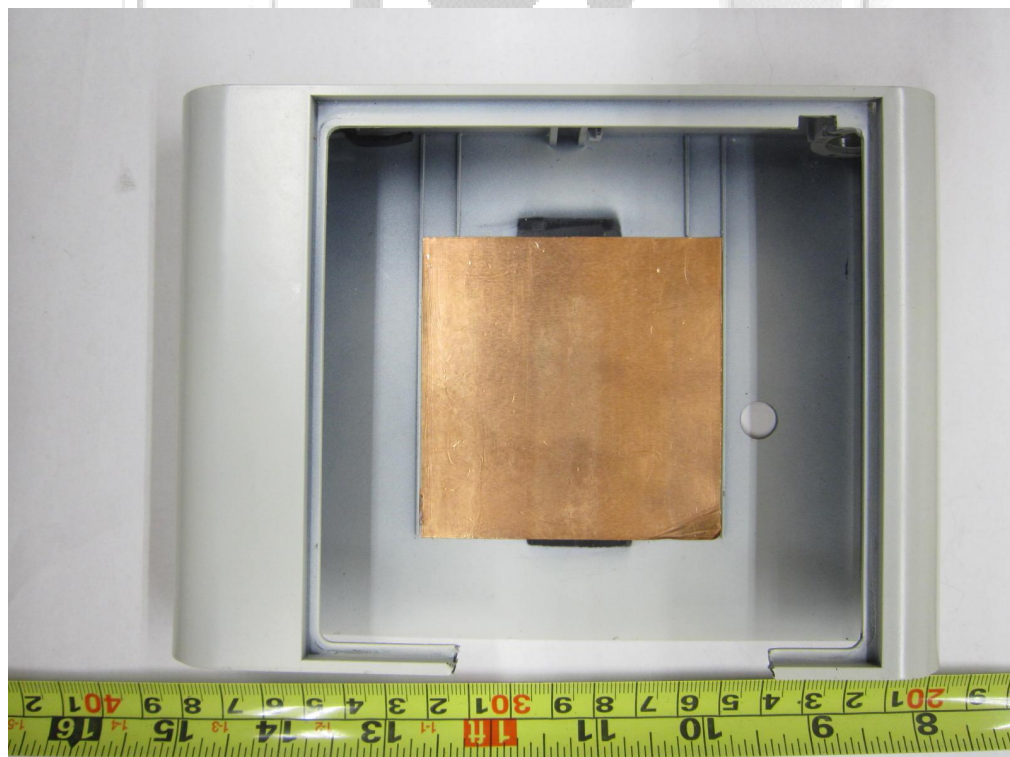


EUT Internal View 1




EUT Internal View 2

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS - BATTERY

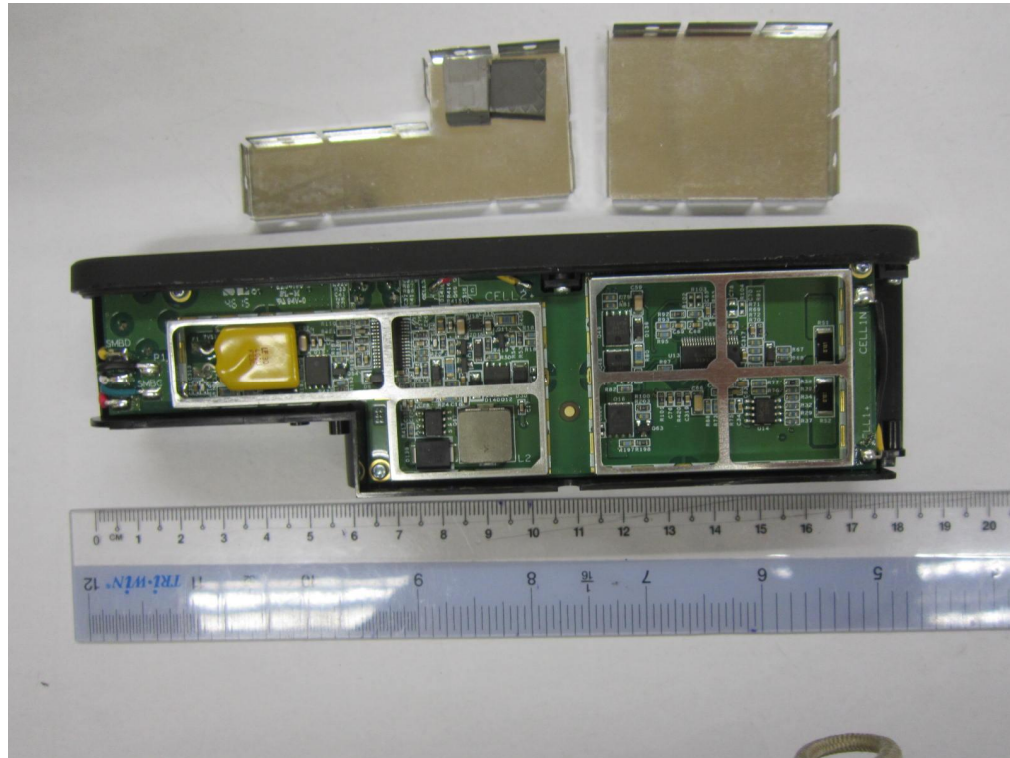


EUT Battery Pack Internal View 3

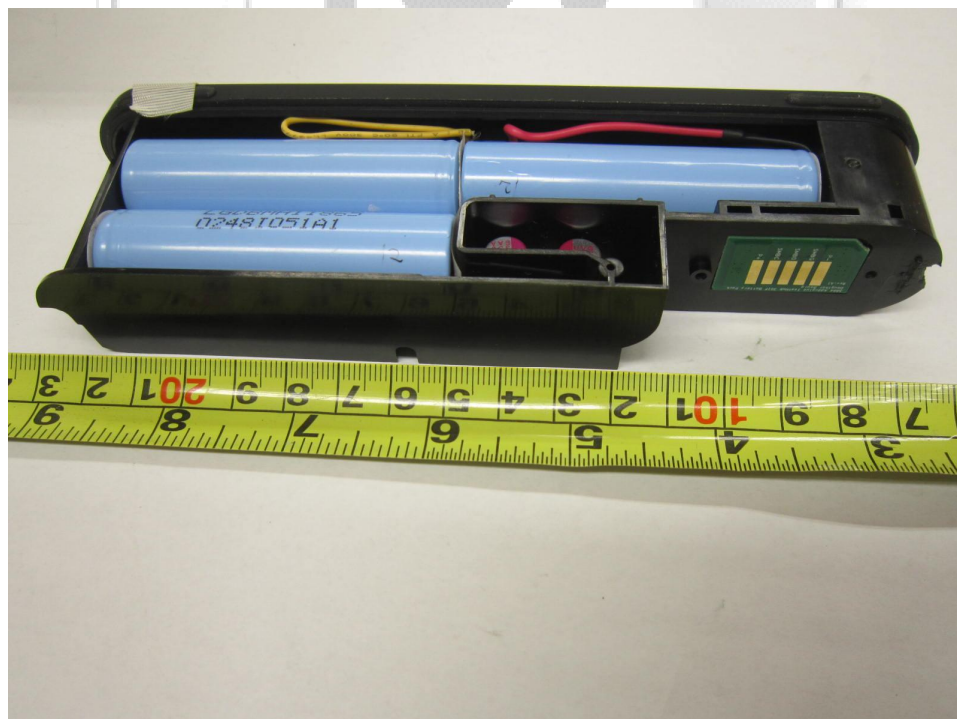

EUT Battery Pack Internal View 4

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS


EUT PHOTOGRAPHS – MAIN UNIT

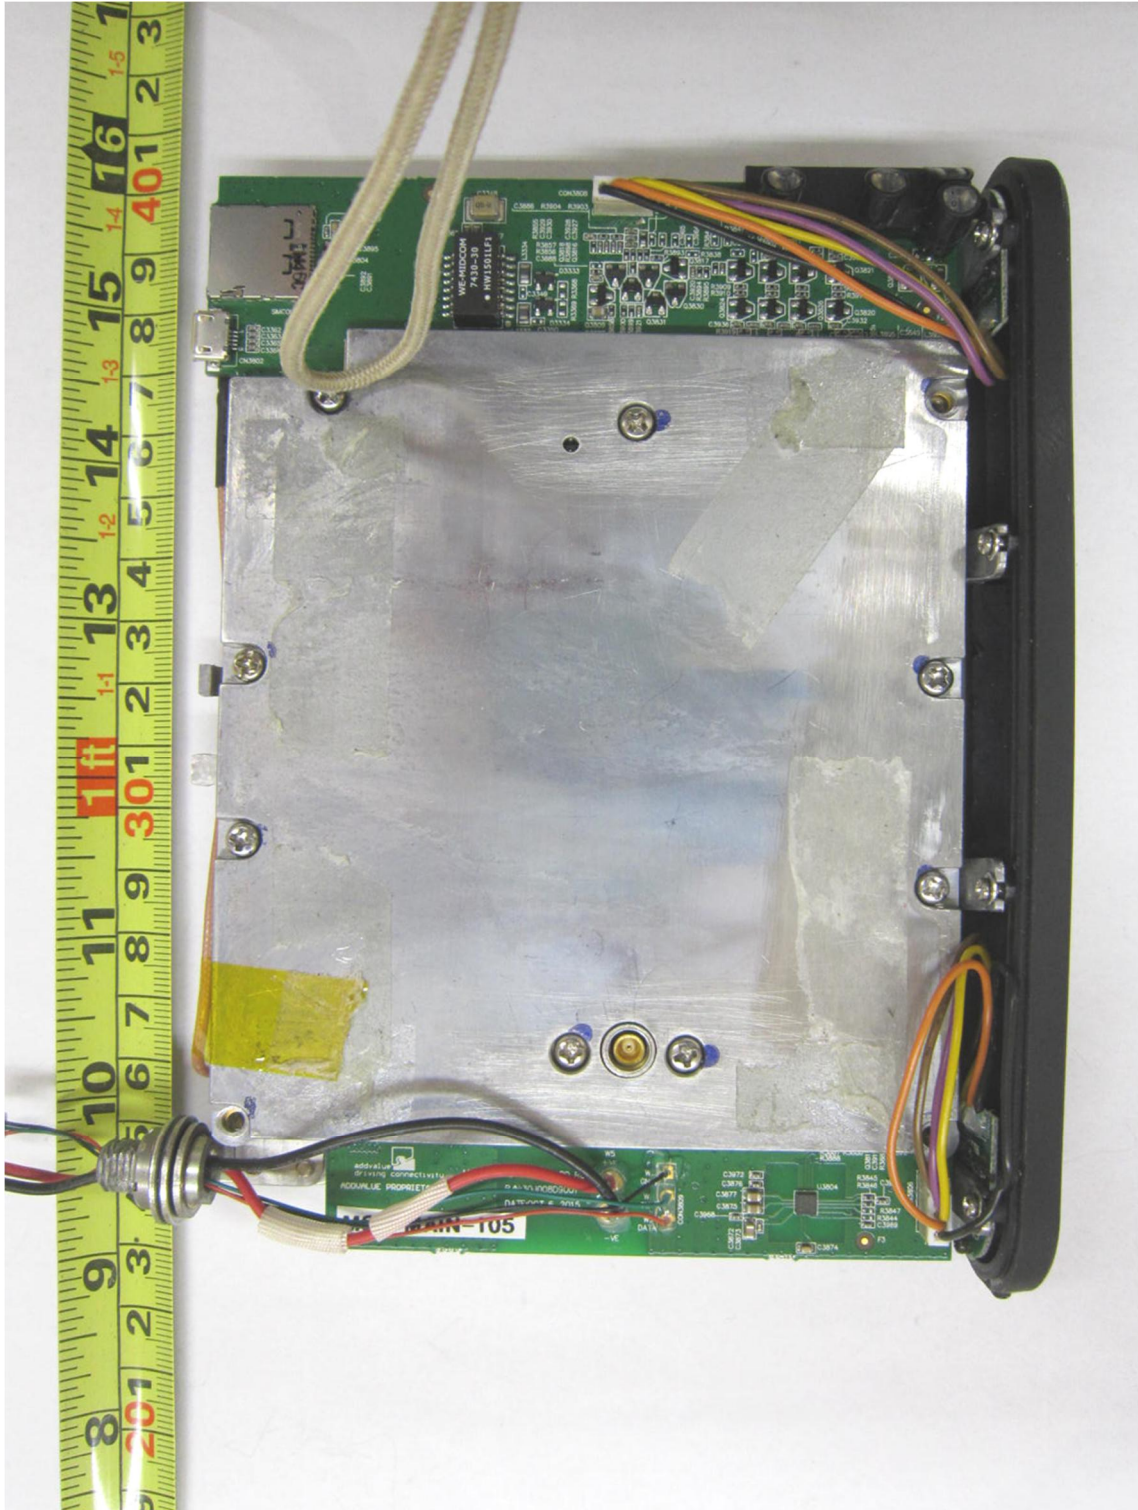

EUT PCB with Shield mounted side

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS


EUT PHOTOGRAPHS

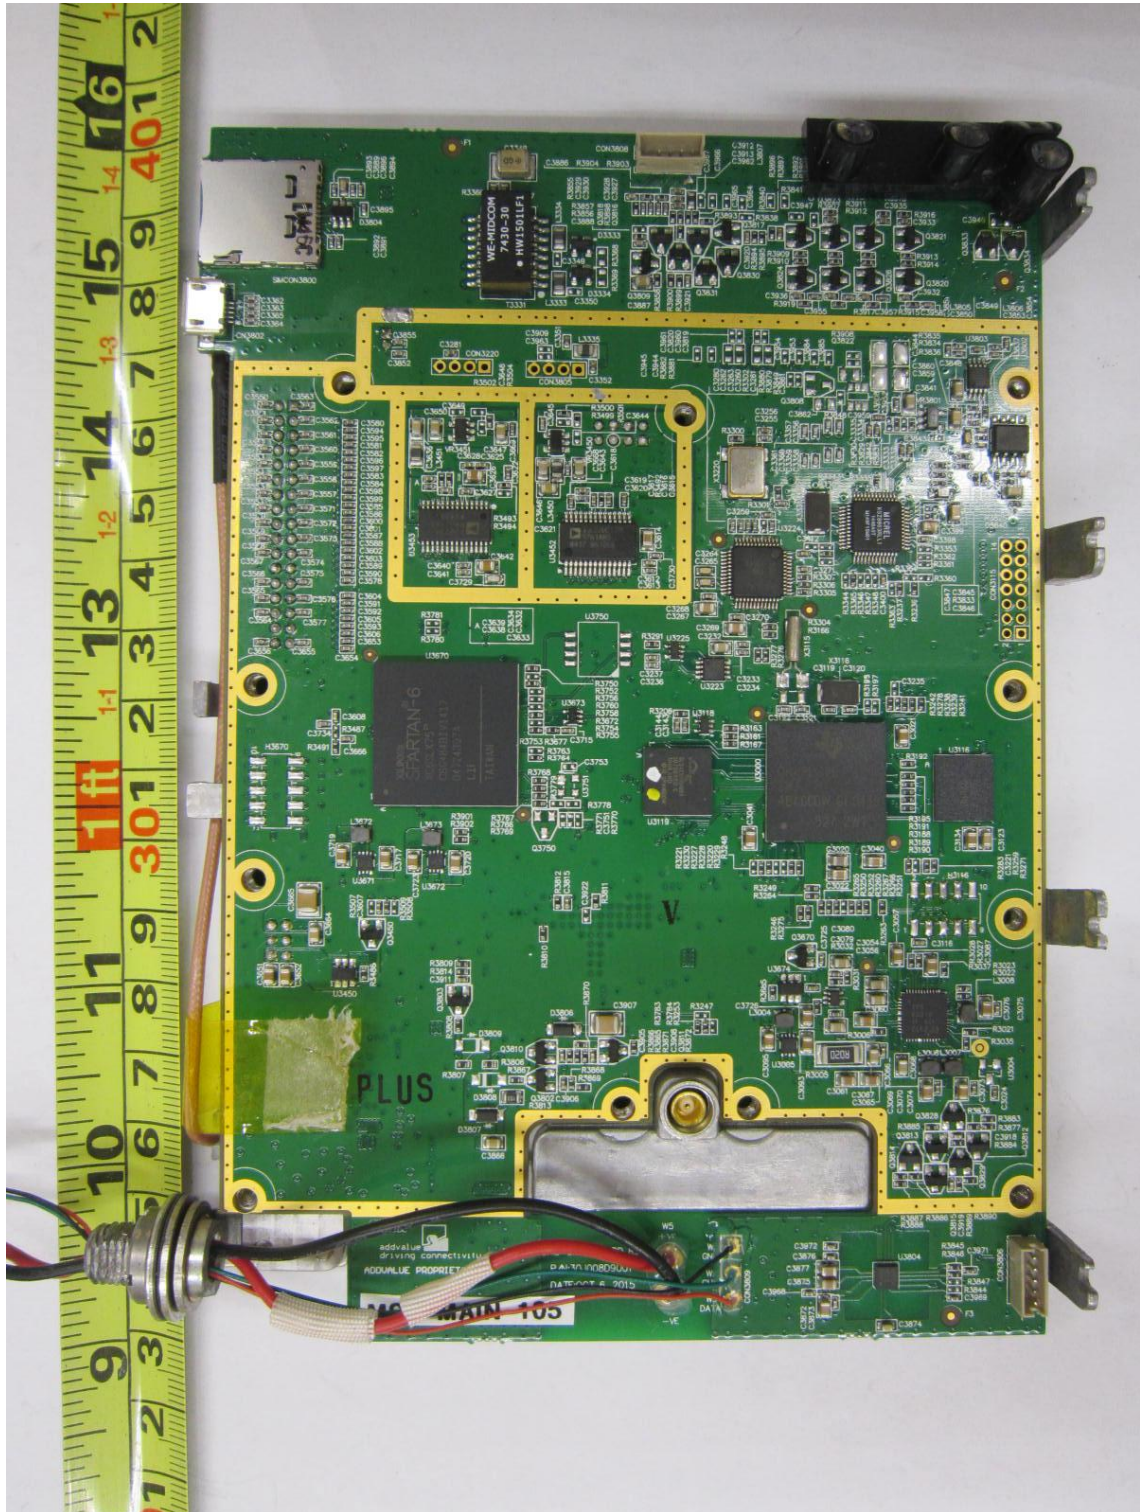

EUT Main-Board PCB Circuit with Shield Removed

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS


EUT PHOTOGRAPHS

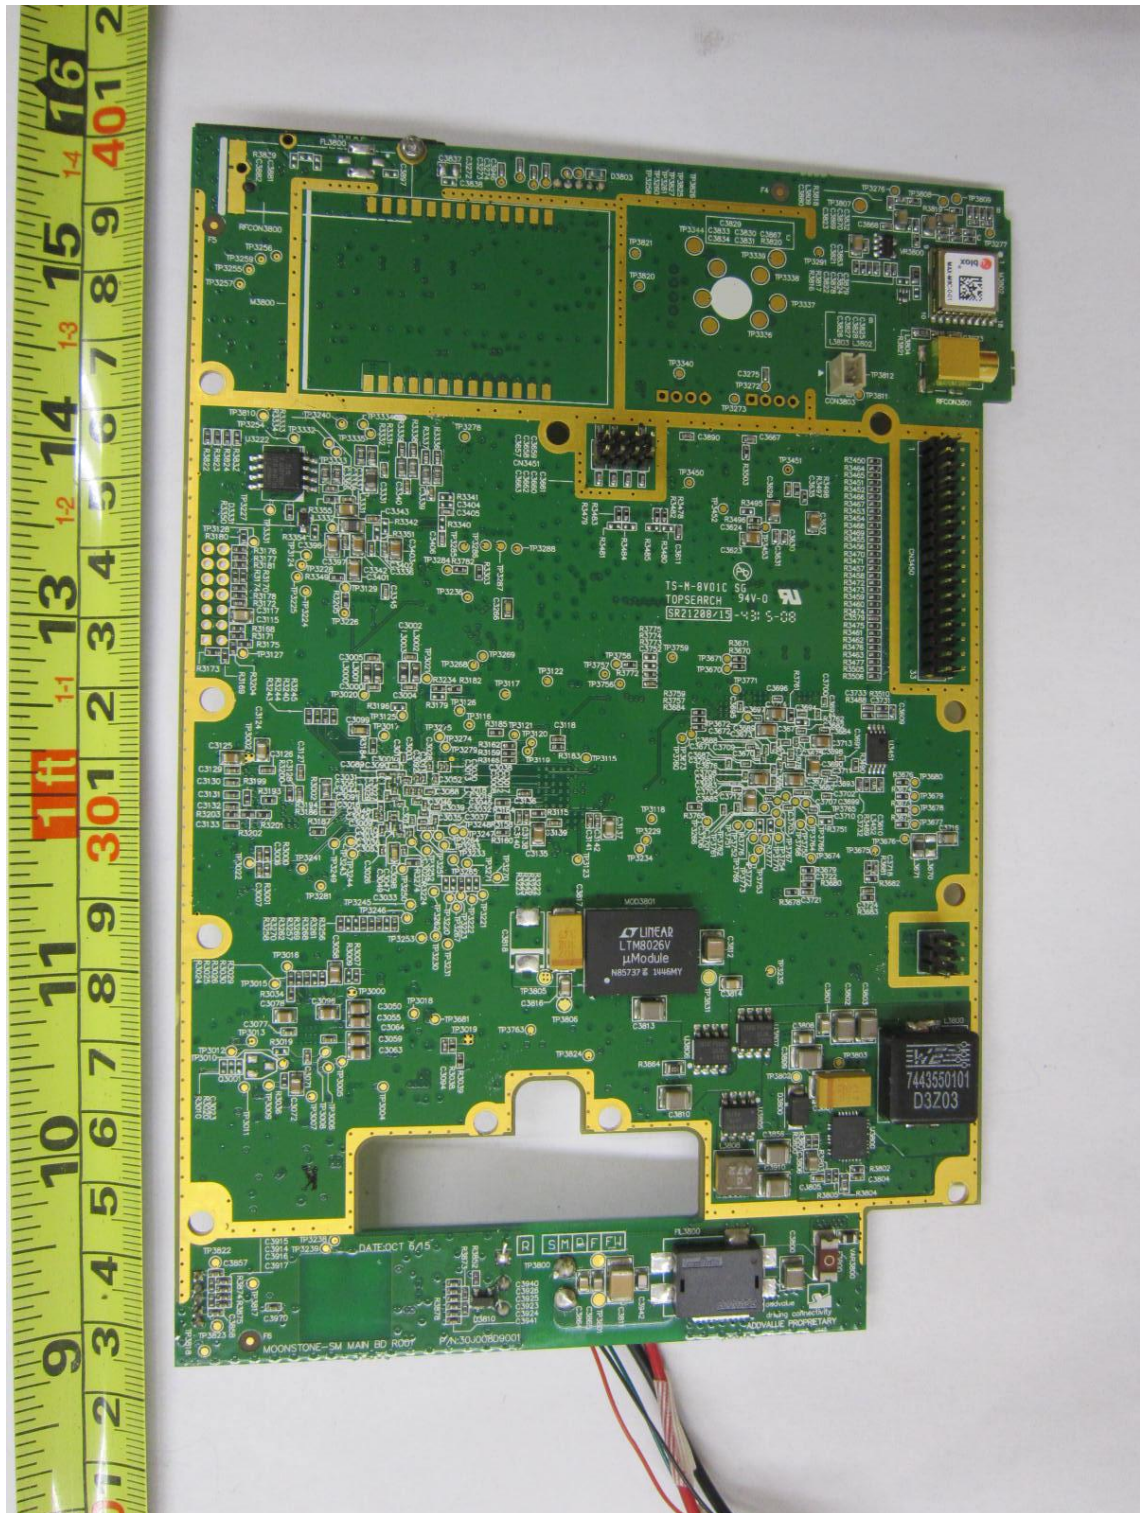

EUT Main-Board PCB Trace Side

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS – MAIN UNIT

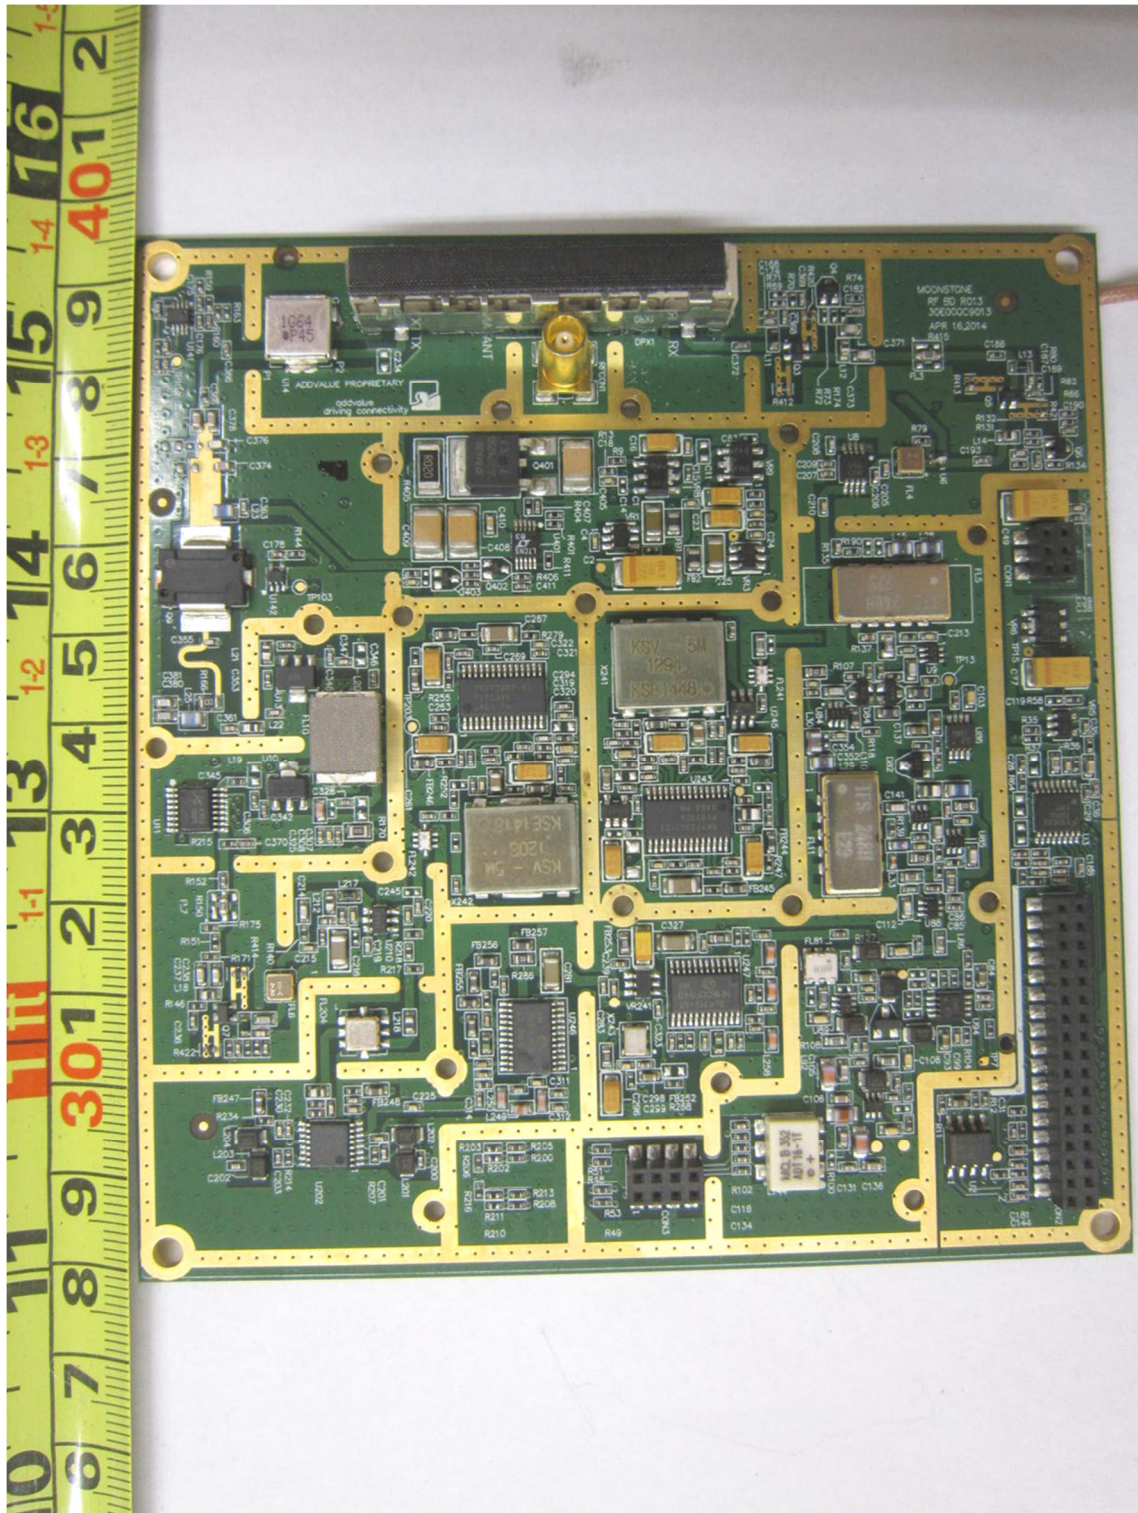


EUT RF Board PCB Component Side

EUT PHOTOGRAPHS



ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS

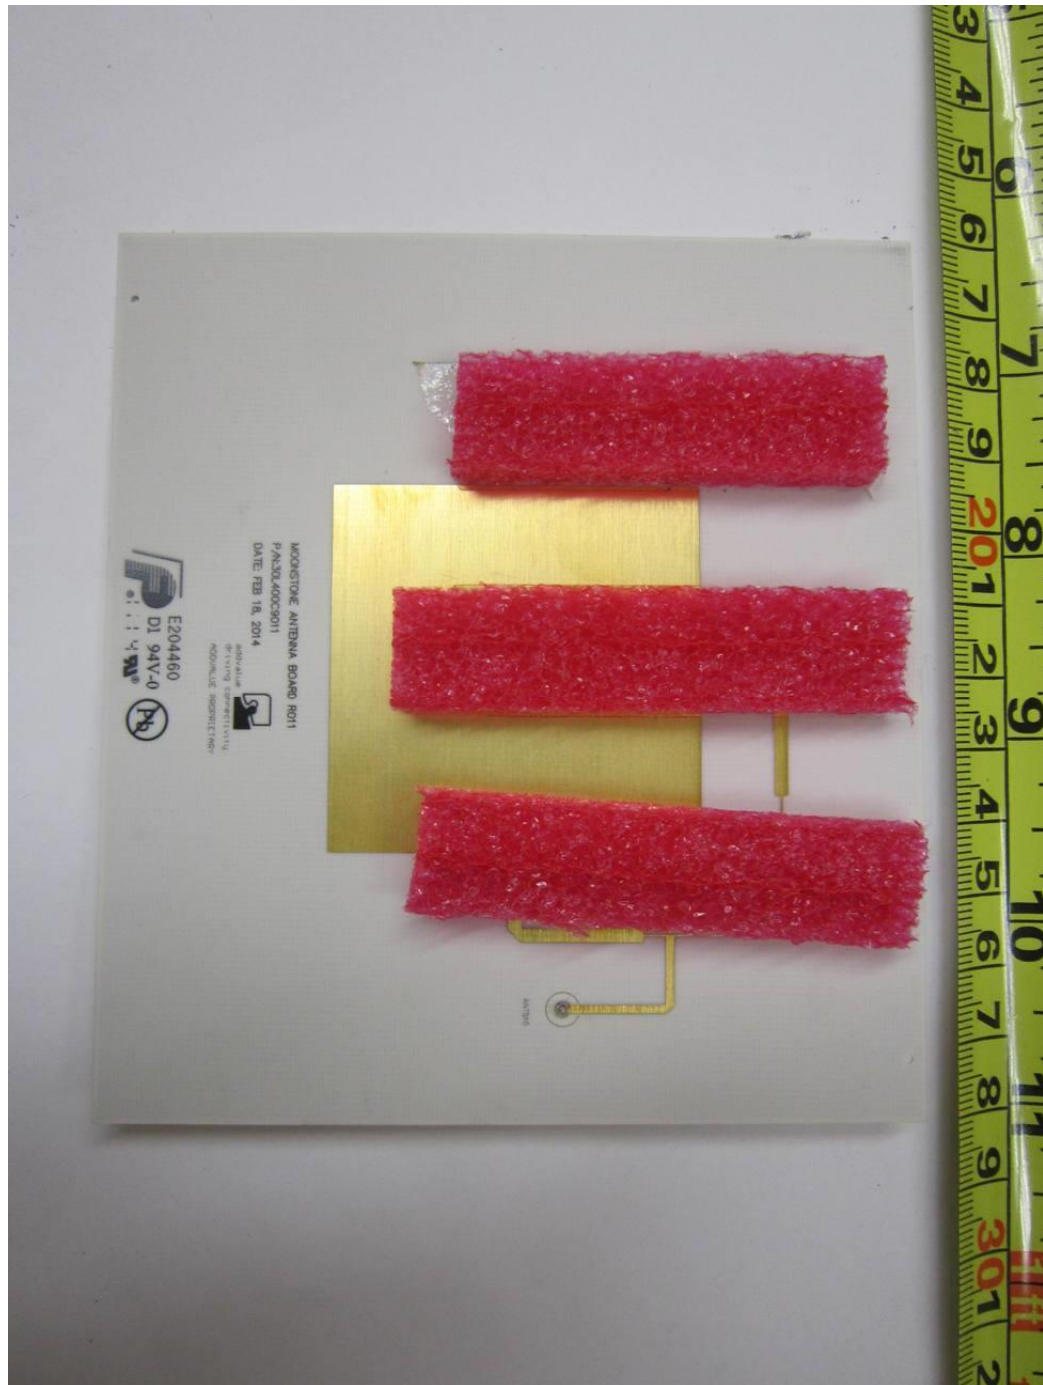


Antenna PCBA Component Side

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS


Satellite
Antenna

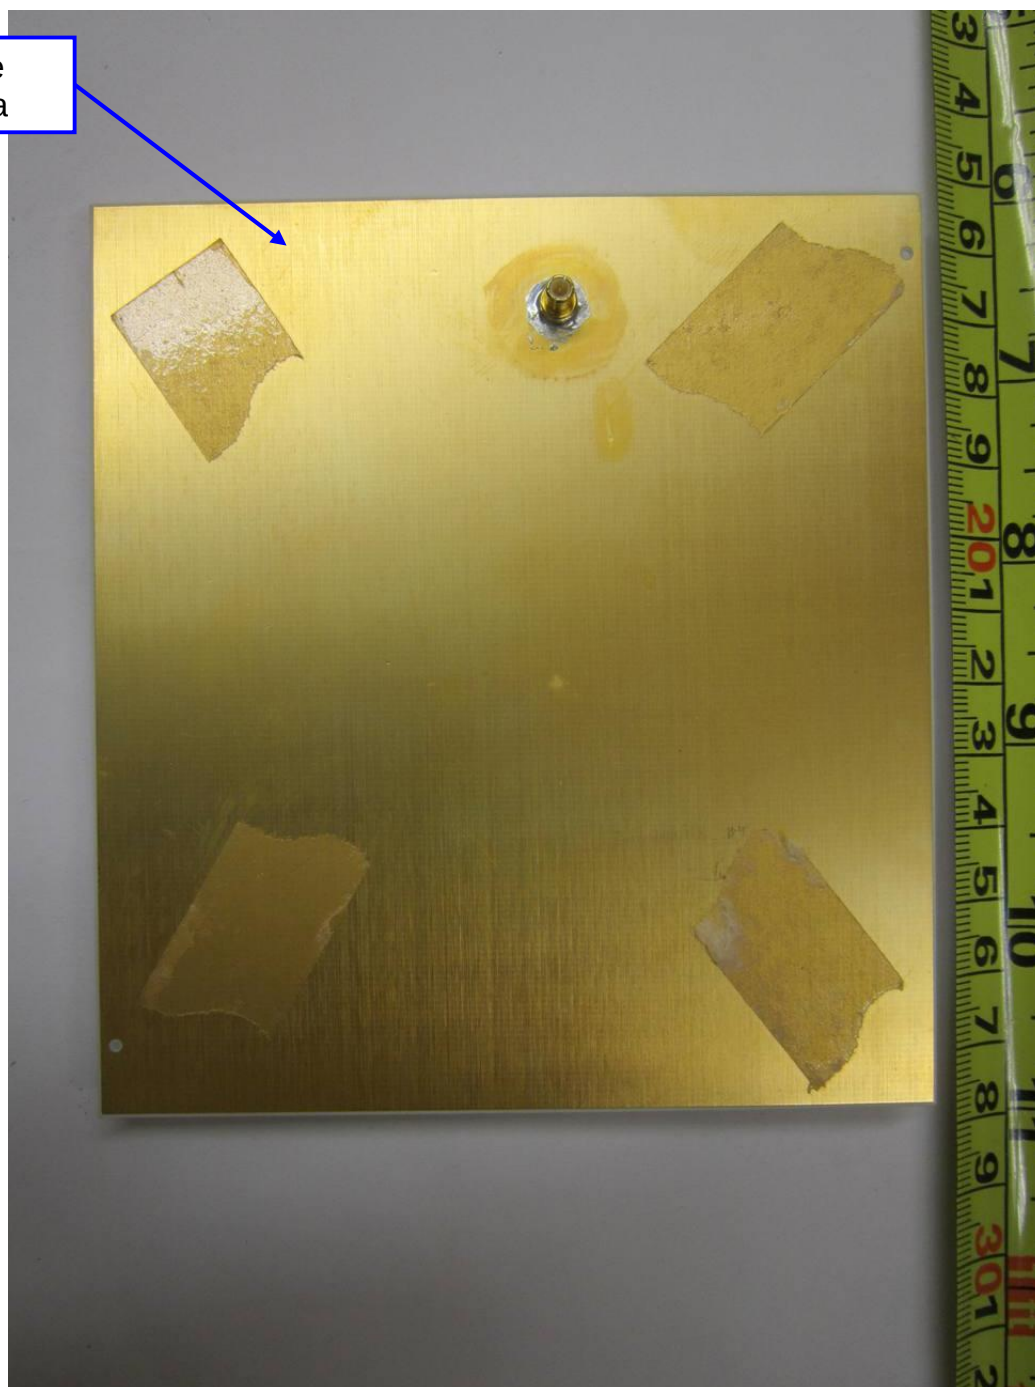


Antenna PCB Trace Side

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS – MAIN UNIT

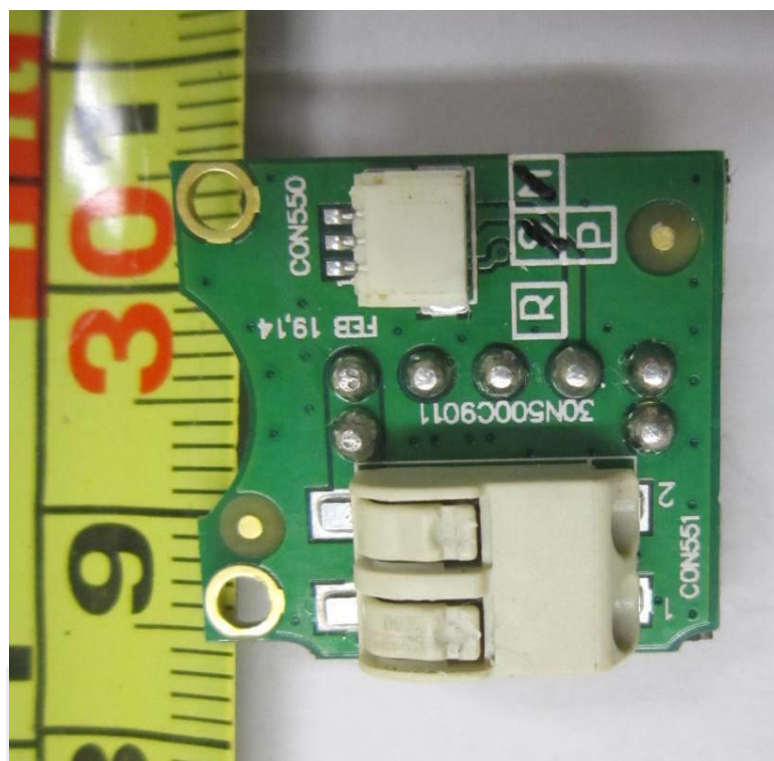


EUT Battery Interface PCB Component Side

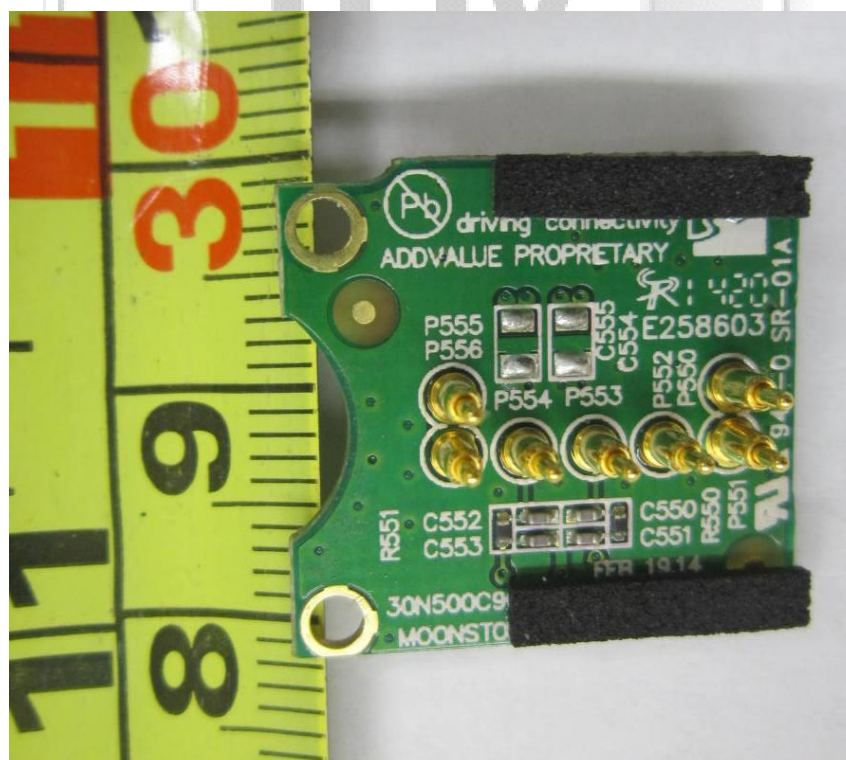

EUT Battery Interface PCB Trace Side

ANNEX A TEST SETUP / EUT PHOTOGRAPHS / DIAGRAMS

EUT PHOTOGRAPHS – MAIN UNIT

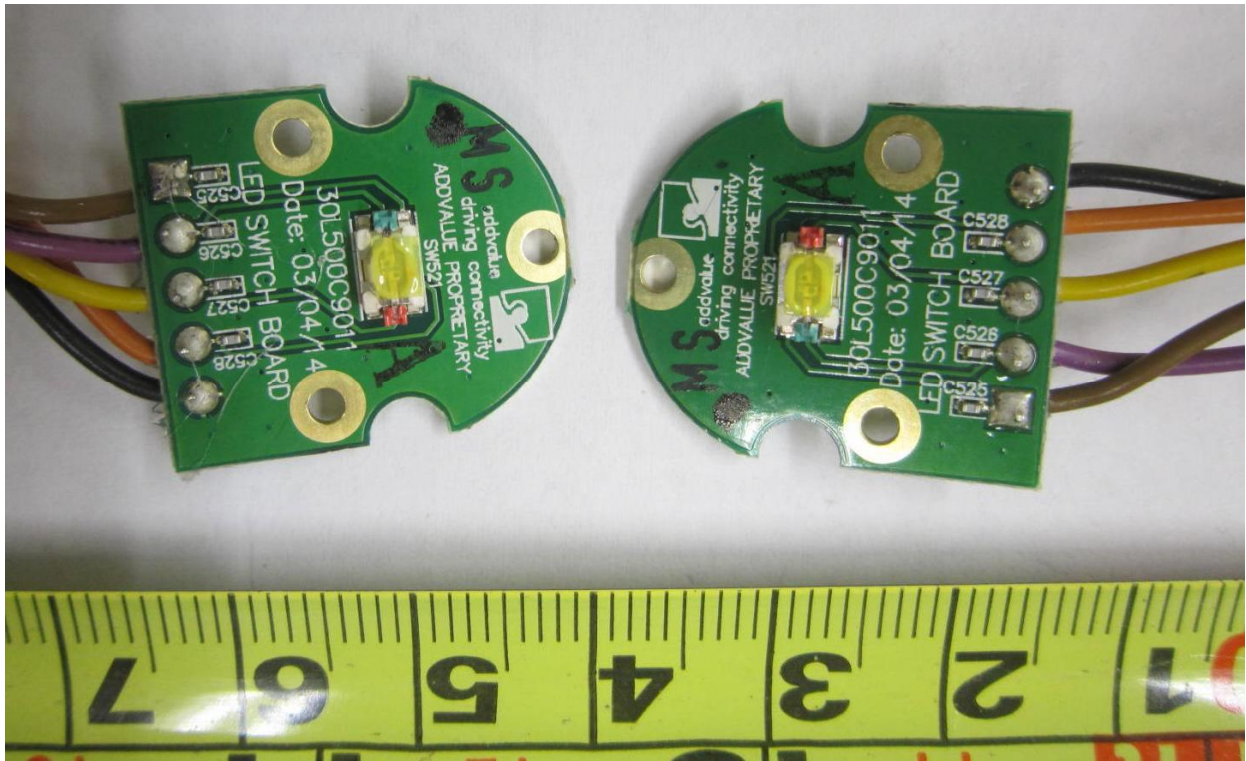

EUT Power ON/OFF Switch , Pointing Mode Switch PCB Component Side



EUT Power ON/OFF Switch , Pointing Mode Switch PCB Trace Side