

Thank you for purchasing this mobile. For the best performance, we recommend that you read the manual carefully.

SPECIFICATIONS	2
BASIC INFORMATION	2
KEY INSTRUCTION	2
INTERFACE ICONS	3
INSTALL THE BATTERY	3
INSERT SIM CARD	3
INSERT SD CARD	3
INSERT HEADPHONES.....	4
INSERT CHARGER	4
POWER ON/OFF YOUR PHONE	4
FUNCTION MENU	5
CONTACTS.....	5
MESSAGE	5
CALL LOGS	6
IMAGE VIEWER.....	6
CAMERA.....	7
AUDIO.....	7
MULTIMEDIA	7
<i>DV.....</i>	<i>7</i>
<i>Recorder</i>	<i>8</i>
<i>Video</i>	<i>8</i>
<i>Radio</i>	<i>8</i>
SETTINGS.....	9
<i>Phone settings.....</i>	<i>9</i>
<i>Display.....</i>	<i>9</i>
<i>Security.....</i>	<i>9</i>
<i>Call settings.....</i>	<i>10</i>
<i>Connections.....</i>	<i>11</i>
<i>Speed dial.....</i>	<i>11</i>
ORGANIZER.....	11
<i>Calculator</i>	<i>11</i>
<i>Clock</i>	<i>11</i>
<i>Stopwatch.....</i>	<i>12</i>
<i>Alarm.....</i>	<i>12</i>
<i>Touch</i>	<i>12</i>
<i>Timer</i>	<i>12</i>
PROFILES	12
MY FILES	12
CALENDAR	13
BLUETOOTH.....	13
GAMES.....	13

Specifications








Basic information

Phonebook capacity	SIM according to card's type, 2000 in the mobile	Audio/Recorder/ Radio	Support
Speaker	support	Camera/DV/Video	support
SMS	Supports 300 SMS capacity	Games	Support
Alarm clock/Calendar	support	USB Mode/Memory Card	support (T-flash card)

Key Instruction

Key Name	Function Description
Menu key	<ol style="list-style-type: none"> 1. In standby interface can enter the main menu 2. Answer a call
Send key	<ol style="list-style-type: none"> 1. Make or answer a call 2. Press Send key in standby mode to show all the call log
Back key	<ol style="list-style-type: none"> 1. End an active call or reject a call 2. Press back key in standby mode show the phonebook
End key	<ol style="list-style-type: none"> 1. End an active call or reject a call 2. Hold this key to power on/off 3. Exit from any interface to standby mode
Up/Down key	<ol style="list-style-type: none"> 1. Scroll the cursor up and down
Left/Right key	<ol style="list-style-type: none"> 1. Scroll the cursor left and right
0~9 key	<ol style="list-style-type: none"> 1. Enter numbers or characters while editing text 2. Long press 1 to activate language mailbox 3. Long press 0 to activate power-saving mode 4. Press 1 key to insert common symbols while editing text, excluding the numbers input mode

Interface Icons

Icon	Description
	GSM system signal strength
	Missed a call
	New message
	SD card
	Alarm
	Power indicator
	Power saving mode

Install the battery

1. Put the battery in the battery compartment, note that the metal end of the battery should be firstly inserted.
2. Put on the back cover.

Insert SIM card

1. Power off the phone and remove other external power.
2. Take off the back cover and remove the battery of the phone.
3. Insert SIM card into the SIM card slot in the phone.

Insert SD card

1. Turn off the phone power and disconnect other external power sources.
2. Remove the back cover and remove the battery from the phone.
3. Insert the SD card into the SD card slot of the phone.

Insert headphones

1. The headphone jack is located directly below the phone and can be used with standard or 3.5mm headphones.
2. Before inserting headphones, please lower the volume of the audio to avoid damaging the ears.

Insert charger

1. The charging location is directly below the phone, using the standard charger or Type-C interface charger.
2. Please ensure that the battery is on the phone before charging.

Power on/Off your phone

1. Hold the End key to power on the phone. The phone will automatically search for the network.
2. When the phone is powered on, hold the End key to power off the phone.

Function Menu

Contacts

You have 2 phonebooks in this mobile phone: SIM card and the mobile. The mobile can store 2000 or more phone numbers and the SIM card's capacity depends on its type.

New: Create a new contact.

Write message: Write a message and send the text messages to this current record.

Call: Make a call of current number.

Delete: Delete the current record.

Delete multiple: Delete the selected contacts.

Import/Export: Import T card contacts to the phone/Export phone contacts to T card/ copy SIM1 or SIM2 contacts to mobile, or copy phone contacts to SIM1/SIM2.

Send vCard: Send the vCard by SMS or MMS or Bluetooth.

Others:

[Own number]: You can view the local numbers.

[Service number]: You can view the service number.

[Memory status]: Check the storage capacity of the SIM card and phone contacts.

Message

All your messages are saved in this menu.

White message: You create SMS messages in this menu.

[Send]: send message.

[Insert template]: Choose common phrases.

[Add contact info]: Add a contact information from the address book.

[Add emoji]: Add a emoji to the text message.

[Save as draft]: The edited SMS will not be sent and will be saved in the draft box.

[Exit]: Exit the SMS editing interface.

Inbox: When you receive new messages, they are usually stored in your inbox. In the inbox, you can see information such as the sender, subject, date, etc., and you can open the email content, reply to the email, or delete it.

Outbox: When your recipient is abnormal, the message will fail to be sent and will be saved in this menu.

Drafts: When you start writing an message but have not yet completed it, or when you need to save an edited message before continuing, you can save the message to the draft box.

Sentbox: When you send emails, they are stored in the outbox so that you can view copies of the emails you send and track or modify them as needed.

security inbox: In the security message, you need to enter a password to enter.

Templates: You can pre-set your greetings to use when editing text messages.

Broadcast message: The community broadcasting system can be used to convey various important information, such as in emergency situations such as fires, earthquakes, etc.

Community broadcasting can be used to issue emergency alarms and instructions, reminding residents to take safety measures.

Voice mail server: Used to receive and store phone messages. When the caller is unable to directly communicate with the receiver, a voice message can be left, and the receiver can then obtain the message by dialing the phone number of the voice mailbox.

Call logs

All your call records are saved in this menu.

Missed calls: Display the missed calls about the latest time and date, caller's number and calling times.

[Details]: See the current record.

[Call]: Call the current number.

[Write message]: Send text messages to the current record.

[Add to contacts]: Save the phone number to contacts.

[Delete]: Choose to delete the current record.

[Delete all]: Delete all the records.

Dialed calls: Display the dialed calls about the latest time and date, caller's number and calling times.

Received calls: Display the answered calls about the latest time and date, caller's number and calling times.

Delete all: Can clear the call logs.

Call timers: Can view the duration of the call.

Image viewer

View or modify photos saved in the album.

Delete: Delete the picture.

Edit image: You can add text, textures, backlighting, and other effects to the image.

Mark: Select multiple or all contacts to delete.

Rename: Rename the current picture.

Slide play: Show the pictures in the gallery through a slide show.

Details: You can be view the image information.

After opening a picture, you can do the following:

[Set as wallpaper]: Use the picture as wallpaper.

[Screen saver]: Display images during screen sleep.

[Set as contact icon]: Set photos as contact avatars.

[Delete]: Delete current photo.

[Rename]: Change image name.

Camera

This feature allows you to feel the endless charm of the imaging world, your digital camera in time to capture a brief moment, beautiful photos become memory.

Shoot mode: Select shooting or recording mode.

Flash: Whether to turn on the flash.

Size: Select different resolutions.

Night mode: Enable night mode.

Brightness: Adjusting brightness.

Contrast: Adjusting contrasting colors.

Cont.shot: Enable continuous photography.

White balance: Adjusting white balance.

Delay: Delayed photography.

Effect: Choose different special effects.

Audio

The audio player can be play MP3 file and so on, let's you listen to audio files through headset or loudspeaker. Press the left and right keys to switch music.

Playlists: Go to the playlist and select a list to play the music.

Add: Add the music to the saved play list or to a new play list.

Set as ringtone: Set the music as incoming call ringtone or alarm ringtone.

Shuffle: Turn on or off shuffle.

Repeat: Setting Repeat mode.

Settings: Set up relevant information of music player.

Open review: Playback the music.

Exit: Exit audio player.

Multimedia

DV

This is a video recorder that can capture your beautiful moments.

Shooting mode: Select shooting or recording mode.

Flash: Whether to turn on the flash.

Size: Select different resolutions.

Brightness: Adjusting brightness.

Contrast: Adjusting contrasting colors.

Effect: Choose different special effects.

Recorder

The recorder can record the current sound.

Start recording: Start recording audio.

Recording file list: View recorded files.

Storage: Set the recording file save path.

File format: Set recording file save format.

Video

Videos from your T card or recorded videos can be played here.

Play: Play the current video.

Open: Open local browse or internet browse or local play list.

Fullscreen play: Videos are played in full screen.

Adjust brightness: You can adjust the video brightness.

Repeat: You can set up a loop to play all videos or a single video.

Shuffle: Turn on or off shuffle.

Set as: Set the selected video to screen saver or power on/off display.

Local video play mode: Choose audio and video synchronization or screen smoothness first.

Details: You can view the video information.

Settings reset: Restore default settings.

Help: If you have any questions, you can click on Help.

Exit: Exit Video Player.

Radio

Before using the radio, please insert headphones. Left and right switchable channels.

Auto search and save: Automatically search for FM channels and save them in the list.

Channel list: Set up the channel list and frequency

Save: Save the FM Channel.

Manual search: In put the frequency by manual

Open speaker: Turn on the speaker to play FM.

Background play: Play FM in the background.

Record: To open or close the recording.

Record timing: Timing for FM recording.

Record file list: View audio recordings file.

Storage: Set FM recording file save location.

Help: Operation instructions for FM use.

Settings

Phone settings

Time & date

[Set time/date]: Set the display date and time

[Time format]: Choose the time and date format

[Date format]: Choose the date format

[Update time settings]: Turn on or off to automatically update the time according to the time zone

Language settings

Display language: Choose the current language from languages, then the phone menus and interface refresh for the corresponding subsequent language.

Writing language: Set the Pref. input method.

Shortcut settings

Define the functions of the up and down keys in the main interface.

Auto power on/off

Set the automatic power on/off time.

Power management

You can enable power-saving mode and check the battery percentage.

Restore factory settings

Restore factory Settings after entering the password. (The default password is "1234")

Display

Wallpaper settings: Set the stand-by wallpaper.

Idle display settings: The following functions are displayed or not on the standby interface(Time& date/Master SIM/Slave SIM/Today's schedule/Timer/Music/ Radio/STK).

Screen saver settings: Turn on or off the screensaver.

Contrast: Set screen brightness.

Keypad backlight time: Choose keypad backlight time for off、20 secs、10 secs、5 secs
Night mode.

Font size: Can adjust the font size of the system.

Auto keypad lock: Choose the keypad lock for off、15 secs、30 secs、1 min、5 mins.

Security

PIN

Activate or deactivate SIM1/SIM2 PIN lock.

Modify PIN2

Set new passwords including PIN1, PIN2 and phone password. Note: Please remember your password firmly in time after changing.

Phone locked

Activate or deactivate the Phone lock.(The default password is 1234).

Modify the phone password

Set new passwords for phone Lock. Note: Please remember your password firmly in time after changing.

Privacy

To encrypt phonebook, call History, Messages and so on.

Lock screen by end-key

Turn on or off ,Press end to lock the screen.

Fixed dialing number

To set the fixed number (Note: If your SIM card supports can be restricted only to dial the selected phone number. When this feature is turned on, only a fixed dial-up table can call the phone number or a few figures in the table at the beginning of the phone number).

Call settings

Dual-SIM

[Standby mode]: You can choose SIM1/SIM2/Flight mode/select when power on.

[Reply by original SIM]: You can choose Reply call or Reply message by original SIM .

[Set SIM name]: Can set SIM name.

[Set dual SIM call diver]: Support double card mutual transfer function.

Call forwarding

Choose SIM1/SIM2 to open, close or enquire the call forwarding function.

Call waiting

Select SIM1/SIM2 to open, close or inquire call waiting.

Call barred

Select SIM1/SIM2 to open, close or inquire call barred.

Hide ID

Select SIM1/SIM2 to hide ID or display own ID or display ID by network.

Others

[Call time minute reminder]: Choose display the call time or not when the phone in-calling status.

[Auto redial]: Choose whether automatic redial will be implemented when the called party is in the busy or have no response.

[Vibration when connected]: Vibrating reminder during connection.

[Reply SMS after reject]: To open or close the message blocking function.

[Auto Call Recoring]: Turn it on, The call can be recorded automatically.

Connections

Network account

Management and editing the network for the Internet browser settings, please consult the specific settings to be transported by the network.

Data service

Turn on or off data service.

Data roaming

Turn on or off data roaming.

Prefer SIM

Choose to use SIM1 or SIM2 data traffic to access the Internet.

Network selection

Select automatic or manual method to search the network.

Network type

Choose network type:4G/3G/2G.

VoLTE

The full name for VOLTE is Voice Over LTE, which stands for high-definition Voice calls over 4G networks. After opening Volte, all the services will be carried on the 4G network. So, signal and sound quality will be much better when we talk.

Speed dial

You can set a number first,then in the main interface,long press the number to dial the number.

Organizer

Calculator

The cell phone support continuous four mixed arithmetic operation and the operation is simple, practical and convenient.

Clock

Here, you can check the current time in other cities. You can choose to add a city or delete a city for easy viewing in the future.

Stopwatch

Click on the start button to start the stopwatch, which can record the time. When the stopwatch is running, you can click on the count to record the time of each turn. Press the pause button to stop.

Alarm

You can set three alarms at the same time, customize the name, time, music, and cycle.

Touch

Click ON to turn on the flashlight, which will light up above the phone. Click OFF to close.

Timer

This is a timer that can be pre-set and will sound a reminder when the time is up.

Profiles

There are normal mode, silent mode, conference mode, indoor mode, outdoor mode, headphone mode, and Bluetooth headphone mode here. You can pre-set the functions in each mode. The specific functions are as follows:

Rename: Change Mode Name.

Ring settings: Customize call and SMS music.

Adjust volume: Adjust the volume during incoming calls, text messages, alarms, calls, and shutdowns.

Ring type: Select ringing or vibration mode.

Other alert rings: Choose whether to turn on keyboard sound, on/off sound, etc.

My files

You can manage and assign several folders in this menu by transferring, copying and moving the files saved in these folders.

Note: Part of the folders in this menu is hidden by default. You just need to save a file with its format to the root folder of the mobile, and then the system will recognize it automatically. You can move the file to its corresponding folder.

New folder: Create a new folder.

Delete: Delete a folder.

Details: Check the file details

Edit: Can rename or copy or cut the file.

Search: Enter the keywords can to search in the file manager.

Sort: Files can be classified by name, time, etc.

Mark: Select multiple or all files to delete.

Memory status: View phone/memory memory ; Format phone or memory card; Rename memory card.

Calendar

In the calendar, you can view the current date and week. For more operations, please click on the options.

Add a new schedule:Add a schedule.

View schedules:View the schedule for the current date.

All schedules:View all schedules.

Clear today's tasks:Clean up the schedule set for today.

Clear all:Clear all schedules.

Go to date:Jump to the specified date.

Weekly:Show only weekly.

Daily:Only display daily.

Bluetooth

Bluetooth technology is a wireless technology connection that includes connecting devices such as mobile phones, headphones, speakers, etc. Turn on the Bluetooth switch, the following are the function details:

Bluetooth visibility: Hide this device, which means others will not be able to discover you.

Paired device: You can connect a new device or view the connected devices.

Device name: Your device name can be customized.

Bluetooth file storage: Location for storing files.

Help: If you have any questions, you can check the help, which may be helpful to you.

Games

This phone has two free games for entertainment. Below are some explanations of the features:

High Score: Can view current scores and historical highest scores.

Sound: Turn on or off sound.

Help: If you have any questions, you can check the help, which may be helpful to you.

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Absorption Rate (SAR) information:

This mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset,including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may notcomply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.