


Radio Control Quad

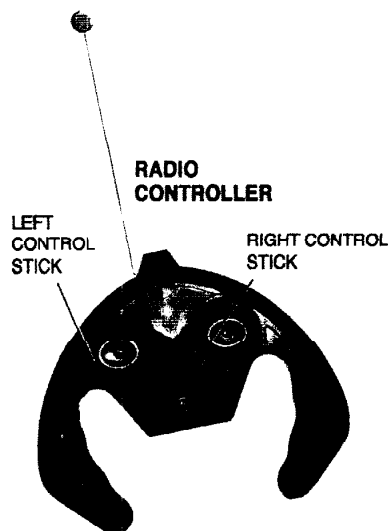

RAISING AND GO STRAIGHT



GO "3"



GO ROUND AND ROUND



RAISE AND GO AROUND



GO ROUND WITH SINGLE WHEEL


HOW TO PLAY TURN THE BUTTON "ON" LOCATED AT THE BOTTOM OF CHASSIS

FORWARD PUSH TWO CONTROL STICKS UP
LEFT PUSH RIGHT CONTROL STICK UP
RIGHT PUSH LEFT CONTROL STICK UP

REVERSE PUSH TWO CONTROL STICKS DOWN
LEFT PUSH RIGHT CONTROL STICK DOWN
RIGHT PUSH LEFT CONTROL STICK DOWN

TURN LEFT QUICKLY PUSH RIGHT CONTROL STICKS UP AND PUSH LEFT CONTROL STICK DOWN AT SAME TIME
TURN RIGHT QUICKLY PUSH LEFT CONTROL STICKS DOWN AND PUSH RIGHT CONTROL STICK DOWN AT SAME TIME

GO ROUND N ROUND PUSH LEFT CONTROL STICKS DOWN AND PUSH RIGHT CONTROL STICK DOWN AT SAME TIME AND HOLDING ON

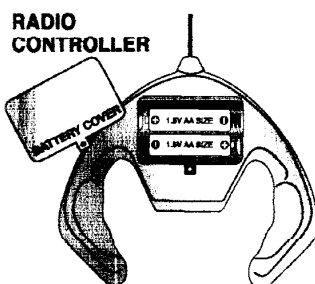

BATTERY REPLACEMENT

REMOVE BATTERY COVER INSTALL
 4 "AA" SIZE BATTERIES (FOR VEHICLE) AND
 2 "AA" SIZE BATTERIES (FOR RADIO CONTROLLER)
 (BATTERIES NOT INCLUDED)

- DO NOT MIX OLD AND NEW BATTERIES
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES
- BATTERIES ARE TO BE INSERTED WITH CORRECT POLARITY

"Modifications not authorized by the manufacturer may void users authority to operate this device"

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FE EXCITE
840

