 


# TG1009 Fire and rescue stunt vehicle manual

**Notes:**  
 This product is not suitable for children aged 3 or under. When using electrical products, precautions must be taken to prevent the risk of an electric shock.  
 -Please do not use the product for a long time.  
 -Do not attempt to modify or re-assemble this product. Unauthorized changes may void your right to use the product.  
 -There are small parts in this product. The children should play it with the guard of the adults, and never swallow the small parts into their mouth.

Thank you for purchasing one of our toy products. To ensure that you get the most out of your new purchase, please read these instructions carefully before using the toy for the first time. They contain important information on how to operate the product.

## Fire and rescue Stunt

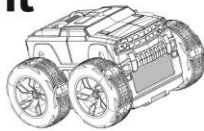

### Inserting the remote control batteries

 
#### Remote control

1. Check the ON/OFF switch is in the "OFF" position.
2. Use a screwdriver to loosen the screw.
3. Remove the battery cover.
4. According to the polarity indicated inside in the remote control, put the 2x1.5v AA battery into the battery compartment.
5. Put the battery cover back and tighten the screw.

#### Remote control car

1. Check the ON/OFF switch is in the "OFF" position.
2. Use a screwdriver to loosen the screw.
3. Remove the battery cover.
4. Install the battery as indicated in the picture on the right.
5. Put the battery cover back and tighten the screw.

Note: If breakdown occurs in the product, please take out the battery for one minute, and then reinsert it. If the breakdown still exists, please replace the battery. The battery can only be installed by the adults.

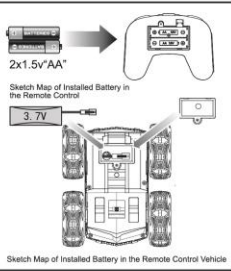


### Care and maintenance

Remove the batteries when you do not plan to use the toy for an extended period.  
 Wipe the vehicle clean with a damp cloth.  
 Do not expose the toy to high temperatures, moisture or direct sunlight.  
 Do not immerse the toy in water, as this may damage the electrical components.  
 If the wheel is too dirty or rolls inflexibly, this may influence the operation experience.  
 Please check it and clear up the foreign matters.

#### Caution

- When the wheels of remote control car is rolling, Do not touch it in order to avoid injury of yourself or damage of the car.
- Please do not play by the road or in dangerous places in case of accidents.
- Avoid operating the vehicle in the rain or grinding the remote control vehicle over the puddle in case of breakdown.
- Avoid operating the vehicle alongside the river, lake or pond in case the remote control or remote control vehicle fall into the water.
- If recharging is unnecessary, please take the battery out of the remote control vehicle and remote control.
- The car will get a poor rolling effect if play on the carpet.
 
### Introduce the function of the remote control and the vehicle

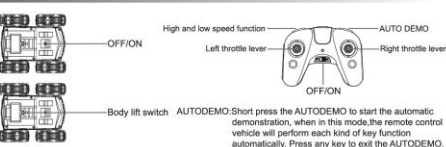

High and low speed functions: By default, turn on the car at high speed. Press the button Press the button to change at low speed. Press again to move at high speed.

#### Using the vehicle

- Switch on the vehicle using the ON/OFF switch.
- Switch on the vehicle ON/OFF switch, make the frequency of the remote control and remote control vehicle match each other, then you can operate the remote control vehicle.
- Switch off the vehicle and remote control after use.
- The playing time is about 20 mins.
- The control range is about 30 meters. If out of 30 meters range, it may lose control.

#### Caution:

In order to avoid losing the remote control vehicle or making it lose control, follow the following steps all the time:  
 1. Turn on the remote control. 2. Turn on the remote control car.  
 Turn it off according to the opposite steps.

### Charging the batteries

#### A. Sketch Map of the Recharging in A Vehicle Battery



Sketch Map of the Recharging in Vehicle Battery

#### B. Battery charging

- Insert the USB charging into the socket. Insert the battery plug into the plug of the USB cable. (Pay attention not to confuse the positive and negative polarity).
- A full charge takes 150 minutes. When charging the LED indicator turns into red, when charging is complete, the LED indicator stays off.
- Regularly inspect the toy, battery charger, charging cable, connectors and other components for signs of damage. In the event of any damage, discontinue use and send the parts for repair.
- In case of abnormal responses such as suspicious peculiar smell, noise or smog in the charger, please remove the power supply at once.
- Please recharge with the dedicated USB delivered by the original factory. Never use broken USB or USB of other brands.
- Please do not recharge the swelling, leaking or broken battery.
- Please do not overcharge the battery. When the battery is fully recharged, please pull out the charger.
- Please do not recharge on the surface of the objects near inflammable things (carpet, wood floor, solid wood furniture, etc.) or of conductive things. While recharging, please keep the battery within the range of visibility.

#### Battery safety information

1. The batteries must only be charged under adult supervision.
2. Before charging the batteries, remove the battery compartment from the vehicle chassis.
3. Remove empty batteries from the vehicle and remote control.
4. Ensure that the vehicle is switched off before inserting the batteries.
5. Install the battery according to the instruction inside the battery box. Make sure not to confuse the positive and negative polarity of the battery.
6. Do not attempt to charge non-rechargeable batteries.
7. Do not short circuit the battery terminals.
8. If you do not plan to use the vehicle for an extended period, remove the batteries from the vehicle and remote control to prevent leakage.
9. Do not throw batteries into open flames, as this may cause them to explode or leak.
10. Do not mix old and new batteries or batteries from different manufacturers.
11. Only use batteries from recommended or reputable manufacturers.
12. Regularly inspect the batteries for signs of leakage.
13. It is suggested not to use more than 3 batteries for one single play.
14. If leaking occurs in the battery, please avoid touching the liquid with the skin and eyes. If it touches the skin, please clean the skin with soap and clean water at once. If it touches the eyes, please wash the eyes with a lot of cold water at once and see the doctor right away.
15. This equipment is composed of electronic components and battery. The electric appliance garbage should be given special care according to the local requirements for garbage disposal.
16. Keep this instruction manual in a safe place for future reference. It contains important information on how to use the product safely.

### FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF frequency band: 2408.5MHz - 2468.5mhz  
 EIRP: 8.91 dBm (For EU)

### Function and operation of the product

<p><b>Forward</b></p> <p>Push both throttle levers upward to make the vehicle move forwards</p>	<p><b>Backward</b></p> <p>Push both throttle levers downward to make the vehicle move backwards</p>
<p><b>Turn right</b></p> <p>Push the left throttle lever upward to make the vehicle turn right</p>	<p><b>Turn left</b></p> <p>Push the right throttle lever upwards to make the vehicle turn left</p>
<p><b>360° left rotation</b></p> <p>Push the left throttle lever downward and right throttle lever upward, the vehicle rotates towards the left on site</p>	<p><b>360° right rotation</b></p> <p>Push the left throttle lever upward and right throttle lever downward, the vehicle rotates towards the right on site</p>
<p><b>BODY MODE OF OPERATION:</b></p> <p>When the car body lift switch, touch the ground, the remote control car switch to the other side of the drive.</p>	
<p><b>High and low speed function</b></p>	<p><b>AUTO DEMO</b></p>