


SAR Test Setup Photographs

System 1 Basic		
EUT Side Definition		
Mode	Side	
1	Back	
2	Side 1	
3	Side 2	
4	Side 3	
5	Side 4	
		


Phantom Position : Flat	EUT side : Back
Spacing to phantom : 0 mm	Accessory : N/A

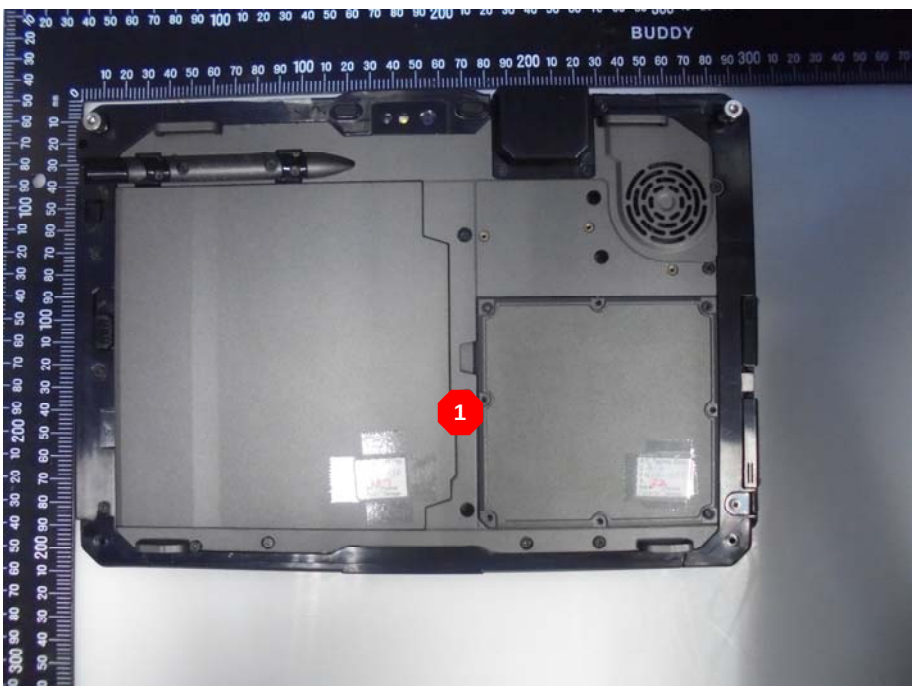

Phantom Position : Flat	EUT side : Side 1
Spacing to phantom : 0 mm	Accessory : N/A




Phantom Position : Flat	EUT side : Side 1 (Battery 2)
Spacing to phantom : 0 mm	Accessory : N/A

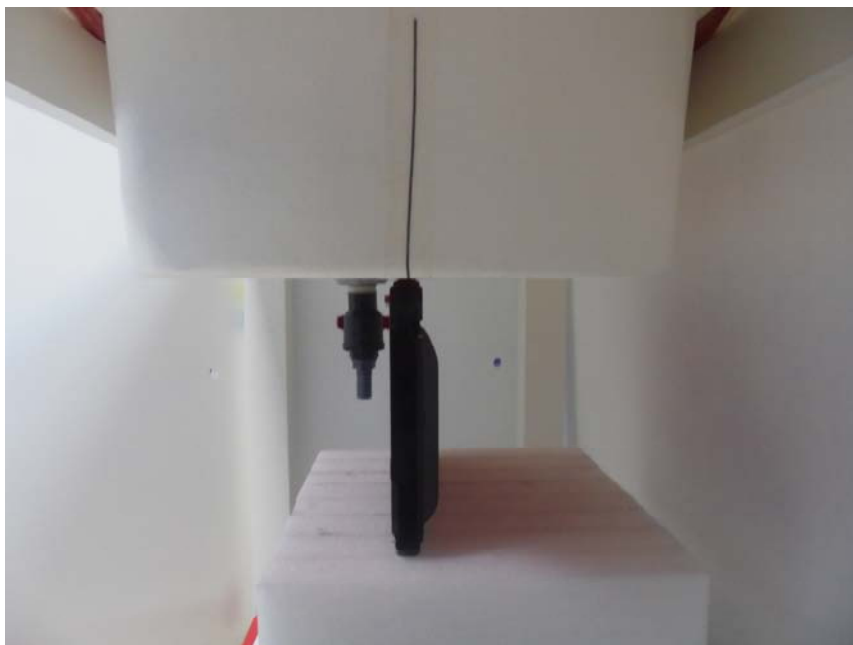

Phantom Position : Flat	EUT side : Side 2
Spacing to phantom : 0 mm	Accessory : N/A



Phantom Position : Flat	EUT side : Side 2 (Battery 2)
Spacing to phantom : 0 mm	Accessory : N/A

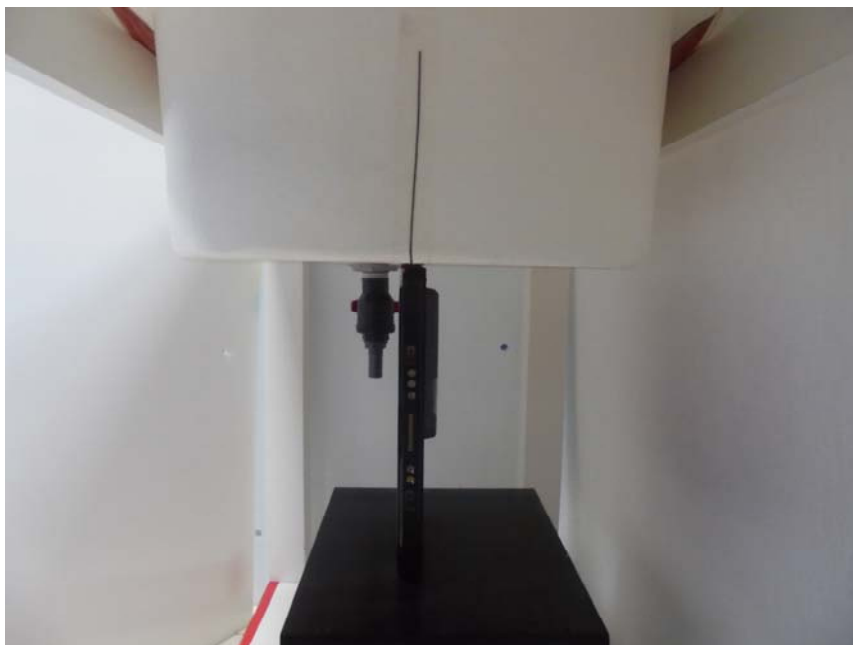

Phantom Position : Flat	EUT side : Side 3
Spacing to phantom : 0 mm	Accessory : N/A



Phantom Position : Flat	EUT side : Side 4
Spacing to phantom : 0 mm	Accessory : N/A
	

System 2 Full		
EUT Side Definition		
Mode	Side	
1	Back	
2	Side 1	
3	Side 2	
4	Side 3	
5	Side 4	
		

Phantom Position : Flat	EUT side : Back
Spacing to phantom : 0 mm	Accessory : N/A




Phantom Position : Flat	EUT side : Back (Battery 2)
Spacing to phantom : 0 mm	Accessory : N/A



Phantom Position : Flat	EUT side : Side 1
Spacing to phantom : 0 mm	Accessory : N/A



Phantom Position : Flat	EUT side : Side 1 (Battery 2)
Spacing to phantom : 0 mm	Accessory : N/A

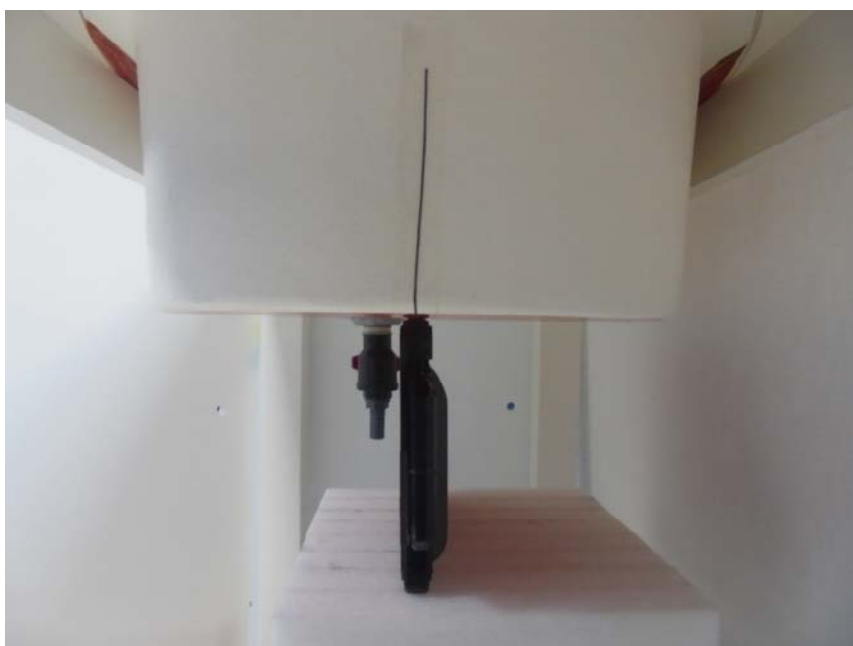


Phantom Position : Flat	EUT side : Side 2
Spacing to phantom : 0 mm	Accessory : N/A



Phantom Position : Flat	EUT side : Side 3
Spacing to phantom : 0 mm	Accessory : N/A



Phantom Position : Flat	EUT side : Side 3 (Battery 2)
Spacing to phantom : 0 mm	Accessory : N/A

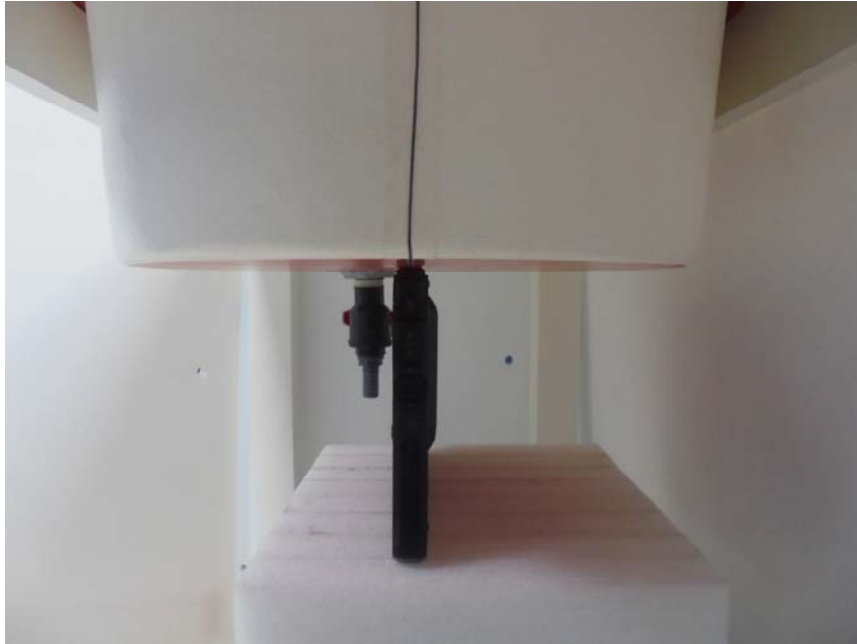

Phantom Position : Flat	EUT side : Side 4
Spacing to phantom : 0 mm	Accessory : N/A

