

EMI TEST REPORT



Report Number : KSQ-FCC030601

FCCID : RAMSTORMSHELTER

Appendix B - User's Manual

Please see attached document(s).

User's manual for Flex pager

FUNCTION / DISPLAY INDICATORS FUNCTION / DISPLAY INDICATORS

1. Message Protected :Message is saved
2. Service Area Indicator :Antenna symbol indicates that the pager is within the service area
3. Duplicated Message :If you receive a page and that same page is already within your pager, symbol will be displayed
4. Auto Power ON/OFF :The pager shuts automatically on and off at the selected time of the user
5. Alarm :The pager will alert you at the time the user has selected.
6. Alert Mode :There are four kinds of alerts.
 - 1)Sound alert :five kinds of Short beep tones
 - 2)Silent
 - 3)Melody :Audio alert
 - 4)Vibration
7. Low Battery :It needs replacement if battery level is low
8. Message Continuation :When the message is longer than 12 characters the message continues displayed.

RECEIVING AND READING MESSAGES RECEIVING AND READING MESSAGES

- When a message is received, your pager alerts for eight seconds and received message is displayed on the screen for 10 seconds.
- That number indicates how many numeric messages were received.
- Your pager can display up to 12 numeric characters on the screen and receive each message.
- When a message is received
 - 1)Press any button to stop the alert or vibration.
 - 2)Press the read button to display the message received.
 - 3)Press the read button again to display message
 - 4)When the message is longer than twelve characters Press the read button again in order to receive the message.

MESSAGE CONTINUATION MESSAGE CONTINUATION

- 1)When the numeric message is longer than 12 characters, the message continuation symbol is displayed. Press the read button again to receive the whole message.

UNREAD MESSAGES / NO PAGES / TONE ONLY UNREAD MESSAGES

/ NO PAGES / TONE ONLY

- 1)Unread Messages

If the messages are unread "UNREAD" will be displayed with the number of unread messages(ex 2)No Page

EMI TEST REPORT



Report Number : KSQ-FCC030601

FCCID : RAMSTORMSHELTER

If no messages are received, "NO PAGES" is displayed for one second when you press read button.

DUPLICATED MASSAGES DUPLICATED MASSAGES

- If a new message is received and is exactly the same as a message already in memory, the d displayed to indicate that.

MISSED CALL MISSED CALL

When you receive the numeric message "MISS CALL" indicate how many messages are missed.

If there is no missed call, "NO MISSED" will be displayed.

ERASING MESSAGE(S)ERASING MESSAGE(S)

1) Erasing all messages

- From the standby screen press mode button for two seconds press and release mode button CLEAR" will be displayed.
- Press read button and "SURE" will be displayed.
- Press read button again to erase the message.

All protected message will not be erased from memory

2) Erasing each message

- After finding to be erased, press mode button for two seconds and release until "ERASE" is displayed.
- Press read button to erase the message

SETTING PAGER ALERT SETTING PAGER ALERT

There are four different types of alert

- Tone alert : 5 different short beep tones
- Melody alert : 8 different of melodic tones
- Motor alert :Vibrator with no alert tone
- Silent :Neither alert tone nor vibration

1) Setting tone alert

- From the standby screen, press mode button for 2 seconds to select function mode.
- Press mode button until "SET ALERT" will be displayed.
- Press read button
- Press and release alert tone with mode button
- 8 different melody tones, 5 different alert tones, vibration mode and silent mode will be displayed.
- Select an alert mode which you want and press read button to activate your selection.

ALARM SETTING ALARM SETTING

1) To enable the alarm

- From the standby screen, press mode button for two seconds to select function mode.
- Press mode button until "SET ALARM" will be displayed.
- Press read button until "OFF" will be displayed with flash.
- Press mode button and "ON" will be displayed with the symbol.
- At this point, the hour digits will flash after pressing the read button
- Set the time of alarm in the same as that of time setting.

EMI TEST REPORT



Report Number : KSQ-FCC030601

FCCID : RAMSTORMSHELTER

2)Disable to the alarm

- From the standby screen, press mode button until "SET ALARM" will be displayed.
- Press read button and "ON" will be displayed with flash.
- At this point, "OFF" is displayed after pressing mode button and press and release read button to automatically return to the standby screen.

TIME AND DATE SETTING TIME AND DATE SETTING

From the standby screen, if press mode button for two seconds it will be returned to function. Press mode button until "SET TIME" is displayed the month digits begin to flash after pressing. Press mode button to select month and then press read button to activate your selection and then mode button to select date and then press read button to activate your selection and then you follow the same instructions in steps to set the hour and minute

AUTOMATIC ON / OFF AUTOMATIC ON / OFF

This feature allows you turn on and off at a selected time of day.

1)To enable automatic ON / OFF

- From the standby screen, press mode button for two seconds to select function mode.
- Press mode button until "SET AUTO" will be displayed
- Press read button "OFF" will begin to flash.
- Press read button and "ON" is displayed with the symbol screen.
- Press read button and then hour digits will flash.
- Please refer to the time / date setting instruction to the "AUTO ON" time.

- If hour digits flash after setting "POWER ON" time follow the automatic ON/OFF to set "POWER same way.

2)To disable automatic ON / OFF

- From the standby screen, press mode button until "SET AUTO"
- Press read button and then "ON" will flash.
- Press mode button to set "OFF" and "AUTO ON / OFF" is disabled after pressing read button.
- Then allow the pager to automatically return to standby screen.

GPS TIME

If select GPS function instead of setting time in itself pager, received time from GPS will be

PAGER ON/OFF

- 1)Self test : The pager is automatically tested with an alert tone and vibration into the page
- 2)Pager ON from the OFF screen

On the pager off screen, pressing read button for more than 2 seconds will turn your pager

3)Turning your pager OFF

- From the standby screen, press mode button for two seconds
- Press mode button until "PAGER OFF" is displayed.
- Press read button and then "SURE" is displayed and press read button again to turn your pager off.
- Press read button for two seconds and then the standby screen is displayed.

EMI TEST REPORT



Report Number : KSQ-FCC030601

FCCID : RAMSTORMSHELTER

MESSAGES LOCK MESSAGES LOCK

You can protect up to 8 message so that they are not erased or replaced by new messages without the message lock.

1)To protect Messages

- While the message is displayed, press mode button for 2 seconds and then is displayed "ER
- "STORE" is displayed if press mode button again.
- save with read button.
- in case to confirm Protected message you can check if press mode button again from the st
- If un-saved messages is more than 30 it will automatically replaced new message in order.

2)Erasing protected messages

- If press mode button while confirming Lock message for two seconds
- "ERASE" is displayed
- Erase with read button.

BACK LIGHT

In low light-condition, the back light makes the LCD easy to read

-Press and hold any button for over 2 seconds to activate light.

-Continue for 12 seconds.

BATTERY INFORMATION

This battery uses AAA-size alkaline batteries. when the battery is low,

"LOW BATT" is displayed with the symbol.

Notifying you that the battery is in need of being replaced.

FCC NOTICE

NOTE: THE MANUFACTURE IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC ID: RAMSTORMSHELTER

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE CONDITION THAT THIS DEVICE DOES NOT CAUSE HARMFUL INTERFERENCE.