

Operation Instructions

The following is the operational instruction for your IP-Link.

- 1) Using your installation CD, install the Helicomm IP-Software.
- 2) Take the top cover off the IP_Link unit.
- 3) Install a CR2477 battery. This is a 3 volt button battery.
- 4) Connect the parallel port from your PC to that of the interface board.
- 5) Connect the RS232 cable from the interface board to the IP-Link.
- 6) Using your flash programmer software, download the latest software into the IP-Link unit.
- 7) The two LED's should flash on and off.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."