



PRODUCT STRUCTURE

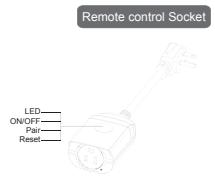

1

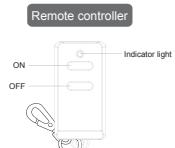

BATTERY INSTALLATION



①
Loosen the screws



②
Pry open the top cover

BATTERY INSTALLATION



⑤
Install the top cover



⑥
Tighten the screws

PAIRING SETTING



1. Plug the remote control outlet into an electrical outlet.



2. Press and hold the button till the indicator light starts to flash slowly.



3. Press the **s** button on the remote controller, the remote control socket indicator light remains on constantly, the pairing is successful.
Note: Please complete the operation within 120 seconds.


WARNING: The outlet must be mounted in a vertical position with the outlet facing down and at least 55 inches (1.4 meters) above the floor.

4

INSTRUCTIONS

1. Remote control operation method

Example: Press the **on** button to turn on the device, press the **off** button to turn off the device.

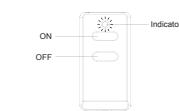

2. If the remote controller is not available, the socket could be ON/OFF by pressing the button in the socket.




CLEAR RECEIVER MEMORY



Press and hold the on/off button of the remote control outlet (about 20 seconds), the indicator light changes from slow flash to fast flash, release the on/off button when the indicator light goes out to clear the device memory.

5

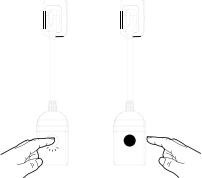

6

PRODUCT SPECIFICATION



Model: 55821USAX18
Working voltage: 120V~ 60Hz 15A
Max power rating: 1800W
Operating range: Max 250 ft(outdoor open area)
Frequency: 433.92MHz
LED flash: Red
Working temperature: 0°C~35°C
Use scene: Indoor/Outdoor
Standby power consumption: ~ 0.3W



Model: 50051
Frequency: 433.92MHz
Working temperature: 0°C~35°C
LED flash: Red
Operating voltage: 1x3V CR2032
Standby current: < 5uA
Transmit power: < 2dBm

7



8

9

FAULT ANALYSIS AND SOLUTION

Problem	Possible Cause	Solution
The indicator light of the transmitter does not light	The battery is not sufficient	Replace with a new battery
The installation of battery is not correct	Remove the battery and reinstall it again to make sure the contact is good	
The receiver does not work	The pairing failed	Re-pair the receiver and transmitter again
The receiver is too far from the receiver or there is a metal obstacle near the receiver or the receiver is mounted located near the metal object	Reduce the distance between the remote control and the receiver or move the receiver to a location away from them	
Multiple outlets are paired	One switch button connects multiple outlets	Clear all pairs of the socket and then re-pair to the corresponding switch buttons

PRECAUTIONS

1. Use Information

The following equipment must not be connected to the remote control plug:
 • Equipment exceeding the technical value of the remote control plug (=> technical data).
 • Equipment with metal capsules (such as refrigerators, etc.).
 • Operating the device unattended can cause fire or other damage (such as irons, etc.).
 • Cathode-ray tube television.
 In an emergency, you must have quick access to the remote control plugs so that they can be disconnected or the grounded contact plugs in the event of a hazard.

2. Safety Information

• Do not plug multiple devices into each other.
 • There is no voltage when the plug is disconnected.
 • The remote control plug can only be connected to a properly installed grounded contact socket (IEC 60309-6014).
 • The remote control plug must not be plugged into an extension cord and must not be used with an extension cord.
 • Do not open the device. Improper assembly may cause electric shock, short circuit or fire.
 • The range of the remote control plug is severely affected by structural conditions (such as reinforced concrete) or sources of electrical / electromagnetic interference (fluorescent lights, computer monitors, TV monitors, cables, etc.). If necessary, remove disturbance sources or keep a proper distance.
 • Keep the equipment installation at a distance of more than 80CM from the ground.
 • Avoid extreme temperature, vibration and shock.
 • Clean with a soft, slightly damp cloth. Do not use detergents or solvents. Do not immerse in water.
 • Do not plug prior or other metal objects into power outlets.

WARNING

■ INGESTION HAZARD: This product contains a button cell or coin battery.
 ■ DEATH or serious injury can occur if ingested.
 ■ A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
 ■ KEEP new and used batteries OUT OF REACH OF CHILDREN
 ■ Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

Coin-cell Battery Type: CR2032 Nominal Voltage: 3.0Vdc
Product use of battery cover is a must.

PRECAUTIONS

Do not expose the battery to extreme temperatures such as direct sunlight or fire. Do not place the device on the heater. Leaving the device in the sun for a long time can damage the device.

Always install batteries with the correct polarity (+ and -), as shown in the battery compartment.
 • Notice! If the battery is incorrectly installed, there is a danger of explosion.

• When replacing the battery, only use the same type of battery.
 If the battery leaks, remove it from the battery compartment with a cloth, dispose the battery properly and wash the area with water. Avoid contact with skin, eyes, and mucous membranes. If you come into contact with acid, immediately rinse the affected skin thoroughly with water and consult a doctor.

• Store the battery in a well-ventilated and dry place.

• If you do not use the device for a long time, remove the battery.

Risk of explosion! Do not use other reagents to charge or reactivate the battery, and do not decompose, throw into fire or short circuit the battery.

• Remove the used battery from the device and dispose it immediately.

WARNING:

The product contains non-replaceable batteries.
 Remove and properly recycle or dispose of used batteries according to local regulations and keep away from children.
 Do NOT dispose of batteries in household trash or incinerate.

Even used batteries may cause severe injury or death.

If the coin-cell battery is swallowed or placed inside any part of the body, call a local poison control center or treatment information.

The non-rechargeable battery is not to be recharged.

Do not force discharge, recharge, disassemble, heat above 60°C (140°F) or incinerate.

Doing so may result in injury due to venting, leaking or explosion of the batteries.

Ensure the batteries are installed correctly according to polarity (+ and -).

Do not mix old and new batteries, different brands or types of batteries, such as alkaline and NiCd batteries.

Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Always remove the batteries from the equipment if the battery compartment does not close properly, stop using the product, remove the batteries, and keep them away from children.

PRECAUTIONS

For Item FCC & IC: Approval:

This device complies with Part 15 of the FCC Rules / Industry Canada license-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est causé par un autre appareil.

Change of controls and modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.
 —Increase the separation between the equipment and receiver.
 —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.



Wireless Outdoor Remote Control Socket User Guide

Model: 55821USAX18+50051

	Warning: INGESTION HAZARD: This product contains a button cell or coin battery.
	FCC LOGO
	The product includes a manual.

11