



PRELIMINARY

WD TV® Play™

Media Player

User Manual



Table of Contents

1	Important User Information	1
Important Safety Instructions	1	
WD Service and Support	2	
Recording Your WD Product Information	3	
Registering Your WD Product	3	
Accessories	3	
2	Product Overview	4
3	Features and Functions	6
Features	6	
Connections	8	
LED Indicator	9	
Remote Control	10	
4	Getting Started	11
Package Contents	11	
Installation Requirements	11	
Operating System Compatibility	11	
Installation Procedure	12	
5	Network Setup	21
Ethernet Network (Wired) Setup	21	
Wireless Network Setup	23	
Checking the Network Connection	27	
6	Finding Your Content	28
Accessing Media Content	28	
Transferring Files	33	
Share a Folder on Your Computer	37	
Using the Web UI	45	
7	Operating the Media Player	49
Using the Remote Control	49	
Using a USB Keyboard	50	

Using the Media Player Menu	51
Media Library Compilation	55
Locating Your Contents on the Drive	57
<hr/>	
8 Watching Video	62
Video Playback	62
Videos Menu Options	64
Video Playback Controls	68
Video Playback Options	69
DVD Navigation	73
<hr/>	
9 Playing Music	75
Music Playback	75
Music Menu Options	77
Music Playback Controls	79
Music Playback Options	80
Playing Music From Your iPod®	81
<hr/>	
10 Viewing Photos	83
Photo Display	83
Digital Camera Support	85
Photos Menu Options	86
Photo Display Options	88
Displaying Photo Thumbnails	89
Displaying Photo Information	90
Photo Slideshow	90
<hr/>	
11 Files	92
Files Display	92
Files Options	93
<hr/>	
12 Internet Services	94
Adding a Service to Favorites	97
AccuWeather.com	98
BBC iPlayer (UK only)	101
CinemaNow	102
Comedy Time	103
Dailymotion	103
Deezer	104
Facebook	109

Flickr	114
Flingo	121
Flixster	122
Hulu Plus (US only)	123
Live365	124
MLB.TV	131
Netflix	135
Pandora (US only)	136
Picasa	142
SEC Digital Network	148
SHOUTcast Radio	149
SnagFilms®	153
Spotify	154
Tuneln	160
Vimeo®	164
Vudu™	165
WatchMojo	166
XOS College Sports	166
Yota Music	166
YouTube	167
YouTube Leanback	176
13 Games	177
Games Display	177
14 RSS	178
Reading RSS Feeds	178
Adding RSS Feeds	178
15 Setup and Advanced Features	179
Setup Navigation Buttons	180
Audio/Video Output	180
Appearance	185
Video Settings	188
Music Settings	191
Photo Settings	192
Network Settings	194
Operation	199
System	201
About	206

Media Library	207
<hr/>	
16 System Maintenance	209
System Firmware Upgrade.....	209
Troubleshooting	211
Common Error Messages	214
FAQs	215
<hr/>	
17 Appendix	216
Multiformat Content Playback	216
Supported Formats	217
Regulatory Compliance	222
Warranty Information (All Regions Except Australia/New Zealand)	226
Warranty Information (Australia/New Zealand only).....	226
GNU General Public License (“GPL”)	228
Spotify Third-Party Licenses.....	229

Important User Information

Important Safety Instructions

This device is designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated into this unit will protect you if you observe the following procedures for installation, use, and servicing.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Carefully read and follow the Quick Install Guide and User Manual.
- Do not operate this device outside the temperature range of 5°C–35°C (41°F–95°F).
- Do not drop or shake the device.
- Do not move the device when it is powered on.
- Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon them or against them.
- Do not overload wall outlets.

For additional safety information, refer to www.wdc.com.

WD Service and Support

Should you encounter any problem, please give us an opportunity to address it before returning this product. Most technical support questions can be answered through our knowledge base or e-mail support service at <http://support.wdc.com>. If the answer is not available or, if you prefer, please contact WD at the best telephone number shown below.

Your product includes 30 days of free telephone support during the warranty period. This 30-day period starts on the date of your first telephone contact with WD technical support. E-mail support is free for the entire warranty period and our extensive knowledge base is available 24/7. To help us keep you informed of new features and services, remember to register your product online at <http://register.wdc.com>.

Accessing Online Support

Visit our product support website at <http://support.wdc.com> and choose from these topics:

- **Downloads** - Download drivers, software, and updates for your WD product.
- **Registration** - Register your WD product to get the latest updates and special offers.
- **Warranty & RMA Services** - Get Warranty, Product Replacement (RMA), RMA Status, and Data Recovery Information.
- **Knowledge Base** - Search by keyword, phrase, or answer ID.
- **Installation** - Get online installation help for your WD product or software.
- **WD Community** – Share your thoughts and connect with other WD users.

Contacting WD Technical Support

When contacting WD for support, have your WD product serial number, system hardware, and system software versions available.

North America		Europe (toll free)*	00800 ASK4 WDEU (00800 27549338)
English	800.ASK.4WDC (800.275.4932)		
Spanish	800.832.4778	Europe	+31 880062100
		Middle East	+31 880062100
Mexico	001 8002754932	Africa	+31 880062100
South America		Asia Pacific	
Chile	1230 020 5871	Australia	1 800 42 9861
Venezuela	0800 100 2855	China	800 820 6682/+65 62430496
Peru	0800-54003	Hong Kong	+800 6008 6008
Uruguay	000 413 598 3787	India	1 800 200 5789
Argentina	0800 4440839	Indonesia	+803 852 9439
Brazil	0800 7704932	Japan	0120 994 120 / 00531 65 0442
		Korea	02 703 6550
		Malaysia	+800 6008 6008/1 800 88 1908/ +65 62430496
		Philippines	1 800 1441 0159
		Singapore	+800 6008 6008/+800 608 6008/ +65 62430496
		Taiwan	+800 6008 6008/+65 62430496

* Toll free number available in the following countries: Austria, Belgium, Denmark, France, Germany, Ireland, Italy, Netherlands, Norway, Spain, Sweden, Switzerland, United Kingdom.

Recording Your WD Product Information

In the following table, write the serial and model numbers of your new WD product. You can find this information on the label on the bottom of the device. You should also note the date of purchase. This information may be required when requesting technical support.

Serial Number:
Model Number:
Purchase Date:
System and Software Notes:

Registering Your WD Product

Your WD product includes 30 days of free technical support during the applicable warranty period for your product. The 30-day period commences on the date of your first telephone contact with WD technical support. Register your WD product online at <http://register.wdc.com>.

If your media player has an active network connection, you can register directly from the device using the supplied remote control (see “Using the Remote Control” on page 49) or a USB keyboard (see “Using a USB Keyboard” on page 50). Go to “Device Registration” on page 204 for instructions.

Accessories

For information on optional accessories for this product, visit:

US	www.shopwd.com or www.wdstore.com
Canada	www.shopwd.ca or www.wdstore.ca
Europe	www.shopwd.eu or www.wdstore.eu
All others	Contact WD Technical Support in your region. For a list of Technical Support contacts, visit http://support.wdc.com and see Knowledge Base Answer ID 1048.

Product Overview

Thank you for purchasing a WD TV Play media player. This user manual provides step-by-step instructions for installing and using your new media player. For the latest WD product information and news, visit our website at www.westerndigital.com.

The best of the Internet on your HDTV – Stream hit movies, catch up on TV shows, watch the latest videos, and stay connected to your social network. Don’t settle for online entertainment on your small computer screen. With the WD TV Play media player, you can enjoy it all on your HDTV. See “Internet Services” on page 94 for more details.

Your media collection belongs on the big screen – Enjoy your media library, home videos, vacation slideshows, and favorite songs on your HDTV and sound system in your living room. Sit back and enjoy the spectacular picture quality of Full-HD 1080p.

Play virtually any media file format – The WD TV Play media player supports a wide variety of the most popular files including MKV, MP4, XVID, AVI, WMV, and MOV video formats. Get the freedom to enjoy your media now, in virtually any file format.

Ready, set up, stream – So easy to set up, you’ll be up and running in minutes. The WD TV Play connects to your high-speed Internet connection wirelessly, no PC required. Or use the Ethernet port to connect to your wired home network.

High-performance, streaming-ready WiFi – Includes the latest wireless technology—extended-range Wireless-N—giving you the speed you need to stream HD.

Play media from any source – Stream videos, music, and photos from your USB drive, network drive, and any PC or Mac computer in your home. Our media library collects the content from all the drives, so finding the perfect video, song, or photo to view is easier than ever.

Show photos and movies directly from your digital camera or camcorder – Connect your camcorder or digital camera directly to the media player and instantly view or archive HD video and photos without a PC. Works with any digital imaging device that supports Picture Transfer Protocol.

Bring the arcade to your HDTV – Swap gems with Rockswap, try your luck with Texas Hold’Em, or test your math skills with Sudoku. WD TV brings casual games to your big screen TV.

Stay updated with RSS feeds – Stay posted on your favorite bloggers and websites and stream the latest audio and video with timely RSS feeds. You can also add specific feeds to your dashboard to be shown as tickers so you never miss a thing.

Programmable remote – Use the included programmable remote control to make your entertainment choices using our crisp, animated navigation menus. Customize buttons for quick and easy access to your favorite music, photos, videos or menu choices.

Your entertainment at your fingertips – Control your WD TV experience with the tap of a soft key or the swipe of a finger using the WD Remote™ app. Get one-touch access to your favorite online services, easy text input and a gesture pad for faster navigation to your favorite content. Download this free app from the Apple® App Store or the Android™ Market.

Use your keyboard for easy searching and updating – Use the on-screen keyboard or attach your wired or wireless USB keyboard for easy text input. Perfect for searching videos on YouTube or updating your status on Facebook.

Advanced navigation options

- Thumbnail, list, and preview modes – Browse your content by file name or by thumbnails of photos, album covers, video preview, and movie cover art.
- Media library – This unique feature lets you view all your media by media type in one menu regardless of its location in folders or drives. You can view your content by categories such as genre, album, artist and date.
- Search – Search by genre, title, artist, filename and partial filename.

Photo viewing

- View photos as a slideshow with a variety of transitions and background music
- Zoom and pan
- Search by filename, partial filename, most recently viewed and date

Movie viewing

- Fast forward, reverse, pause, zoom, and pan
- View subtitles
- Search by filename, partial filename, most recently viewed and date

Music playback

- Fast forward, reverse, pause, shuffle, repeat
- Search by filename, partial filename, most recently viewed and date.

File Management

- Copy files between USB drives and transfer files between a USB drive connected to the media player and your computer.

HDMI and composite video output – The HDMI port lets you connect to the highest quality HDTV or home theater. Additional composite (RCA) outputs ensure compatibility with virtually all television sets.

S/PDIF digital output – The optical audio output sends digital signals to your AV receiver for the best surround sound experience.

Ultra-compact design – Cool and quiet, this compact system integrates perfectly into your entertainment center.

3

Features and Functions

Features

The animated interface makes it easy to navigate and enjoy your media and the best of the Internet. Make it personal and have fun.

Menus

Organized, categorized and ready to play – The WD TV Play media player finds and categorizes all the music photos and movies on any connected USB devices and network shares and displays them in one easy-to-view menu system.

Choose from a variety of viewing options – Select thumbnail view, list view and even see a preview of your movies in your movie menu. You can add metadata to your media for better identification and sort and filter the content to easily find what you're looking for.

Customize your media experience – Select a background from beautiful, high resolution images provided by WD's Creative Masters or choose one of your own photos.

Dash to your favorites – Tag your favorites for instant playback and use the handy dashboard to quickly access your favorite personal content and Internet services. View your recent activity. Organize your movies, music, and photos in a queue and play them in sequential order.

Play photo slideshows with the music you choose – View special moments with the right music to set the mood for your next party. Select transitions and slideshow speed.

Playing video – DVD-like navigation lets you view all the content included with your movies, including complete menu navigation, chapter listings, special features, and subtitles. Select and jump to a specific time-spot in a video. Browse your video collection with its clip art in the background.

Playing music – Browse by artist, genre, and album title. Or search for your favorite titles. Create a queue and you've got a virtual DJ for your party. Preset your favorite song to a numeric key and play it with one click.

Family-ready – Share your family photos, videos, music, and files on your home network and stream to any screen in the house.

Automatic play – Select your favorite song, movie, or photo slideshow to automatically play when the device is turned on. Perfect for living art on your HDTV or for digital signage.

Play your media from your computer – This media player is Windows® 7 compatible, so you can use the "Play To" feature to easily stream your Windows 7 computer's files to your TV through your media player.*

*For more information on Play To, go to:
<http://windows.microsoft.com>.

Audio/Video Interface

- HDMI interface for digital audio and high-definition video.
- Composite video interface (mini-jack) for analog AV connection.
- S/PDIF (optical) audio for high-fidelity digital audio.
- Auto source function enables the HD media player to detect and switch to a new interface connection. For example, the media player automatically switches to HD mode when it is connected through an HDMI cable.
- Video output resolution includes 480i, 576i, 480p, 576p, 720i, 720p, 1080i, 1080p.
- Stereo or multi-channel digital surround audio output (digital surround sound is only available when using the HDMI or S/PDIF interfaces).
- Wired or wireless Internet connection for access to online media content.

Plug-and-Play USB 2.0 Support*


- USB storage device with a USB connector
- Portable media players with USB connector
- Digital cameras/camcorders with USB connector

*For a list of tested, compatible USB devices, see Article #5688 in our knowledge base at <http://support.wdc.com>.

USB Storage File System Support


- NTFS
- FAT/FAT32
- HFS+

Connections

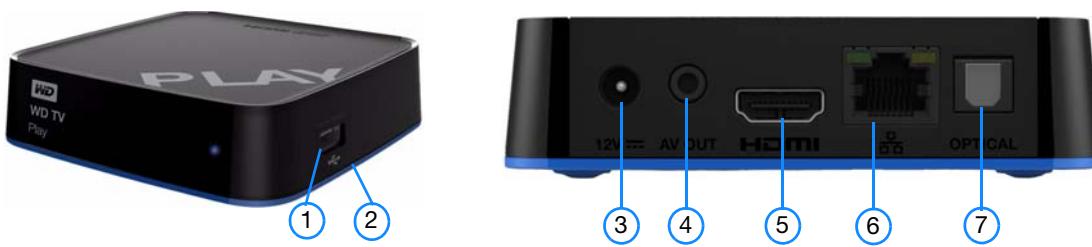

Item	Component	Description
1	USB port	Supports connection of compatible removable storage devices, portable media players, and digital cameras with USB connectors.
2	Reset button (bottom of device)	Press for one second to reset to factory defaults (see "Device Reset" on page 205). Press and hold 10 seconds to toggle between NTSC and PAL. Use a fine-tipped stylus or the unfolded end of a paperclip to press the reset switch.
3	Power jack	Connects the power cable.
4	Composite jack	Connect to your TV's analog video and audio jacks.
5	HDMI port	Connects to your TV's HDMI port (HDMI cable sold separately).
6	Ethernet port	Supports LAN connection for wired Internet access.
7	S/PDIF (optical) audio port	Connects to your AV receiver (S/PDIF cable sold separately).

LED Indicator

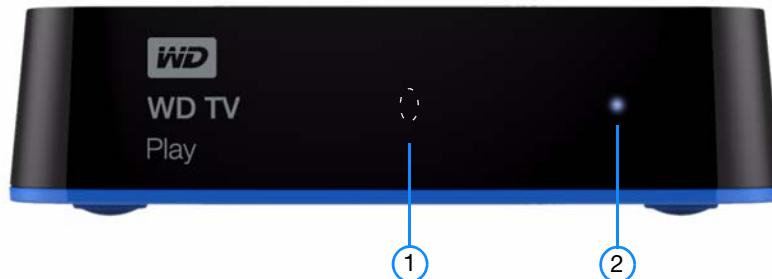


Item	Component	Description
1	Infrared receiver	<ul style="list-style-type: none">• Receives signals from the remote control. Point the tip of the remote control to the infrared receiver and ensure that the path between the two is unobstructed.
2	LED	<ul style="list-style-type: none">• On—The power cable is connected and the power is on.• Off—The media player is in standby mode, turned off, or the power cable is disconnected.• Steady flashing—A USB device has been discovered and the unit is being mounted in the system. If the Media Library is set to On in the Setup options (see “Media Library Compilation” on page 55), the LED flashes at the same steady constant rate.• Three short flashes followed by three long flashes followed by three short flashes—A system diagnostic failure has occurred. See “Troubleshooting” on page 211.

Remote Control



CAUTION: Do not expose the batteries or the remote control with batteries installed to excessive heat (direct sunlight, fire, etc.).

1. Infrared transmitter
2.  POWER
3. Back (last screen)
4. Navigation buttons, OK
5. Previous Page
6. REV, PAUSE/PLAY, FF
7. SEARCH
8. NETFLIX (starts app)
9. VUDU (starts app) or A (shortcut/function key)
10. HULU PLUS (starts app) or B (shortcut/function key)
11.  HOME
12. Options
13. Next Page
14. PREV (track), STOP, NEXT (track)
15. EJECT (safe removal of attached storage)

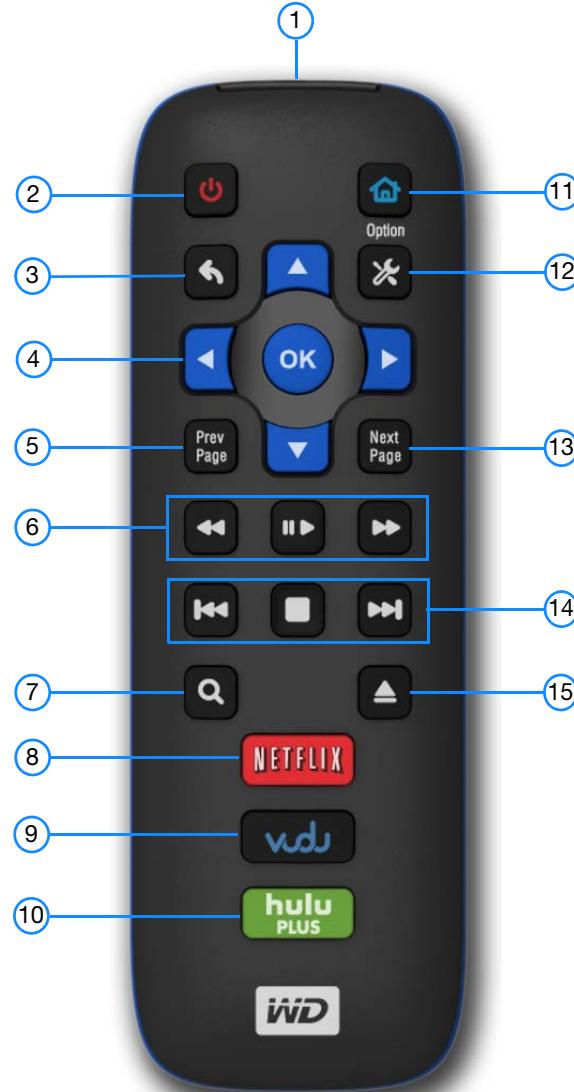

Note: For additional information, see "Using the Remote Control" on page 49.

WD TV Remote



Control your WD TV experience with the tap of a soft key or the swipe of a finger using the WD TV Remote app. Get one-touch access to your favorite online services, easy text input and a gesture pad for faster navigation to your favorite content. Download this free app from the Apple app store or get the Android app on Google Play.

4

Getting Started

Package Contents



WD TV Play media player

Remote control and
Two AAA batteries

AC power adapter



Composite AV cable



Quick Install Guide

Installation Requirements

- Standard or HDTV with a composite (standard A/V) or HDMI input
- An available network connection for online content and services

Optional: TV, stereo, or AV receiver with an optical digital (S/PDIF) or stereo audio input jack (audio playback only)

Operating System Compatibility

The media player is compatible with the following operating systems:

Windows®

- Windows XP
- Windows Vista®
- Windows 7

Mac® OS X®

- Leopard®
- Snow Leopard®



Note: Compatibility may vary depending on user's hardware configuration and operating system.



Important: For highest performance and reliability, it is recommended that you install the latest updates and service pack (SP). For Windows, go to the **Start** menu and select **Windows Update**. For Mac, go to the **Apple** menu and select **Software Update**.

Installation Procedure


The media player installation procedure is outlined below:

1. Connect the power cable. See “Step 1 - Connecting the Power Cable” on page 13.
2. Connect the media player to your TV or entertainment unit. See “Step 2 - Connecting the Media Player” on page 14. You can use HDMI (page 15), or composite (page 16) connections.
3. Insert the batteries into the remote control.
4. Connect the USB device containing your media content (“Step 3 - Connecting a USB Device (Optional)” on page 18) and/or establish a wired or wireless network connection (“Step 4 - Connecting to Your Network” on page 20).

Step 1 - Connecting the Power Cable

1. If applicable, connect the power clip to the power cable plug.

The AC power adapter will vary, depending on your location. Some locations do not require a power plug clip. Units sold in those locations will have a fixed power plug. Refer to the illustration below.

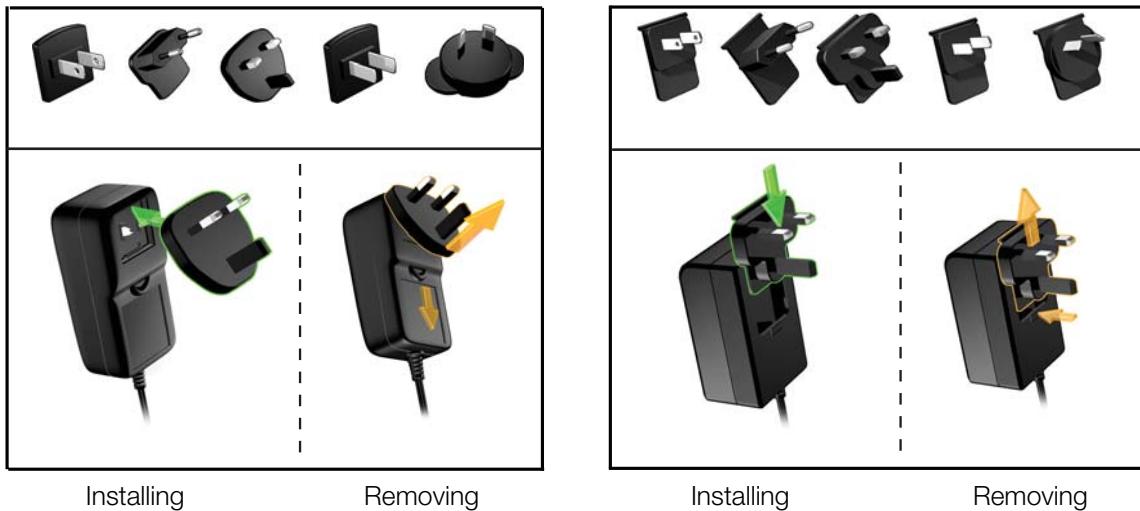

2. Connect the power cable to the media player's DC connector, and then plug the opposite end into an AC power outlet. The media player powers up automatically.



Step 2 - Connecting the Media Player

The following figures illustrate the cable connections supported by the media player. The standard connection uses the included composite-to-mini AV cables.



Note: HDMI and S/PDIF (optical) cables are sold separately.



Important: Configure the media player's Audio/Video settings depending on the type of connection you choose. See "Audio/Video Output" on page 180 for more information on these settings.

Choosing the Best Connection

The quality of the picture produced by your TV depends on the quality of your TV and its connection to the media player.

Connection	Quality	Connectors
HDMI	Best (up to 1080p)	Specialized, high-definition connector
Composite	Good (480i/576i)	<ul style="list-style-type: none"> Yellow = video Red = right audio White = left audio

HDMI (High Definition)



Composite (Standard Definition)




HDMI Video and Audio (High Definition)

HDMI combines high-definition video, multi-channel audio, and inter-component control in a single digital cable. This interface provides video quality resolution of up to 1080p.

To connect your media player using an HDMI cable:

1. Plug an HDMI cable into the HDMI connector on the media player.
2. Plug the opposite end into the HDMI port on your TV or audio/video system (if available).

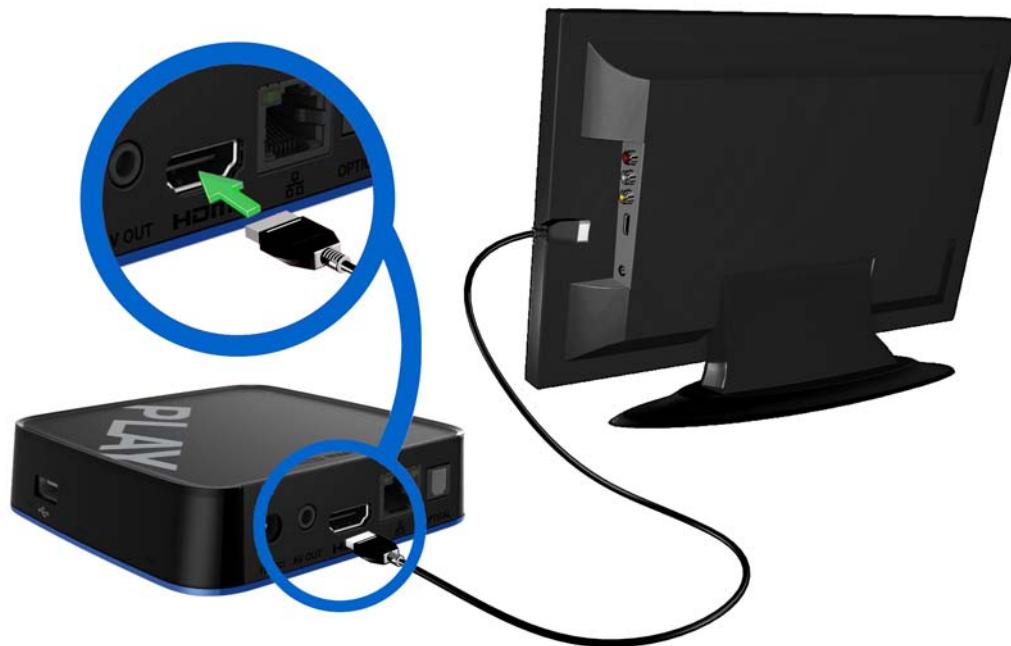

Wait a few seconds for your TV to detect the media player. If it is not detected, you may need to change the input source on your TV to HDMI. Check the user documentation of your TV for more information.

Once the media player is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.



Note: HDMI cables are sold separately.

Composite AV Connection (Standard Definition)

To use a composite connection:

1. Plug the mini-connector into the composite port on the media player.
2. Plug the opposite ends into the composite input ports on your TV, yellow to yellow, red to red, and white to white.
3. Select the appropriate TV input source.



Wait a few seconds for your TV to detect the media player. If the media player is not detected, you may need to change the input source on your TV to component or composite, depending on your connection. Check the user documentation of your TV for more information.

Once the media player is detected, the splash screen displays to indicate system bootup, then the home screen of the user interface opens.

Home Theater (High Definition)

To connect a home theater system:

1. Plug an HDMI cable into the HDMI connector on the media player.
2. Plug the opposite end into the HDMI In port on your A/V receiver.
3. Plug an HDMI cable into the HDMI Out port on your A/V receiver.
4. Plug the opposite end into the HDMI port on your TV (if available).
5. Select the appropriate TV input source.



To connect a home theater system using S/PDIF:

1. Plug a S/PDIF cable into the S/PDIF connector on the media player.
2. Plug the opposite end into the S/PDIF In port on your A/V receiver.
3. Plug HDMI or composite connectors to the appropriate Out ports on the media player.
4. Plug the opposite end(s) into the appropriate port(s) on your TV.
5. Select the appropriate TV input source.
6. Set the appropriate audio output option on the media player. See “Audio/Video Output” on page 180.



HDMI and S/PDIF cables sold separately.


Step 3 - Connecting a USB Device (Optional)

The media player has two USB ports that support playback from WD USB external drives.*

* For a list of supported WD external drives, see article #5688 in or knowledge base at <http://support.wdc.com>.

To connect the USB device:

1. Connect the USB device to the media player's USB port.

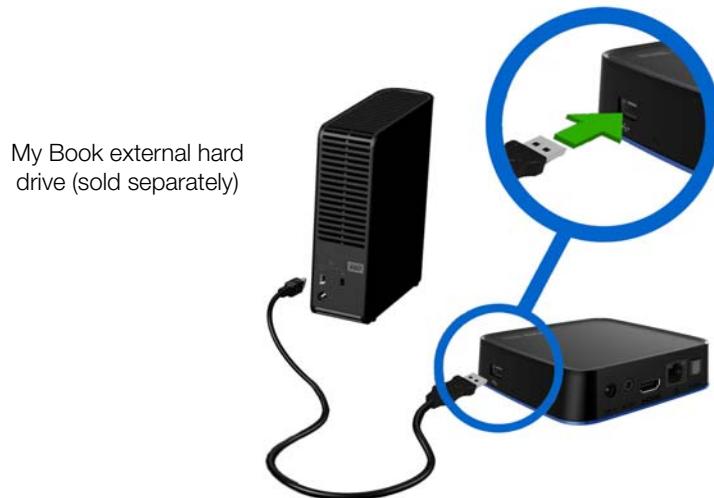

2. Wait for a few moments while the media player scans the USB device for media files. (Scanning is enabled by default. If you want to turn off automatic scanning, go to "Media Library Compilation" on page 55.)

To unlock a locked WD USB device:

A USB device must be unlocked for the media player to access its contents.

1. Navigate to the Home screen, and select the menu for the media content you wish to access. It can be Music, Videos, or Photo.
2. In the Unlock your WD Drive screen, press **◀/▶** to select **OK**, then press **OK**.
3. Use the navigation buttons **▲▼◀▶** to type in the USB drive access password in the on-screen keyboard. Select **Submit**, then press **OK**.

If a wrong password is entered, press **◀/▶** to select **OK**, press **OK**, then type in the correct password. If you enter the wrong password five consecutive times, the USB drive is placed in a hold state. Press **OK** to close the error message.

Disconnect the USB drive. Power cycle and reconnect the USB drive and type in the correct access password.

4. Once the USB drive has been unlocked, the menu bar for the selected media type will appear. Press **▲/▼** to choose a filter option for displaying supported media contents, then press **OK**.

Supported content for the selected media type will be displayed.


5. Use the navigation buttons **▲▼◀▶** to select the content you wish to access, then press **OK** to start media playback.

Removing a USB Device

To prevent data loss, it is highly recommended that you first press the **EJECT** button on the remote control before removing a USB device.

To remove a USB device:

1. Press the **EJECT** button \blacktriangle .
2. Press $\blacktriangle/\blacktriangledown$ to select the USB device.
3. Press **OK**. With the selected, press **OK** again.

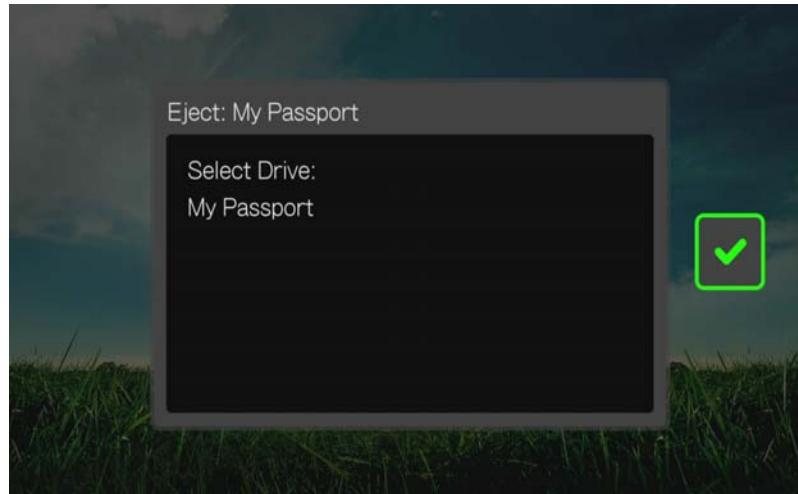


4. Disconnect the USB device from the media player.

Step 4 - Connecting to Your Network

The media player can be connected to your home network to access the Internet and network storage using a wired or wireless network connection. A network connection provides access to locally stored and online media content.

After connecting the media player to your TV and turning it on, the network setup wizard starts up. Press **▲/▼** to select your language, then press **OK**.

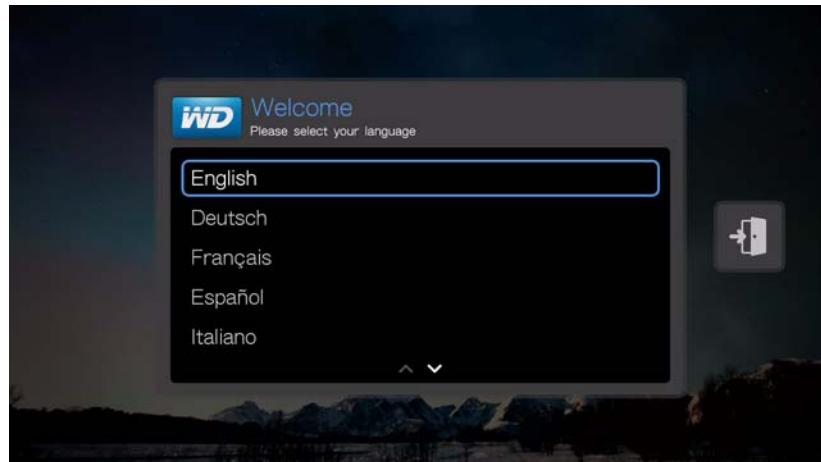

For detailed instructions on wireless and wired and wireless network connections, go to the next page (“Network Setup” on page 21).

Accessing Media Content from the Network

See “Finding Your Content” on page 28.

Accessing Online Media Content

See “Internet Services” on page 94.

5

Network Setup

The media player can be connected to the local area network using a wired or wireless network connection for access to streaming video and online and offline media content.



Important: Streaming over Wi-Fi™ may be unstable due to various reasons such as a weak network connection, signal strength, variable speeds, or other environmental factors. You can create instant high-speed, wired network connections and gain fast, reliable access to the Internet without running wires all over your house using WD LiveWire™ powerline AV network kit (sold separately). For more information, visit <http://products.wdc.com/WDLiveWire>.


Ethernet Network (Wired) Setup

Follow these steps to automatically set up a wired network connection:

1. Press **▲/▼** to select your language in the setup wizard Welcome screen, then press **OK**.
2. Plug an Ethernet cable into the Ethernet connector on the media player.
3. Plug the opposite end of the Ethernet cable directly into a LAN port on a router or network switch.



4. The wizard begins automatic network connection. When finished, the following screen displays. Press **OK** to continue, or select and press **OK** to exit.

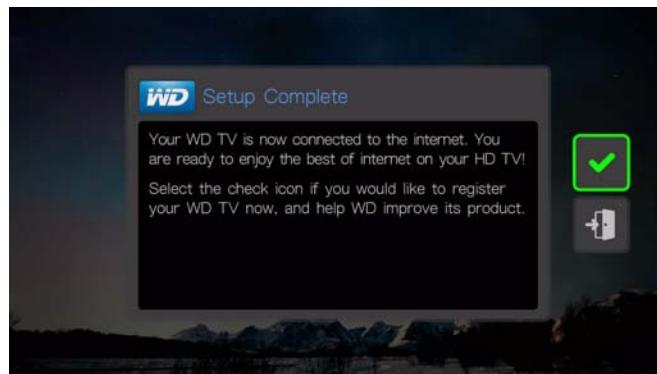

5. Press **OK** if you want to report usage statistics, or select and press **OK** to decline.



6. Press **OK** to consent to use of data.



7. Use the navigation buttons **▲▼◀▶** and the OK button to type in your registration info. Select and press **OK** when complete.



To change or manually configure your wired network setup (recommended for advanced users only), see “Network Setup” on page 194.

Wireless Network Setup

You have four options for setting up your wireless network:

- **Automatic** – Select an available access point found by the media player.
- **Manually enter the wireless network name** – Use the on-screen keyboard to input the network name (SSID) manually (when SSID not set to broadcast).
- **Wi-Fi Protected Setup (WPS)** – Enter a PIN or push the WPS button on the router (if available).
- **Windows Pairing Code** – This option is only available via the Setup menu. See “Get Windows Pairing Code (Windows 7)” on page 196



Note: The recommended setting on Wireless N routers is 802.11n-only with a channel width of 20/40 MHz. If you are using a wireless-N access point (AP) and it has been set to operate in 802.11n mode with a security setting of anything other than WPA2-PSK+AES or None, then media player will operate at lower 802.11g rates. Disabling wireless security is not recommended.


Auto Search or Manually Enter Wireless Network Name

1. Press ▲/▼ to select your language in the setup wizard Welcome screen, then press **OK**.
2. *Auto Search:* Press ▲/▼ to select your wireless network from the list, and press **OK**. Proceed to step 5.



Manual: Depending on your wireless network setup, you may want to manually type in the name of your network. In this case, navigate to the keyboard icon on the right side of the screen, press **OK**, and proceed to the next step.


3. Use the navigation buttons **▲▼◀▶** to type in the SSID for the access point you want to connect to, select **Submit**, then press **OK**.

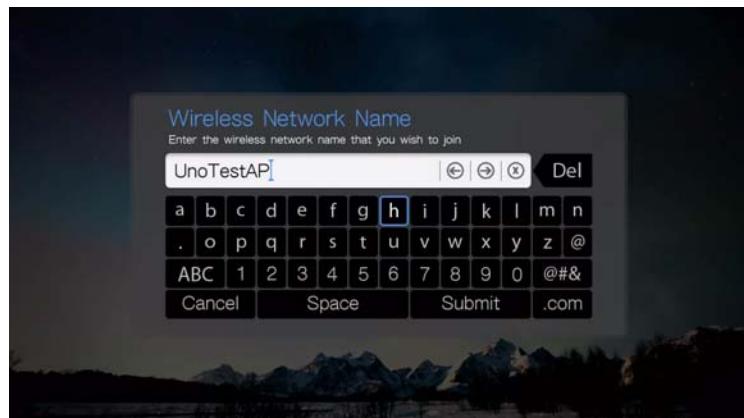

4. Press **▲/▼** to select the wireless network encryption type, then press **OK**.



5. If necessary, use the navigation buttons **▲▼◀▶** to type in the passcode for the access point, select **Submit**, then press **OK**.

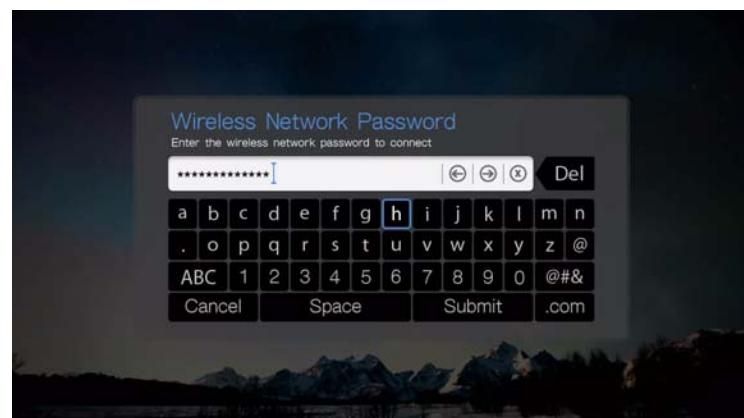

6. Once the network is successfully set up, press **OK** to display the Home screen.

Wi-Fi Protected Setup (WPS)

1. Press **▲/▼** to select your language in the setup wizard Welcome screen, then press **OK**.
2. Navigate to the WPS icon on the right side of the screen, and press **OK**.
3. Press **▲/▼** to select the method you want to use, then press **OK**.



WPS Button

1. Press the WPS button on your wireless router.
2. Press **OK** on the remote.



PIN Code

1. Enter the WPS PIN code shown on-screen in your wireless router's web configuration page.




2. Press **OK** to continue, or select and press **OK** to exit.



3. Press **OK** if you want to report usage statistics, or select and press **OK** to decline.



4. Press **OK** to consent to use of data.

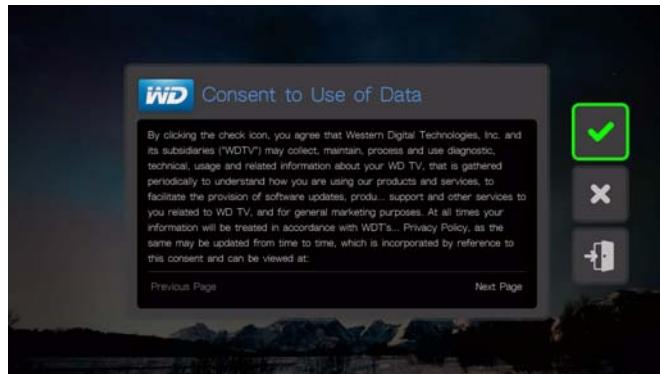

5. Use the navigation buttons **▲▼◀▶** and the **OK** button to type in your registration info. Select and press **OK** when complete.



After establishing a network connection, you can:

- Use the Internet services integrated into your media player to access streaming media. See “Internet Services” on page 94 for more information on these services.
- Access your media files on the network. See “Finding Your Content” on page 28.


Checking the Network Connection

If you experience network problems, check the network connection to determine the cause of the problem.

To check the network connection:

1. Press **Setup** or navigate to the Home | Setup menu bar.
2. Press **▲ / ▼** to select **Network Settings**, then press **OK**.
3. Press **▲ / ▼** to select **Check Connection**, then press **OK**.

The unit will automatically check the network connection. Once the check is completed, the results display. A green check mark on these items indicate that there is no problem with your network settings. If a problem is indicated, check your router settings and manual for a solution.

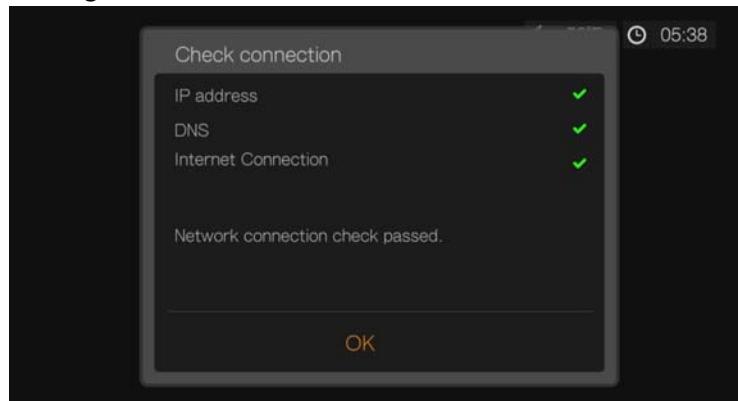

A red cross mark indicates a problem with the network settings. It can either be the IP address or the DNS server address. If the problem persists, check with your Internet service provider.

6

Finding Your Content

This section describes how you can use the media player to access your digital media collection over the local network.


- **Access network attached storage** – view and play back digital media content stored on your network attached storage device or media server. [See “Accessing Media Content” on page 28](#).
- **Access your online media** – view and play back your digital media content stored in your Facebook or Picasa online accounts. [See “Accessing Media Content” on page 28](#).
- **Attach USB storage** – attach a USB storage device to the media player and transfer media files back and forth to it using your computer. [See “Transferring Files” on page 33](#).
- **Share a folder on your computer** – view and play back digital media content stored on your computer by sharing one or more folders containing the media. [See “Share a Folder on Your Computer” on page 37](#).

Accessing Media Content

Once the media player has an active network connection, you can access media content from a Network Attached Storage (NAS) device or shared computer located on the same network as your media player. You can also access content from USB storage connected to the media player. The benefits and applications of each content source type are described below.

To access media content from a network share, media server, USB storage, or online account:

1. Navigate to the Home screen, and select the menu for media content you wish to access. It can be Music, Videos, or Photos. Press **OK**.
2. Press **OK** to select a new content source or press **B** or **▲/▶** to select Select Content Source **B**, then press **OK**.
3. Press **▲/▼** to select the network resource where the media content you want to access is located, then press **OK**.

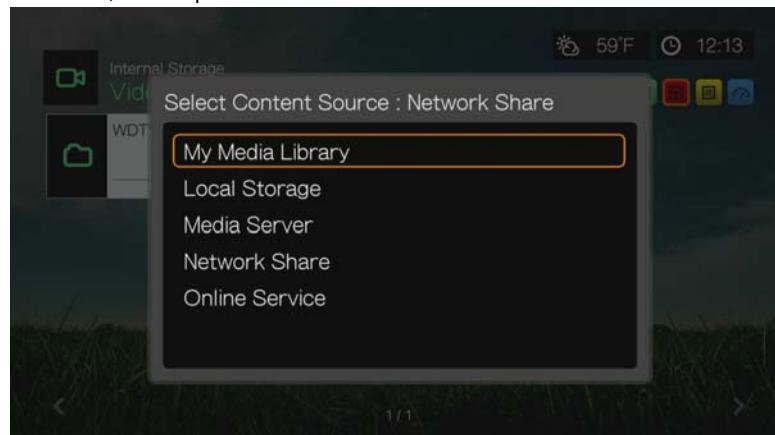

Note: My Media Library does not appear on first use or if the media library is turned off (see “Media Library” on page 197). It only appears if you have a USB drive attached or have added a network attached storage drive to the Media Library list


Content Source	Best for accessing...
My Media Library	All available network shares and attached USB storage (slow scan—depending on the number of files and connection speed, the scanning time required to compile the media library may be increased).
Local Storage	Storage devices attached to USB ports 1 and/or 2.
Media Server	Network-attached media server devices for ease of use (optimal for DLNA certified server devices such as WD's My Book® Live™).
Network Share	
Windows Shares	Windows network shares, most network attached storage drives, legacy Mac OS before Lion, and other devices that uses SMB/CIFS protocol.
Linux Shares	Linux (NFS) network shares (recommended for advanced power users).
Online Service	Photos and videos posted in your Facebook and Picasa online accounts.

My Media Library

The benefit of selecting this option is that it shows all the aggregated content on your network attached and USB storage together in one view. However, it does take longer to scan all the storage content compared to selecting a more specific option for content retrieval.

To add additional source content to My Media Library, please do one of the following:


- Attach USB storage to one of the USB ports on the media center and it is automatically added to media library.
- Connect to a Windows or Linux Share (see “Network Share” on page 31). While browsing the content inside, press **Option** to add a share folder to the Media Library.

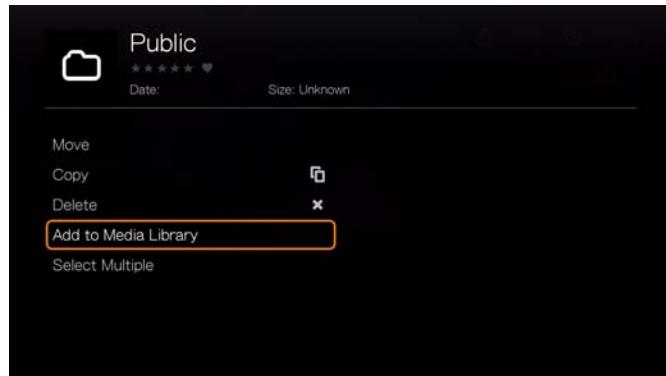

- Use the Media Library Manager for Network Share (see “Media Library Manager for Network Share” on page 201), and select **Add network share to media library** to manually add individual share folders to the media library. A maximum of 10 shares can be added.

Local Storage

Select Local Storage to access media content on one or more USB storage devices connected to the media player's USB 1 or USB 2 ports.

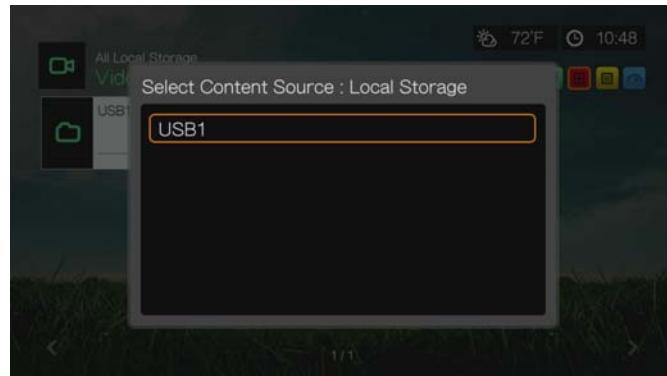


After selecting USB 1 or USB 2, the media player scans the drive to build the media library by default (if enabled).

If the media player and your computer are attached to the network, you can transfer files back and forth between your computer and the USB storage device. See “Transferring Files” on page 33.

Media Server

This menu displays network attached UPnP media servers connected to your network and usage is optimized with DLNA compliant devices such as WD My Book Live personal cloud storage and other WD TV Hub media centers.

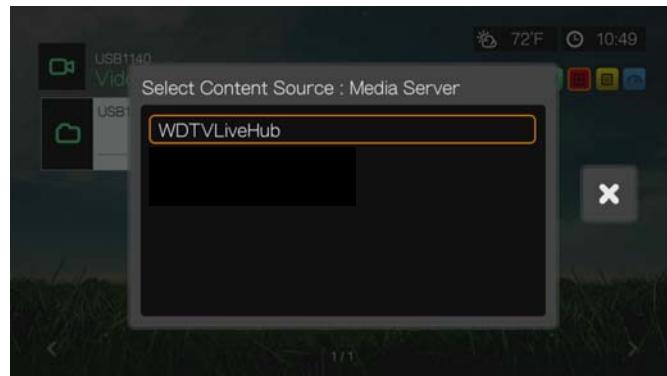

The benefit of using a media server is that it aggregates the content together from the device that is hosting it. The media server hosts a list of supported file formats with metadata information that allows a client device like the media player to easily browse and play back the content.

However, using a media server can restrict supported file types and you may not be able to see all the files stored in the media server. When using a Network Share, every file is presented to the media player and it does the content filtering based on what it can support.

Follow the steps below under “Accessing a Shared Folder,” selecting the name of your media server and referencing your media server documentation for password setup and administration if necessary.

Network Share


The media player supports Windows (SMB/CIFS), and Linux (NFS) network shares.



Windows Shares

Windows Shares uses Samba (also known as SMB/CIFS), a more common protocol among devices such as PC, NAS, and Mac (before Lion). If you want to simply discover and/or share a folder on the network to be accessed by the media player, Samba is a common method, especially for Windows.

Windows Shares display shared computers and network attached storage devices (such as WD's My Book Live personal cloud storage NAS drive) connected to your network via the Samba protocol.

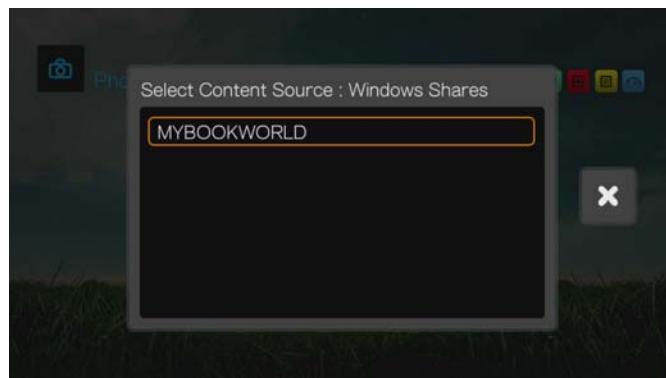

Linux Shares

Linux Shares uses NFS, which is popular with power users and Linux users because of the increased speed and performance it can provide. NFS is better suited to Linux since using NFS with Windows requires installation of third party applications.

Follow the steps below under "Accessing a Shared Folder," selecting the name of your NAS device or computer and referencing your NAS device or operating system documentation for password setup and administration if necessary.

Accessing a Shared Folder

To create a shared folder, follow the instructions under "Share a Folder on Your Computer" on page 37.

To access a shared folder under Network Share:

1. Select the name of your computer and press **OK** twice.




2. If necessary, enter your user name and password to access your computer, or accept the default login. For further information regarding password setup and administration, refer to your operating system documentation.
3. Press ► to select **OK**, then press **OK**. Supported content for the selected media type displays.
4. Select the content you wish to access, then press **OK** to start media playback.

Accessing Network Attached Storage

Follow the steps above under “Accessing a Shared Folder,” selecting the name of your NAS device and referencing your NAS device documentation for password setup and administration.

Online Service


This menu allows you to connect to media content stored in your Facebook and Picasa online accounts. Select **Facebook** or **Picasa** and enter your user name and password to access your media content.

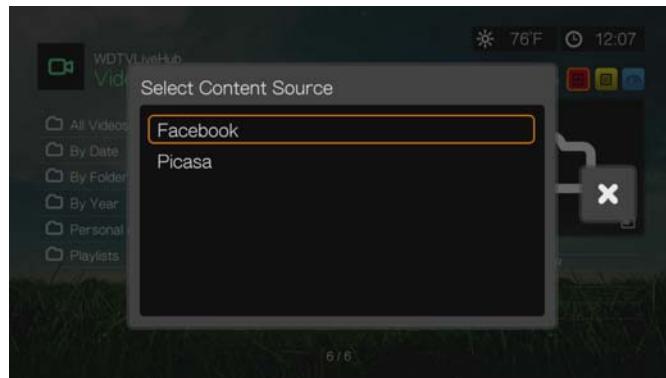

Logging in to a Network Resource or Online Account

When accessing a network resource, you need to enter in the user name and password for the device or account using the on-screen keyboard. In some cases, a

default anonymous login displays if no password is set for the device. When this happens, accept the default login, select , then press **OK**.

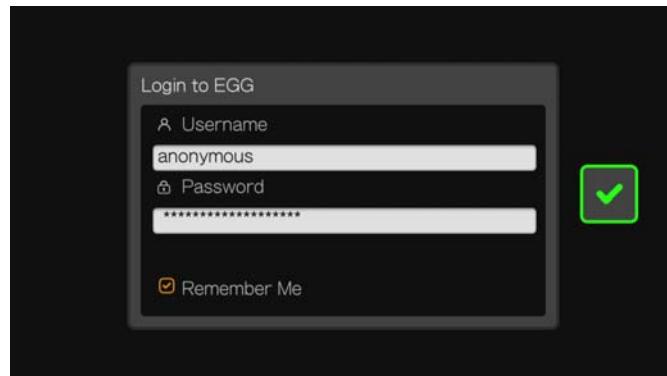


Select **Remember Me** and press **OK** to have the media player remember the user name and password for the resource.

Transferring Files

If the media player has an active network connection, any USB drive connected to it can serve as a network drive. This allows you to transfer files between your media player and your computer. This feature is applicable to a PC running the Windows® XP, Windows Vista®, or Windows 7 operating systems, as well to a Macintosh® computer running Mac® OS X® Leopard® or Snow Leopard®.

Enabling File Sharing on the Network Share (Samba Server)

1. Navigate to the Home | Setup menu bar.
2. Press **▲/▼** to select Network Settings, then press **OK**.
3. Press **▲/▼** to select **Network Share Server** and make sure the option is set to **On**.

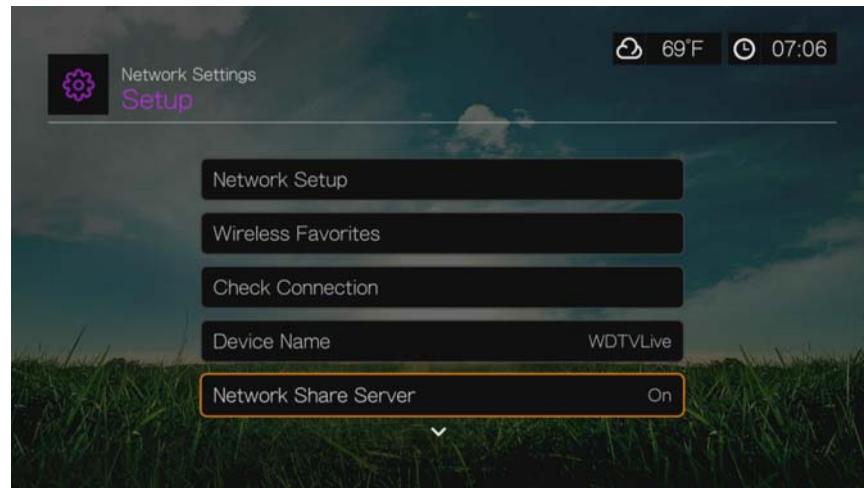


4. Note the name indicated in the **Device name** field. This will help you identify your media player on the network.

Moving Files Between the Media Player and a Windows Computer

1. Connect the USB hard drive you need for the file transfer to your media player.
2. Ensure that your computer is on the same network as your media player and that the file sharing option is enabled. Refer to Windows Help for instructions on how to enable file sharing on your computer.
3. Download the WD Link tool from <http://products.wdc.com/WDTVLiveG3>.
4. Double-click on the downloaded installer file and follow the on-screen prompts to install WD Link.
5. Click  or **Start**, then click **Programs > WD Link > WD Link**.
6. Click **WD TV** in the Network Storage Found list.
7. The USB drive connected to your media player displays in the Drive Mapping list. Click the USB drive you need for the file transfer.
8. Select an available drive letter from the Available Drive Letters list.
9. Click **Map Drive**.




10. Click **OK**.

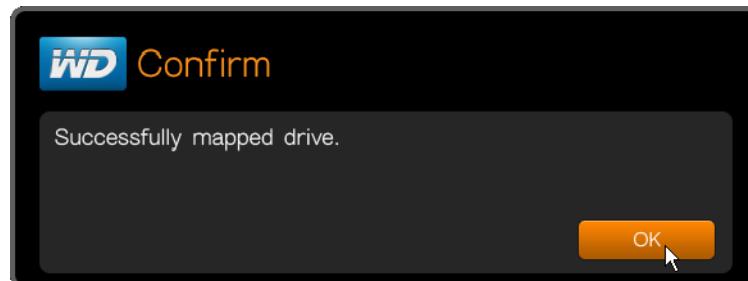


Moving Files Between the Media Player and a Windows Vista / Windows 7 Computer


1. Connect the USB hard drive you need for the file transfer to your media player.
2. Ensure that your computer is on the same network as your media player and that the file sharing option is enabled. Refer to Windows Help for instructions on how to enable file sharing on your computer.
3. Open a Windows Explorer window, then click **Network**. Your media player is listed on the network resources list.

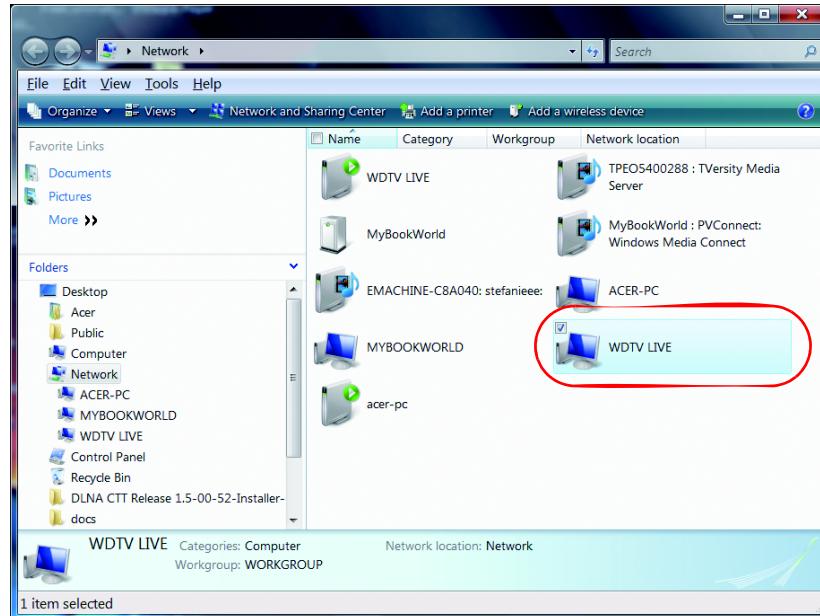

4. Click the device corresponding to your media player.

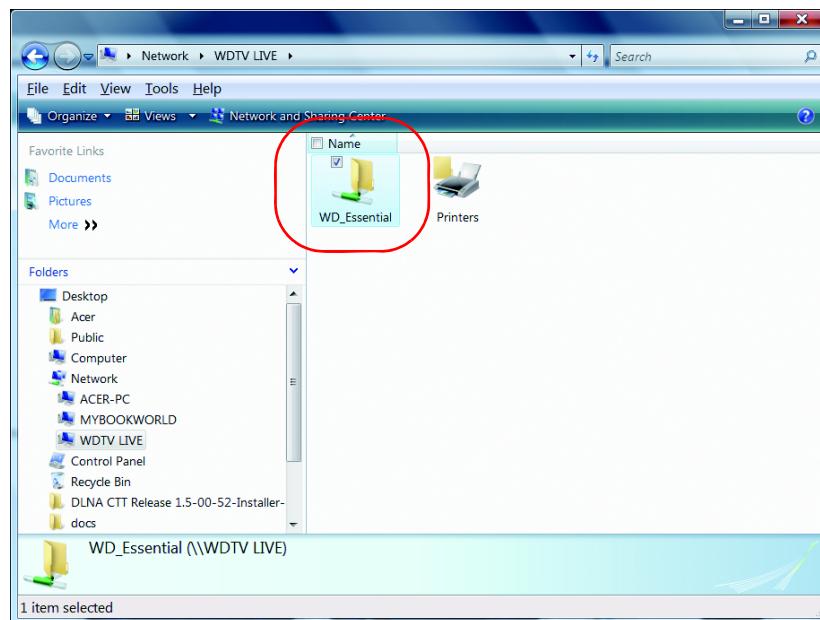


5. Click the USB drive you need for the file transfer to display its contents.

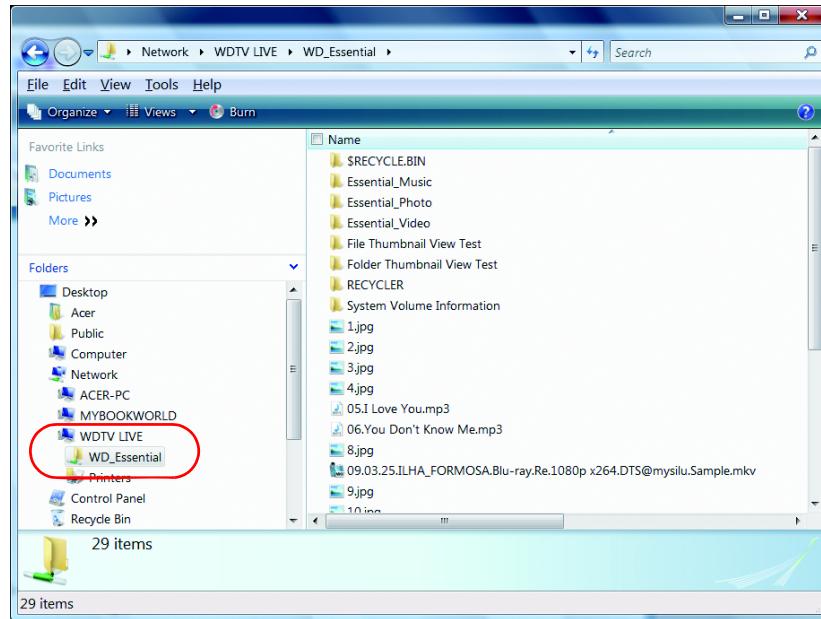

6. Locate the file(s) you intend to transfer and do a Copy/Paste, Cut/Paste, or Drag/Drop operation.

Moving Files Between the Media Player and a Mac Computer

1. Connect the USB hard drive you need for the file transfer to your media player.
2. Ensure that your computer is on the same network as your media player and that the file sharing option is enabled. Refer to Apple Help for instructions on how to enable file sharing on your computer.
3. Open a Finder window.
4. On the Finder side bar, click **Shared**. Your media player is listed on the shared resources list.
5. Click the device corresponding to your media player. The USB drive connected to your media player displays.

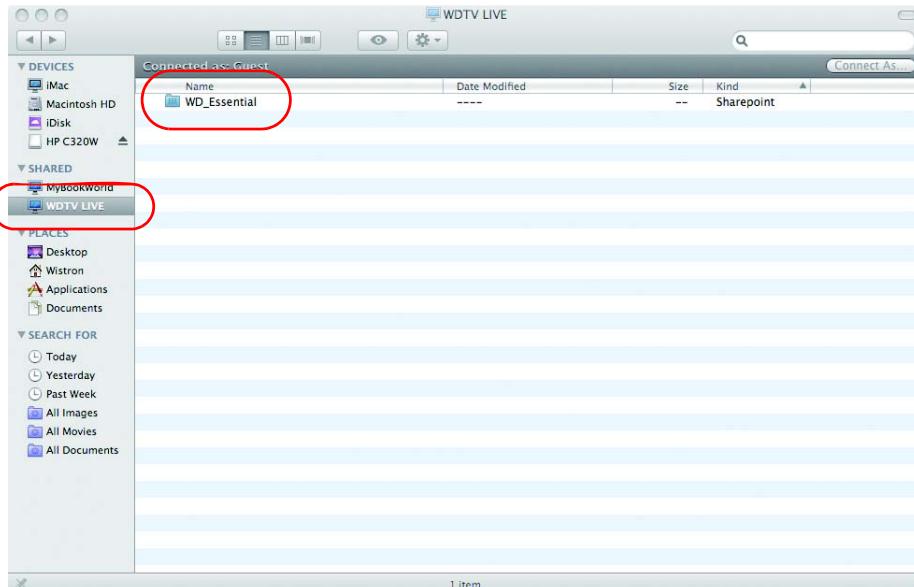

6. Click the USB drive you need for the file transfer to display its contents.
7. Locate the file(s) you intend to transfer and do a Copy/Paste, Cut/Paste, or Drag/Drop operation.

Share a Folder on Your Computer

You can view and play back digital media content stored on your computer by sharing one or more folders containing the media.

Make sure the media player and your computer are both attached to the network, then follow the instructions below for your operating system (Windows 7/Vista/XP or Mac).



Important: Be sure to update your operating system to the latest update or service pack. Depending on your network's configuration you may need to disable or adjust your Firewall settings to view your shared folder on your network. Contact your Firewall manufacturer for assistance.

When finished following the instructions for your operating system, go to "Accessing a Shared Folder" on page 31.


Windows 7

Change Settings to Allow Folder Sharing

The first thing you need to do to allow folders to be shared with the WD TV is to determine how your network is configured. Follow the instructions below to determine what kind of network you have.

1. From the Control Panel, click **Network and Internet**.
2. Click **Network and Sharing Center**.

3. Look under View your active networks to determine if your network is Home, Work, Public, or Domain.

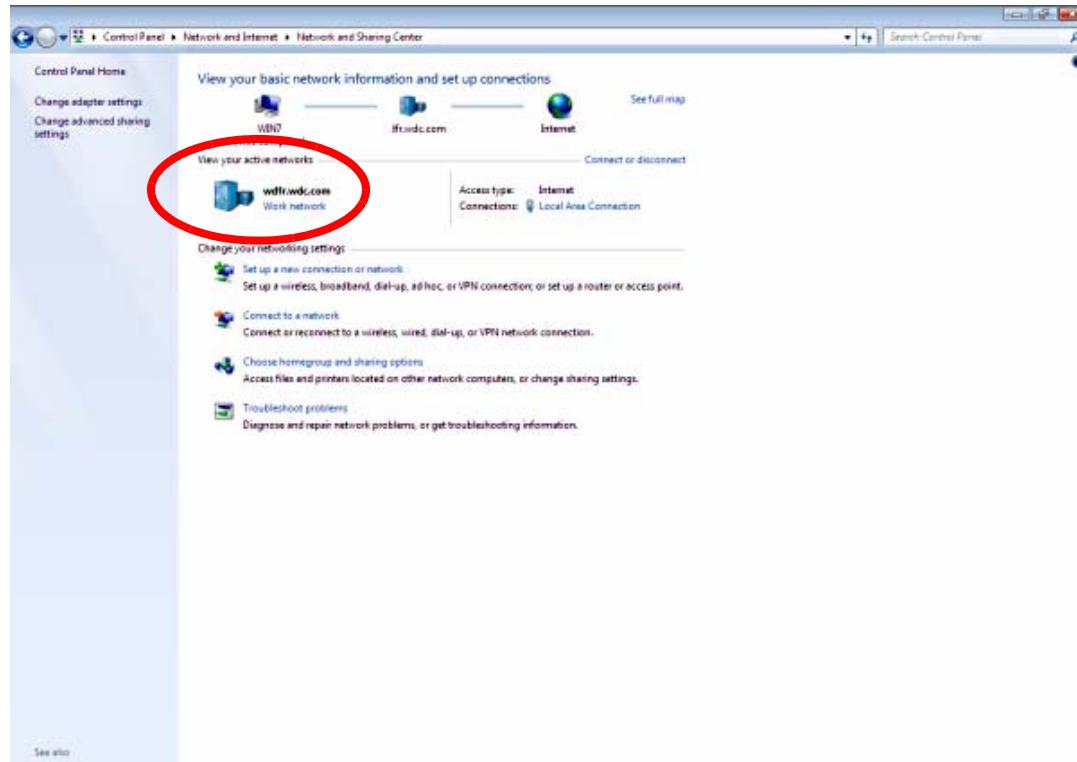

4. If you have a Work network, proceed to step 6. If you have a Public network, click the **Public network** link.
5. Click **Work network**.



6. Click the **Choose homegroup and sharing options** link.
7. Click the **Change advanced sharing settings...** link.
8. Ensure that the following options are selected: **Turn on network discovery**, **Turn on file and printer sharing**, **Media streaming is off**, and **Allow Windows to manage homegroup connections (recommended)**.




Note: WD does not support streaming from a domain server, or a computer attached to a domain, to the WD TV. Please contact your domain administrator or Microsoft® Support for assistance.


Share a Folder

Follow the instructions below to share a folder in Windows 7.


1. Navigate to the folder you want to share. Once found, right-click on the folder and select **Properties**.
2. Click the **Sharing** tab.
3. Click the **Advanced Sharing** button.

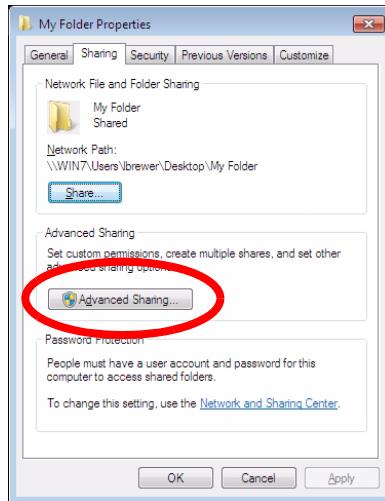

4. Click the **Share This Folder** box.
5. Enter the name you would like this folder to appear on the network as in the **Share name** box.
6. Click the **Permissions** box.

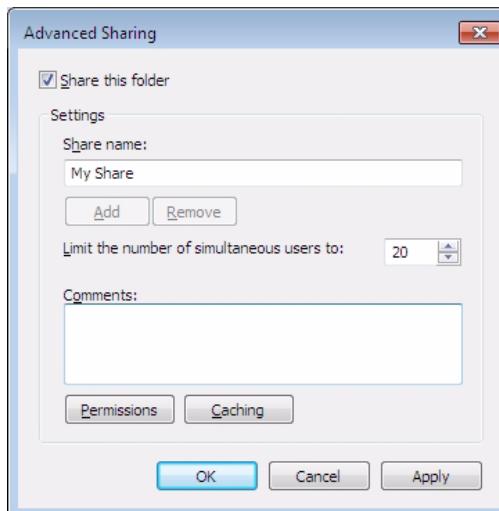

7. Select the users you would like to give access to and the permissions you would like to assign to that user, then click **OK**.

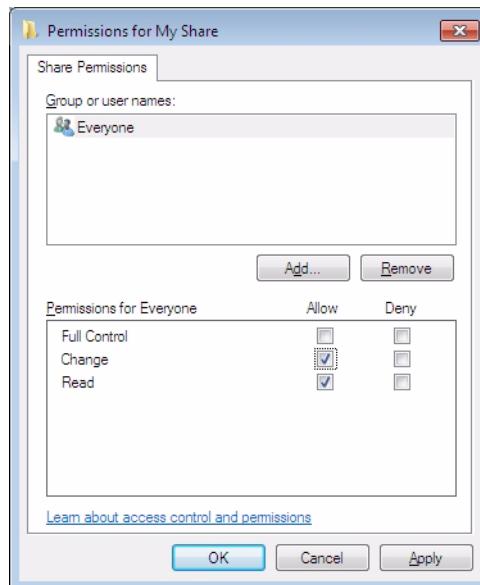


8. Click **OK** to close the Advanced Sharing window.
9. Finally, click on **OK** one more time to close the folder properties window and save your changes.

Windows Vista


Change Settings to Allow Folder Sharing

Follow the instructions below to configure your computer for folder sharing in Windows Vista.

1. Open the Network And Sharing Center from the Control Panel.

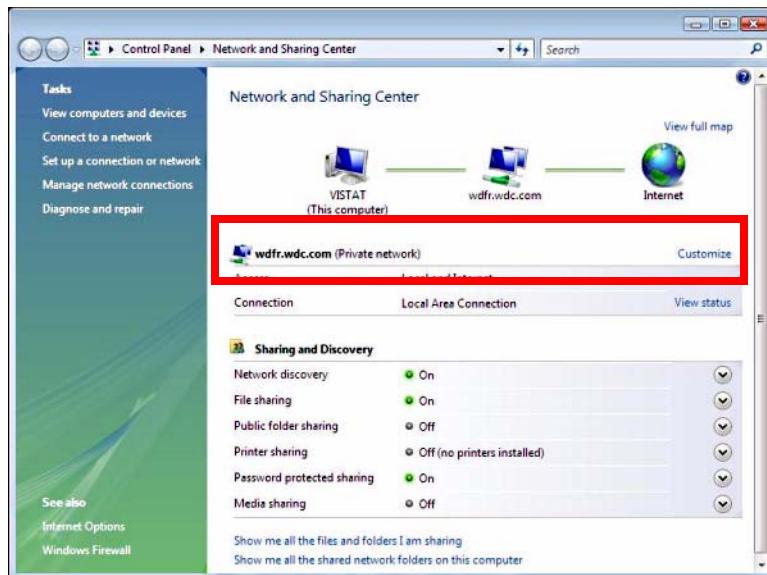

2. Next to the name of the network look to see if it is a Private or Public network.
3. If your network is Private skip to step 5 below. Otherwise, click the **Customize** link.
4. Click **Private**, then click **OK**.
5. If it is set to **Off** expand the **File Sharing** field and change it to **On**.
6. If you want to share the pre-designated Public folders in Windows, expand the **Public folder sharing** field under Sharing and Discovery.

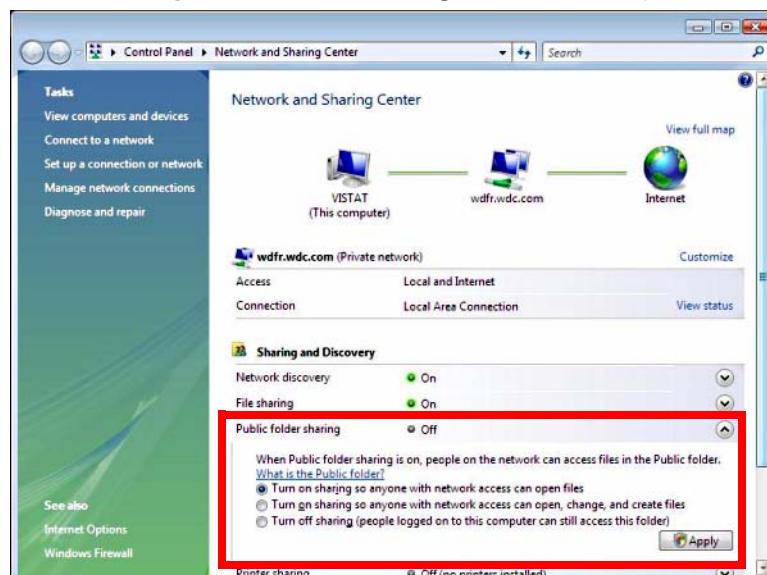


7. Select your choice of the two "**Turn on sharing...**" options.
8. Click **Apply**.


Share a Folder

Follow the instructions below to share a folder in Windows Vista.

1. Navigate to the folder you want to share. Once found, right-click on the folder and click **Share**.
2. If your system requires a login to access a shared folder, select a User account to assign to the share, then click **Share**. Otherwise, simply click the Share button.

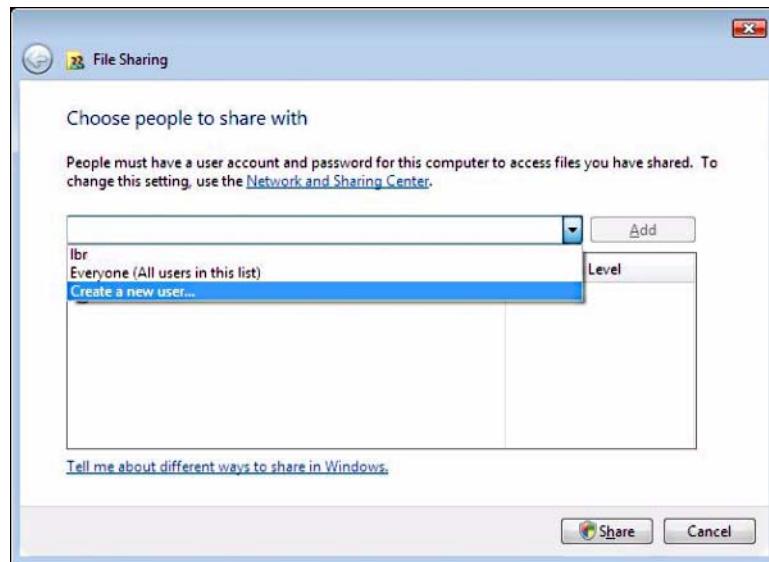

3. Under Sharing and Discovery expand the **Public folder sharing** field.

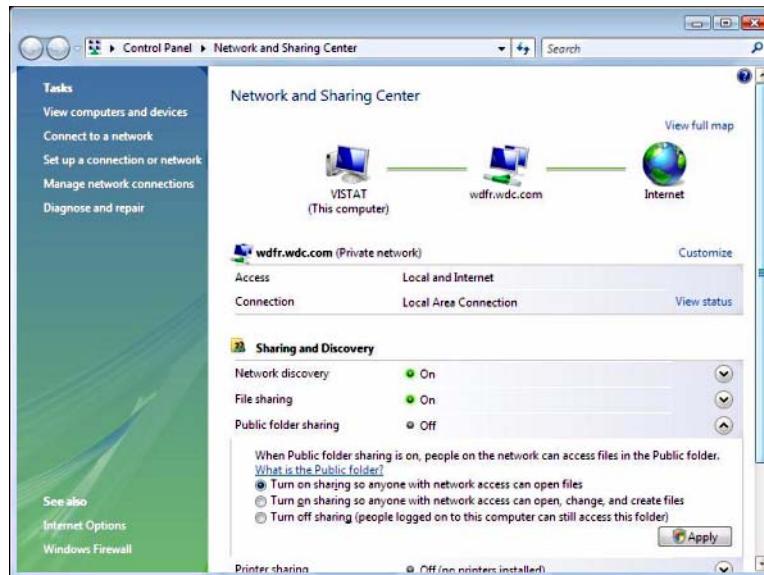

4. Depending on your system speed you may or may not see a progress bar while the permissions on the folder are updated. Click **Done**.

Windows XP

Follow the instructions below to share a folder in Windows XP.

1. Right-click on the folder you want to share and select **Sharing and Security**.
2. Click **Share this folder**.
3. Choose a name you want the folder to appear as on your network and enter it in the **Share Name** field.



Note: You can also set a maximum number of users able to access your drive at one time. To do this, click "Allow this number of users:" and set the number in the field to the right.

4. Click **OK**.


Mac

Follow the instructions below to share a folder within Mac OS 10.5 or 10.6.


1. Open the Apple menu from the upper left corner of your screen and click **System Preferences**.
2. Click the **Sharing** button under the Internet & Wireless group.



3. Choose a name for your computer on the network and type it in the **Computer Name** field.
4. Click the box next to **File Sharing** to turn on the file sharing service. Then click on the + sign button below the **Shared Folders** box.

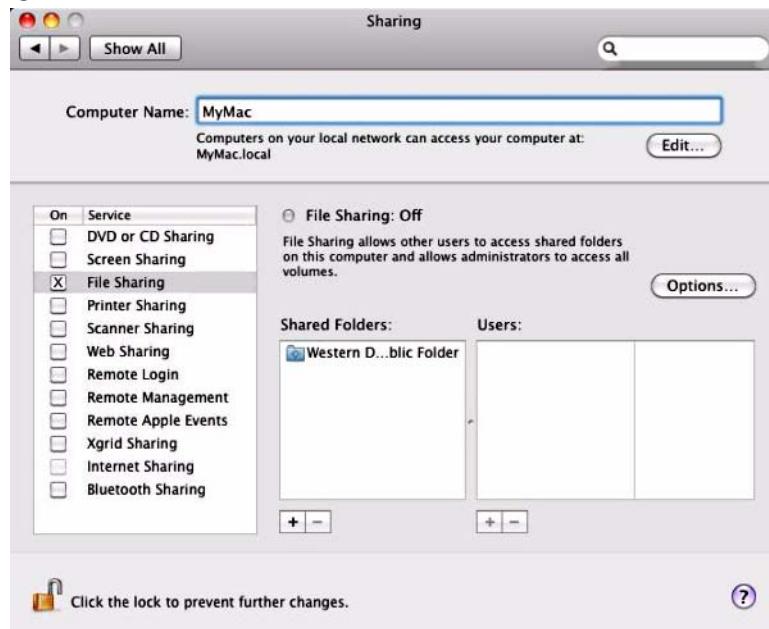

5. To share additional folders beyond the default Public folder, select the folder you would like to share and click the **Add** button.

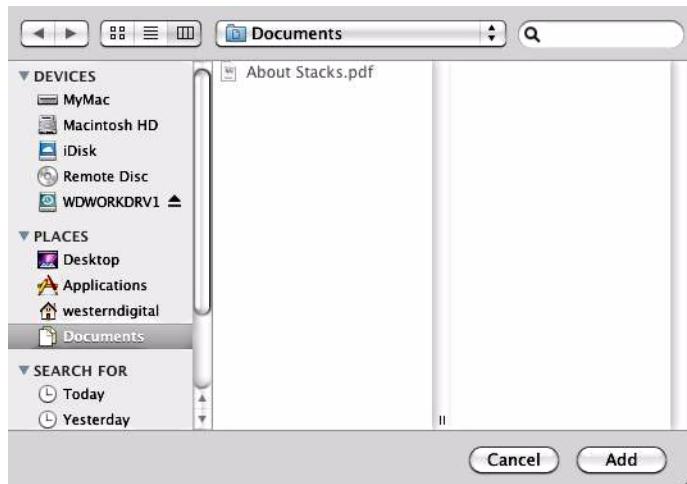

6. Click on the red x in the upper left corner to close the window.

Using the Web UI

The media player provides a Web-based user interface (UI) that can be used to control certain functions. You must use a network-connected computer or smart phone to use the Web UI.



Important: Your media player must be set up on the network (see “Network Setup” on page 21 for further information) to use the Web UI.

Launching the Web UI

1. Open a Web browser and type in your media’s center’s IP address in the address field. Press **ENTER** on your computer keyboard.




Note: To find your media player’s IP address, press **Setup** on the remote controller and navigate to **Network Settings**. Select **Network Setup** to see the media player’s IP address.

2. The Web UI launch page displays. Enter the default password (“admin”) in the **Password** field.
3. Select your preferred language from the **Language** list.
4. Click **I accept END USER LICENSE AGREEMENT**, then click **Login**. You can also click **Keep me signed in**.




5. The Web UI menu options display.

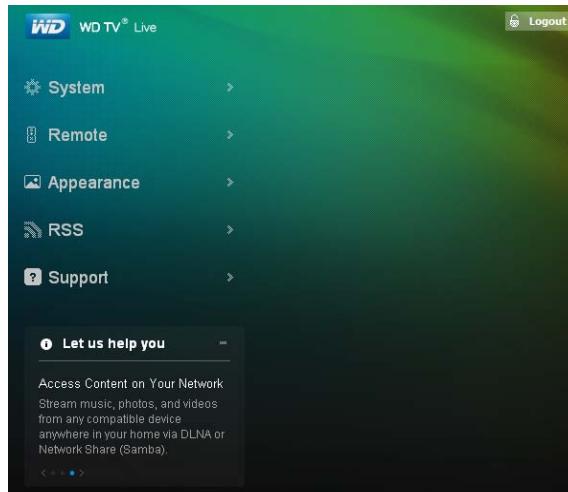


System

Click **System** in the Web UI home page to manage the system status of your media player and view general network information and important messages. You can change the password, set the device name, view network information, and choose date and time settings using these options.

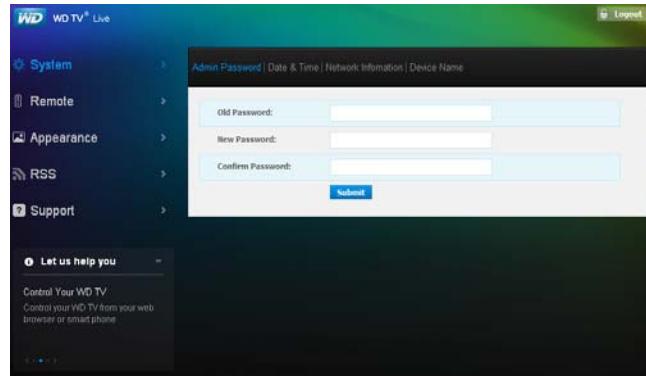

Remote

Click **Remote** in the Web UI home page to control the media player using your computer. Click the buttons on the virtual remote controller to control your media player (see “Using the Remote Control” on page 49 for further information).

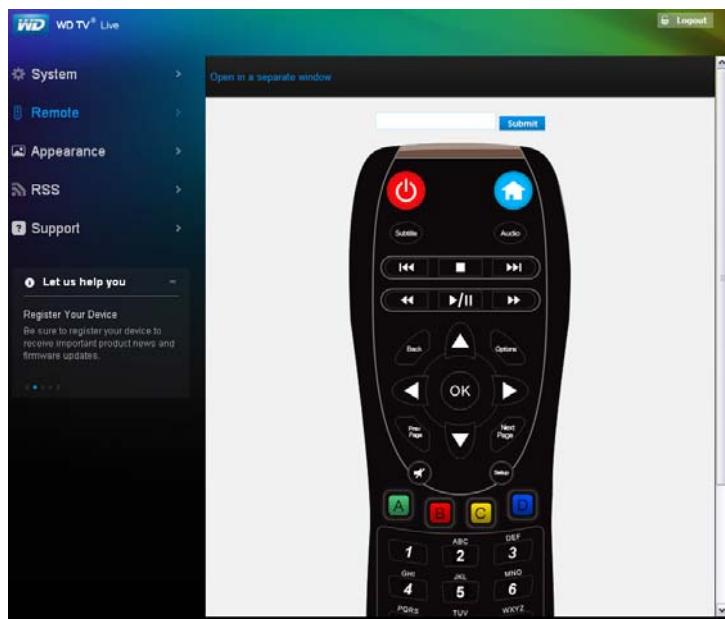

Click the **Open in separate window** link to open the virtual remote controller in a new browser screen. You can copy the URL from this browser screen and enter it in a browser on your smartphone. Then, you can use your smartphone as a virtual remote controller by touching the buttons on the screen.

Enter on-screen keyboard commands in the **Submit** field using your computer or smartphone keyboard, then click or press **Submit** when finished.




Appearance

The media player supports interchangeable user interfaces called themes. Themes alter the player's visual appearance, but not its functionality. Click **Appearance** to change the user interface theme. Click **Browse** to find the *.zip file containing all the files for the theme you want to load. Click **Submit**.




Note: When applicable, make sure all the theme files have been extracted from the *.theme file then compressed into a *.zip file.

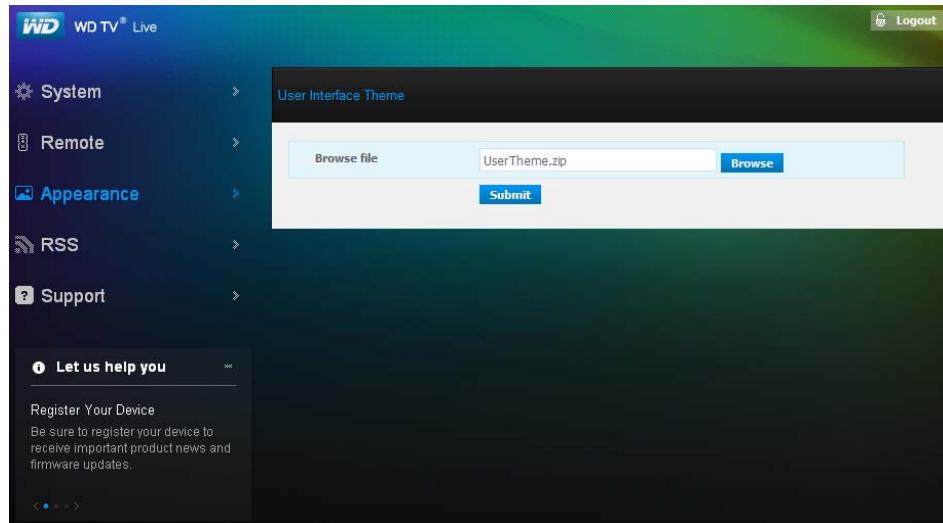


RSS

Click **RSS** to view your RSS subscriptions and category folders. Here, you can add a new subscription or a new folder to categorize your subscriptions.

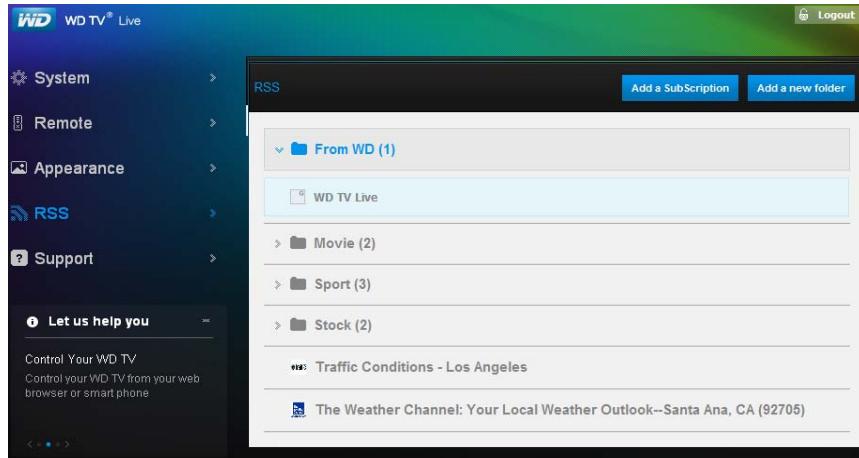

Support

Click **Support** to access Express Customer Support and Support Documentation including product documentation, FAQ's, and a WD TV user forum.

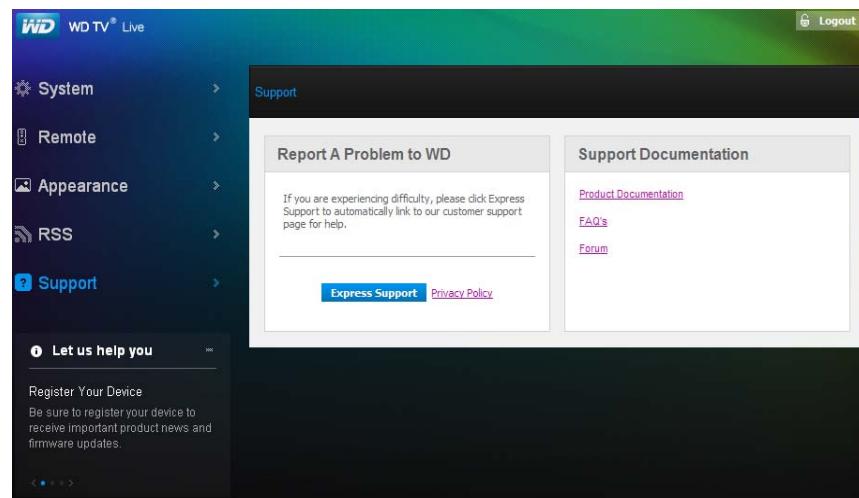

Logout

Click the **Logout** button in the main menu to log out of the Web UI.

Operating the Media Player

Using the Remote Control

The media player's ergonomic remote control lets you navigate the Home screen, browse for media files, enable playback options, and customize the system settings. The infrared sensor detects signals from the remote.



Important: Make sure there are no obstructions between the remote control and the infrared sensor on the media player.

Button	Function
HOME	Displays the main menu and the various options for playback of files and device setup.
POWER	Suspends the device into sleep mode and turns off video output. Press and hold the power button for five seconds to completely shut down the media player.
Navigation buttons	Navigate through Home options, menu screens, media libraries, on-screen keyboards, and toolbars.
OK	<ul style="list-style-type: none"> Displays the media directories and Settings screens. Turns information bar ON or OFF. Begins playback of the selected media file. Enables the currently selected setting in a Settings option screen.
STOP	Discontinues playback.
Back	Goes back to the previous screen.
REV (reverse)	Scans backward during audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
PREV	<ul style="list-style-type: none"> Press once to jump to the start of the audio/video file. Press twice to jump to the previous audio/video/image file. Press to page up. During Video REV mode, press to skip back 10 minutes.
SEARCH	Locates a media file in the current folder. This function is only available when the Media Library setting is enabled. Does not search subfolder.
Option	During playback, displays additional playback options. From an online media content screen, press to display more service options.
PAUSE/PLAY	Toggles between pause and playback.
FF (fast forward)	Scans forward through the audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
NEXT	<ul style="list-style-type: none"> Skips to the next audio, video, or image file. Press to page down. During Video FF mode, press to skip forward 10 minutes.

Button	Function
EJECT	Safely removes a USB device

Using a USB Keyboard


As an alternative to using the remote control, you can plug a USB keyboard into the USB port on the media player.

Key or key sequence	Function
HOME	Displays the main menu and the various options for playback of files and device setup.
CTRL + P (Power)	Suspends the device into sleep mode and turns off video output.
UP, DOWN, LEFT, & RIGHT ARROWS	Navigate through Home options, menu screens, media libraries, on-screen keyboards, and toolbars.
ENTER	<ul style="list-style-type: none"> Displays the media directories and Settings screens. Turns information bar ON or OFF. Begins playback of the selected media file. Enables the currently selected setting in a Settings option screen.
S (Stop)	Discontinues playback.
ESC (Back)	Goes back to the previous screen.
- (Reverse)	Scans backward during audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
P (Previous)	<ul style="list-style-type: none"> Press once to jump to the start of the audio/video file. Press twice to jump to the previous audio/video/image file. Press to page up. During Video REV mode, press to skip back 10 minutes.
CTRL + F (Search)	Locates a media file in the current folder. This function is only available when the Media Library setting is enabled. Does not search subfolder.
CTRL + O (Options)	During playback, displays additional playback options. From an online media content screen, press to display more service options.
SPACE BAR (Play/Pause)	Toggles between pause and playback.
+ (FF)	Scans forward through the audio/video playback. Supports the following speeds: 2x, 4x, 8x, 16x.
N (Next)	<ul style="list-style-type: none"> Skips to the next audio, video, or image file. Press to page down. During Video FF mode, press to skip forward 10 minutes.
CTRL + E (Eject)	Switches to safe mode so you can safely remove a USB device.
M (Mute)	Turns off the volume output

Key or key sequence	Function
V (Subtitle)	Switches a video's subtitles (if applicable)
B (Audio)	Switches a video's audio stream (if applicable)
DELETE	Clears the data entry field.
Z (Zoom)	Zooms in on the currently playing video file or photo.
R (Shuffle)	Enables the shuffle function for Videos and Music files.
L (Repeat)	Repeats the current video or music file.
BACKSPACE	Deletes the currently selected file.
CTRL + S (Setup)	Brings up the Setup menu
Alpha-numeric keys	<ul style="list-style-type: none"> Pressing any of these keys once inputs the corresponding letter or number. While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.

Using the Media Player Menu

The Home screen displays when you turn on your media player or press **HOME** on the remote control. The menu options in this screen let you browse your media library and configure the media player's settings.

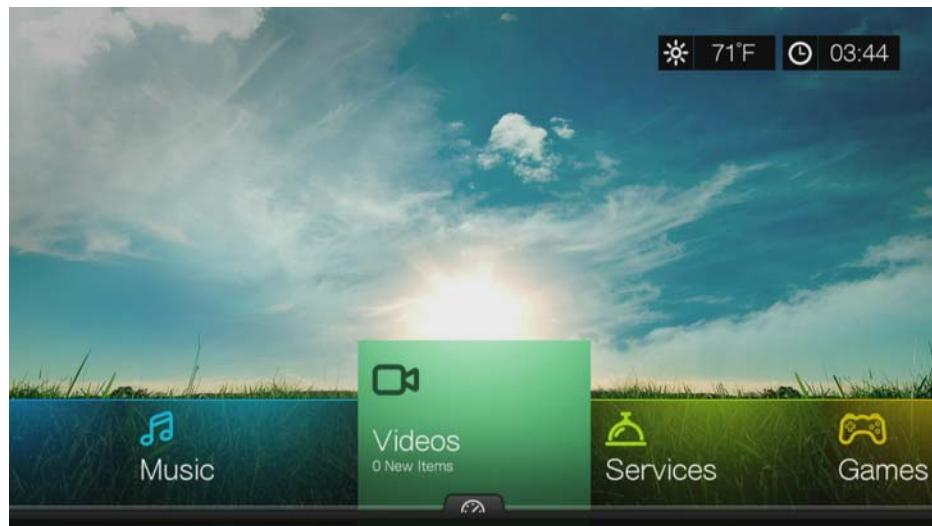

Home Screen Options

The main Home options are:

- Videos
- Music
- Photos
- Files

- Setup
- Services
- Games
- RSS
- New Firmware (automatically detects new firmware and only appears when new firmware is available)

The Music, Videos, and Photos options represent folders for the different media types. Media contents display either as file/file folders in the media player, network attached storage, or a USB drive directory or as a media library compilation list based on metadata information. For example, music files can be categorized based on their genre or the artist's name.

Setup lets you customize the way you use the media player and set preferences for media playback. For more information, see “Setup and Advanced Features” on page 179.

Setting Time and Weather

- To set the time in the media player screen display, see “Set Time & Country” on page 201.
- To set the temperature in the media player screen display, see “AccuWeather.com” on page 98.


Home Screen Navigation

Use the following keys to navigate through the menu screens.


Button	Function
◀▶ Left/Right arrows	Move from one option to the next
▼ Down arrow	View the dashboard
OK	Launches your selection

Media Player Dashboard

Press **▼** at the home screen or navigate to  then press **OK** in the in the Videos, Music, or Photos menus to launch the dashboard. Press **▲** or **Back** to exit the dashboard. Your Favorites are shown by default.

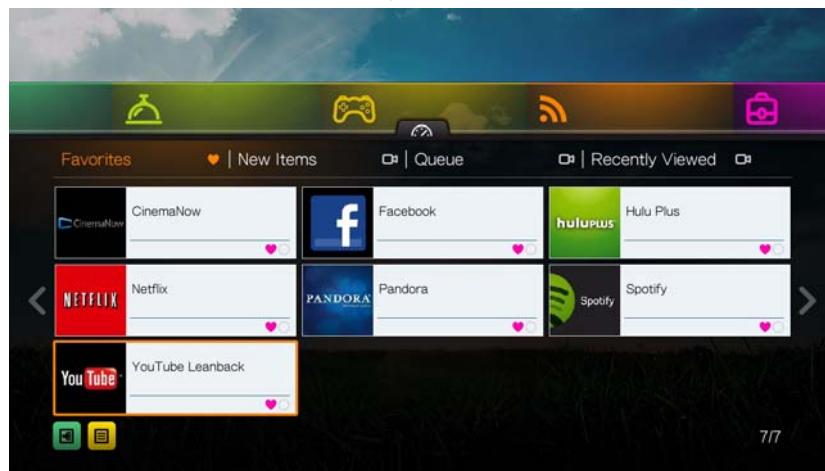

Navigate to  to filter the media files and internet service links shown on the main dashboard page by category and media type. For example, to find photos you have added recently, select **New Items** and press **OK**, **Photos** and press **OK**, then press **OK** again.

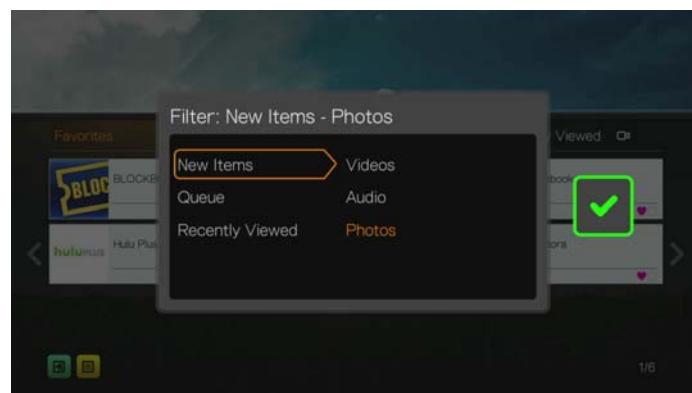

Navigate to  and press **OK** to toggle between list and thumbnail views.


Press **▲**, Use the **◀/▶** navigation buttons, then press **OK** in the dashboard to display your media files by the following categories:

- **Favorites** (see “Favorite” on page 65)
- **New Items** (displays media files you have added within a certain date range. See “Show New Items” on page 187 for details and instructions for adjusting the date range)
- **Queue** (Use the **◀/▶** navigation buttons then select the Videos, Music, or Photos icon, then press **OK** - see “Add to Queue” on page 65)
- **Recently Viewed** (displays media files you have viewed in the last xx days)

After selecting a category, filter the results by media type (Videos, Audio, or Photo). Then, use the navigation buttons to select a file then press **OK** to begin playback.

Dashboard Options


With a file selected in any of the dashboard categories, press **Options**.

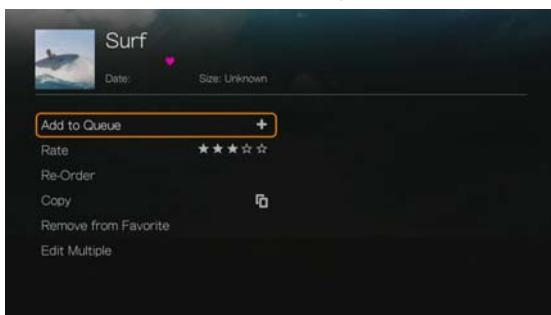

Dashboard Options - Favorites



Dashboard Options - New Items or
Recently Viewed

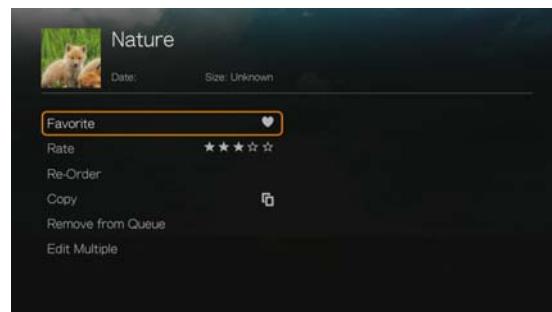

Dashboard Options - Queue

Use the **▲** / **▼** navigation buttons to select from the following options, then press **OK**.

- **Add to Queue** (when a file in Favorites, New Items, or Recently Viewed is selected - see "Add to Queue" on page 65).
- **Rate** (see "Rate" on page 65).
- **Re-Order** - use this option to move items up or down in viewing sequence in both Favorites and Queue categories. Using the navigation buttons, place the cursor where you want the selected file located.
- **Favorite** (when a file in Queue, New Items, or Recently Viewed is selected - see "Favorite" on page 65).
- **Copy** (see "Move & Copy" on page 66).
- **Remove from Favorite/Remove from Queue** - removes the selected file from the Favorites or Queue categories.
- **Delete** (see "Delete" on page 66).
- **Edit Multiple** (see "Select Multiple" on page 67).

Media Library Compilation

Media Library Compilation refers to the process of scanning and consolidating the media contents of the media player, network attached storage, or an attached USB device into one comprehensive database so that you can easily browse and locate media files based on certain metadata information (e.g., video files are categorized based on title or release date).


Media Library Compilation Exemptions

The following conditions will prevent the media library compilation process.

- The network share has read-only protection.
- The USB device has read-only protection.
- There is not enough storage space in network attached storage or an attached USB device.
- A drive is locked.

To turn off Media Library Compilation (default is On):

1. Navigate to Home | Setup | System.
2. Select **Media Library**, and then press **OK**.

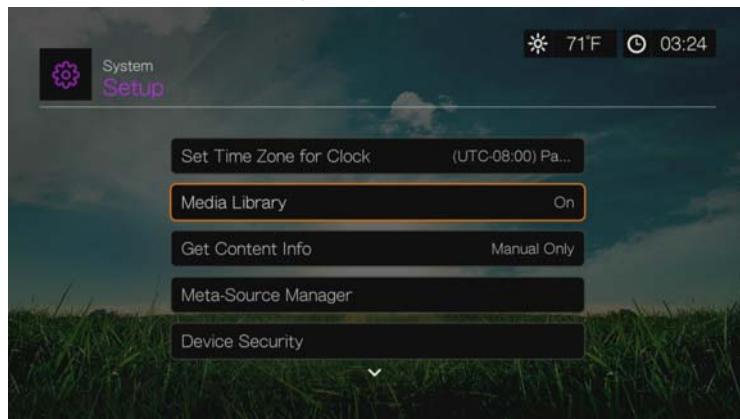

3. Select **OFF**, then press **OK**.



Note: Clear Media Library clears then rebuilds the media library.

Supported Categories for Media Library Compilation

Once the media library compilation process is completed, all available media files are organized under their respective media type directory. By default, media contents are displayed as thumbnails (music album/movie poster art, image thumbnail). The content categories are listed in the following table.

Media Type	Category	Description
Music	All Tracks	Displays a list of all audio files arranged in alphabetical order.
	Artist	Content is categorized based on the artist name.
	Genre	Content is categorized based on genre.
	Album	Content is categorized based on album names.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in audio file folders.
	Recent	Displays a list of audio folders/files that have been accessed recently.
	Playlist	Displays a list of music playlists.

Media Type	Category	Description
Video	All Video	Displays a list of all video files arranged in alphabetical order.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in video file folders.
	Recent	Displays a list of video folders/files that have been played recently.
	Playlist	Displays a list of video playlists.
Photo	All Pictures	Displays a list of all image files arranged in alphabetical order.
	Date	Content is organized by date modified.
	Folders	Contents are displayed in image file folders.
	Recent	Displays a list of image folders/files that have been accessed recently.

Locating Your Contents on the Drive

There are two ways of locating a particular media file depending on whether or not the media library compilation function is enabled.

Manual Search

You can manually search for a media file by navigating to the specific media section and browsing through the available file folders. This method is recommended if there are only a limited number of files to search through. Otherwise, it is better to enable the media library compilation and use the built-in Search function.

Button	Function
 Up/Down arrows	Select a media type (photos, video, or music) or settings Select one of the option icons in an Internet service's submenu bar
 Left/Right arrows	Move within a category
OK	Launches your selection

Use the navigation buttons to move around a particular folder; press **Back** to move between folders.

Thumbnail Support for Media Files

Your media player supports thumbnails in two ways - embedded or external (some file formats do not support embedded thumbnails).

Embedded thumbnails are images that are part of the media file itself. File formats that support embedded thumbnails:

Music - MP3 and WMA

Photo - JPEG

Video - MP4

To add an external thumbnail:

With an individual file or music album selected, press **Options**, then select **Get Content Info** (see “Get Content Info” on page 64). As an alternative, or if the database did not find any info:

1. Select a JPEG, GIF, or PNG image file that you want to display as a thumbnail of the music or video file.
2. Save the file in the same location as the file it will represent, according to the following guidelines:

Folder Thumbnail Guidelines

Music:

- Display folder.jpg (the image file must be named “folder.jpg” or thumbnail will not function)
- If no folder.jpg file is found, display the first embedded album art image found in the folder
- If no album art is available, display the first .JPG in the folder

Photo:

- Display thumbnail

Video:

- Display embedded cover art
- If no embedded cover art is available, display image file associated with the video file to be played (for example video.mkv will be associated with video.JPG)

File Thumbnail View Functions (Defaults)

Music:

- Display album art (.MP3 file with embedded .JPG)
- If no album art is available, display the image file with the same name as the audio file to be played. (for example, song.wav will be associated with song.jpg)

Photo:

- Display thumbnail

Video:

- Display .MP4 with embedded .JPG
- Display image file associated with the video file to be played (for example video.mkv will be associated with video.JPG)


Search Function

You must first enable the Media Library Compilation feature before using the Search function. Go to “Media Library Compilation” on page 55 for instructions.


To perform a media search:

1. Go to the main browser screen of the type of media you want to search for (**Videos**, **Music**, or **Photos**).
2. Press  on the remote control.


3. Select **Title**, **Director**, or **Actor** (Videos); **Title**, **File Name**, **Album** or **Artist** (Music); or **Title** (Photos). Press **OK**, then ► to select the . Press **OK**.

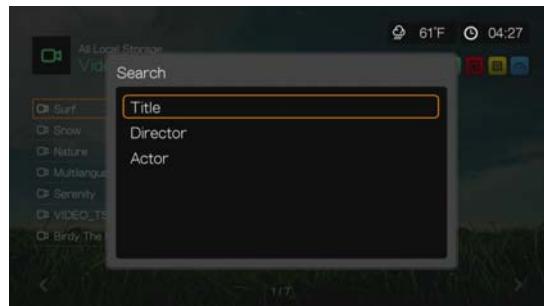

Search Options - Videos

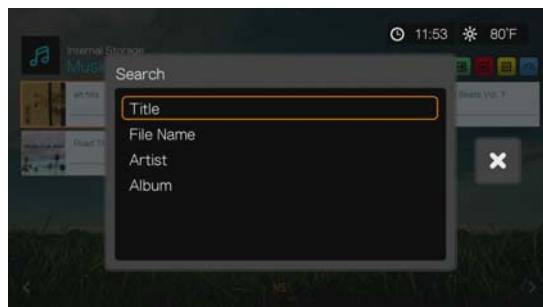


Search Options - Music

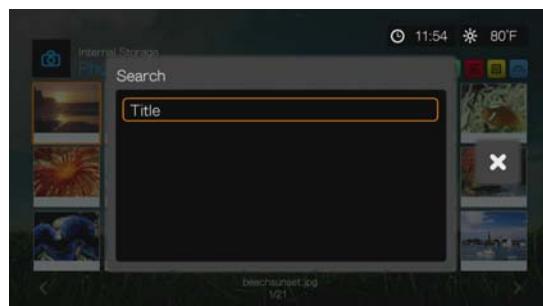


Search Options - Photos

4. Select **Contains** or **Starts with**, then press **OK** twice.

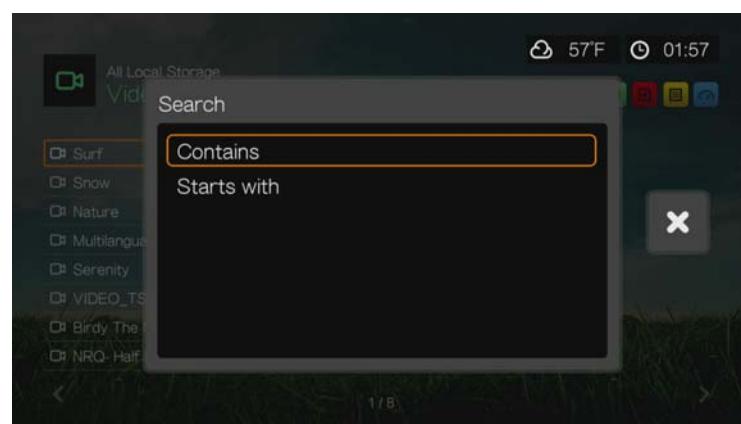


5. Using the on-screen keyboard:

- Use the navigation buttons to select a character, then press **OK** to input it in the search bar. Alternatives to this method are as follows:
 - Use the alpha-numeric keys on the remote control to enter search terms. For example, press the **2** button a number of times to enter a, b, or c; press the **3** button a number of times to enter d, e, or f, etc.
 - Plug a USB keyboard into the media player as an alternative to the methods above. See “Using a USB Keyboard” on page 50.
- Select **ABC** or **abc**, then press **OK** to input characters in a different case.
- Select **@#&**, then press **OK** to display the symbol keyboard for inputting special keyboard characters.
- Select **.com**, then press **OK** to display the symbols for special characters such as *.com*, *www.*, *.net*, *.org*, etc.
- Press **Options** for multi-lingual/multi-character input (applicable to certain letters on the keyboard).
- If you want to erase the last character entered, navigate to **Del** then press **OK**.
- Navigate to **↶** and press **OK** to move the cursor backward and **↷** to move the cursor forward in the **Search** field (you can also press **↶↷** to move the cursor backward and **Next Page** to move the cursor forward in the Search field).

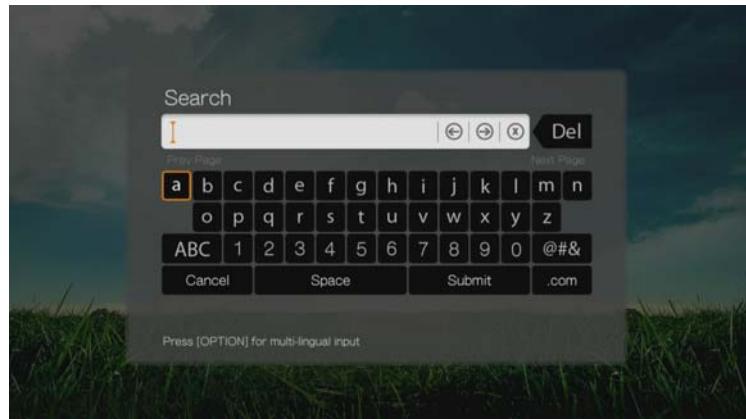

To use search history:

- Press the **SEARCH**  button on the remote control. This toggles you to the Search History list.

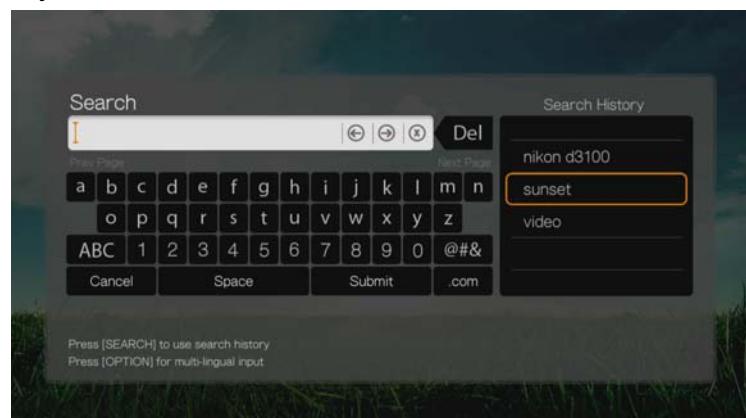

- Press **▲/▼** to select a search from the display.
- Press **OK** to perform the saved search.


6. Once you define the search parameters, select **Submit** on the bottom of the on-screen keyboard, then press **OK**.

All files with filenames that begin with the characters entered in the search field will be included in the search results. For example, inputting 'glo' will result to a search results like this:

- Global party.mpeg
- Glow of the Field.jpg
- Gloss.mp3

7. If there are no media files matching the search parameters, press **OK** to display the on-screen keyboard again and redefine the search parameters.

If media files matching the search parameters you set are found, they will be listed as shown below (the result of entering 'bea' in Photos).

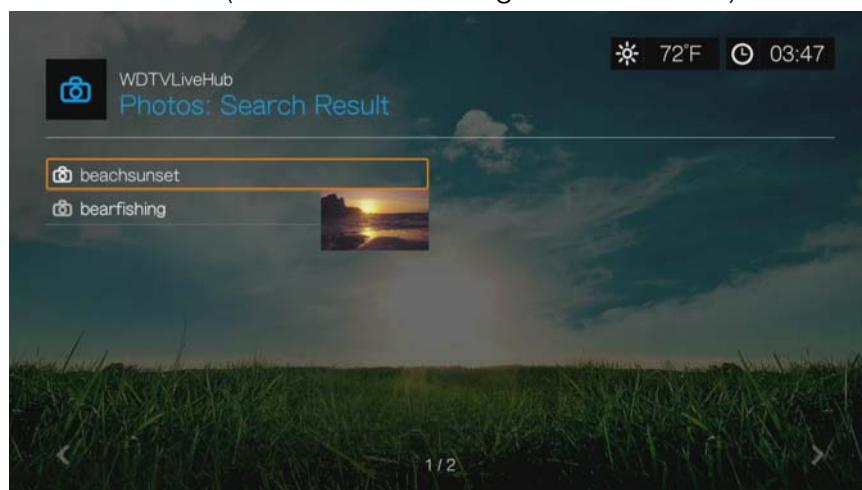

Use the navigation buttons to select the media file you are looking for, and then press **OK** or **■ ▶** to initiate playback.

Watching Video

You can watch videos on your TV using the media player.

Supported Video Formats


The following video file formats are supported.

- AVI (Xvid, AVC, MPEG1/2/4)
- MPG/MPEG
- VOB/ISO
- MKV (h.264, x.264, AVC, MPEG1/2/4)
- TS/TP/M2T (MPEG1/2/4, AVC, VC-1)
- MP4/MOV (MPEG4, h.264)
- M2TS
- WMV9 (VC-1)


Video Playback

To play back video:

1. Navigate to the Home | Videos menu, then press **OK**.

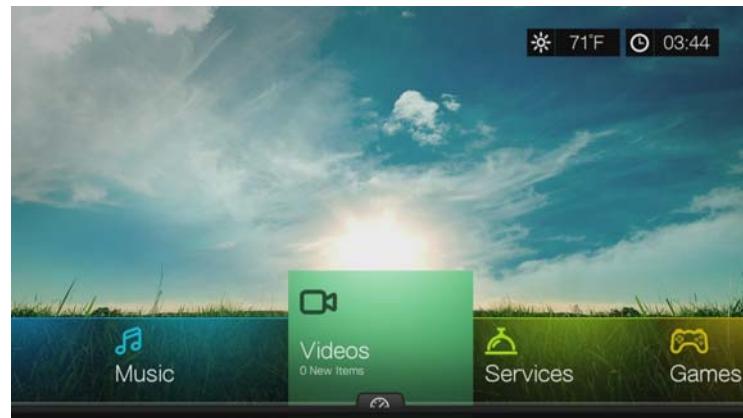

2. The screen displays available video files and video folders in the media player's local drive by default. The display will either be in preview view (default), grid view, list view, or gallery view, depending on your Browser Display setting (see "Video Settings" on page 188 for more information on Browser Display settings). Preview mode displays file size, and file type and genre (if available) for the selected video.

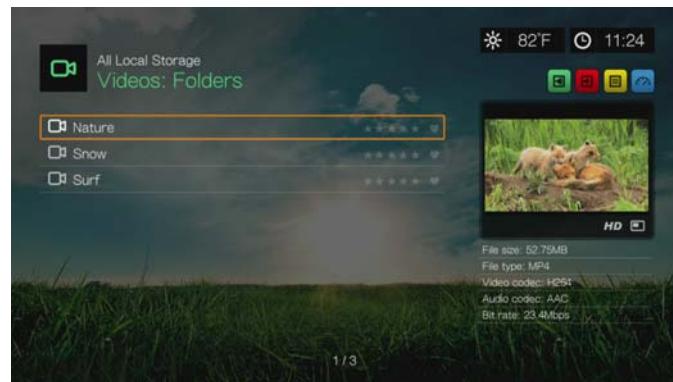

If Media Library is enabled, you can choose to navigate using a filter option (**All Videos, By Date, By Folders, By Year, Personal rating, or Playlists**) by selecting the Video icon and then using the left and right arrow buttons on the remote control to scroll through the options listed. See “Supported Categories for Media Library Compilation” on page 56 for details.

3. Locate the video file you want to play.
 - To begin playback of a single video file, highlight the file, and then press **OK**.
 - To begin playback of a video playlist, highlight the playlist name, then press **PAUSE/PLAY**.
 - To begin playback of all video files in a folder, highlight a video in that folder, then press **PAUSE/PLAY**.
 - To find a video on a network share or media player, follow the instructions in “Accessing Media Content” on page 28.

If you try to open a video file that has been partially played before, you are prompted to choose whether to play the file from the beginning or resume playback from the last playback position. Select **Resume** to resume playback or **Restart** to start playback from the beginning.

Sort & Filter Videos

You can sort and filter the videos shown in the video menu based on your preferences using the sorting & filter option.

Filter

1. Press **A** or navigate to the sort and filter content icon **Filter**, and press **OK**.
2. Press **▶**, then **▲/▼** to select Filter by All, Folders, Genre, Actor, Director, TV Show, Playlist, Untagged, New Items, and Favorites. Press **OK** to display videos by the criteria selected.



Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.



3. With the green check mark **✓** selected, press **OK** again.

Sorting


1. Press **A** or navigate to the sort and filter content icon  , and press **OK**.
2. Press **►**, then **▲** / **▼** to select Sorting by Date, Alphabetically, by Ratings, or by Recently Viewed. Press **OK** to display videos by the criteria selected in either ascending (arrow up) or descending (arrow down) order.



3. Press **►**. With the green check mark  selected, press **OK** again.

Videos Menu Options

In the main Videos screen, press **Options**. The Videos menu options display. Press **Back** when finished to return to the main menu.

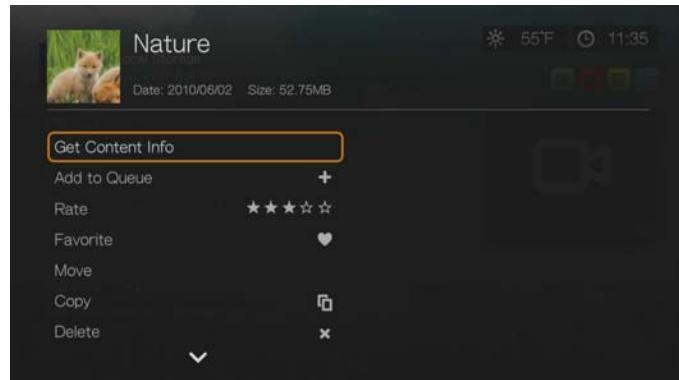

Get Content Info

Press **▲** / **▼** and select **Get Content Info** from the list of options prompts the media player to connect to an online media database to gather information about the file. For example, Get Info returns the MPAA rating, duration of the movie, genre, studio photos, and movie trailers based on the movie's title.

If a No Content Info Found message displays, navigate to the keyboard icon then press **OK**.



Enter the whole title or a portion of the title using the on-screen keyboard, select **Submit**, then press **OK** to associate info with the content. Select a title from the list, then press **OK**.

Rescan Info

Press **▲/▼** and select **Rescan Info** from the list of options after you have associated content info with a file. The rescan info option updates content info or allows you to correct content info that was associated with the file in error.

View Info

Press **▲/▼** and select **View Info** from the list of options after you have associated content info with a file. A synopsis/description of the title info displays.

Add to Queue

Adding videos to the queue provides quick access to these files via the dashboard (see “Media Player Dashboard” on page 53).

Rate

Rate your videos and other media files so you can sort and filter them by ratings and access them quickly in the dashboard.

1. Press **▲/▼** and select **Rate Video** from the list of options.
2. Press **◀/▶** to highlight the number of stars corresponding to your preferred rating. Five is the highest rating, and one is the lowest.
3. Press **OK** to confirm your rating.


Favorite

Favorite your videos other media files so you can sort and filter them by favorite and access them quickly in the dashboard.


1. Press **▲/▼** and select **Favorite** from the list of options.
2. Press **OK**.

Move & Copy

1. Press **▲/▼** and select **Move** or **Copy** from the list of options, then press **OK**.
2. Select a storage destination for the file you want to move or copy, then press **OK**.

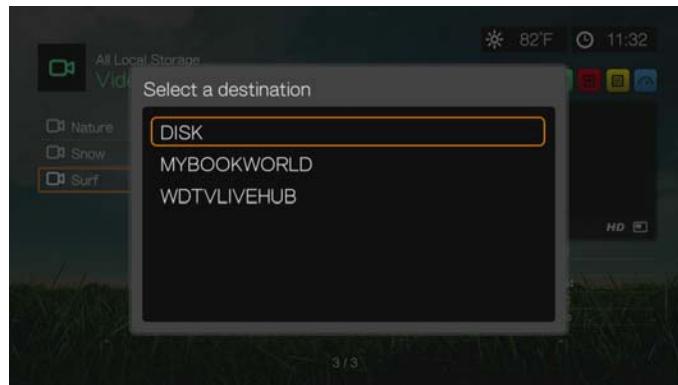

3. Use the navigation buttons to select the location where you want to move or copy the file. When you have selected the location, press **OK** to place the file there (if selecting a network or media server location, see “Accessing Media Content” on page 28).
4. Press **►** to select the green check mark , then press **OK**.

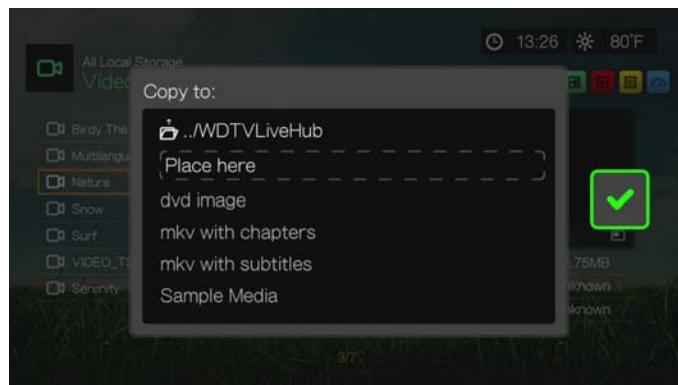

Delete


1. Press **▲/▼** and select **Delete** from the list of options.
2. Select **Yes**, then press **OK** to confirm deletion.

Upload to Facebook

You can upload a video to Facebook by selecting this option.

1. Press **▲/▼** and select **Upload to Facebook** from the list of options.
2. Select the account you want to post the file to then press **OK**, or select **Add Account** to add a Facebook account (see “Facebook” on page 109 for details).


3. The screen below displays. Press **OK** to select “Don’t ask me again!” if you do not want this screen to appear again, then press **►** to select the green check mark . Press **OK**.

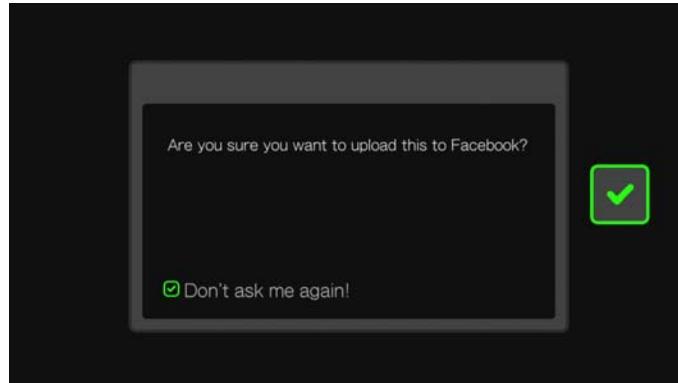


Select Multiple

Select Multiple applies changes to more than one file.

1. Press **▲/▼** and select **Select Multiple** from the list of options.
2. The select multiple screen displays. Use the navigation buttons to **Select All**, **Select Page**, or **Clear All** files shown, or **Continue** to the next group of files, then press **OK**.

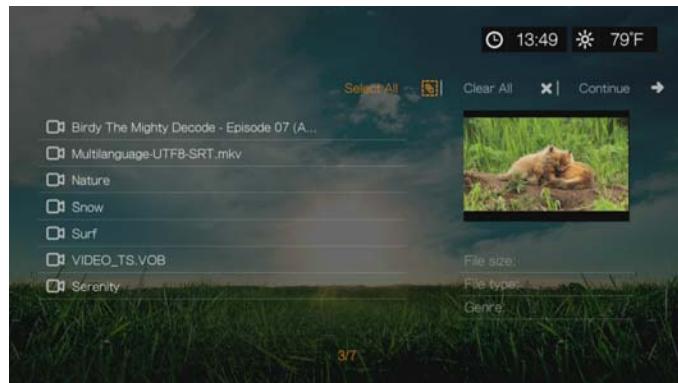

3. With multiple files selected, press **Options** to apply changes to more than one file.

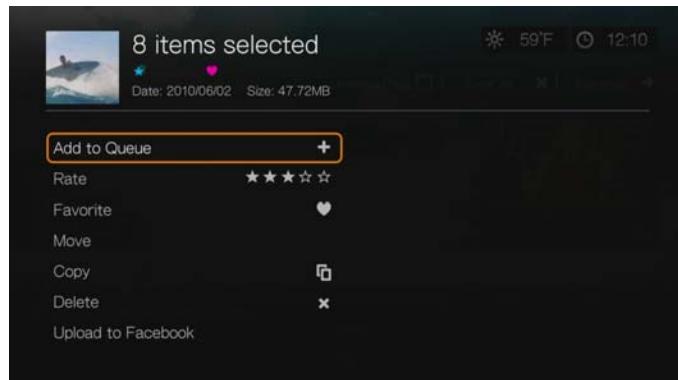

Video Playback Controls

Use these buttons on the remote control to control video playback:

Button	Function
STOP	Discontinues video playback
PAUSE/PLAY	Pauses or resumes video playback
1. Press FF (fast forward) or REV (reverse) to scan video (press repeatedly to select the scan speed) 2. Press PAUSE/PLAY to resume playback on the selected position	Scans the video playback forward or backward The media player supports the following scan speeds: 2x, 4x, 8x, 16x
NEXT	<ul style="list-style-type: none"> Plays the next video file in the video folder/playlist Press during Fast Forward to skip forward 10 minutes. Press NEXT to skip to the next chapter (if the video file supports chapters).
PREV	<ul style="list-style-type: none"> Plays the previous video file in the video folder/playlist Press during Fast Reverse to skip back 10 minutes. Press PREV to skip to the previous chapter (if the video file supports chapters).
 Up arrow	Move subtitles up on the screen.
 Down arrow	Move subtitles down on the screen.
 Left arrow	Reduce subtitle display speed.
 Right arrow	Increase subtitle display speed.
Subtitle	<ul style="list-style-type: none"> •
Audio	<ul style="list-style-type: none"> •

Video Playback Options

- To display the video playback options while playing a video, press **Options**.
- To return to the video, press **Back**.



Get Content Info

See “Get Content Info” on page 64.

View Chapter

If you are viewing a multichapter video file, you can select which chapter to play.

To select the video chapter:

1. Press **Options**.
2. Highlight **View Chapter**, then press **OK**.



3. Press **▲** / **▼** to highlight your chapter selection, then press **OK** twice.

Subtitle

Use this option to view subtitles during video playback. Make sure the subtitle files are located in the same folder as the current video, and that it has the same filename as the video file.



Note: Subtitle files (specific types that are supported) need to have the exact same file name as the media they are playing (the extensions will be different) and need to be located in the same folder as the video file.

To view subtitles:

1. During video playback, press **Subtitle** repeatedly until your desired subtitles display or “Subtitle Off” appears. Or, press **Options**, highlight **Subtitles**, then press **OK** and follow the steps below.
2. Select your preferred language or **Off** (to disable subtitles), then press **OK**.
3. With the green check mark  selected, press **OK** again.




Adjust Subtitles

After selecting subtitles, use this option to adjust subtitles during video playback.



Note: This option is only available for ASS/SRT/SSA subtitles, and is not available for PGS, SUB/IDX, or VOBSSUB subtitles.

1. During video playback, press **Options**.
2. Highlight **Adjust Subtitles**, then press .

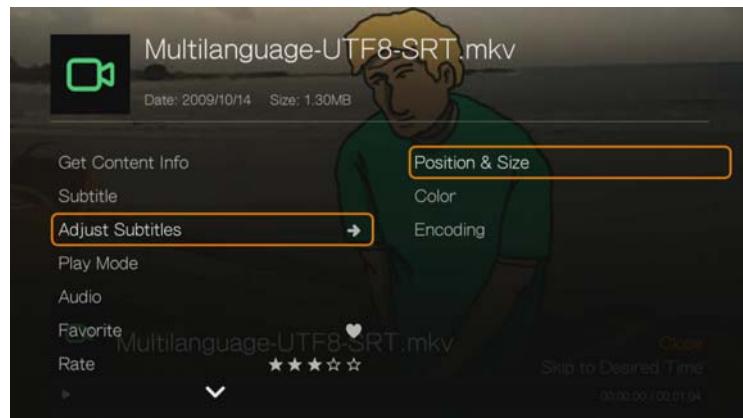

Adjust Subtitles submenu options include:

- **Position & Size** - use navigation buttons to adjust position and speed, press **OK** repeatedly to adjust size).
- **Color (of subtitle text)** - select fill and border color from the Subtitle Color menu.
- **Encoding** - see “Additional Encoding Support” on page 203.

Play Mode

Use the play mode option to set video repeat options. Press **OK** repeatedly until the repeat icon you want is displayed. Options include:

- **Repeat All**  – All the video files in the current video folder are played in sequence and repeatedly until you press **STOP** or **Back**.
- **Repeat One**  – The current video file is played repeatedly until you press **STOP** or **Back**.

Audio Channel Selection

Use this option to select the audio language used in the video playback. This option is only available if the current video has more than one audio track. Make sure the audio tracks are located in the same folder as the current video.

To select the audio channel:

1. During video playback, press **Audio** (or press **Options**, highlight **Audio**, then press **OK**).
2. Repeat the step above until your desired language or track plays.

Favorite

See “Favorite” on page 65.

Rate

See “Rate” on page 65.

Add to Queue

See “Add to Queue” on page 65.

Selecting Video Zoom and Pan Options

Use this option to change the viewing scale of the video playback screen and to pan the video display.


1. During video playback, press **Options**.
2. Select **Zoom & Pan**, then press **OK**.
3. Press **OK** repeatedly to cycle through the available zoom options. Use the navigation buttons to pan the display.

Delete

See “Delete” on page 66.


Displaying the Video Playback Panel

Use this option to display the Video Playback Panel on the bottom of the screen. This panel shows the following information about the current video:

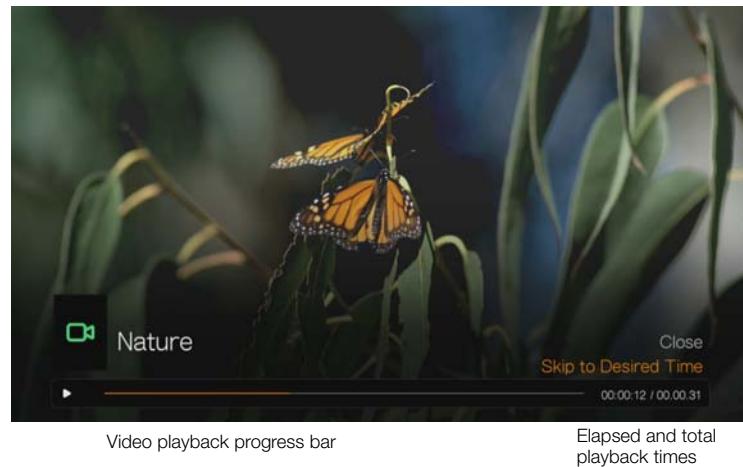

To view the Video Playback Panel:

1. During video playback, press **OK**. The video playback panel appears on the bottom of the screen, showing a progress bar along with the elapsed and total playback times.
2. Some videos allow you to advance to a specific time. Select **Skip to Desired Time**, then click **OK**. A keyboard displays:

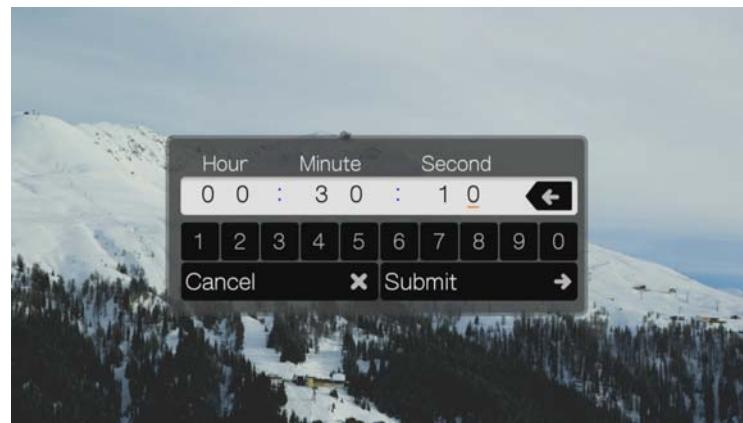

3. Use the navigation buttons to position the cursor under each number in the Hour, Minute, and Second fields, then select a number from the keyboard. Select Submit then press **OK** when finished to advance to the specific time.

Press **OK** to hide the Video Playback Panel when finished.

DVD Navigation

In most cases, when the contents of an entire DVD have been successfully saved and stored on an attached USB hard drive or a networked hard drive connected to the media player, you will experience the same DVD menu navigation functionality using the buttons on the media player remote as you would using a DVD remote for a DVD player connected to a television.



Important: For DVD navigation to work, the VOB files must be placed in a folder named VIDEO_TS.



Note: Video files such as AVI, MP4, MKV, and MT2S are "single track" video files that do not provide DVD navigation features.


DVD Navigation Controls

Use these buttons on the remote control to control DVD navigation video playback:

Button	Function
STOP	Discontinues video playback
PAUSE/PLAY	Pauses or resumes video playback
1. Press FF (fast forward) or REV (reverse) to scan video (press repeatedly to select the scan speed) 2. Press PAUSE/PLAY to resume playback on the selected position	Scans the video playback forward or backward The media player supports the following scan speeds: 2x, 4x, 8x, 16x
NEXT	<ul style="list-style-type: none"> Press during Fast Forward to skip forward 10 minutes. Press NEXT to skip to the next chapter.
PREV	<ul style="list-style-type: none"> Press during Fast Reverse to skip back 10 minutes. Press PREV to skip to the previous chapter.
▲ Up arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc.
▼ Down arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc.
◀ Left arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc.
▶ Right arrow	<ul style="list-style-type: none"> At the main menu, move between selections such as Play Movie, Scene Selection, Set Up, Special Features, etc.

DVD Navigation Playback Options

- To display the video playback options, press **Options**.
- To hide the options, press **Back** or **Options** again.

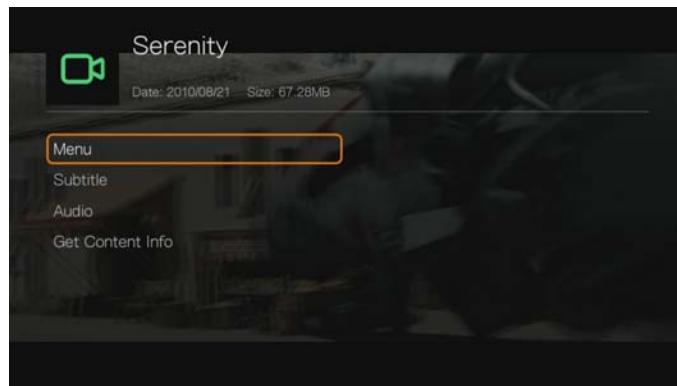

Main Menu Selection

To show the main menu in DVD navigation mode:

1. Press **Options**.
2. Highlight **Menu**, then press **OK**. The main menu displays.



Note: Make sure the DVD menu option is set to **On**. See “DVD Menu” on page 188.

Selecting Subtitles

See “Subtitle” on page 69.

Audio Channel Selection

See “Audio Channel Selection” on page 71.

Get Content Info

See “Get Content Info” on page 64.

9

Playing Music


You can listen to audio files on your TV/audio system using the media player.

Supported Audio Formats


- MP3
- WAV/PCM/LPCM
- WMA
- AAC
- FLAC
- MKA
- AIF/AIFF
- OGG
- Dolby Digital Plus
- DTS

Music Playback

1. Navigate to the Home | Music menu, then press **OK**.

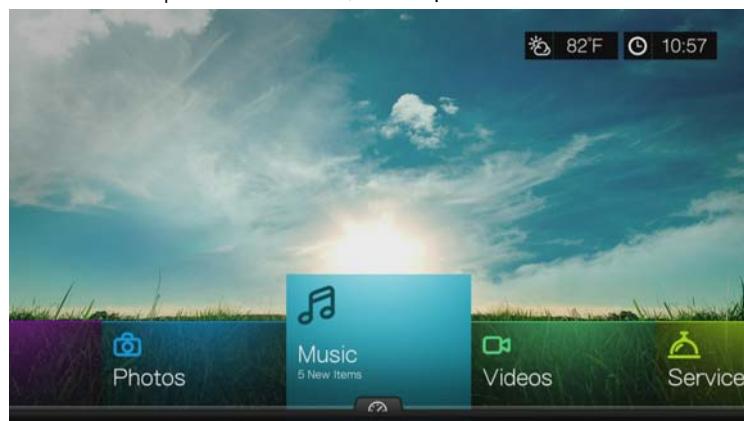

2. The screen displays available music files and folders in the media player's local drive by default. The display will either be in grid view (default) or list view, depending on your Browser Display setting (see "Music Settings" on page 191 for more information on Browser Display settings).

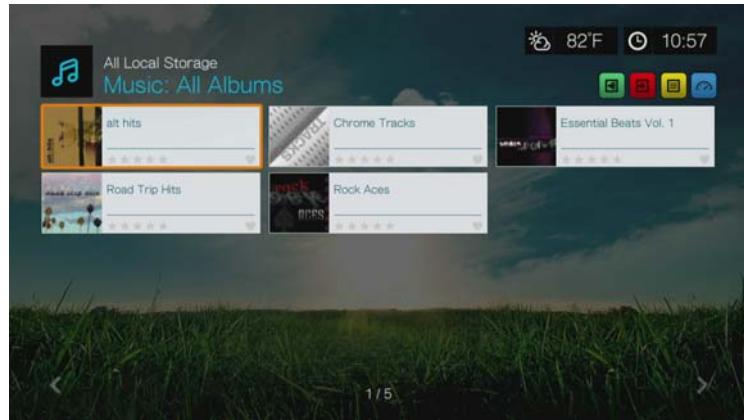

If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All, All Tracks,

Genre, Artist, Album, Playlists, Favorites) See “Supported Categories for Media Library Compilation” on page 56 for details.

3. Locate the audio file you want to play.
 - To begin playback of a single audio file, highlight the file, then press **OK**.
 - To begin playback of an album, highlight the album, then press **OK**. Press **OK** again to play the album.
 - To begin playback of a music playlist, highlight the playlist name, and then press **PAUSE/PLAY**.
 - To begin playback of all audio files in a folder, highlight an audio file in that folder, and then press **PAUSE/PLAY**.
 - To find audio files on a network share or media player, follow the instructions in “Accessing Media Content” on page 28.

Sort & Filter Music


You can sort and filter music based on your preferences using the sort & filter option.

Filter

1. Press **A** or navigate to the sort and filter content icon  , and press **OK**.
2. Press **►**, then **▲** / **▼** to select Filter by All Albums, All Tracks, Genre, Artist, Folders, Playlist, Untagged, New Items, and Favorites. Press **OK** to display music by the criteria selected.




Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

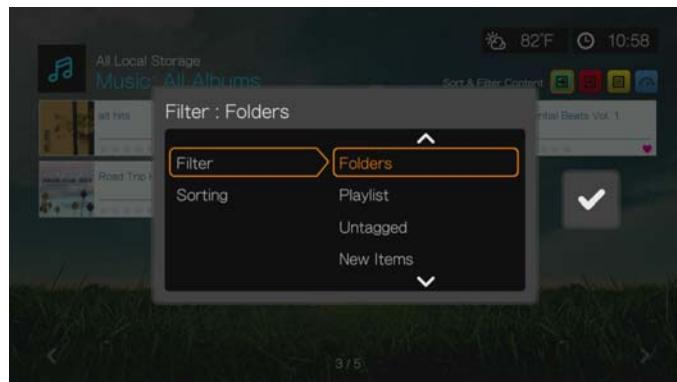

3. With the green check mark  selected, press **OK** again.

Sorting


1. Press **A** or navigate to the sort and filter content icon  , and press **OK**.
2. Press **►**, then **▲** / **▼** to select Sorting by Date, Alphabetically, Ratings, or by Recently Viewed. Press **OK** to display music by the criteria selected in either ascending (arrow up) or descending (arrow down) order.

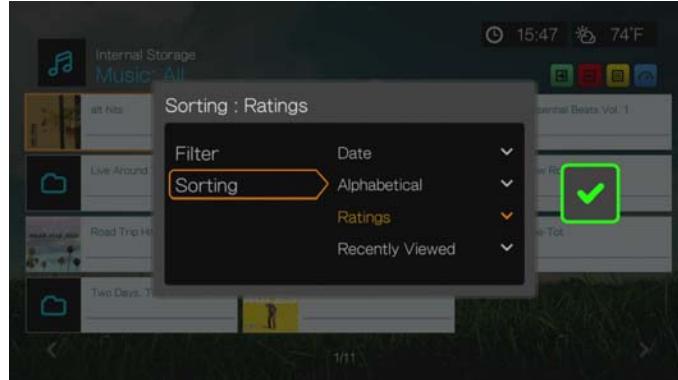

3. Press **►**. With the green check mark  selected, press **OK** again.

Music Menu Options

In the main video screen, press **Options**. The Music menu options display. Press **Back** when complete to return to the main menu.

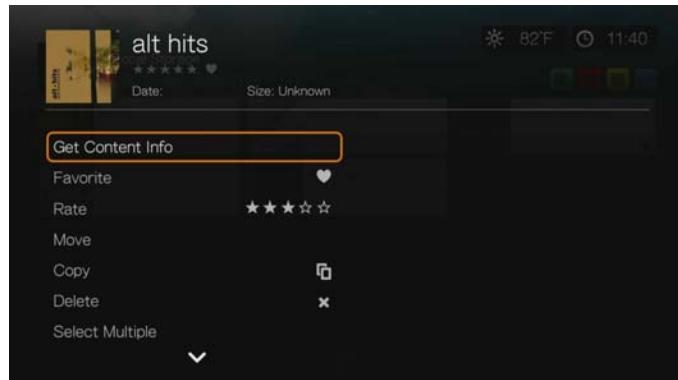

Get Content Info

The Music get content info function is the same as the Videos get content info function. See “Get Content Info” on page 64.

Rescan Info

The Music rescan info function is the same as the Videos rescan info function. See “Rescan Info” on page 65.

View Info

The Music view info function is the same as the Videos view info function. See “Video Playback Controls” on page 68.

Favorite

The Music favorite function is the same as the Videos favorite function. See “Favorite” on page 65.

Rate

The Music rate function is the same as the Videos rate function. See “Rate” on page 65.

Move & Copy

The Music move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 66.

Delete

The Music delete function is the same as the Videos delete function. See “Delete” on page 66.


Select Multiple

The Music edit multiple function is the same as the Videos edit multiple function. See “Select Multiple” on page 67.

Preset Music

The Preset Music function allows you to assign a numbered button on the remote to a song for quick playback.

1. Press ▲/▼ to select **Preset Music**. Press ►.

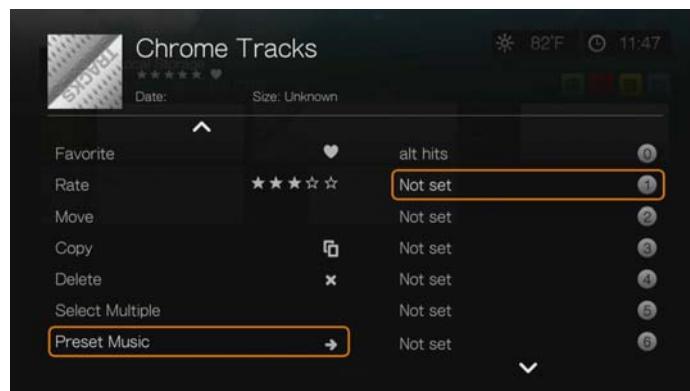

2. Press ▲/▼ to select a numbered remote button, then press **OK**.

Music Playback Controls

Use these buttons on the remote control to control music playback when in the music playback screen:


Button	Function
STOP	Stop audio playback
PAUSE/PLAY	Pause or resume audio playback
1. Press FF (fast forward) or REV (reverse) to scan the audio file (press repeatedly to select the scan speed). 2. Press PLAY to resume playback on the selected position.	Scan the audio playback forward or backward The media player supports the following scan speeds: 2x, 4x, 8x, 16x
Press PREV (previous track) once.	Start playback from the beginning
Press NEXT	Play the next audio track in the music folder/playlist
Press PREV (previous track) twice.	Play the previous audio track in the music folder/playlist
0-9	While listening to a song or music playlist, press and hold any of the 0-9 buttons to create a preset.



Note: If you leave the music playback screen, the only playback controls that work are the **STOP** button (to stop music playback) and **Options** (during photo playback - to jump to the previous or next track).

Music Playback Screen

The music playback screen displays the following information about the currently playing album and/or audio file:

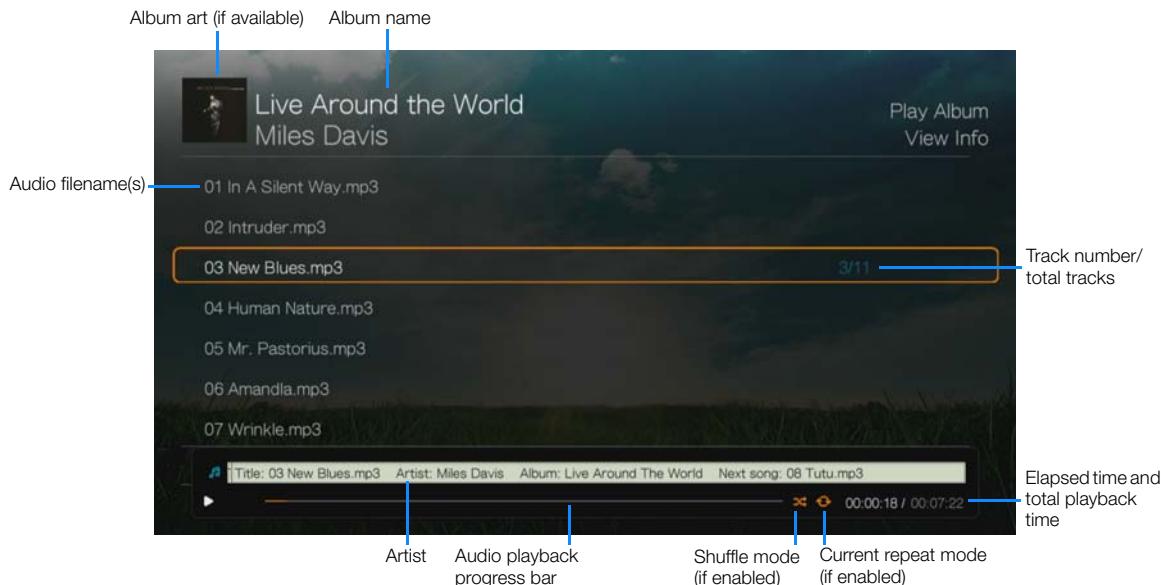

Music Playback Options

- To display the music playback options, press **Options**.
- To hide the options, press **Back** or **Options** again.



Get Content Info

The Music get content info function is the same as the Videos get content info function. See “Get Content Info” on page 64.

Rescan Info

The Music rescan info function is the same as the Videos rescan info function. See “Rescan Info” on page 65.

View Info

The Music view info function is the same as the Videos view info function. See “Video Playback Controls” on page 68.

Add to Queue

The Music add to queue function is the same as the Video add to queue function. See “Add to Queue” on page 65.

Favorite

The Music favorite function is the same as the Video favorite function. See “Favorite” on page 65.

Rate

The Music rate function is the same as the Video rate function. See “Rate” on page 65.

Play Mode

Use the music play mode to set repeat and shuffle options.

Repeat

To set the music repeat mode:

1. During music playback, press **Options**.

2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Repeat All**  – All the audio files in the current music folder/playlist is played in sequence and repeatedly until you press **STOP** or **Back**.
 - **Repeat One**  – The current audio track is played repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the audio files in the current music folder/playlist are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

The icon for the enabled repeat mode will appear below the playback progress bar.

Shuffle

Use this option to set the audio tracks in the current music folder/playlist to play in random order.

To enable music shuffle mode:

1. During music playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Shuffle**  – All the audio files in the current music folder/playlist are shuffled repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle**  – All the audio files in the current music folder/playlist are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

Delete

The Music delete function is the same as the Videos delete function. See “Delete” on page 66.

Preset Music

See “Preset Music” on page 78.

Playing Music From Your iPod®

Apple® uses a proprietary naming scheme and because of this the media player is unable to display the original names for the folders and files as they are in your iPod. The media player instead reassigns new names for the folders and files, but only while in use with the media player. The original file information is preserved in your iPod. You can view the original file information when you play a file where the screen will display the metadata.



Note: The media player does not support playback of protected premium content such as movies or music from the iTunes® Store, Cinema Now, Movielink®, Amazon Unbox™, and Vongo®.

To use your iPod with the media player, simply plug your iPod in to the USB port and navigate through the interface menu.



Note: The media player only supports USB mass storage mode. iPod Touch is not a USB mass storage device and is therefore not supported.

10

Viewing Photos


You can view your digital photos both individually and in slideshow mode on your TV using the media player.

Supported Image File Formats

- **GIF** (Animated GIFs are not supported)
- **BMP** (non-compressed)
- **JPEG** (grayscale, RGB, YCbCy) (does not support CMYK or YCCK)
- **TIF/TIFF** (RGB) (does not support CMYK, YMC, YMCK, or KCMY)
- **PNG** (Non-alpha channel only)

Photo Display

1. Navigate to the Home | Photos menu, then press **OK**.

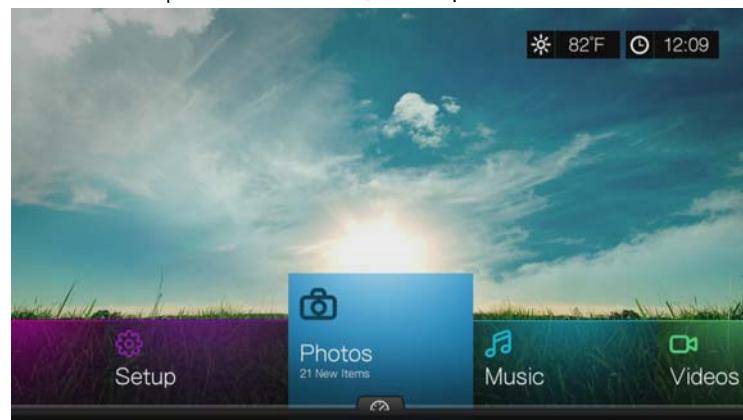

2. The screen displays available music files and folders in the media player's local drive by default. The display will either be in grid view (default) or list view, depending on your Browser Display setting (see "Photo Settings" on page 192 for more information on Browser Display settings).



3. If Media Library is enabled, you can choose to navigate using sorting (Alphabetical, Date, Ratings, Recently Viewed) and filter options (All Pictures,

Date, Folders, Recent). See “Supported Categories for Media Library Compilation” on page 56 for details.

4. Locate the picture file you want to view.
 - To open a single picture file for viewing, select the file, and then press **OK**.
 - To view the next picture file in the photo folder, press **▶** (next).
 - To view the previous picture file in the photo folder, press **◀** (previous).
 - To find picture files on a network share or media player, follow the instructions in “Accessing Media Content” on page 28.

You can also view a slideshow using all picture files in a photo folder. See “Photo Slideshow” on page 90 for instructions.

Sort & Filter Photos


You can sort and filter photos based on your preferences using the sort & filter option.

Filter

1. Press **A** or navigate to the sort and filter content icon  , and press **OK**.
2. Press **▶**, then **▲** / **▼** to select Filter by All, Date, Date (year), Date (month), Folders, New Items, and Favorites. Press **OK** to display music by the criteria selected.




Note: If you have your media files organized by folder, it may be easier and quicker to find your files by using the Filter option to only show folders.

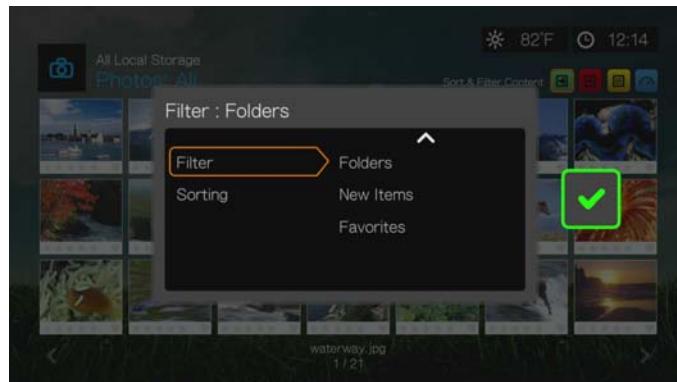

3. With the green check mark  selected, press **OK** again.

Sorting

1. Press **A** or navigate to the sort and filter content icon  , and press **OK**.
2. Press **►**, then **▲** / **▼** to select Sorting by Date, Alphabetically, Ratings, or by Recently Viewed. Press **OK** to display photos by the criteria selected in either ascending (arrow up) or descending (arrow down) order.

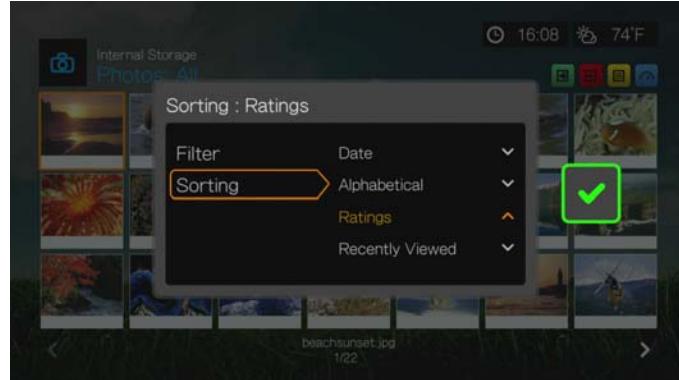

3. Press **►**. With the green check mark  selected, press **OK** again.

Digital Camera Support

You can attach your digital camera to the media player via a USB port and view the supported image files stored in the camera's memory card.


To view images from a digital camera:

1. Attach your digital camera to the media player via the USB port.
2. Press **OK** to close the message (the media player sees the camera's memory card as a read-only device).
3. Navigate to the Home | Photos menu.
4. The digital camera is considered a USB device. Use the navigation buttons to select, then press **OK**.

The screen displays thumbnails of available picture files and photo folders. Only image files supported by the media player are displayed.

Photos Menu Options

In the main photo screen, press **Options**. The Photos menu options display. Press **Back** when complete to return to the main menu.

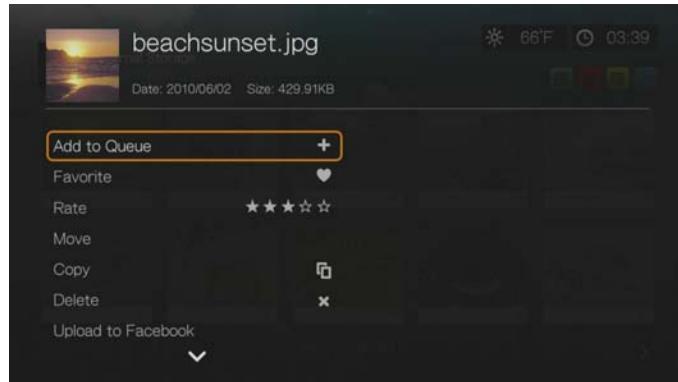

Add to Queue

The Photos add to queue function is the same as the Videos add to queue function. See “Add to Queue” on page 65.

Favorite

The Photos favorite function is the same as the Videos favorite function. See “Favorite” on page 65.

Rate

The Photos rate function is the same as the Videos rate function. See “Rate” on page 65.

Move & Copy

The Photos move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 66.

Delete

The Photos delete function is the same as the Videos delete function. See “Delete” on page 66.

Upload to Facebook


The Photos upload to Facebook function is the same as the Videos upload to Facebook function. See “Upload to Facebook” on page 66.

Upload to Picasa

You can upload a photo to Picasa by selecting this option.

1. Press **▲/▼** and select **Upload to Picasa** from the list of options.
2. If prompted to sign in, select **Yes**, then press **OK**, and enter your Picasa username and password using the on-screen keyboard.


3. The screen below displays. Press **OK**.

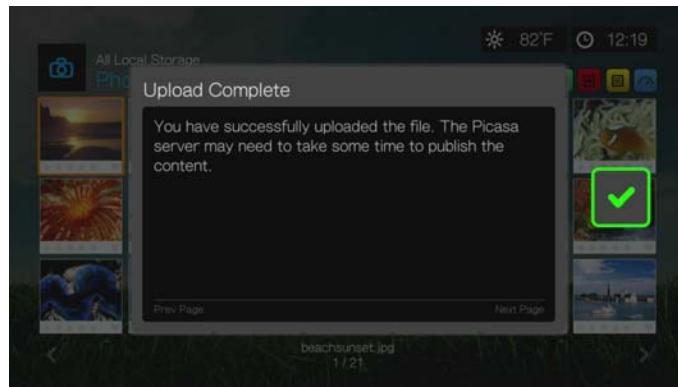

Set as Background

You can set any photo as the system background to replace the default grass field and sunny sky photo or other photo you have previously selected.

1. Find and select the photo you want to use for the background in the Photos menu, then press **OK**.
2. Press **Options**.
3. Select **Set as Background**, then press **►**.
4. Select one of the photo scaling options (**Keep as Original**, **Fit to Screen**, or **Display in Full Screen**), then press **OK**.

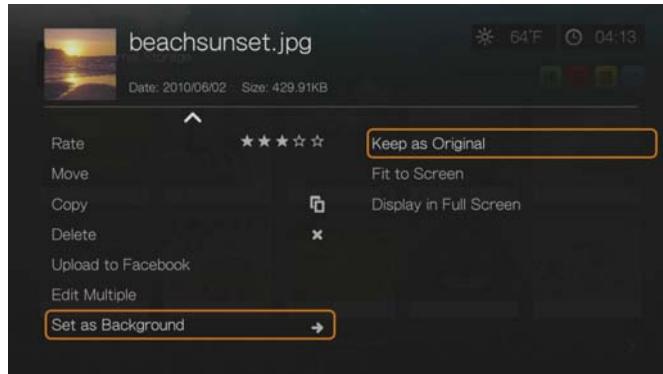


Select Multiple

The Photos edit multiple function is the same as the Videos edit multiple function. See “Select Multiple” on page 67.

Photo Display Options

- To display the photo options while viewing a photo, press **Options**.
- To return to the photo you were viewing, press **Back** or **Options** again.

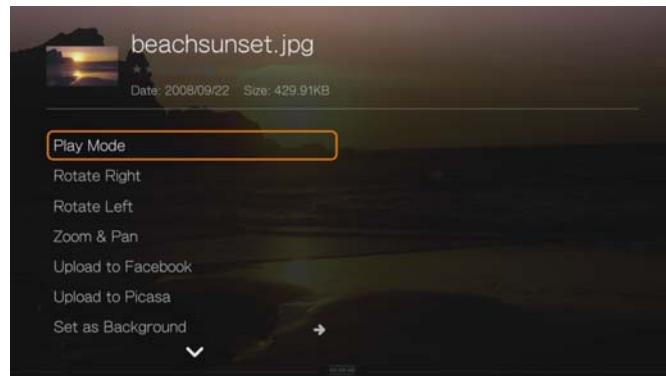

Play Mode

Use the play mode option to set repeat and shuffle options.

1. During photo playback, press **Options**.
2. Select **Play Mode**, then press **OK** repeatedly until the repeat icon you want is displayed. Options include:
 - **Repeat All** – All the photo files in the current photo folder are played in sequence and repeatedly until you press **STOP** or **Back**.
 - **Shuffle** – All the photo files in the current photo folder are shuffled repeatedly until you press **STOP** or **Back**.
 - **Repeat All and Shuffle** – All the photo files in the current photo folder are played repeatedly in sequence and shuffled until you press **STOP** or **Back**.

Rotate Left & Right

1. During photo viewing, press **Options**.
2. Select **Rotate Left** or **Rotate Right**, then press **OK**.
3. Press **Options** and select **Rotate Left** or **Rotate Right** again as needed until the rotation you want is set for the photo.

Selecting Photo Zoom and Pan Options

See “Selecting Video Zoom and Pan Options” on page 71.

Upload to Facebook

See “Upload to Facebook” on page 66.

Upload to Picasa

See “Upload to Picasa” on page 86.

Set As Background

See “Set as Background” on page 87.

Rate

See “Rate” on page 65.

Favorite

See “Favorite” on page 65.

Add to Queue


See “Add to Queue” on page 65.

Delete

See “Delete” on page 66.

Displaying Photo Thumbnails

While viewing a photo or slideshow, press ▼ to display thumbnails of all your photos. Use the ▲▼ navigation buttons to select another photo to view, then press **OK**.

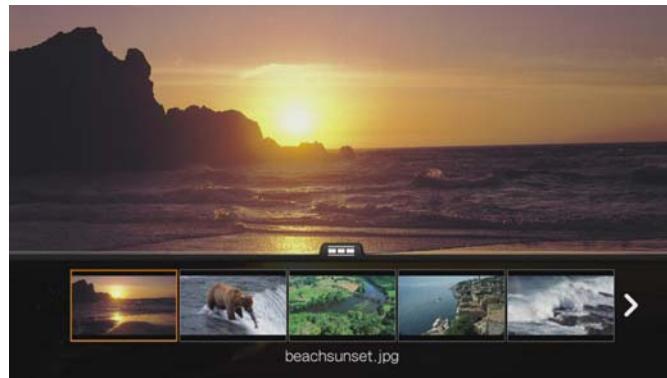

Displaying Photo Information

Use this option to display the Picture Information Panel on the bottom of the screen. This panel shows the following information about the current picture:

- Image filename
- Source
- Image file size and resolution
- Image's sequence number and the total number of image files in the current photo folder

To view the photo information panel:

- During photo viewing, press **OK**. Press **Back** to hide photo information.

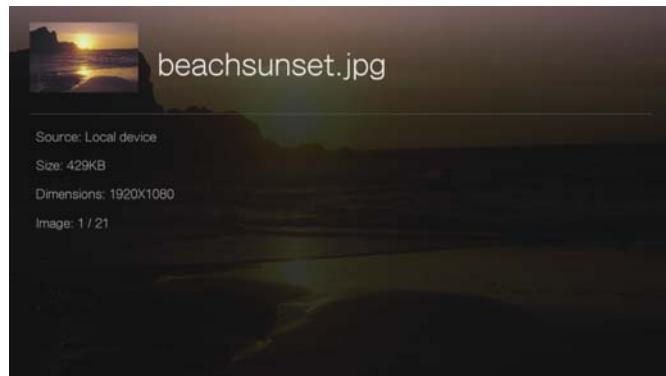


Photo Slideshow

The media player allows you to create a slideshow using the contents of a photo folder.

To start a slideshow:

1. Locate the photo folder containing the image files you want in the slideshow. (See “Photo Display” on page 83.)
2. Select the photo folder, then press **PAUSE/PLAY** to start the slideshow.

To listen to background music with a slideshow:

1. Navigate to the music folder containing the audio file/playlist you want to accompany the slideshow. (See “Music Playback” on page 75.)
2. Select the audio file/playlist, and then press **PLAY**.
 - If you selected a single audio file, you may want to enable it to play repeatedly so it doesn't stop before the slideshow is done.
 - If you selected a music playlist, you can choose to enable the repeat or shuffle mode.
3. Press **HOME**, and then start the slideshow (as described above).

Slideshow Playback Controls

Use these buttons on the remote control to control slideshow playback:

Button	Function
STOP	Discontinue the slideshow
PAUSE/PLAY	Pause or resume the slideshow
NEXT	Display the next picture file in the slideshow
PREV	Play the previous picture file in the slideshow

Repeating and/or Shuffling a Slideshow

Access Setup > Photo settings to repeat and/or shuffle a slideshow. See “Slideshow Sequence” on page 192.

11

Files


You can view and manage all of your media files in one place using the Files menu.

Files Display

1. Navigate to the Home | Files menu, then press **OK**.



2. The screen displays all available media files and folders in the media player's local drive by default. The display is in list view.

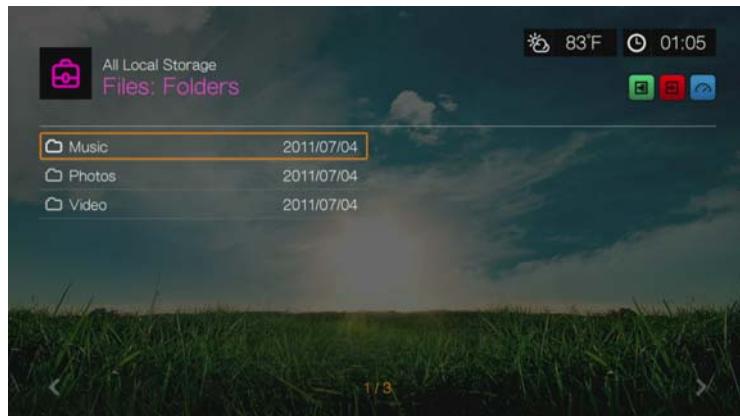

3. Locate a file you want to play.
 - To play a single file, select the file from the list or by navigating through the folder structure, then press **OK**.
 - Follow the instructions under "Watching Video" on page 62, "Playing Music" on page 75, or "Viewing Photos" on page 83.
 - To find files on a network share or media server, follow the instructions in "Accessing Media Content" on page 28.


Sorting Files

The Files sorting function  is the same as the Videos sorting function. See “Sorting” on page 64.

Files Options

To manage files (move, copy, delete, rename, and select), do the following:

With an individual file or folder selected, press **Options**.

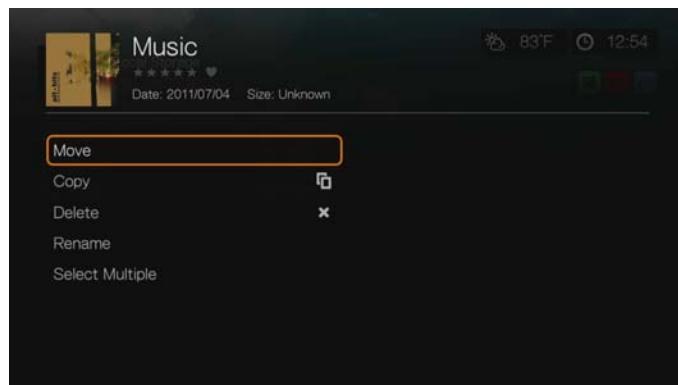

Move & Copy

The Files move and copy functions are the same as the Videos move and copy functions. See “Move & Copy” on page 66.

Delete

The Files delete function is the same as the Videos delete function. See “Delete” on page 66.

Rename

To rename a folder or file, select **Rename** then enter in the new name using the on-screen keyboard.

Select Multiple

The Files edit multiple function is the same as the Videos select multiple function. See “Select Multiple” on page 67.

12

Internet Services



Important: A broadband Internet connection (e.g., DSL or cable) is required to use Internet services. Availability varies by country. These services may be changed, terminated, or interrupted at any time.

After connecting to a network, you can use the media player to access media content from the following Internet services:

- **AccuWeather.com**[®] – Get local and international forecasts, climate trends, and the latest news from the world's weather authority.
- **BBC iPlayer** – Watch and listen to BBC programs from the past seven days live and on demand.*



Note: *BBC iPlayer TV shows available in the UK only.

- **CinemaNow**[™] – With over 11,000 titles to choose from, CinemaNow gives you instant access to new release movies the same day they come out on DVD and brings you TV episodes for many popular shows the day after they air.*



*CinemaNow.com account required. US only.

- **Comedy Time**[®] – The Comedy Time Network launched as the comedy channel for Sprint TV and MobiTV in July, 2004 and has since expanded on to all major carrier decks as well as cable/satellite/IP television, broadband video and traditional media. It is a market leader in the production and distribution of short-form comedy programming.
- **Dailymotion** – With over 115 million monthly unique visitors, Dailymotion powers video sharing and discovery, presenting the hottest videos in news, music, film, television, sports, gaming and more from across the Web.
- **Deezer**[™] – A personalized on-demand music service to listen to seven million tracks anytime, anywhere and one of the most popular Internet and mobile music offerings in Europe.
- **Facebook**[®] – Share your status, photos, videos, and your favorite links on Facebook. Find out the latest news from your social network or the world and so much more. Access it all on your big screen TV.
- **Flickr**[™] – Connect to Flickr using the on-screen menus. View the photos on your Flickr account and enjoy them on your TV.
- **Flingo**[®] – Flingo offers consumers free Internet Television from leading studios, TV networks, and video websites.
- **Flixster**[™] – Watch the latest theatrical movie trailers and get critic reviews from Rotten Tomatoes. Preview movies that are opening this week and see what's hot at the box office. See what's new on DVD and Blu-ray and the top rentals.
- **Hulu Plus**[™] – Hulu Plus offers current hit TV shows and award-winning movies anytime in HD. Watch any current season episode of top shows like *Modern Family*, *Glee*, *30 Rock* and many others, enjoy classic series, or explore acclaimed movies from The Criterion Collection and Miramax.*



*Hulu Plus membership required. US only.

- **Live365®** – Listen to thousands of commercial-free Internet radio stations. Easily browse through popular genres or discover treasures in some of the less-traveled styles.
- **MLB.TV** – Watch every out-of-market game LIVE or on demand in HD quality. Almost 100 games are streamed LIVE each week. Choose home or away feeds, and use quick navigation to run scoring plays or at bats. PLUS, watch over 150 Spring Training Games with no blackout restrictions.*



* MLB.TV Premium subscription required.

- **Netflix®** – Enjoy popular movies, classics, and TV episodes instantly. Access your Netflix unlimited membership and instantly watch TV episodes and movies on your big screen.*



*Netflix is available in certain countries. Unlimited membership required. More information at www.netflix.com.

- **Pandora®** – Free, personalized Internet radio playing only the music you love. Enter your favorite songs or artists, and enjoy stations created just for you. Rate songs as they play, because Pandora caters to your tastes and adapts stations to your feedback on the spot.*



*Pandora available in US only.

- **Picasa** – View, share and enjoy your photographs right from your television.
- **SEC Digital Network** – The SEC Digital Network offers college sports fans access to the largest library of multi-sport full games and original programming from the most dominant and exciting collegiate sports conference. Watch FREE daily programming including SEC Today, Countdown to Kickoff, Game Day Central, and weekly coaches teleconferences, and select full games. Additional content can be ordered at www.SECDemand.com.
- **SHOUTcast Radio** – The ultimate directory of online radio stations featuring over 45,000 music, talk, sports, and community radio stations from around the world.
- **SnagFilms®** – SnagFilms offers a broad collection of great independent movies you can watch right now, on demand, for free – films that entertain and inform, engage and inspire, and satisfy every taste. These are movies worth watching – documentaries, comedies, dramas and thrillers, award winners and rare finds – all free for you to enjoy.
- **Spotify** – Enjoy on-demand access to over 15 million tracks and albums. Any artist, any album, any genre - available instantly on your media player. Spotify is available in: USA, UK, Sweden, Finland, Norway, France, The Netherlands, Spain, Austria, Belgium, Switzerland and Denmark.*



*Spotify Premium account required.

- **TuneIn** – The world's largest Internet radio guide with access to over 30,000 free radio stations searchable by location, genre, or format.
- **Vimeo®** – Take your video experience to the next level with Vimeo. Get a video experience with absolutely no pre-roll ads, unlimited video length, unlimited HD playback and embedding, superior privacy settings and more! Vimeo is the next step in your creative film and video experience.

- **VUDU™** – VUDU delivers a cinema-like experience at home with the hottest new releases and the largest HD library. There are no subscription fees or late fees, simply pay for what you watch. Choose to rent or own from thousands of titles available in vibrant 1080p with rich Dolby Digital 5.1 Surround Sound. Activate your VUDU account on your media center today and receive a free* movie credit.



*New VUDU account required. Terms and conditions apply. For more information visit www.vudu.com.

- **WatchMojo** – WatchMojo produces original video programming on the people, places and things that people are passionate about, covering the Automotive, Business, Education, Fashion, Film, Food, Health, Music, Parenting, Politics & Economy, Space, Sports, Science, Technology, Travel and Video Game categories.
- **XOS College Sports** – XOS College Sports offers college sports fans multi-sport, multi-conference access to full games and historic documentaries including many of the nation's top schools and teams. Free access to a large collection of rare content, championship season highlights and select full games past and present. Additional content can be ordered at www.XOSSports.com.
- **Yota** – Yota music* is more than a million licensed tracks of the leading global and local music labels in free access. Rock and classical, pop and jazz, global celebrities and musical rarities, the Yota collection has it all.




Note: *WD TV media player only. Yota music service available in Russia only.

- **YouTube** – Stream YouTube and watch your favorite videos from the world's #1 video sharing website on your television.

The above services are fully integrated with their web-based counterparts when accessed via the media player. If you are a registered user of any of these services, everything you create, rate, or bookmark when using the media player shows up on your account the next time you sign in to that service from your computer or mobile computing device.

To access Internet Media:

1. Navigate to the Home | Services menu bar and press **OK**.

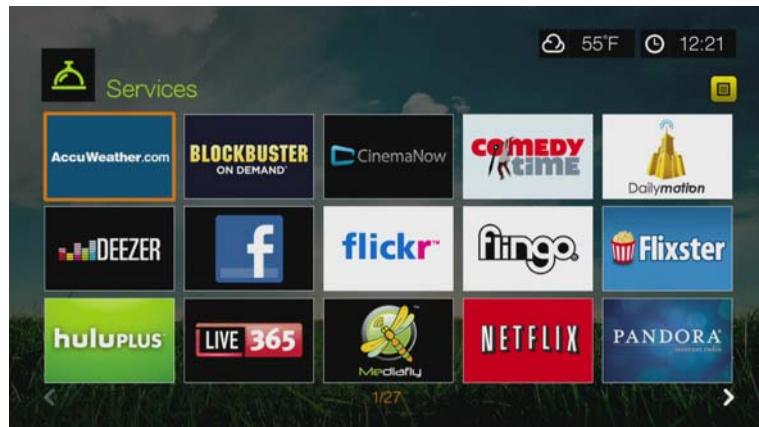


2. The list of Internet services display in alphabetical order. Press **◀/▶** and/or **Next Page** to make a selection, then press **OK**.

Adding a Service to Favorites

You can add a Service to your Favorites so that it's quickly available via the dashboard when you are in the Home screen or other screens (when you press **D** or navigate to  in certain screens then press **OK**).

1. In the Services screen, press **◀/▶** to select a service you want to favorite, then press **Options**.
2. Press **OK** to list the service in the dashboard under Favorites.

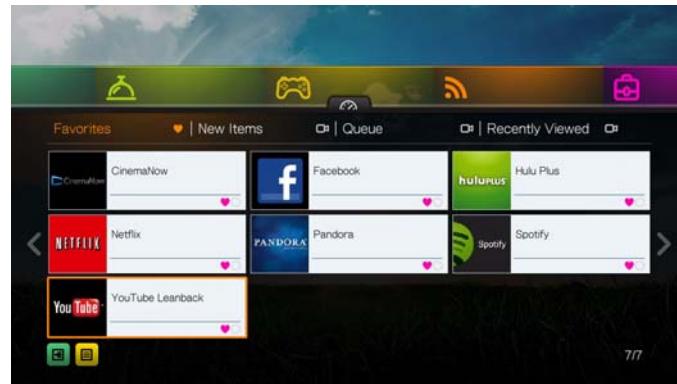

AccuWeather.com

The Weather service provided by AccuWeather.com provides local forecasts for everywhere in the United States and over two million locations worldwide.


To access Weather:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select AccuWeather.com , then press **OK** to display the AccuWeather.com home screen.
3. Select **OK** in the End User License Agreement screen, then press **OK** to display the AccuWeather.com home screen.
4. Use the navigation buttons **▲▼◀▶** to type a search using the on-screen keyboard. You can also press  on the remote control to toggle to the results list after entering several characters in the search field. Select **Submit**, then press **OK**.



Note: The complete city name needs to be entered for locations outside of the U.S. For example, you must type "Sydney" to find Sydney, Australia; typing "Sydn" results in Sydney, FL as the location.

5. If necessary, Press **▲/▼** to scroll through search results to select your city, then press **OK**.
6. Press **OK** to complete setting your location.

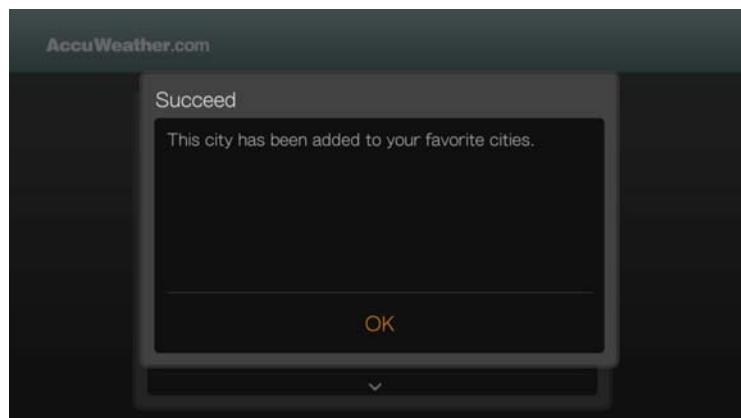

7. The AccuWeather.com home screen displays current temperature, conditions, and other weather details at your location.

Options include:

- Settings
- Maps (press **Options**, then **OK** to zoom & pan the weather map in your area using the navigation buttons)
- Lifestyle (provides forecasts from Poor to Excellent for various health and sporting conditions)
- Forecast (select **7-Day Forecast** or **Weekend Forecast** to view upcoming weather)
- Weather Video (select and watch popular AccuWeather.com videos)
- Exit




Settings

Change Temperature Display

To change the temperature display from Celsius to Fahrenheit or vice-versa, do the following:

1. Press **◀/▶** to select **Settings** in the AccuWeather.com home screen.
2. Select **°F / °C**. Press **OK**.

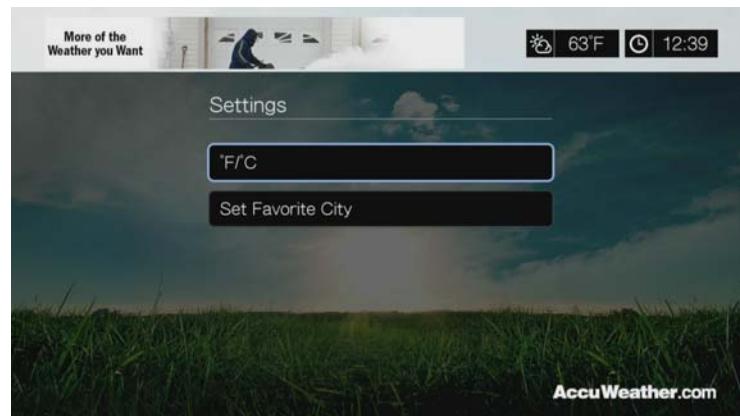


Set/Add Favorite City

To add one or more cities so that you can view weather information for more than one location, do the following:


1. Press **◀/▶** to select **Settings** in the AccuWeather.com home screen.
2. Select **Set Favorite City** and press **OK**.
3. Select **Add Favorite City** and press **OK**.
4. Use the navigation buttons **▲▼◀▶** to type a search using the on-screen keyboard. You can also press **🔍** on the remote control to toggle to the results list after entering several characters in the search field. Select **Submit**, then press **OK**.
5. Your new favorite city appears in the Set Favorite Cities screen. Press **▲/▼** to set a new favorite city as your default location. To delete a favorite city, select it and press **▶**, then **OK**.



Note: The complete city name needs to be entered for locations outside of the U.S. For example, you must type "Sydney" to find Sydney, Australia; typing "Sydn" results in Sydney, FL as the location.

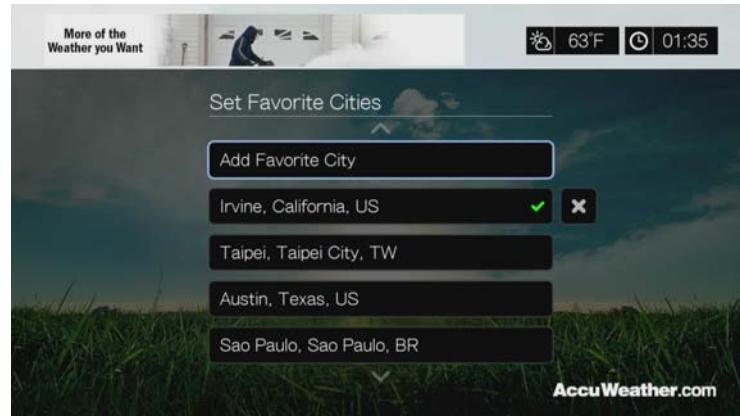

6. You can also press **▼** in the AccuWeather.com home screen to set your favorite city and to see the current temperature, conditions, and other weather details at your location in all your favorite cities.

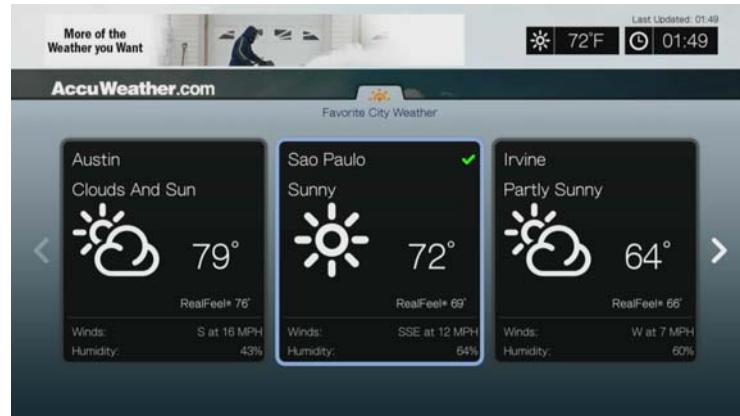

BBC iPlayer (UK only)

Watch and listen to BBC programs from the past seven days live and on demand.



*BBC iPlayer TV shows available in the UK only.

To access the BBC iPlayer:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select BBC iPlayer **BBC iPlayer**, then press **OK**. The BBC iPlayer begins loading.
3. The BBC iPlayer Home screen displays television show Highlights. Press **▼**, then press **◀/▶** to choose another category (Most Popular and Last Played) from the BBC iPlayer interface, or press **▼** again to access Help or Settings. Press **OK**.
4. In the home screen, you can also press **▲**, then press **◀/▶** to choose a media type (TV or Radio), or Search. Press **OK**.
5. Use the navigation buttons **▲▼◀▶** to select a TV show by Channel or Categories, or a Radio show by Stations or Categories. Press **||▶** or **OK** to begin playing the TV show or radio program.
6. Press the Home button  to exit the BBC iPlayer.

CinemaNow

With over 11,000 titles to choose from, CinemaNow gives you instant access to new release movies the same day they come out on DVD and brings you TV episodes for many popular shows the day after they air.* No subscription required and no need to drive to a kiosk or wait for movies in the mail!

- New release movies available the same day as Blu-ray/DVD
- Popular TV shows available the day after they air
- No monthly subscription, pay for only what you watch
- More choice – with more than 10,000 movies and TV shows
- Rent or purchase with Dolby Digital Plus 5.1 surround sound



*Note: *CinemaNow account required. US only.*

To Get Started:

1. Go to <http://www.cinemานow.com/bbactivate>. Sign in or create a free CinemaNow account. No subscription required!
2. Follow the on-screen instructions to begin activation and receive your PIN code.
3. On the media player, navigate to the Home | Internet media menu bar and press **OK**.
4. The list of Services display in alphabetical order. Press **◀/▶** to select CinemaNow , then press **OK**.
5. Select **Settings** from the bottom menu within the CinemaNow service, then press **OK**. Press **OK** again to activate the device and enter the CinemaNow PIN code.

You now have instant access to new release movies & next day TV!

How Do I Download and Watch a Movie?

Once you rent or purchase a movie, it will appear in your My Videos tab. With progressive download, you can begin watching within minutes by selecting **Play Now** as soon as it becomes available.

Your selection will continue to download while you watch. Track your download progress in the Download Manager on the Home screen. **Watch purchased movies whenever you want, as much as you want. Rentals must be watched within 24 hours once you start playback.**

To learn more:

To learn more about CinemaNow, go to <http://www.cinemานow.com>.



Note: To deactivate the media player from your CinemaNow account, log in to your account at <http://www.cinemานow.com>.

Comedy Time

The Comedy Time Network launched as the comedy channel for Sprint TV and MobiTV in July, 2004 and has since expanded on to all major carrier decks as well as cable/satellite/IP television, broadband video and traditional media. It is a market leader in the production and distribution of short-form comedy programming.

To access Comedy Time:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Comedy Time , then press **OK** to display the Comedy Time home screen.
3. Use the navigation buttons **▲▼◀▶** to browse, select, and search for videos and the playback buttons to stop and start videos.

Dailymotion

Dailymotion is a video sharing service website.

To access Dailymotion:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Dailymotion , then press **OK**.
3. The Dailymotion main screen displays top videos. Press **▼** to choose another category (Channels, Favorite Members, Top Members, Search, Help, and Info) from the Dailymotion interface. Press **OK**.
4. Use the navigation buttons **▲▼◀▶** to select a video. Press **▶▶** or **OK** to begin playback.
5. Press the Home button  to exit Dailymotion.

Deezer

Deezer is a personalized on-demand music service to listen to seven million tracks anytime, anywhere and one of the most popular Internet and mobile music offerings in Europe.

To access Deezer:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Deezer  , then press **OK**. The Deezer main screen displays.



3. Press **◀/▶** to choose an option, then press **OK**.

Options include:

- My Music
- Radios
- Top Charts
- Search
- Sign in
- Exit


Signing in to Your Deezer Account

Sign in to your Deezer account to access My Music (your playlists and favorites) and Top Charts.



Note: If you do not have a Deezer account and want to create one, go to <http://www.deezer.com>.

1. Navigate to the Home | Services menu bar.
2. Press **◀/▶** to select Deezer, then press **OK**.
3. In the Deezer main screen, press **◀/▶** to select **Sign In**, then press **OK**.
4. Select **Sign in**, then press **OK**.

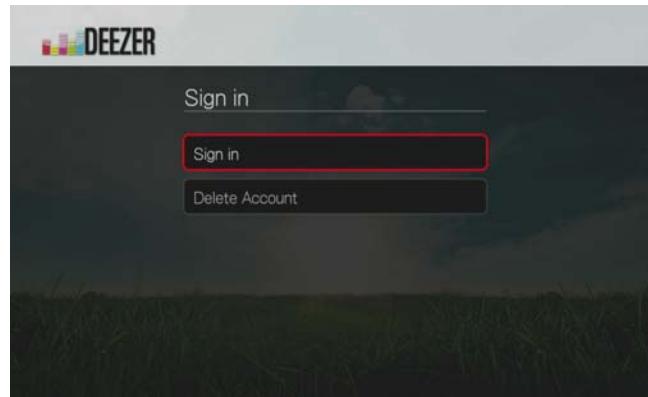

5. Use the navigation buttons **▲▼◀▶** to type your registered Deezer email address using the on-screen keyboard. Select **Submit**, then press **OK**.
6. Use the navigation buttons **▲▼◀▶** to type your Deezer account password in the on-screen keyboard. Select **Submit**, then press **OK**.
7. Press **▲/▼** to select a save option.
Options include:
 - **No** – Your account details will not be saved. You need to repeat the initial sign-in process every time you access this service using the media player.
 - **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you access this service using the media player.
 - **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you access this service.
8. Press **OK** to complete the sign-in process. The My Music screen displays.

Radios

You can choose from a variety of radios by music genre and subgenre.

1. In the Deezer main screen, press **◀/▶** to select **Radios**, then press **OK**.
2. Press **OK** to select a radio.



3. Press **▲/▼** to select a radio by music genre, then press **OK**.
4. Press **▲/▼** to select a radio by music subgenre, then press **OK**.
5. With a radio you want to listen to selected, press **Options** to select **Become a Fan**. This adds the radio to **Favorite Radios** for quick access in the future.
6. Press **▶▶** or **OK** to begin listening to the radio station.

Deezer Player

The Deezer player is similar to the regular music playback screen. It displays the playback status bar, album, artist, and the elapsed and total playback times.

- Press **PLAY/PAUSE** to pause and resume playback.
- Press **FF/REV** to fast forward or rewind in 10 second increments.
- Press **NEXT/PREV** to select the next/previous song in the station or playlist.

My Music


After signing in to Deezer, select **My Music**, then press **OK** to display playlists and favorite radio stations.

Playlists

Adding a playlist to My Music:

1. In the Deezer main screen, press **◀/▶** to select **My Music**, then press **OK**.
2. Sign in to your Deezer account if not already logged in.

3. Select **Playlists**, then press **OK**.

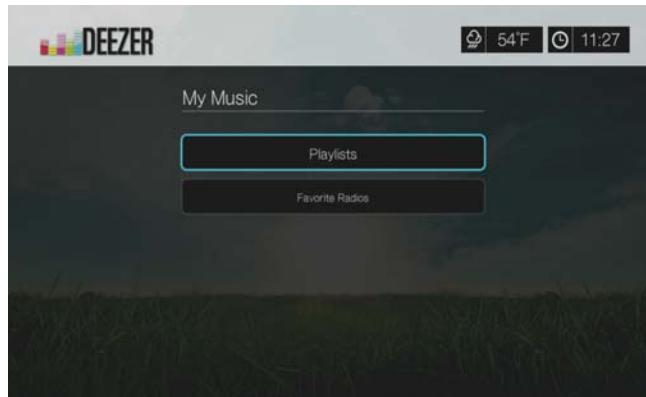

4. Press **Options**, then select **Create Your Playlist**. Press **OK**.
5. Type in the name of your playlist using the on-screen keyboard, select **Submit**, then press **OK**.

Favorite Radios

Accessing a favorite radio station in My Music:

1. In the Deezer main screen, press **◀/▶** to select **My Music**, then press **OK**.
2. Sign in to your Deezer account if not already logged in.
3. Select **Favorite Radios**, then press **OK**.



Note: If you have not added any stations, the screen displays "no favorite available."

4. Press the navigation buttons to select a station from the list, then press **▶** or **OK** to begin listening to the radio station.

Add to Playlist

You can add songs to a playlist using the **Options** button on the remote.

1. With a song selected in a Radio or Top Charts screen, press **Options** to display **Add to Playlist**. Press **OK**.
2. Press **▲/▼** to select a playlist you have created in **My Music**, then press **OK** to add the song to the selected playlist.

Delete a Playlist

You can delete a playlist using the **Options** button on the remote.

1. With a playlist selected in **My Music > Playlists** screen, press **Options**.
2. Press **▲/▼** to select **Delete**, then press **OK**.
3. Select **OK**, then press **OK**.

Delete a Radio Station

You can delete a radio station using the **Options** button on the remote.

1. With a radio station selected in **My Music > Favorite Radios** screen, press **Options**.

2. Press **◀/▶** to select **Delete from Favorite**, then press **OK**.
3. Select **OK**, then press **OK**.


Top Charts

These are songs deemed most popular by Deezer users by country.

1. In the Deezer main screen, press **◀/▶** to select **Top Charts**, then press **OK**.
2. With the filter button selected , press **OK**.
3. Press **▲/▼** to filter channel results (choose from **FR, BE, UK, US**), then press **OK** twice.
4. Press **▲/▼** to select a song from the display then press **II▶** or **OK** to start listening to the selected song.

Search

1. In the Deezer main screen, press **◀/▶** to select **Search**, then press **OK**.
2. Press **▲/▼** to filter results (**All, Title, Artist, or Album**), then press **OK**.

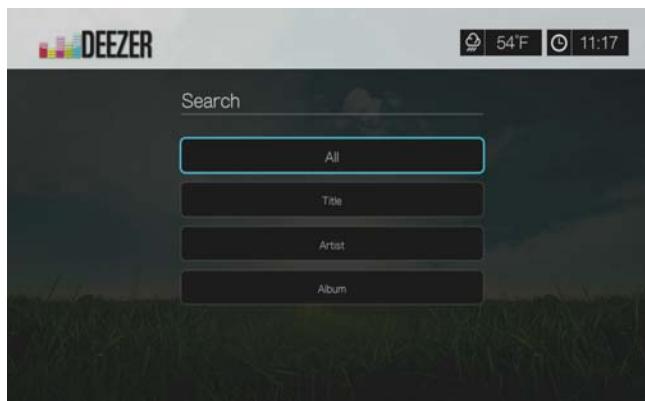

3. Use the navigation buttons **▲▼◀▶** to type a search using the on-screen keyboard. Select **Submit**, then press **OK**.



Note: You can also press  on the remote control to toggle to the results list after entering several characters in the search field.

4. Press **▲/▼** to select a song from the display, then press **II▶** or **OK** to start listening.

Deleting a Deezer Account

1. On the Deezer main screen, press **◀/▶** to select **Sign in**, then press **OK**.
2. Press **▲/▼** to select **Delete Account**, then press **OK**.
3. Press **▲/▼** to select the account you want to delete, then press **OK**.
4. Press **◀/▶** to select **OK** on the confirmation prompt, then press **OK**.

Exit Deezer

To return to the Services home screen, press **◀/▶** to select **Exit** in the Deezer home screen, then press **OK**.


Facebook

Share your status, photos, videos, and your favorite links on Facebook. Find out the latest news from your social network or the world and so much more. Access it all on your big screen TV.

You must have a valid Facebook account to use this service. You can create a Facebook account at www.facebook.com.

Signing in to Facebook for the First Time

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Facebook , then press **OK**.
3. Press **OK**, then use the navigation buttons **▲▼◀▶** to type in your Facebook user name using the on-screen keyboard. Select **Submit**, then press **OK**.
4. Press **OK**, then use the navigation buttons **▲▼◀▶** to type in your Facebook password using the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press **▼**, then **OK** to **Remember Me** if you want your Facebook account stored in the media player for quick access.
6. Press **▶/▼**, then **OK** with the green check mark  selected.

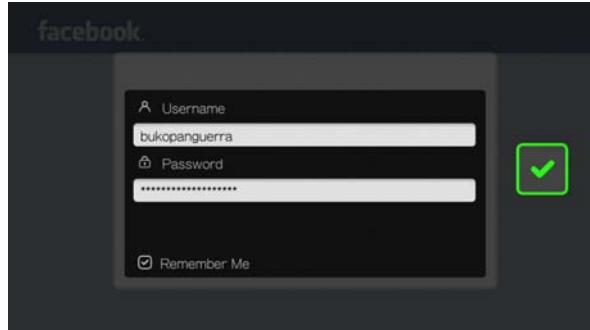

7. Press **OK** to complete the sign-in process. The Facebook home screen displays.



Notifications

Notifications let you know when people take actions on Facebook related to you, so you can quickly check out a photo you've been tagged in or read a new posting on your Wall.

In the Facebook main menu, press **▼** to select **Notifications**. Press **▲/▼** to select a notification then press **OK**.

Photos

You can view the photos or photo albums you and others users have posted to Facebook either individually or as a slideshow.


1. In the Facebook main menu, select **Photos** then press **OK**.
2. Navigate to a photo album, then press **OK**.
3. Navigate to a photo then press **OK**, or press **II▶ (PAUSE/PLAY)** to start a photo slideshow (see “Slideshow Playback Controls” on page 91).

Photos Options

With an individual photo selected or a slideshow running, press **Options**.



- **Rotate Left & Right** - See “Rotate Left & Right” on page 88.
- **Zoom** - To change the display’s viewing scale, press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.
- **Set as Background** - see “Set As Background” on page 88.
- **Download Photo** - Select this option then press **OK** to download the photo to one of your local drives. Select the location you want to download your photo to (network share or attached storage) then press **OK**.

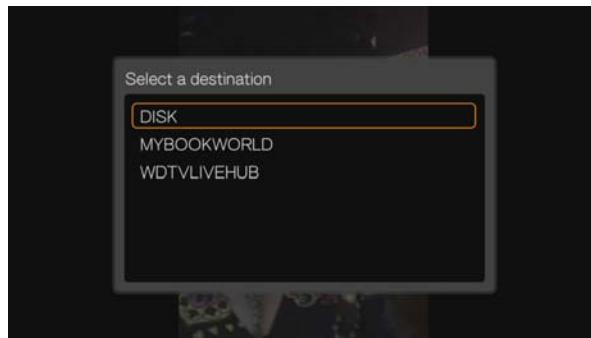

Newsfeed

The Facebook news feed displays all of your friends’ comments and allows you to “Like” or comment. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the news feed entry.

1. In the Facebook main menu, press **◀/▶** to select **Newsfeed**, then press **OK**.

2. Press **▲ / ▼** to view your friends' comments and posts.
3. With an entry selected, press **►** once to select "Like," if you like the entry , then press **OK**. Press **►** twice to comment on a news feed entry , press **OK**, then enter your comment using the on-screen keyboard.



*Note: Navigating to **What's on your mind?** and pressing **OK** allows you to add a comment to your wall in the newsfeed screen.*

Friends

You can access your friends' pages to view their photos, videos, and Wall posts.

1. In the Facebook main menu, press **◀/▶** to select **Friends**, then press **OK**.
2. The page of the friend you have selected displays. The photos section of the page displays by default. You can view photos or navigate to Videos or Wall, then press **OK** to view your friend's videos and wall comments.

Wall

The Facebook Wall displays all of your entries and your friends comments and allows you to "Like" or comment. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the Wall entry.

1. In the Facebook main menu, press **◀/▶** to select **Wall**, then press **OK**.
2. Press **▲ / ▼** to view your friends' comments and posts.
3. With an entry selected, press **►** once to select "Like," if you like the entry , then press **OK**. Press **►** twice to comment on a wall entry , press **OK**, then enter your comment using the on-screen keyboard.



*Note: Navigating to **What's on your mind?** and pressing **OK** allows you to add a comment to your wall.*

Videos

You can view the videos you and others users have posted to Facebook.

1. In the Facebook main menu, select **Videos** then press **OK**.
2. Navigate to a video, then press **OK**.

Videos Player

With a video playing, press **OK** to bring up the videos player info panel. You can choose to **Like** or **Comment** on a video in the info panel, then press **OK**.



Videos Options

With a video playing, press **Options**.



- **Zoom** - To change the display's viewing scale, press **OK** repeatedly until the preferred viewing scale is achieved. Press **Options** or **Back** to revert to the default viewing scale.
- **Pan** - To pan the display, press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.
- **Browse description** - Select this option then press **OK** to view the description of the video.
- **Download video** - Select this option then press **OK** to download the video to one of your local drives. Select the location you want to download your video to (network share or attached storage) then press **OK**.

Event

Event displays all events you've been invited to, and allows you to view more information about or comment on events, and view your friends' comments and "Like" or comment on them. The number of people who like or have commented on each entry displays inside the corresponding icons to the right of the Event entry.

1. In the Facebook main menu, press **◀/▶** to select **Events**, then press **OK**.
2. Select an event you've been invited to, then press **OK**.
3. Select **Write a Comment...** or **View More Info** to write a comment about or view more info for the event.
4. Press **▲/▼** to view your friends' comments and posts.
5. With an entry selected, press **▶** once to select "Like," if you like the entry , then press **OK**. Press **▶** twice to comment on an event entry , press **OK**, then enter your comment using the on-screen keyboard.

Sign Out

In the Facebook main menu, select **Sign Out** then press **OK** to log out of Facebook and return to the Services home screen. All previously saved login data for the Facebook account is erased.

Flickr

Flickr is an online image and video management and sharing website. Flickr content is organized based on tags—a keyword or category label that describes content. Tags help users to search for contents that have something in common. Each content file can have as many as 75 tags associated with it.

To learn more about Flickr services, and the options and limitations related to them, go to <http://www.flickr.com/tour/>.

To access Flickr:

1. Navigate to the Home | Search menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Flickr **flickr**, then press **OK**. The Flickr home screen displays.

Options include:


- Interesting (last seven days)
- Recent Upload
- Search
- My Contacts
- Hot Tags
- My Tags
- Exit

Exploring Contents

You can explore photostreams (Flickr's term for content selection) available in Flickr's public domain.

To explore for random “interesting” media content from the past seven days:


Press **◀/▶** to select **Interesting** in the Flickr home screen, then press **OK**.

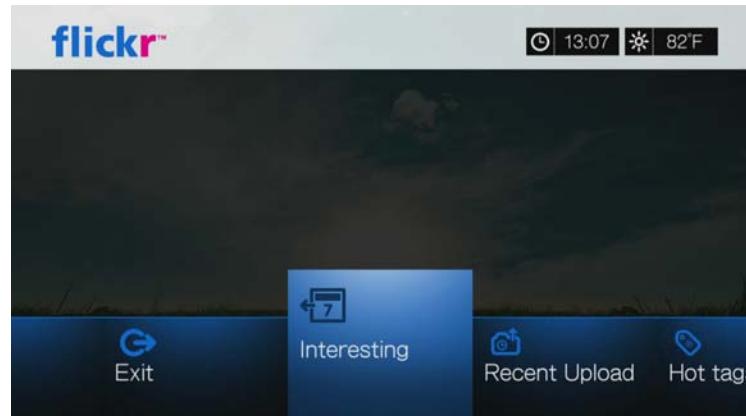

A photostream showing random contents rated as interesting in the past seven days by Flickr users displays. Go to page 119 for instructions on how to navigate a photostream.

To explore based on the upload date:


Press **◀/▶** to select **Recent Upload** in the Flickr home screen, then press **OK**.

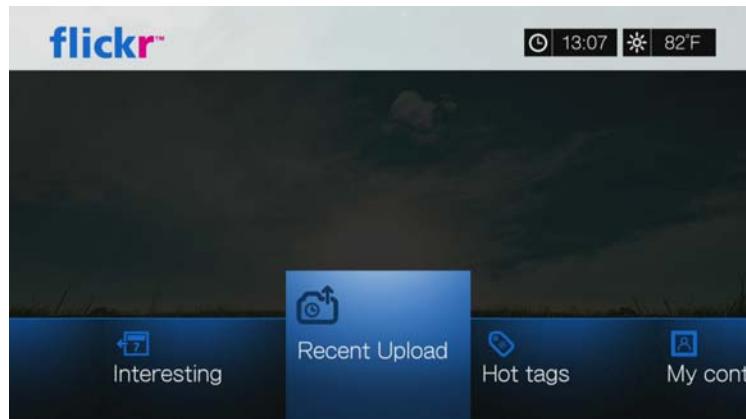

A photostream showing the most recently uploaded content displays. Go to “Flickr Photostream” on page 119 for instructions on how to navigate a photostream.

To explore based on popular tags:

1. Press **◀/▶** to select **Hot tags** in the Flickr home screen, then press **OK**.

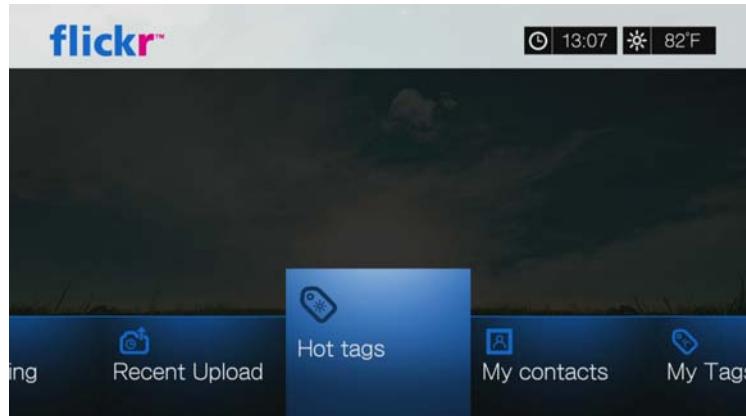

2. Press the navigation buttons to select a tag from the list, then press **OK**.


A photostream showing contents associated with the selected tag is displayed. Go to “Flickr Photostream” on page 119 for instructions on how to navigate a photostream.

Searching for Contents


To search for content based on a specific keyword:

Keywords are words or phrases associated with the type of content you’re looking for. Keyword searches are based on information indicated on a member’s profile page.

1. Press **◀/▶** to select **Search** in the Flickr home screen, then press **OK**.

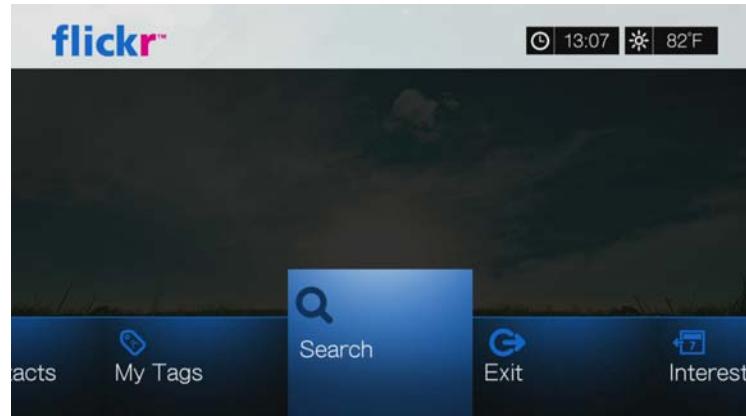

2. Press **▲/▼** to select **Keywords**, then press **OK**.

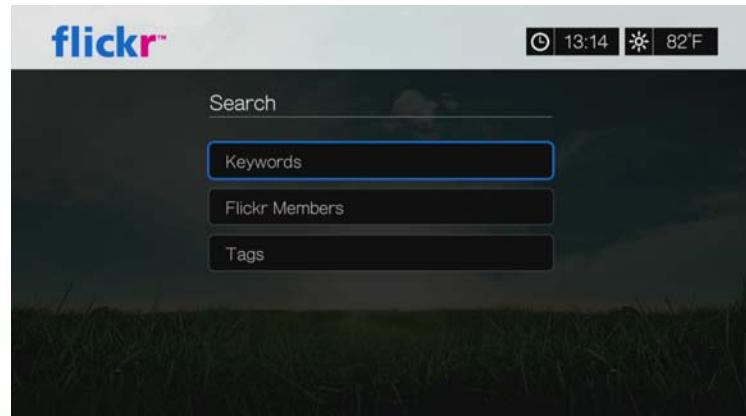

3. Use the navigation buttons **▲▼◀▶** to type a search word using the on-screen keyboard. Select **Submit**, then press **OK**.

A photostream showing contents associated with the specified keyword displays. Go to page 119 for instructions on how to navigate a photostream.

To search for content based on tags:

Perform this type of search to find content based on information indicated in a member's tags list.


1. Press **◀/▶** to select **Search** in the Flickr dashboard, then press **OK**.
2. Press **▲/▼** to select **Tags**, then press **OK**.
3. Use the navigation buttons **▲▼◀▶** to type a search word using the on-screen keyboard. Select **Submit**, then press **OK**.

A photostream showing contents associated with the specified word is displayed. Go to “Flickr Photostream” on page 119 for instructions on how to navigate a photostream.

Searching for a Flickr Member

To search for a Flickr member:

1. Press **▲/▼** to select **Search** in the **Explore** screen, then press **OK**.
2. Press **▲/▼** to select **Flickr member**, then press **OK**.

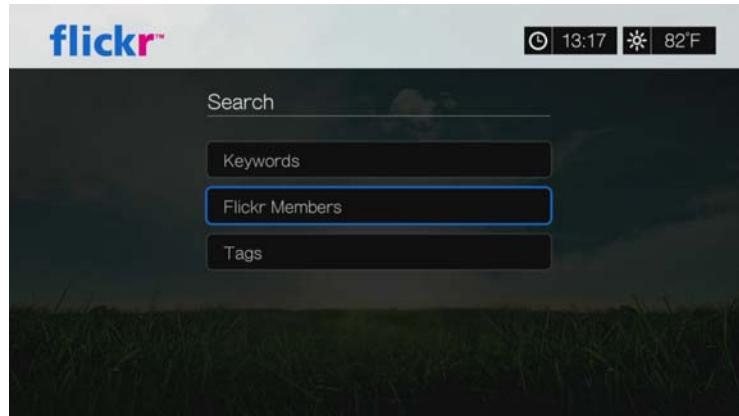


3. Use the navigation buttons **▲▼◀▶** to type a member's user name, email address, or interest using the on-screen keyboard. Select **Submit**, then press **OK**.
A browser screen listing Flickr member links matching your search criteria displays.
4. Press **▲/▼** to select a link, then press **OK** to view that member's profile page.
If the selected member has public photostreams, you can explore them. Use the navigation buttons **▲▼◀▶** to select a content selection, then press **OK** to explore it. Go to the next section for instructions on how to navigate a photostream.

My Contacts

My Contacts shows a list of Flickr members you have searched for.


To view My Contents:

1. Press **◀/▶** to select **My Contents** in the Flickr home screen, then press **OK**.

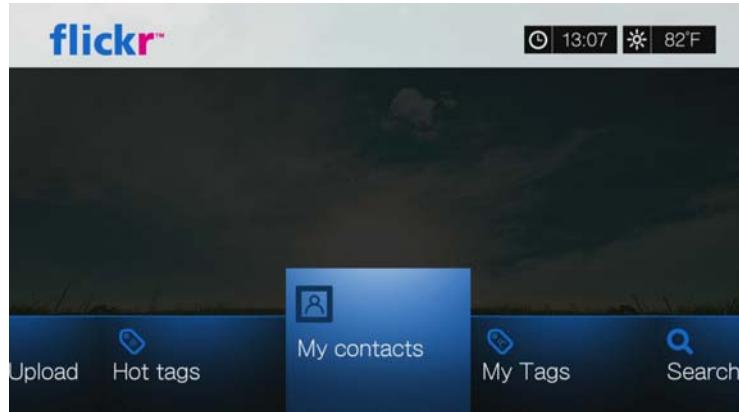

2. Press **▲/▼** to select a Flickr member you've searched for previously, then press **OK** to view their photos.

3. To remove a contact from the list, select the contact name and press **Options**. Select **Delete** or **Delete All Items**, then press **OK**.

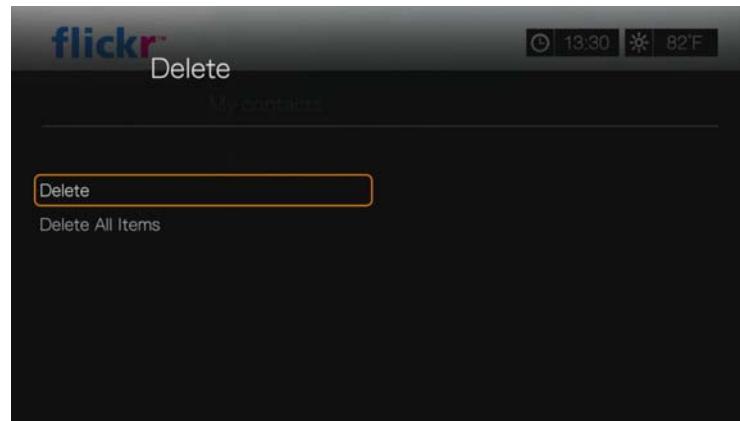


My Tags

My Tags shows a list of Flickr tags you have searched for.

To view My Tags:


1. Press **◀/▶** to select **My Tags** in the Flickr home screen, then press **OK**.

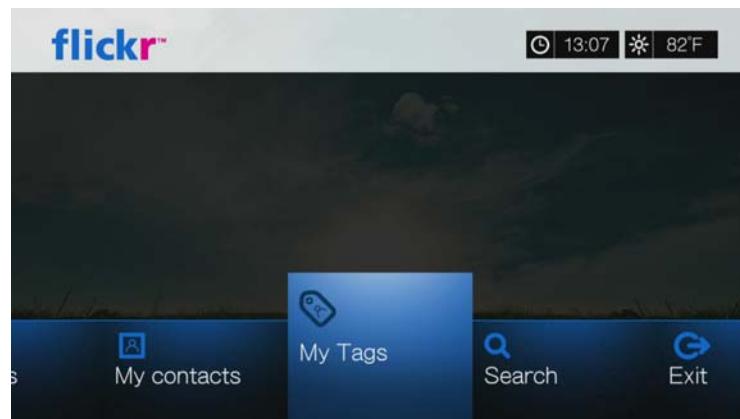


2. Press **▲/▼** to select a tag you've searched for previously, then press **OK** to view the photos associated with the tag.
3. To remove a tag from the list, select the tag and press **Options**. Select **Delete** or **Delete All Items**, then press **OK**.

Flickr Photostream

The Flickr photostream layout is the same as that of a Photos directory in thumbnail mode.

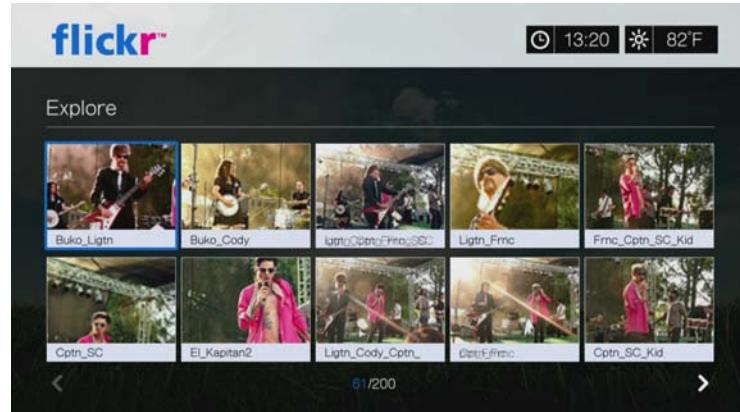

- You can use the navigation buttons **▲▼◀▶** to select content.
- To view content in fullscreen mode, select the file and press **OK**.
- To view a slideshow using all the current photostream's content, press **||▶** or **OK**. Contents display in the Flickr Player screen. Go to next section for information.
- To return to the photostream from fullscreen mode, press **Back**.
- To return to the photostream from Player mode, press **■**.
- To view all photos in full screen, go to Photo Settings and select Fit to screen (see "Photo Scaling" on page 193).
- While in the photostream layout, press Options to jump back to the Flickr home page or choose any of the Flickr home page menu options.

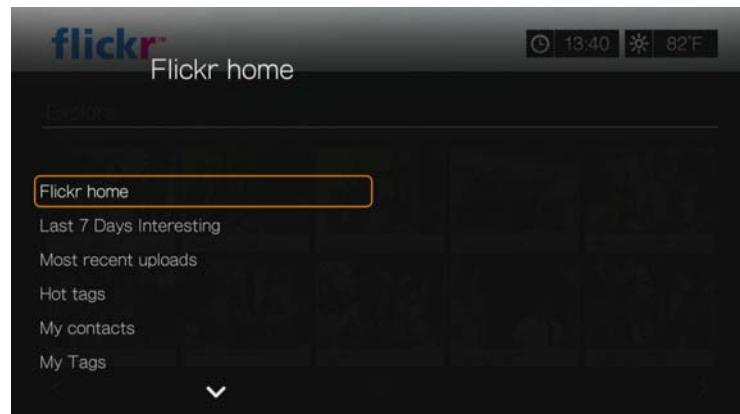


Flickr Player

The Flickr Player layout is the same as that of a photo slideshow.

- Press **▶▶** to view the next image in the photostream.
- Press **◀◀** to view the previous image in the photostream.
- To return to the photostream, press **■**.

Player Options

As with a regular photo slideshow, you can customize the way content is displayed in the Flickr Player. To do this, press **Options**.

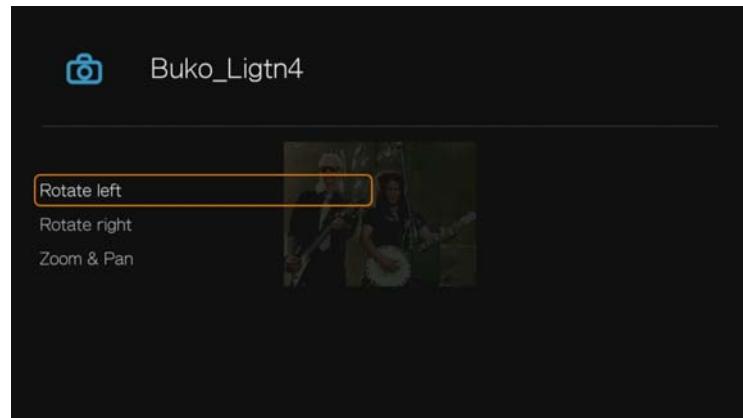

Note: To view photos enlarged in fit to screen or full screen mode, access the Setup menu and follow the instructions under "Photo Scaling" on page 193.

- To rotate the image display, press **▲/▼** and select **Rotate left** or **Rotate right**, then press **OK** repeatedly until the preferred display angle is achieved.
The display is rotated clockwise or counter-clockwise in 90° increments. Press **Options** or **Back** to revert to the default display angle.
- To change the display's viewing scale, press **▲/▼** and select **Zoom & Pan**, then press **OK**. Press **OK** repeatedly until the preferred viewing scale is achieved.
Press **Options** or **Back** to revert to the default viewing scale.
- To pan the display, press **▲/▼** and select **Zoom & Pan**, then press **OK**. Press the navigation buttons **▲▼◀▶** repeatedly until the preferred panned view displays. Press **Options** or **Back** to revert to the default viewing scale.

Exit Flickr


To return to the Services home screen, press **◀/▶** to select **Exit** in the Flickr dashboard, then press **OK**.

Flingo

Flingo offers free Internet Television from leading studios, TV networks, and video websites. It also allows you to turn the Web into your remote control. You can simply "fling" your favorite videos to the Queue in the Flingo application on your media player. For more information go to www.flingo.tv.

To access Flingo:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Flingo **flingo**, then press **OK**.
3. Press **▲**, then press **◀/▶** to choose a category (Channels, Popular, Favorites, Queue, and Search) from the Flingo interface. Press **OK**.
4. Use the navigation buttons **▲▼◀▶** to select a channel, then a video within the channel. Press **▶▶** or **OK** to begin playing the video.

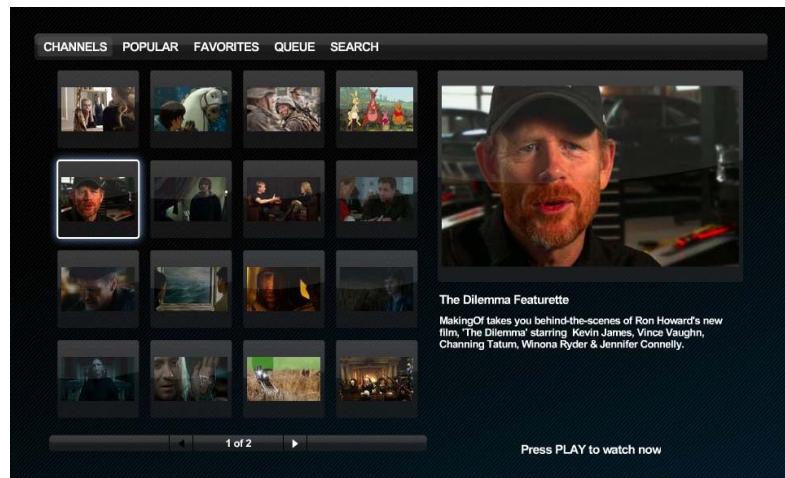

5. Press the Home button  to exit Flingo.

Flixster

Watch the latest theatrical movie trailers and get critic reviews from Rotten Tomatoes. Preview movies that are opening this week and see what's hot at the box office. See what's new on DVD and Blu-ray and the top rentals. Search a catalog of over 40,000 films. Watch high quality trailers for over 10,000 blockbusters and indie flicks.

To access Flixster:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Flixster , then press **OK**. The Flixster main screen displays.



3. Press **◀/▶** to choose an option, then press **OK**.

Options include:

- Box Office (stay up to date with trailers and reviews for movies this week and last week's top box office)
- DVD (browse trailers and reviews for recently released DVDs)
- Upcoming (view trailers and reviews for upcoming movies)
- Search (search for trailers and reviews using the on-screen keyboard)
- Exit

4. Use the navigation buttons **▲▼◀▶** to select a movie or DVD, then press **OK**.
5. Press **◀/▶** to select **Watch Trailer, Cast, Critic Reviews, Share to Facebook, or Details**, then press **OK**.



6. While watching trailers, press **OK** to see the video progress/playback bar. Press **Option** to select **Zoom & Pan** (see "Selecting Video Zoom and Pan Options" on page 71).

Hulu Plus (US only)

Hulu Plus offers current hit TV shows and award-winning movies anytime in HD. Watch any current season episode of top shows like *Modern Family*, *Glee*, *30 Rock* and many others, enjoy classic series, or explore acclaimed movies from The Criterion Collection and Miramax. Visit www.hulu.com/plus for details.*



* Hulu Plus membership required. US only.

The following conditions must be satisfied before you can use the Hulu Plus service.

- You must have a Hulu Plus subscription. Go to www.hulu.com/plus to create your account.
- At present, Hulu Plus is only available for users located in the United States. You must have a US-based network connection.

To access Hulu Plus:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Hulu Plus **huluplus**, then press **OK**.
3. If you are a Hulu Plus subscriber, choose **Yes**, then press **OK**. Proceed to step 4. If you are not a Hulu Plus subscriber, choose **No**, then press **OK**. Write down the referral code, which you will enter when you go to www.hulu.com/plus to create your account.



Note: If you select **No**, you can still choose **View sample videos** and **Learn more about Hulu Plus**.

4. Write down the activation code and follow the onscreen instructions (go to www.hulu.com/activate and enter your user name, password, and activation code). Or, select **Log in to Hulu Plus** to log in to your Hulu Plus account using the onscreen keyboard (you will need to do this each time you log out and log back in to your Hulu Plus account).
5. The Hulu Plus Home screen displays. Press **▼**, then press **◀/▶** to choose another category (Search, Browse Movies, Browse TV, Recently Added, Most Popular, Queue/Profile, Recommended, and Help) from the Hulu Plus interface. Press **OK**.
6. Press the Home button  to exit Hulu Plus.

Live365

Use Live365 to create your own online radio station or listen to other Live365 broadcasters' online stations. Music selections are compiled based on user ratings. Some small AM and FM stations also utilize Live365 to stream audio over the Internet.

To access Live365:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select **Live365** , then press **OK**.

Options include:


- Stations
- Last Played
- My Presets
- About
- Exit

Signing in to Live365 (Optional)

You can start listening to free Live365 stations as an unregistered user, but to enjoy more features like access to recommended stations, saving stations to favorites, securing track information, setting station preferences, and many others, you need to sign up for a Live365 account.

To sign in to Live365:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select **Live365**, then press **OK**.
1. On the Live365 main screen, press **◀/▶** to select **My Presets**, then press **OK**.

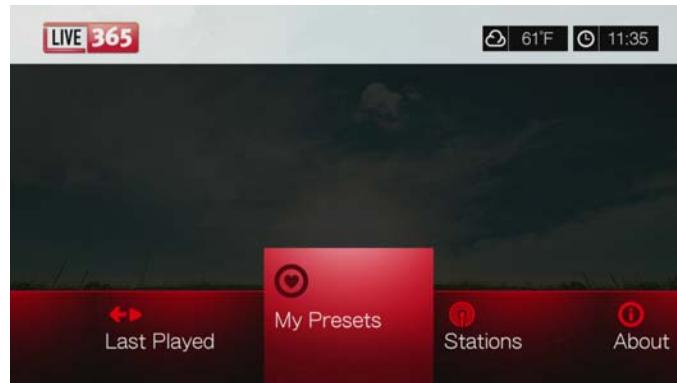

2. Press **▲/▼** to select **Sign In** or **Don't have an account?**, then press **OK**. If you don't have an account, follow the on-screen instructions to create your Live365 account online.



3. Use the navigation buttons **▲▼◀▶** to key in your Live365 user name on the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons **▲▼◀▶** to key in your Live365 account password on the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press **▲/▼** to select a save option.

Options include:

- **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you use the media player to access the Live365 service.
- **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you use the media player to access the Live365 service.
- **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you select Live365 from the Services menu bar.

6. Press **OK** to complete the sign-in process. Once you have successfully signed in, the Live365 Home screen appears.

From this screen you can browse for new stations, access previous stations you've listened to, and define profile preferences for your Live365 account.

To sign up for a Live365 account, go to <http://www.live365.com/wdtv>.


For more information on the features, options, and limitations of using Live365, go to <http://www.live365.com/index.live>.

Listening to a Live365 Station


- New Live365 users can browse for a radio station.
- You can access the last station you've listened to if you've already accessed Live365 from the media player.
- Registered Live365 users can access My Preset List and listen to favorite stations.
- Live365 VIP members can listen to premium radio stations.

To browse for a radio station:

1. On the Live365 main screen, press **◀/▶** to select **Stations**, then press **OK**.

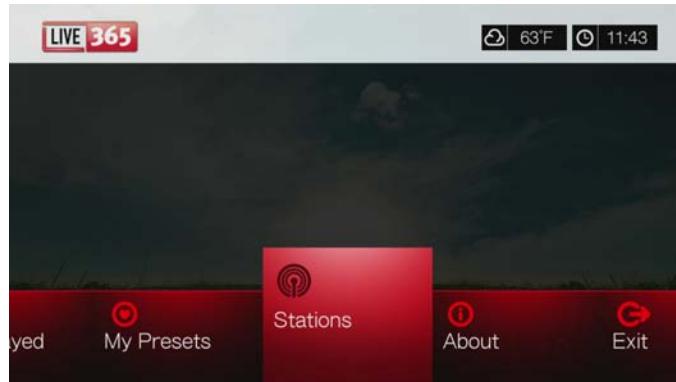

2. Press **▲/▼** to select a station category, then press **OK**.

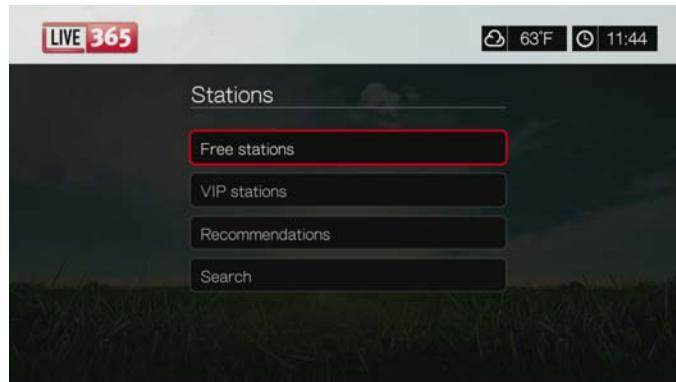

Selections include:


- **Free Stations** – Free Internet radio.
- **VIP Stations** – Premium, uninterrupted Internet radio for registered and paying Live365 users. You must sign in to your Live365 account and be a valid VIP member before you can access this category. Go to page 128 for more information.
- **Recommendations** - Free Internet radio recommended by your other Live365 users. You must be signed in to access these stations.
- **Search** – Search for a Live365 station. Go to page 128 for more information.

3. Press the navigation buttons to select the station you want to listen to. Press **OK**.
4. Press **▲** if you want to add the station to My Presets if you have a Live365 account. Press **OK**.
5. Press **II▶** or **OK** to start listening to the selected radio station.

The Live365 Station screen:

The Live365 station screen provides view and sorting and audio quality filtering options.


1. Press **▲**, select the view icon  , and press **OK** to switch between Grid and List views.
2. Press **▲/►** to select the sorting and filter icon  , and press **OK**.
3. Press **►**, then **▲/▼** to select Filter by audio quality. Options include All Stations, Only high (audio quality), Medium to high (audio quality), Low to medium (audio quality), and Only low (audio quality). Press **OK**.
4. Press **►**, then **OK** to select the green check mark  , then press **OK** again.

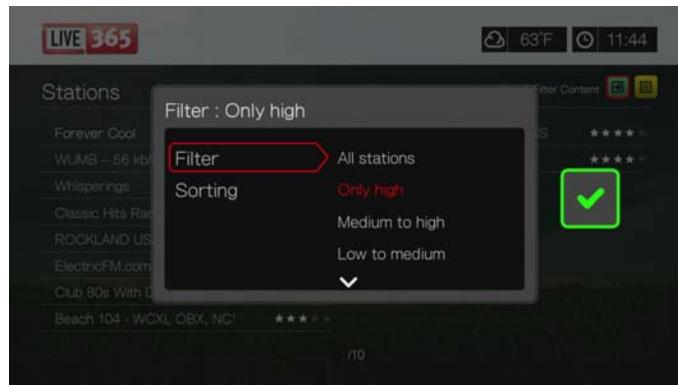

5. Select Sorting and repeat the steps above to sort stations either Alphabetically or By Popularity.

To access the last station listened to:

1. On the Live365 main screen, press **◀/►** to select **Last played**.

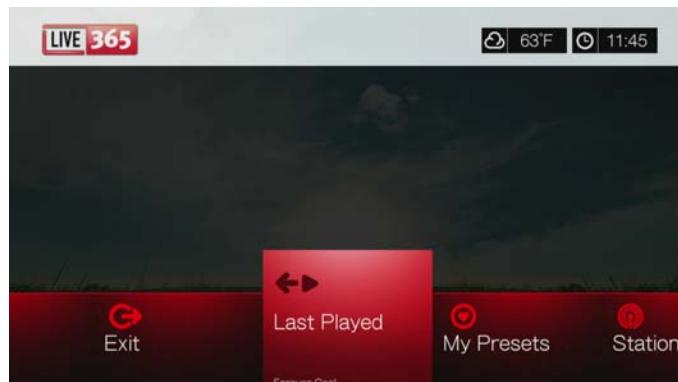


2. Press **■►** or **OK** to start listening to the selected radio station.

To listen to a favorite station:

1. On the Live365 main screen, press **◀/▶** to select **My Presets**, then press **OK**.
Press **◀/▶** to select a station from your preset list.
2. Press **II▶** or **OK** to start listening to the selected radio station.

To listen to a VIP station:

1. On the Live365 main screen, press **▲/▼** to select **Stations**, then press **OK**.
2. Press **▲/▼** to select **VIP Stations**, then press **OK**.
3. Press **▲/▼** to select a music genre, then press **OK**.

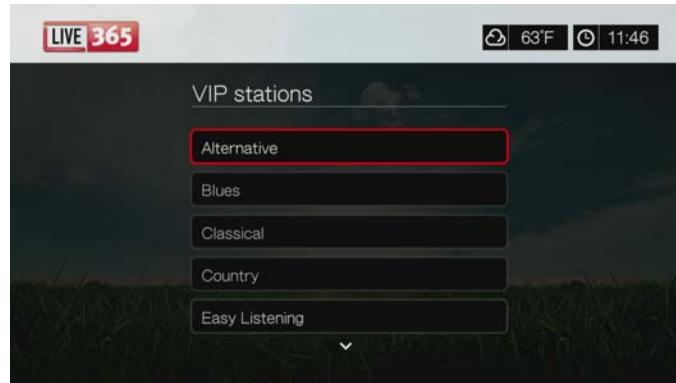

4. Press **▲/▼** to select a music sub-genre, then press **OK**.
5. Press **◀/▶** to select the station you want to listen to.
6. Press **II▶** or **OK** to start listening to the selected radio station.

Searching for a Live365 station

Perform a station search based on the following criteria:


- Artist name
- Track or CD title
- Station information
- Music genre
- Station location
- Audio quality.

You can limit your search based on whether a station has been rated by Live365 editors or if it is a professional, independent, or official station.

To search for a Live 365 station:

1. On the Live365 home screen, select **My Presets**, **Stations**, or **Last Played**, then press **Options**.

2. Press **▲/▼** to select **Search**, then press **OK**.

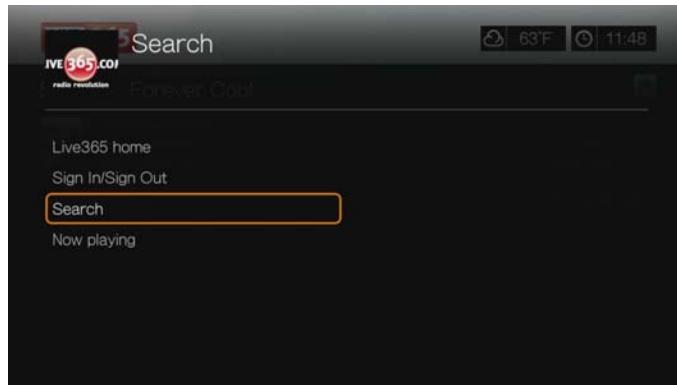

3. On the on-screen keyboard, use the navigation buttons **▲▼◀▶** to key in a search keyword, then press **OK**.
4. Press **◀/▶** to select a station from the search result.
5. Press **II▶** or **OK** to start listening to the selected radio station.

Displaying the Currently Playing Station

1. On the Live365 home screen, select **My Presets, Stations**, or **Last Played**, then press **Options**.
2. Press **▲/▼** to select **Now Playing**, then press **OK**. The station currently playing displays.

Adding a Station to Your Preset List

If you like a particular station, you can add it to your preset list for easier access in the future.

To add a station to your preset list from the Now Playing screen list:

1. Go to the station list showing the station you want to add.
2. Press **◀/▶** to select the station you want to add.
3. Press **▶** several times to enable the **+** Add to My Preset function, then press **OK**.
4. A confirmation screen appears. Press **OK** to confirm the new preset station and return to the Now Playing screen.

Removing a Station from Your Preset List

You can remove stations you no longer want from your preset list.

To remove a station from your preset list:

1. Sign in to your Live365 account. Go to "To sign in to Live365:" on page 124 for instructions.
2. From the Live365 home screen, press **◀/▶** to select **My Presets**, then press **OK**.
3. Press **◀/▶** to select the station you want to remove.
4. Press **▲** to enable the Remove Station function, then press **OK**.
5. A confirmation prompt appears. Press **OK** to go back the Now Playing screen.

Providing Song Feedback

Music selections in Live365 are compiled based on their user ratings. You can participate in the selection process by giving a song the “thumbs up”  or “thumbs down”  vote.

To provide song feedback:

1. While the song is playing, press / to select a feedback icon:  for positive feedback,  for negative feedback. Press **OK**.
2. A feedback confirmation screen appears. Press **OK** to go back to the Now Playing screen.

Getting Track Information

You can send the track information of the currently playing song to your email account for later reference.

To secure track information:

1. While the song is playing, press / to select , then press **OK**.
2. A confirmation screen appears. Press **OK** to return to the Now Playing screen. The track information will be sent to the email address you used to sign up for your Live365 account.

Signing out from Live365

Sign out of Live365 after a listening session to ensure that nobody can make changes to your Live365 settings and stations without your permission.

To sign out from Live365:

1. In a Stations or the Now Playing screen, press **Options**, then / to select **Sign In/Sign Out**, then press **OK**.
2. Press / to select **OK** on the confirmation prompt, then press **OK**.

Exit Live365

To return to the Services home screen, press / to select **Exit** in the Live365 home screen, then press **OK**.

MLB.TV

Watch every out-of-market game LIVE or on demand in HD quality. Almost 100 games are streamed LIVE each week. Choose home or away feeds, and use quick navigation to run scoring plays or at bats. PLUS, watch over 150 Spring Training Games with no blackout restrictions.




Note: MLB.TV Premium subscription required. See MLBTv.COM for details.

See http://mlb.mlb.com/mlb/help/faq_subscriptions.jsp for further details and subscription access FAQs.

To access MLB.TV:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀ / ▶** to select **MLB.TV**, then press **OK**.
3. Select **Link Now**, then press **OK**.
4. Go to www.mlb.tv/wdtv and enter the code shown on-screen.

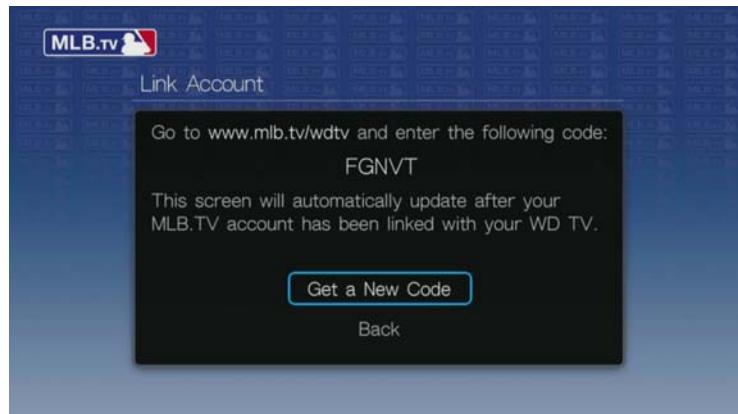

5. Press **OK** on the remote. The MLB.TV main screen displays.




Today's Games

To view Today's Games:

1. Press **▲ / ▼** to select a game from the list in the main screen, then press **OK**.
2. Select a video feed (HOME or AWAY broadcast), then press **OK**.

3. Select a playback option (**Watch From Beginning**, **Resume Watching**, **Watch Live**), then press **OK**.

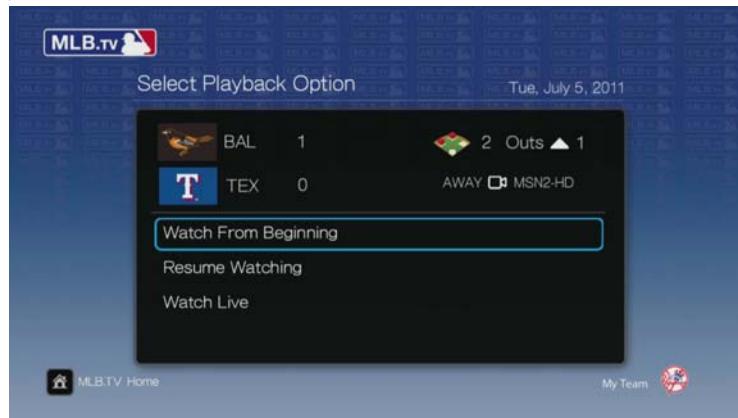


Game Playback

Press **OK** while watching a game to bring up the MLB.TV playback screen. Use the navigation buttons to **Jump to Inning**, **Jump 10 Secs**, play **Slow**, **Jump to Live**, or **Select Feed**. Select **Close** then press **OK** to close the playback screen.



Playback Options

Press **Options** during game playback to bring up the playback options screen. Besides the same options available in the playback screen, the options screen also includes **Zoom & Pan** (see “Selecting Video Zoom and Pan Options” on page 71) and **Sound Effect** (TV Channel, Radio Station, or Audience Background Noise),

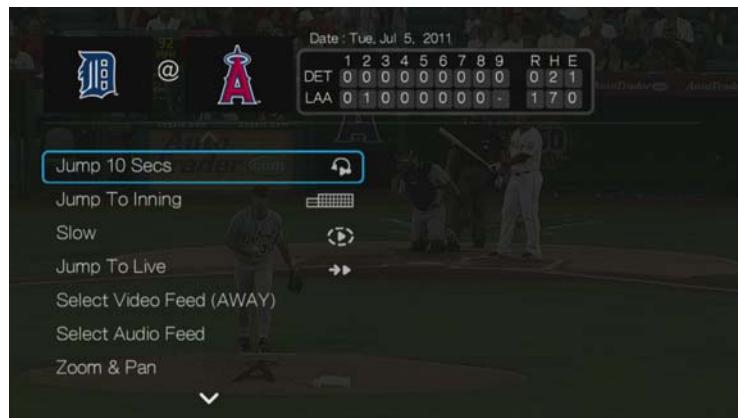

Calendar

In the MLB.TV main screen, navigate to **Calendar** then press **OK**. Your team's calendar displays. Select the current date or navigate to an earlier date and press **OK** to view current or archived games.



Standings

In the MLB.TV main screen, navigate to **Standings** then press **OK** to view AL and NL standings.


Game Recaps

In the MLB.TV main screen, navigate to **Game Recaps** then press **OK**. Use the navigation buttons to view recaps of recent games.



Settings

In the MLB.TV main screen, navigate to **Standings** then press **OK**. In this screen, you can perform such functions as setting your favorite team or teams, setting the default team for the calendar, unlink your account, or hide or reveal scores in the main screen.

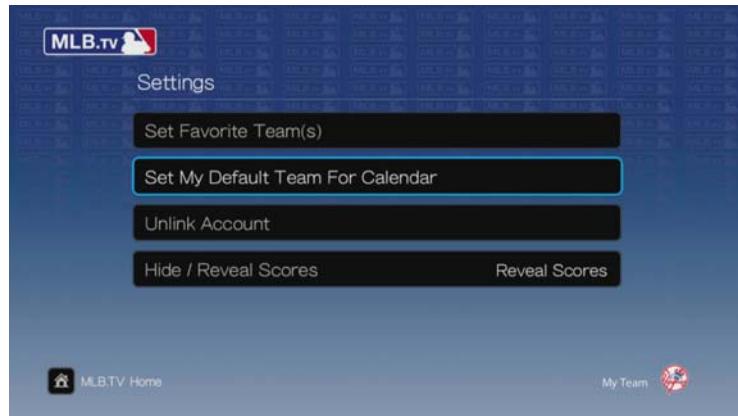

Netflix

Enjoy new releases, classics, and TV episodes instantly on your WD TV Hub media player. Don't wait for the mailman to deliver your movies and don't settle for streaming to your small computer screen. Access your Netflix unlimited membership and instantly watch TV episodes and movies on your big screen.*



*Netflix is available in certain countries. Unlimited membership required. More information at www.netflix.com.

To access Netflix:



Important: Be sure to update your firmware to the latest version before following the instructions below. See "System Firmware Upgrade" on page 209 for further details.

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Netflix **NETFLIX**, then press **OK**.

Existing Netflix Members

Follow the on-screen instructions to enter your user name (in most cases, your registered email address) and password to log in to your account using the remote control. Go to www.netflix.com/signinhelp if you encounter any problems.

New to Netflix

Go to www.netflix.com/wdtv to sign up and start a one month free trial.

Netflix Navigation

Once you have accessed your Netflix account, navigate using the remote control to choose from a variety of categories of movies and TV shows.



Note: To deactivate Netflix on the media player, reset the device to factory defaults. See "Device Reset" on page 205. To deactivate the media player from your Netflix account, log in to your Netflix account. Navigate to "Your Account & Help." Under "Manage Netflix ready devices and computers" locate the WD TV device and select "Deactivate."

Pandora (US only)

Pandora is an automated music recommendation and Internet radio service. With Pandora, you can input a song title or artist name and the service responds by playing selections that are musically similar. You can provide feedback (approved/not approved) on individual songs, which Pandora takes into account for future selections.


Conditions for Using Pandora

The following conditions must be satisfied before you can use the Pandora service.

- You must have a Pandora account. Go to www.pandora.com/wd to create your account. Once you have registered, note your activation code. You will need this code to sign in to Pandora from your media player.
- At present, Pandora is only available for users located in the United States. You must have a US-based network connection.


To set the system language to English:

1. Navigate to Home | Setup menu bar.
2. Press **◀/▶** to select **Appearance**, then press **OK**.
3. Press **▲/▼** to select **Language**, then press **OK**.
4. Press **▲/▼** to select **English**, then press **OK**.

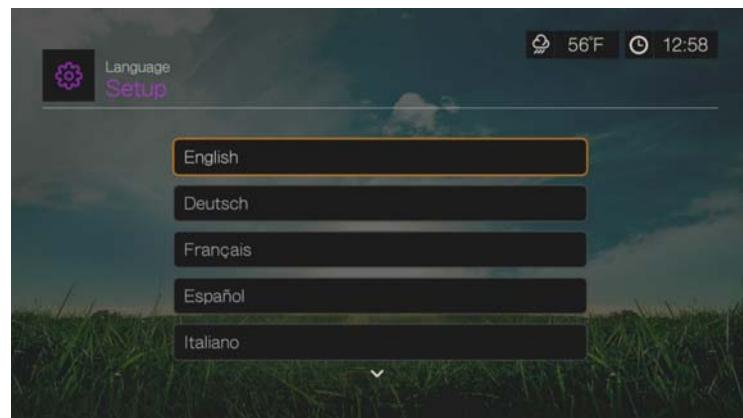

Signing in to Pandora for the First Time

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select Pandora , then press **OK**.
3. Press **OK** to bring up the Add Account screen.
4. If you already have a Pandora account, choose **I have a Pandora account**, then press **OK** to create your new Pandora account. Proceed to step 6.

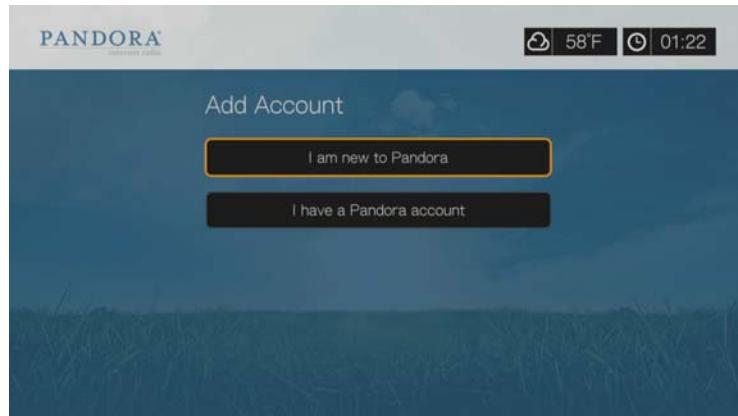

5. If you do not have a Pandora account, select **I am new to Pandora**, then press **OK**.
6. Write down the activation code and follow the onscreen instructions (go to www.pandora.com/wd to create your new account). When finished, choose **Continue**, then press **OK**.
7. Use the navigation buttons **▲▼◀▶** to type in your Pandora user name using the on-screen keyboard, then press **OK**.
8. Use the navigation buttons **▲▼◀▶** to type in your Pandora account password using the on-screen keyboard, then press **OK**.
9. Press **◀/▶** to select a save option.

Options include:

- **No** – Your account details will not be saved. You need to repeat the initial sign-in process every time you access the Pandora service using the media player.
- **Save username only** – Your user name is saved, but you will be prompted to type in your password every time you access the Pandora service using the media player.
- **Yes** – Both your user name and password are saved. You are automatically logged in to your account every time you access the Pandora service using the media player.

10. Press **OK** to complete the sign-in process.

Once you have successfully signed in to Pandora, the Stations screen appears.



From this screen you can create new stations, start listening to previously created stations and Quickmix playlist, and define profile preferences for your account.

For more information on the features, options, and limitations of using Pandora, go to <http://www.pandora.com>.

Pandora Stations

A Pandora station is a personalized stream of music, based on one or more artist names or song titles of your choice. Once you've signed in to Pandora from your media player, you can easily access your stations from the Music menu bar.

Pandora stations reminders

- You can have up to 100 stations at any one time, plus one QuickMix. Once you reach this maximum number of stations you have to delete a station before you can add another one.
- Pandora does not allow immediate or "on demand" playback of a specific song.
- A Pandora station cannot play more than four songs by an artist in a three-hour period.
- After eight hours of play, Pandora prompts you to see if you're still listening. Streaming stops until you respond.
- The music selection streamed into your Pandora station contains a mix of songs or artists that were compiled based on:
 - the initial station "seed" used in creating that station. Go to the next section for instructions on how to create a new Pandora station.
 - the track feedback (thumbs up / thumbs down) you provide. Go to page 140 for more information.
 - the number of skips assigned to a track. Go to page 140 for more information.
- You cannot reverse or immediately replay the songs played on your Pandora station.

To create a Pandora station:

1. Navigate to **Create Station** or press **Options** to select **Create station**. Press **OK**.
2. Use the navigation buttons **▲▼◀▶** to type the name of an artist or song title using the on-screen keyboard. Select **Submit**, then press **OK**.
3. Press **▲/▼** to select a listing from the search results, then press **OK**.

The listing you selected will serve as the station 'seed' for Pandora to compile and stream music similar to your station.

To listen to a Pandora station:


1. On the **Stations** screen, use the navigation buttons to select the name of the station you want to listen to.
2. Press **II▶** or **OK** to start listening to the selected Pandora station. Press **NEXT II** to go to the next song.

To tune in to another station:

1. While listening to a station, press **STOP ■**. You are returned to the Stations screen.
2. Use the navigation buttons to select the name of the station you want to switch to.
3. Press **II▶** or **OK** to start listening to the selected station.

To rename a Pandora station:

1. Tune in to the station you want to rename.
2. Navigate to **Rename Station** or press **Options** then **▲/▼** to select **Rename this station**. Press **OK**.

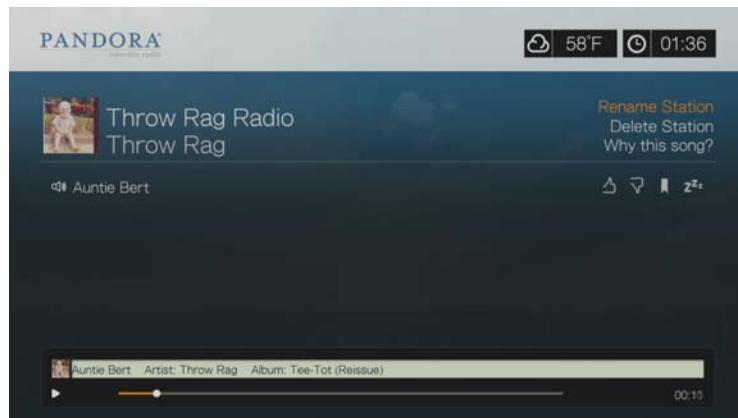

3. Use the navigation buttons **▲▼◀▶** to key in a new station name using the on-screen keyboard. Select **Submit**, then press **OK**.

To delete a Pandora station:

1. Tune in to the station you want to delete.
2. Navigate to **Delete Station** or press **Options** then **▲/▼** to select **Remove this station**. Press **OK**.
3. Press **◀/▶** to select **OK** on the confirmation prompt, then press **OK**.

QuickMix

QuickMix is a feature that allows you to listen to more than one of your stations at once. QuickMix will play only one song based on particular musical characteristics at a time (unlike regular Pandora stations, which play four related songs in a row), so the mood changes more often.

Providing Song Feedback

You can influence the music selection that is streamed into your Pandora station by providing track feedback for the song currently playing. You can give a song a "thumbs up" or a "thumbs down" vote.

Thumbs up

If you like the currently playing song, give it a thumbs up vote. This positive feedback means:

- The very next set of songs for this station will be generated using the song you've given a "thumbs up" vote to as a musical starting point.
- Future sets of songs are likely to have similar musical traits. Multiple "thumbs up" votes on this station for other similar songs will have a cumulative effect.
- This song will play somewhat more often than other songs on this station's potential playlist, and will play about as often as other songs that have received a "thumbs up" on this station.

Thumbs down

If you don't want to hear a song on a particular station, give it a thumbs down vote. This negative feedback means:

- The song will stop playing, if there are any of the remaining "six skips per hour" available on that particular station (this limit is per station, on a rolling per-hour basis).
- The song will be permanently removed from that particular station's playlist.
- A new set of songs with a different musical emphasis will begin to play.
- If you've given at least two "thumbs down" vote to a specific artist on that particular station, songs from that artist will no longer be included in that station's playlist.

To provide song feedback:

- While a song is playing, press **◀/▶** to select **👍** or **👎**, then press **OK**.
A prompt to confirm your vote appears.

Putting a Song to Sleep

When you want to stop listening to song, but not permanently remove it from a station's playlist, you put it to "sleep." This prevents the song from playing on any of your stations for 30 days.

To put a song to sleep:

- While a song is playing, press **◀/▶** to select **💤**, then press **OK**.
A prompt to confirm the "sleep" action appears.

Bookmarking a Song or Artist

You have the option to bookmark a song or an artist for later reference. You can later refer to this bookmark if you want buy the track when you've sign in to Pandora from your computer or mobile computing device, or if you want to share your musical preferences with other Pandora users.

To bookmark a song or artist:

1. While a song is playing, press **◀/▶** to select , then press **OK**.
2. Press **▲/▼** to select whether to bookmark the song title or the song artist, then press **OK**.

The new bookmark is added to your listener profile page. Sign in to Pandora from your computer or mobile computing device to view this profile page.

Why a Song is in my Station's Playlist

You can see why Pandora included a particular song in your station's playlist. While a song is playing, select **Why this song?**, then press **OK**. The song analysis displays.

Deleting a Pandora Account

1. Select Pandora from the Services menu then press **OK**.
2. Press **▲/▼** to select the Pandora account you want to delete, then press **▶** to select the  and press **OK**.

Picasa

View, share and enjoy your photographs right from your television.

To learn more about Picasa services, and the options and limitations related to them, go to <http://www.picasa.google.com>.

To access Picasa:

1. Navigate to the Home | Services menu bar and press **OK**.
2. The list of Internet services display in alphabetical order. Press **◀/▶** to select  , then press **OK** to display the Picasa home screen.

Options include:


- Account
- Search
- My Photos
- People I'm Following
- Featured
- Recent

Signing In To Your Picasa Account




Note: If you do not have a Picasa account and want to create one, go to <http://www.picasa.google.com>.

1. Press **◀/▶** to select **Account** in the Picasa home screen, then press **OK**.

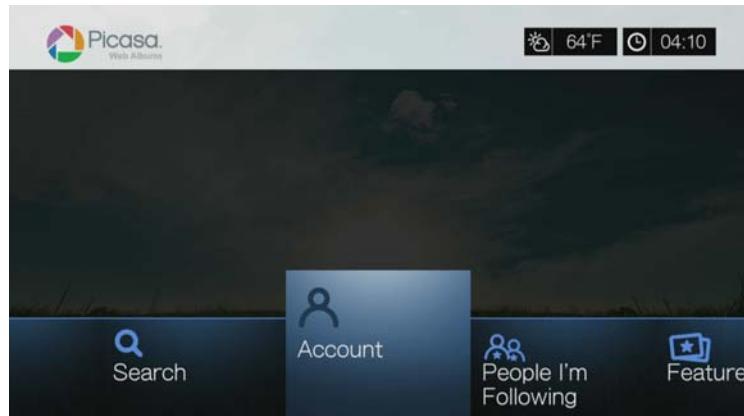


2. Select **Add Account**, then press **OK**.

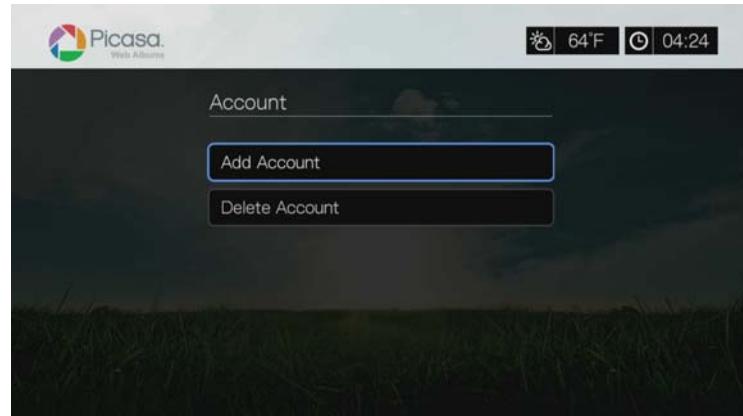

3. Use the navigation buttons **▲▼◀▶** to type your Picasa user name in the on-screen keyboard. Select **Submit**, then press **OK**.
4. Use the navigation buttons **▲▼◀▶** to type your Picasa account password in the on-screen keyboard. Select **Submit**, then press **OK**.
5. Press **▲/▼** to select a save option. Press **OK** when finished.
Options include:
 - **No** – Your account details are not saved. You need to repeat the initial sign-in process every time you access Picasa using the media player.
 - **Save username only** – Your username is saved, but you will be prompted to input your password every time you access Picasa using the media player.
 - **Yes** – Both your user name and password are saved. You can later sign in to your account from the Picasa Account screen.
6. The **My Photos** page appears. Go to the next section for more information on this page.


Account

By default, the **My Photos** page displays first when you sign in to your account. This page contains the photos and videos you have uploaded to Picasa.

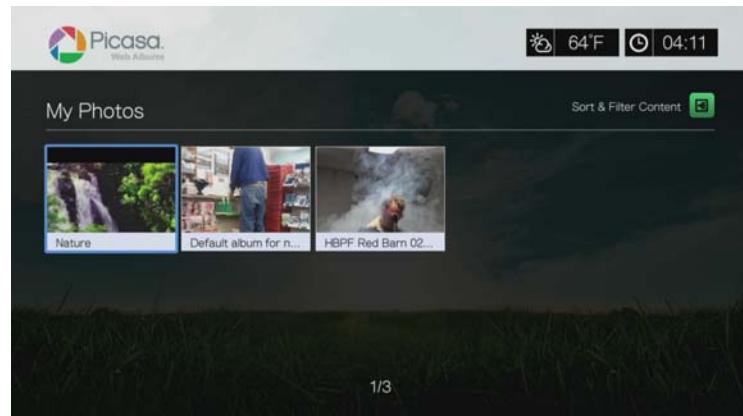

Note: If you have not uploaded any photos or videos, the screen displays "there is no media in the current folder."

You can sort and filter content on this page by showing all content (**All**) or your **Unlisted Gallery** or **Public Gallery**. Press **A** or navigate to **□**, and press **OK**, then press **▲/▼** and **OK** twice to switch that selection.

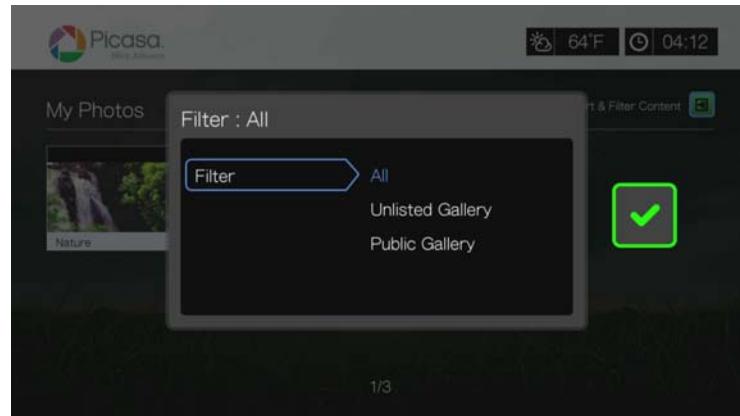

Searching for Content

You can search Picasa for photos and videos of particular interest to you. The search results are based on the following:

- Filenames
- Captions
- Tags
- Folder or album names
- Camera maker
- Date (i.e., 'November' or '2011')


The media player saves your searches so you can quickly recall them.



Note: Content with visibility set to "private" by users do not appear in search results.


To search for content:

1. Press **◀/▶** to select **Search** in the Picasa home screen, then press **OK**.

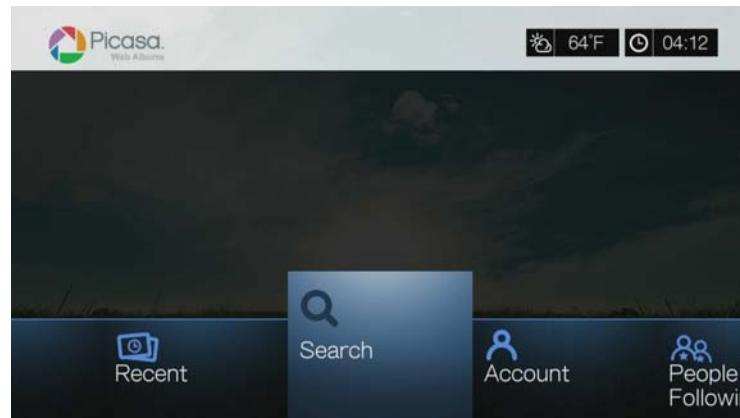

2. Use the navigation buttons **▲▼◀▶** to type a keyword related to the subject matter of the content you're looking for using the on-screen keyboard. Select **Submit**, then press **OK**.


The content search begins (this may take a few seconds). Content matching your search word appears in a Search result screen.

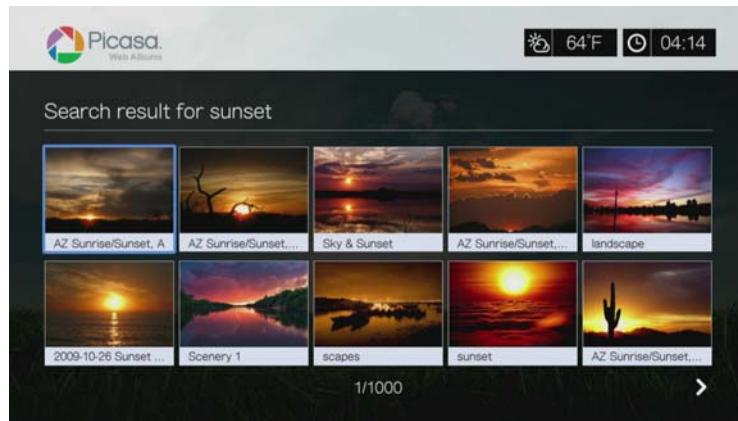

3. Use the navigation buttons to select a photo or video from the display.
4. Press **II▶** or **OK** to view the selected photo or start watching the selected video.

To use search history:

1. Press the **SEARCH**  button on the remote control. This toggles you to the Search History list.

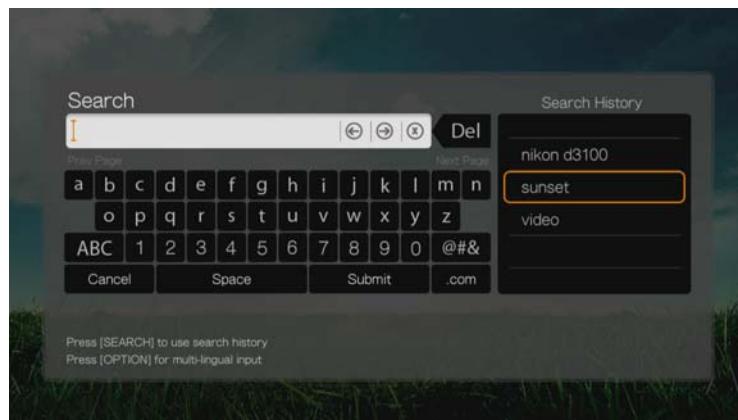

2. Press **▲/▼** to select a search from the display.
3. Press **OK** to perform the saved search.

My Photos

My Photos contains all images and videos in your Picasa Web Albums. To view images or videos, use the navigation buttons to select a web album, then press **OK**. Select an individual file and press **OK** to view, or press **II▶** to view a slideshow of all the photos in an album.