

Thank you very much for choosing Amoi A6a, the fashionable and elegant blue screen mobile phone. A6a is a perfect integration of unparalleled contemporary design and consummate craftsmanship, bringing you easy communication and entertainment, as well as highlighting your tastes.

Key Features:

- GSM World Tri-band Unlocked
- Compatible with Most Standard GSM Networks
- Metal Silver Keys with Sapphire Blue Backlight
- SMS (Short Messaging Service)
- Phonebook Memory: 150 V-card Entries
- AMOI Smart Dial
- 16-Polyphonic Ring Tones
- Interesting Standby Animations & Images
- Multi Call Functions (Call Divert, Call Wait/ Hold, Auto-Redial/ Answer, Incoming Call Filter)
- Built-in Amusing Games
- Tool Kit (Alarm Clock, Calculator, World Time, Voice Memo)

Specifications:

GSM/ GPRS: 850/ 1800/ 1900MHz

Voice Encoding: FR/ EFR/ HR

Screen: 1.8" FSTN Main Screen (128 x 128 Pixels)

Dimension: 86.5 x 44 x 17.9 mm; 3.41" x 1.73" x 0.70"

Weight: 78 g; 2.75 oz

Battery Capacity: 650 mAh

Standby Time: 80~120 hrs

Talk Time: 2~3 hrs

The manufacturer may, at any time and without notice, make changes or improvements to the products offered, but provide necessary corrigendum with this manual or release new version of this manual for the following lot. The Amoi logo and trademark are the property of the manufacturer. Nov. 2004

INTELLECTUAL PROPERTY

All Intellectual Property, as defined below, owned by or which is otherwise the property of AMOI or its respective suppliers relating to the AMOI mobile phones, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to AMOI and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You could not infringe on it, otherwise you may violate the rights secured by the Intellectual Property. Moreover, you must agree that you will not (and will not attempt to) modify, prepare derivative works, recompile, disassemble, or attempt to create source code from the software. No title or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with AMOI and its suppliers.

TABLE OF CONTENTS

Safety Precautions 7

Unpacking9

Your Phone 11

Phone’s Layout 11

Keys Description13

Display 14

Backlight 15

7 Color LED.....15

Getting Started 16

Installing a SIM Card 16

Charging a Battery 18

Switching the Phone On/Off 22

Your Phone’s Mode..... 23

Call Functions 24

Making Calls 24

Receiving Calls 25

Rejecting a Call.....26

Missed Calls 26

Adjusting the Volume..... 27

Quick-switch to Mute Mode..... 27

Call Menu..... 27

Making a Conference Call.....29

Entering Text 30

Changing Text Input Mode 30

Insert Symbol	31
English Mode	31
Spanish Mode.....	31
ABC Mode	32
123(Numeric) Mode	33
Insert Template.....	33
Insert Phone Number.....	34
Using User's Dictionary	34
Phonebook	36
Storing a Phone Number in PB.....	36
Phonebook Menu.....	36
Using Menus	43
Accessing a Menu Function.....	43
List of Menu Functions	44
Messages	48
Voice Mail	48
SMS.....	49
Broadcast	51
Settings	52
Display	53
Power On/ Off Display.....	53
Standby Display	53
Audio Profile	54
Music Select.....	54
Volume.....	55
Call Prompt.....	55

Settings	56
Mobile.....	56
Call.....	58
Network.....	61
Security.....	62
Toolbox	65
Calendar.....	65
Calculator.....	66
World Time	67
Voice Memo	67
Private Info	70
Call Lists	70
Calls.....	70
Bio Rhythm	71
Monthly Care.....	71
Games	72
Reference Information	73
Access Codes	73
Using the Battery	75
Care and Maintenance	77
Glossary	79
TroubleShooting	86

SAFETY PRECAUTIONS



Read these brief guidelines. Failure to comply with them may be dangerous or illegal.



Road safety comes first

Do not use a hand-held mobile phone while driving; park the vehicle first. Remember that in some countries, it is illegal to use a mobile phone while driving.



Switch off on aircraft

Mobile phones can cause interference. Using them on aircraft is both illegal and dangerous. (Please also close the power-off alarm clock.)



Switch off near an explosion place

Do not use the phone near an explosion place, because it likely disturbs the remote control of the explosion.



Switch off when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.



 
Switch off in hospital

Follow any regulations or rules. Switch phone off near medical equipment.



Interference

All wireless phones may be subject to radio interference, which may affect their performance.



Accessories and batteries

Use only approved accessories and batteries.



Use sensibly

Use only in the normal position (to ear). Do not touch the antenna unnecessarily when the phone is switched on. Your package contains the following items.

 


Emergency Call (SOS)

By pressing the soft key SOS you can reach an emergency call on any network without a SIM card and without entering a pin (not available in all countries)

UNPACKING

Your package contains the following items.

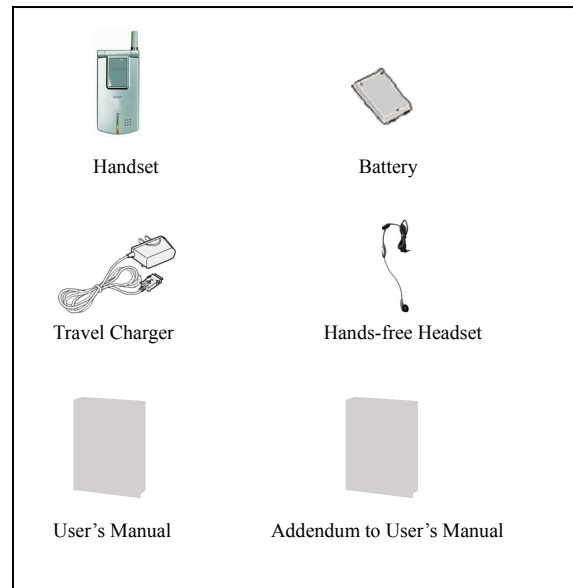

In addition, you can buy the following accessories for your phone from your AMOI local dealer:

- Standard Battery
- Hands-free Car Kit
- Car Charger
- Leather Case
- Desktop Charger
- PC Data Link Kit (PC data link cable + PC link CD)

Note: Accessory availability may vary by market.

YOUR PHONE

Phone's Layout

The following illustrations show the main elements of your phone.

 
Open View




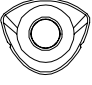





Closed View

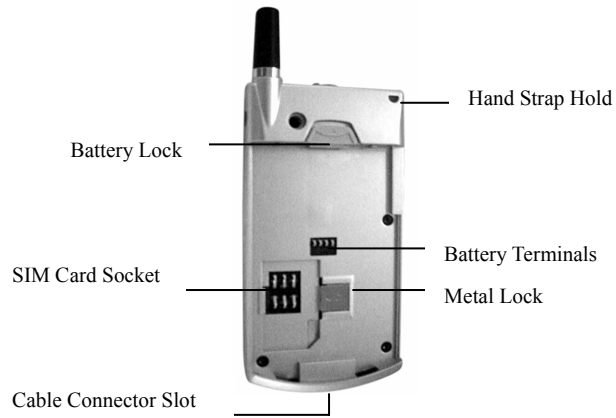

Rear View




Keys Description

Key	Description
	<p>Two soft keys perform the functions indicated by the text above them (in the bottom line of the display).</p>
	<p>Navigation Keys: In the menu facility, scroll through the menu Options and Phonebook memory. In Standby mode, the ▲ key to enter the Voice Memo, the ▼ key to view the Call Lists, the ◀ key to use My Favorite and the ▶ key to enter Messages.</p>
	<p>OK Soft Key: In the menu facility, confirms your selection or entry. In editing mode, press it to enter the Input Mode Menu.</p>
	<p>Send Key (Call Key): Makes or answers a call. In Standby mode, recalls the last number dialed.</p>
	<p>Power On/ Off Key: Ends a call; hold it to switch the phone on and off. In the menu facility, returns to the Standby mode and cancels your input.</p>
	<p>Alphanumeric Keys: Enter numbers, letters and some special characters. In Standby mode, hold the 1 numeric key to enter the Voice Mail.</p>
	<p>Volume Keys (On the side of the phone): During a call, adjusts the voice volume. In Standby mode, adjusts the key tone volume.</p>

 Display



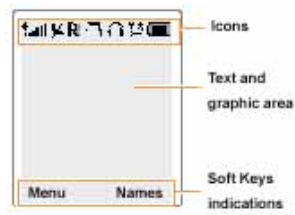

The display comprises three areas.



Area	Description
First line	Displays various icons.
Middle lines	Displays messages, instructions and any information that you enter.
Last line	Shows the functions currently assigned to the two soft keys.

Icons

	Signal Strength: Shows the received signal strength. The greater the number of bars, the better the signal strength.
	Service: Appears when there is a call incoming.
	No Service: Appears when you are not covered by the network service provider. In this case, you cannot make or receive calls.
	Roaming: Appears when you are out of your home area and under another different network.

	New Message: Indicates that there is a new message received.
	Mute: Appears when you set the Mute mode active. The phone vibrates instead of ringing when there is a call coming.
	Alarm: Appears when you set the alarm active.
	Battery Status: Shows the level of your battery. The more black area you see, the more power you have left.

Backlight

The display and keypad are illuminated by a backlight. When you press any key, the backlight illuminates. It turns off if no key is pressed within a given period of time, depending on the **Backlight** Option set in the **Phone Set** menu.

7-Color LED

The 7-colors LED is on the bottom of the upper cover, you can set different flickering modes when you switch on your phone or receive an incoming call. It flickers when:

Standby: Green light flickers;

During a call: Blue light flickers;

Missed a call: Purple light flickers;

New SMS: Red/Green/Blue lights flickers alternately;

Un-read SMS: Yellow lights flickers;

Charging: Red light shines;

Full charged: Green lights shines.

GETTING STARTED

Installing a SIM Card

When you subscribe to a mobile network, you are provided with a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details (PIN, Phone book information and so on).

Note: The SIM card can be easily damaged by scratching or bending, so you should be careful when handling, inserting or removing the card. Follow the instructions supplied with the SIM card. Keep all SIM cards out of the reach of small children.

1. Switch the phone off to press and hold down the key.
2. Remove the battery. To do so:
 - ① Press down the catch above the battery and hold it in the position.
 - ② Slide the battery and lift it away, as shown.



3. Insert the SIM card into the SIM card holder so that the holder locks the card in the position. Make sure that the notched corner is at the top right and the gold contacts of the card face into the phone.



4. Reinstall the battery. To do so:
 - ① Place the battery back, taking care to match the tabs on the battery with the grooves on the phone.
 - ② Push the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.



Charging a Battery

Your phone is powered by a rechargeable Li-ion battery.

You are provided with a travel charger when buying the phone. Use only approved batteries and chargers. Ask your local dealer for further details.

Note: You must fully charge the battery before using your phone for the first time. The phone can be used while the battery is charging.

Using the Travel Charger

 
1. Place the battery on the back of the phone, connect the lead from the travel adapter to the connector at the bottom of the phone.
2. Connect the adapter to a standard AC wall outlet.
3. When charging is finished (the full battery icon becomes solid), disconnect the adapter from the AC wall outlet, then from the phone.

Note: When disconnect the lead of the adapter from the phone, you should press the buttons on both sides of it, otherwise it's easily damaged.


Using the Desktop Charger

To charge the battery alone, use the desktop charger unit.


1. Insert the battery alone into the slot making sure that the terminals on the battery contact to the terminals on the charger.

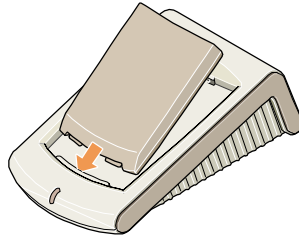

 2. Push down the battery until you hear a click.

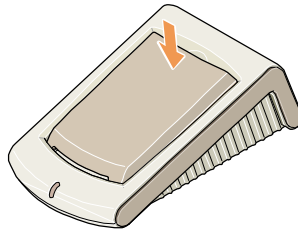

 
3. Insert the lead of the travel adapter into the connector socket of the desktop charger.

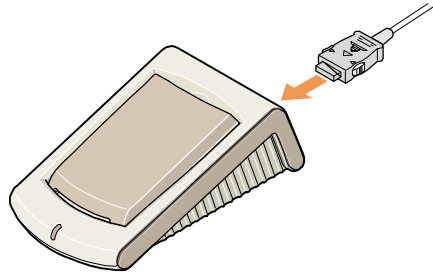

4. Connect the adapter to a standard AC wall outlet.
5. The colour indication of the LED on the charger is as follows:
 - Red: Charging
 - Green: Fully Charged
6. When charging is finished (the LED flashes in green), unplug the power cord of the adapter from the AC outlet and remove the battery from the charger.


Low Battery Indicator

 
When the battery charge level gets low, you can see an empty battery icon at the top right of the display and a text notification.

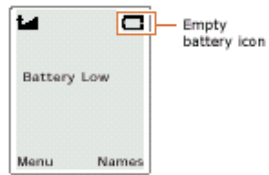


If the battery level gets too low, the phone will turn off automatically. Unfortunately, if this happens, you'll lose whatever you are doing, including dropping your call. Watch the battery strength icon and make sure your battery is adequately charged.

Switching the Phone On/Off

 1. Open the phone.
2. Hold the  key for more than one second to switch the phone on.
3. Enter the PIN code (if you have set to PIN check On), and press the OK soft key. Then your phone connects to the GSM network, and you'll see the following screens.

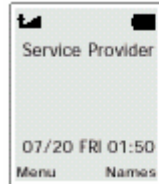

Note: If the phone is out of service, 'No Service' appear in the display. In this case, you cannot make or receive any calls. Wait a little while for a better signal or move into an open area to regain the service.

4. To switch the phone off, hold the  key for more than two seconds.


WARNING!



Do not switch on the phone when the mobile phone use is prohibited or when it may cause interference or danger.

Note: The unnecessary touch of the antenna when the phone is switched on may affect the call quality and cause the phone to operate at a higher power level than otherwise needed.

Your Phone's Mode

Standby Mode

Standby is the most basic state of your phone. The phone goes into Standby mode soon after you turn it on, or whenever you briefly press the  key. When your phone is in Standby mode, you will typically see the current date and time. If you enter a phone number, you can press the **OK** key to dial it, or press the **Save** soft key to save it in the internal Phonebook.

Press the  key at any time to return to Standby mode. Be careful; if you are on a call when you press the  key, you will return to Standby mode, but it also disconnects the call.

Talk Mode

You can place and answer calls only when your phone is turned on. During a call, the phone is in Talk mode. While you are in Talk mode, pressing the left soft key gives you a list of Options referred to as "Call Menu".



CALL FUNCTIONS

Making Calls


Before you can make or receive a call, you must turn on the phone and be within the range of a network.

1. In Standby mode, enter the area code and phone number. (If you make a mistake while dialing, use the ◀ or ▶ key to move the cursor to the right of the digit, press the right soft key to erase; and hold it to erase the entire number.)





Note: While entering the number, hold the # key to insert a pause (for example: between the switchboard and the extension). The number after the pause will be sent a few seconds after dialing the first number.

2. Press the  key to dial the number.
3. When you finish talking, press the  key or simply close the phone to end the call.


Making International Calls

1. Hold the 0 key UNTIL A '+' character appears on the display.
2. Enter the country code, area code, and phone number, then press the  key to begin dialling.

Last Number Redialing

To redial the last number you dialed, press the  key to view the outgoing call list, then choose the desired one by using the  ,  key and then press the  key to dial it. Your phone can store up to 10 last numbers you dialed.



Making a Call from the Phonebook

Press the right soft key to enter the phonebook, search the desired number from it, and press  the key to dial it.

Receiving Calls

When somebody calls you, the phone rings or vibrates (if you have set for that), the screen display an incoming call message. If you have subscribed the Line Identification Service (contact your service provider) and the caller's phone number displays; if you have saved the number in your phone book, the name displays.

Two modes are provided for receiving a call: Call Key & Open Mobile. Refer to Settings/ Mobile/ Answer mode for the details.

Press the  key to answer the call the  key to reject it when the phone is opened.

Note: You can answer a call while using the phonebook or menu features, while the current operation will be halted. If you use the


hands-free kit, hold the OK key on it for about three seconds to answer it.

Rejecting a Call

Pressing and holding down the Volume key for about 3 seconds to reject a call when the phone is closed; press the Reject soft key to reject it when the phone is opened.

Missed Calls


When an incoming call is not answered for any reason, the Missed call log displays on your screen.

1. To view the missed call immediately, press the List soft key, the number or the name (if available) displays, scroll through the desired one, press the  key to dial it.
2. Press the Option soft key, you'll enter the Missed Calls menu, the following options are available:

Edit: Edit the number. It allows you to save the number in your SIM card or Local.

Delete: Delete the number from the missed calls list.


Delete All: Delete all numbers from the missed calls list.

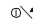Note: Press the  key at any time to exit the Missed Call menu, or view the missed calls at any time by entering the Call Lists.

Adjusting the Volume

During a call, use the volume key on the left side of the phone to adjust the volume of the voice. Press the Up key to increase the volume, the Down key to decrease it. In Standby mode, you can adjust the key tone volume by using the volume key.

Quick Switch to Mute Mode

You can quickly switch your phone to the Mute mode by holding the * key. In mute mode, the phone vibrates instead of ringing when there is a call coming. When the Mute mode is set to be active, an icon  appears on the display. To switch back to the Normal mode, hold the * key for about three seconds.

Call Menu

Some of the features you can use during the call depend on the support of your network service.

During the call, press the Option soft key to enter Call Menu. The options may change in different conversation circumstances.

The followings are the possible options:

Record: Record the conversation during a call. It can be recorded up to 30 seconds.

Note: Recording conversation in some countries is illegal, so please first get the consent from the other party before you begin the recording.

Mute: You can switch the microphone off so that the caller can't hear you.

Hold (current call): You can hold the current call.

Resume held call: Connect the held call.

Hold current call/Dial new number: You can dial a new number while holding the current call.

Hold current call/ Answer new call: You can answer a new call while holding the current call.

Switch Call: Hold the current call and connect the held call.

Connect the held call to a conference call: You can connect the held call to a conference call.

End the current call: Select it to end the current call.

End held call: Select it to end the held call.

End current call/ Answer new call: You can end the current call and answer the new call.

End current call/ Answer held call: You can end the current call and answer the held call.



End all calls: Select it to end all the calls.

Message: Enter the Message / SMS feature.

DTMF Off: Switch the DTMF off.

Making a Conference Call

Conference Call is a network service. It allows up to six people to take part simultaneously in a call.

1. During a call, dial a phone number of the second participant, and press the  key. The first participant is automatically put on hold.
2. Press the **Menu** soft key to enter **Options**.
3. Press the **▲** or **▼** key to scroll to **Conference Call** and press the **OK** soft key.
4. When **Join** is highlighted, press the **OK** soft key (or OK key) to join the first participant in the call.
5. To add more participants to the call, repeat steps 1 to 4.
6. Press the  key to end the whole conference call.

ENTERING TEXT


When storing a name in the phonebook, creating your personal greetings or scheduling events in your calendar or writing any other message, you will need to enter text.

You are provided with the following eZi text input modes:

- Symbol
- English/ ENGLISH/ english
- Spanish / SPANISH/ Spanish
- Abc/ ABC/ abc
- 123 (Numeric input mode)

Note: The number on the top right is a word count of the message, it points out how many characters you can enter in the edit zone. The current input mode indicates on the top left of the display.

Changing Text Input Mode

When in a text entry screen, you will see the text input mode indicator on the top left of the display. Press the **OK** key to enter the text input mode list, and press the ▲ or ▼ key to find the desired one. Or you can simply change the input mode by pressing the  key in text entering mode.

Note: The text input mode may vary in different markets.

Insert Symbol

Symbols mode enables you to enter symbols into a text message.

To enter a symbol, you should:

1. When entering text, press the OK key to enter the 'eZi Menu'.
2. Enter the 'Insert Symbol' and you will see a symbol chart as below. Press the ▲ or ▼ key to select the column which includes the symbol you want to use.
3. Press the corresponding numeric key on the bottom of the chart to insert the desired symbol mark.

Symbol							
.	:	;	?	!	“		
'	(*	+	-	/	=	
<	>	#	%	_	[]	@
{	}	\$	~	^	\	`	
1	2	3	4	5	6	7	8

eZi English Mode

This mode allows you to enter English words with only one keystroke per letter. Each key on the keypad has more than one letter. For example, when you press the 5 key **J**, **K**, or **L** may be displayed. The English mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus

requiring far fewer keystrokes than the ABC mode. For example, to enter 'hello', press the following keystrokes: 4,3,5,5,6.

If the word that appears in the display is not the word you desire, press the ► or ◀ key to display alternate word choices for the keys you have typed. (For example, 'of ' and 'me' both shares keystrokes 6, 3 in the same sequence) The phone displays the most commonly used choice first.

Press the ▲ or ▼ key to change the case, the ▲ key for upper case, the ▼ key for lower case.

eZi Spanish Mode

Please refer to English mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter, once for the first letter, twice for the second letter, and so on.

For example, press the key "2" three times in succession to display the letter "C", press the key "5" two times quickly to display the letter "K".

Note: When you require the same letter twice or more in succession (or a different letter on the same key), just wait for a few seconds for the

cursor to automatically move right , and then select the next letter.

List of characters available:

Key	Characters in the Order Displayed
	. ! ' , - ? @ 1 _
	A B C 2
	D E F 3
	G H I 4
	J K L 5
	M N O 6
	P Q R S 7
	T U V 8
	W X Y Z 9
	Space 0

(Caps Lock mode)

123 (Numeric) Mode

123 Mode enables you to enter numbers into a text. You can enter your desired digits by simply pressing the key on which the digit is.

Insert Template

There are 5 daily used templates stored in the phone that allows you to insert directly when editing the message.

Insert Phone No.

In text entering mode, press the OK soft key to enter 'Menu/ Insert Phone No.'. Press the ▲ or ▼ key to choose the number, then press the OK soft key. The number will be inserted to the message.

Dictionary

While entering a SMS message, you can use your own dictionary which allows you to add a new word and then the word has a high priority in English mode.

Adding a word to the Dictionary

1. In the text entry mode, press the OK key to enter the 'eZi Menu'.
2. Scroll to 'Dictionary' and press the OK soft key to enter.
3. Select "New" and input the word you want to add.
4. Press 'Select' and select 'Save', then the word is saved in your dictionary.

Now, the word saved in your dictionary becomes the one with first priority for the associated key press. You can check the added words in the 'List' of 'Dictionary'.

Dictionary List

1. Enter the Dictionary in the eZi Menu, press the OK soft key.
2. Scroll to the List, and press the OK or Select soft key.

3. All the words list out, and then choose the desired one by pressing the OK soft key.
4. Press the Select soft key to choose to Save or Delete it.

PHONEBOOK

You can store your phone numbers and their corresponding names in your SIM card or in your phone memory. You can store up to 150 numbers in your phone memory; the number of the entries which SIM card can store, depends on the type of the SIM card.

Storing a Phone Number in PB

1. Key in the number to be stored.
2. Press the Save soft key.
3. Enter the corresponding name up to 10 characters.
4. After that, press the **OK** soft key.
5. Press the **▲** or **▼** key to select to save in the SIM card or Local.
6. Press the **OK** soft key to store the name and number.

There are two ways provided for you to enter the Phonebook.

1. In standby mode, press the right soft key to enter it.
2. Enter the corresponding numeric key and then press the * key, you'll enter the associated entry of the phonebook.

Phonebook Menu

When you enter the phonebook, the following options are available:

Country/ Area Codes

Press the ▲ or ▼ key to view the country/ area codes, press the left soft key to search by name or by code.

Search	
[1]	Search Name
[2]	Search Code
Ok	Back

Smart Dial

This Option allows you to find an entry quickly in your PB.

1. When Smart Dial is highlighted, press the left soft key to enter.
2. Input the corresponding numeric key of the desired name.
3. Scroll to your desired entry and press the Left soft key.
4. Press the Send key to dial it or press OK left soft key to enter "Option", the following options are available:

Edit: Edit the details of the selected entry (name, number).

Copy: Allows you to copy the selected entry from the phone memory to the SIM memory or vice versa.

Delete: Press the Left key and phone will display 'Delete? OK or Back'. Select "OK" to delete this entry. Select "Back" to cancel this operation.

Call: Press the OK key to dial this number.

Write SMS: Refer to *Messages/Write*.

Send number: Send all the numbers in this entry to the appointed number.

View

This Option allows you to find a Phonebook entry by searching from the list of all entries sorted by name.

- (1) Press ▲ or ▼ key to view the entries.
- (2) If the entry contains more than one item, press the ► or ◀ key to view the items. The cursor is right to the current item.
- (2) Choose the desired one. Press the Option soft key, you'll have the following operations:

Edit: Edit the current entry.

Find: Find a new entry from the Phonebook.

Copy: Allows you to copy the selected entry from the phone memory to the SIM memory or vice versa.

Delete: Delete the selected entry.

Call: Dial this number.

Write SMS: Refer to Messages/Write.

Send number: Send all the numbers in this entry to the appointed

number.

Search Name

Press the corresponding alphanumeric key(s) of the entry and you can have the same options as in the **View**.

New

It allows you to add new entries to your Phonebook. When New is highlighted, press Left soft key. Enter the name and the number of the new entry, then press the OK left soft key. When finishing entering, press the left soft key to choose the Save Local or SIM. (refer to Storing a phone number in PB)

Speed Dial

Enter the number or search an entry from the phonebook you desire for speed dial, then press the left soft key to save the option. It allows you to set up to 10 numbers for speed dial. For example, set the number of Steven as the first one in the Speed Dial list, in standby mode, hold the corresponding 1 numeric key, the number can be dialed quickly and directly.

Caller Groups

The phone allows you to group the numbers stored in the Local. (The numbers stored in the SIM card cannot be grouped.) It allows you to set 10 groups, such as Family, Friend, VIP and so on. When the number in the group dialed, the phone rings and lights in the way you've set. Enter one desired group, you'll have the following options:

Member List: List all the members stored in the group. When the Member List is empty, press the New left key to select Add From Pb or New; or choose the desired existed one, press the OK left soft key to choose Add From Pb, New or Delete.

Delete: Delete the group.

Rename: Rename the group.

Light Alert: Set the Alert light for the group. There are 10 choices, press the ◀ or ▶ key to choose the desired one, press the left soft key to save the option.

PhBook Manager

Own Number

Store the SIM card number of local phone for reference.

Memory Status

Check the total capacity and the amount of used entries of PB in SIM

card and Local.

Copy (Take “Local to SIM” for example)

- (1) Copy One: Press ▲ or ▼ to view the phone number one by one and press left soft key to copy the desired one.
- (2) Copy All: Copy all the numbers stored in phone to SIM card.

*Note: If the entry already exists in target PB, the entry will not be copied.
If the space of target PB is not enough for the copy, only the front phone numbers will be copied until the target PB is full.
If the name length of target PB is less than that of original PB, the exceeded part will be lost.*

Move

It allows you to move the entries from the SIM to Local or from Local to SIM. Press the OK left soft key to enter one menu, select Copy one or ALL to move the entries.

Delete All

Delete all the entries in the SIM card or in the Local.

USING MENUS

Accessing a menu function

By Scrolling

- 1, In Standby mode, press 'Menu' soft key.
- 2, Scroll with ▲, ▼, ►, ◀ key through the menus and press OK to enter the one you desire.
- 3, If the menu contains submenus, select the one you want, for example Call settings.
- 4, If the selected submenu contains further submenus, repeat step 3.
- 5, Press the OK soft key to confirm the desired setting.

By Shortcut

The menus, submenus and setting options are numbered and can be accessed directly by using their corresponding shortcut keys.

 
 
 
 
- 1, In Standby mode, press the 'Menu' soft key.
- 2, Within three seconds, key in the corresponding number of the menu function you want to access.

Notes: The numbers assigned to each menu function are indicated on the list of the following pages. They may not match the menu number on the phone. It depends on the services supported by the SIM card.

List of Menu Functions


The list shows the menu structure available and indicates the number assigned to each option.

1. Messages

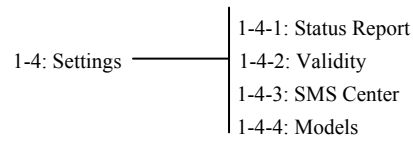
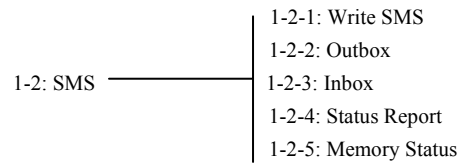



2. Display

 2-1: Power On/ Off Display

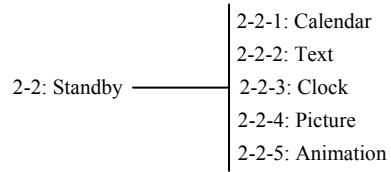

   3. Auto Profile

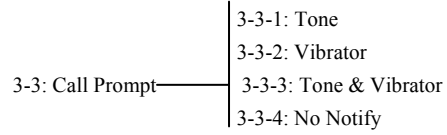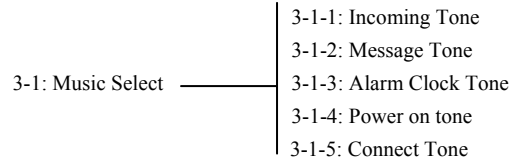

4. Settings

- 4-1: Mobile
 - 4-1-1: Time
 - 4-1-2: Answer Mode
 - 4-1-3: Auto
 - 4-1-4: Auto Redial
 - 4-1-5: Backlight
 - 4-1-6: Language
 - 4-1-7: 7 Color LED
 - 4-1-8: Contrast
 - 4-1-9: Reset All

- 4-2: Call
 - 4-2-1: Divert
 - 4-2-2: Bar Calls
 - 4-2-3: Call Waiting
 - 4-2-4: Send Waiting
 - 4-2-5: 1' Beep

- 4-3: Network
 - 4-3-1: Mode
 - 4-3-2: Search
 - 4-3-3: Sequence
 - 4-3-4: Band

 
- 4-4: Security
 - 4-4-1: Check PIN
 - 4-4-2: Password
 - 4-4-3: Set lock
 - 4-4-4: PIN2 Change

5. Toolbox




5-1: Calendar

5-2: Calculator

5-3: World Time

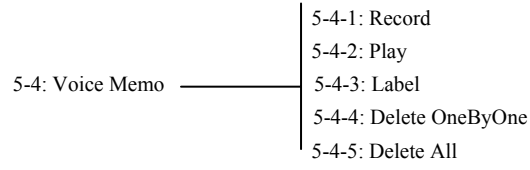

   6. Private Info

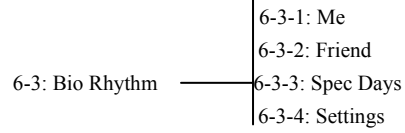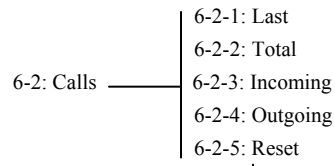

6-4: Monthly Care

7. Games

7-1: Eat Bean

7-2: Push Box

8. STK

Note: STK is a function that must be supported by the SIM card, so please ask the provider for more details.

MESSAGES



The SMS (Short Message Service) function is network service and may not be supported by your network. You must obtain the number of the SMS center from your service provider. Mostly it is automatically available from your SIM card.

Your phone can store up to 100 incoming and outgoing messages. SIM card memory depends on the type of the SIM card.

Two message boxes are available: Personal SMS and Broadcasting SMS.

Personal SMS: It is the message for mobile users to transmit personal information.

Broadcasting SMS: If you select this option, you will receive public information from Network Operators such as Weather Broadcasting and so on.

SMS Indicator: When you receive a new message, an icon  appears on the screen. If the message memory is full,  continues flashing and you cannot receive any new messages. Then use the 'Delete' menu to delete obsolete messages.

Voice Mail

This menu provides you a quick way to access your voice mail (if provided by your network). In standby mode, hold the 1 numeric key

to dial the number directly. In the Voice Mail menu facility, the following options are available:

Call: Press the 'OK' soft key to listen to your messages. If there is no mailbox number, enter the number first.

Number: Allows you to input or modify the mailbox number obtained from your service provider.

SMS

Write SMS

The text message can be made up to 140 characters. Write down your own words or press the OK soft key to enter the eZi Menu, then select 'Insert Template', choose the desired one to add to your message. In editing mode, press Call key to change the text input mode, or press the OK soft key to enter the text input menu. Press the left soft key to enter the Write SMS menu, and then the following options are available:

Send: Write down your own message. When finish, press the Ok left soft key to enter the number you want to send or search the number from the Phonebook.

Save: Allows you to save the message and the number, so that you can send it whenever you want.

Outbox

Outbox stores the messages that you have already sent or unsent.

1. Scroll to the desired message by pressing the ◀ or ▶ key and scan

through the message by pressing the ▲ or ▼ key.

2. Press the Options left soft key to view the details of the messages.

Then press the Ok left soft key to have the following options:

Send: Allows you to send the message.

Save: Allows you to save the message.

Extract Number: Allows you to extract the receiver's number from the message.

Delete: Delete the stored message.

Inbox

Inbox stores the messages you have received.

1. Scroll to the desired message by pressing the ◀ or ▶ key and scan through the message by pressing the ▲ or ▼ key.

2. Press the Options left soft key to enter the Options menu facility, you'll have the following options:

Reply: Reply to the sender. You can write a piece of new message and then choose 'Send', 'Save', 'Extract Number' and 'Delete'.

Forward: Allows you to send the message to others. You can edit the message and then choose 'Send', 'Save', 'Extract Number' and 'Delete'.

Extract Number: Allows you to extract the sender's number.

Delete: Delete the selected message.

Delete All: Delete all the messages in the inbox.

Status Report

In the Messages' Settings menu, set this function 'On' to require the SMS center to inform whether your message has been sent or not.

Memory Status

This menu allows you to view how many messages are currently stored in your SIM card and Phone. The phone can store up to 100 short messages; the numbers of message that SIM card can store depend on the type of the card.

Broadcast

You can receive broadcast messages with various contents via this network service, such as weather or traffic. Enter the Broadcast, you'll have the following options:

Auto Display: If you set this function to be '**On**', messages will be displayed immediately when they are received; select '**Off**' to cancel it.

Filter: Set the channel list for receiving broadcast message:

All: Allows you to receive all the broadcast messages.

List: Only the message sent from the list can be received. You are allowed to add or delete the channel to the list.

None: No broadcast messages will be received.

Read: You can view the up to date broadcast message.

Settings

Use the function to set the special features for the SMS. You can have the following options:

Status Report: You can select 'On' to require the SMS center to inform whether your message has been sent or not.

Validity: Allows you to set the length of time for which your text messages will be stored at the message center while attempts are still made to deliver them. Max, 1 hour, 6 hours, 12 hours, 1 day, 2 days & 1 week are available.

SMS Center: Allows you to store or change the number of your SMS center while sending messages. You can obtain this number from your service provider.

Models: There are several message models stored to be edited. It allows you to send the message conveniently and quickly whenever you want.

DISPLAY

Power On/Off Display

The phone provides you 2 modes for your Power On/ Off Display. You can set the Theme or Text for it.

Standby Interface

By using this menu, you can set the Calendar, Text, Clock, Picture or Animation as your standby interface.

AUDIO PROFILE

Music select

Enter the Music Select. The phone allows you to set the ring tone for the incoming call, message, alarm clock, and so on.

Incoming Tone

It allows you to set the music for the incoming call. 20 pieces of music are available.

Message Tone

Set the music for the incoming message. 20 pieces of music are available.

Alarm Clock Tone

Set the music for the alarm clock. 20 pieces of music are available.

Power on Tone

Set the music for the phone as the Power on tone. 21 pieces are available.

Connect Tone

Set the music for the Connect Tone. 6 pieces are available.

Volume

Adjust the volume for the ring and the key. Use the volume key on the side of the phone to increase and decrease the volume, or use the ▲ or ▼, ◀ or ▶ to adjust it.

Call Prompt

It allows you to set the alert type for a new incoming call & message. There are four types provided for you: Tone, Vibrator, Tone & Vibrator and No Notify. Scroll to the option you want, press OK left soft key to confirm.

SETTINGS

Many different features of your phone can be customized for your preferences.

Mobile

Time

This function allows you to change the current time displayed in the standby state. Enter the Time, you'll have the following options:

Clock: Set the current time and the time format for the time display. 2 formats are available: 12 hours and 24 hours.

Date: Allows you to set or change the date and date format. 3 formats are available: Y/ M/ D, D/ M/ Y, M/ D/ Y.

Alarm: 3 alarms are provided for you. You can set the 3 alarms to be active at the same time or you can choose to cancel all the alarms. For every alarm, you can have the following options:

Enter Time: Enter the time you desire for the alarm to ring.

Sound: Set the mode for the alarm to work for one time or for every day.

Answer Mode

There are 2 modes provided for you to answer a call.

Call Key: Press the  key to answer the call.

Open Mobile: Open the mobile to answer the call.

Auto

You can set the phone to auto answer the incoming call. The phone provides you 2 choices for the time of auto answer: 5 seconds & 10 seconds. Choose the desired one, your phone will auto answer the call if you do not answer it in 5 or 10 seconds. You can also set it off.

Auto Redial

If you set the Auto Redial on, the phone will auto redial the missed call. Press the call key to redial.

Backlight

Set the length for the backlight. Four lengths are available: Always, 5 seconds, 10 seconds & 20 seconds. You can also choose Off to switch the backlight off.

Language

Two language modes are provided for your phone to display the text information.

English: All the menus and information are displayed in English.

Spanish: All the menus and information are displayed in Spanish.

*Note: Press the *,9,9,# in succession to switch the two language in standby mode. And the languages may vary in different markets, please check with the local AMOI retailer.*

7 Color LED

Set the 7 Color LED for the incoming call or set for Power On light.

Call Prompt: Allows you to set the LED for the incoming call. 10 patterns are provided for you.

Power On: Allows you to set the pattern of the light when the phone is switched on. 10 patterns are available.

Contrast

Set the contrast for the Main LCD. Use the ◀ or ▶ key to adjust the contrast.

Reset All

You can reset some settings back to factory set. You need to enter the PWD number. The original PWD number is 0000.

Call

Press the OK or left soft key to enter the Call setting, you'll have the following operations:

Divert

This network service enables the incoming calls to be transferred to the number that you specify. For example: You may hope to transfer your business calls to a colleague when you are on holiday. 5 options are available:

All: All incoming calls will be transferred.

Not Reachable: Calls will be transferred to the appointed number when you are not in an area covered by your service network or when the phone is switched off.

Busy: Calls will be transferred when your line is busy or the call is rejected.

No Reply: Calls will be transferred if you do not answer the call.

Cancel All: All Call Transfer functions are cancelled.

Bar Calls

The Call Barring function helps you to restrict the incoming and outgoing calls. But this service may not be available in all networks. Enter the first option Tele/ Speech, the following operations are available:

All Out: To select this option, the phone will be restricted to make any calls (except the urgent calls).

Out Intl: To select this option, the phone will be restricted to make any international calls.

Out Intl Roam: To select this item, the phone will be restricted to make any international calls except to your home country when roaming (out of the network service area).

All In: To select this item, it will restrict all incoming calls.

In When Roam: To select this item, it will restrict all incoming calls when roaming.

Cancel All: To select this item, the phone will allow making and answering all calls.

To change the PCK, you have to enter the Net PWD first.

Call Waiting

The phone supports the function of 'Call Waiting' and 'Call Holding' of GSM net. If you select this function, the network will tell you there is a new incoming call during another call. You can answer the new call by holding the current call. When you enter the Call Waiting menu, the phone displays 'Status Report...' automatically. You can see whether you have set the function on or off. Press the left soft key to change the status.

Activate: Press the Activate left soft key to switch the call waiting function on, when there is a new incoming call, the network alerts you that there is a call incoming. You can hold the current call, and answer the new call.

Cancel: Press the Cancel left key to invalidate the Call Waiting function.

Send Number

This function must be supported by the network.

On: Your phone number will be displayed to receiver.

Off: Your phone number will be hidden and unknown to receiver.

1' Beep

Set to hear an elapsed time reminder in the 45th second of every minute during your calls.

On: Set to hear the time reminder.

Off: Set the reminder off.

Network

When you use the phone, the phone will automatically select the Internet service. When the phone is out of the service area or in abroad, you can select the appropriate Internet manually.

Mode

Switch between these two modes: Auto & Manual.

Search

To select this item, the phone displays " Searching". After you get it, the GSM will auto display the found networks. If there are more than one available networks, you can use the ▲ or ▼ to select. Networks marked with * are forbidden to use.

Sequence

This item allows you to list the networks you can use when your GSM is in roaming. If the listed network can be used, your phone will select the network from the prior list. Three operations are available.

Move: To press the ▲ or ▼ key to shift it to your desired place.

New: You can add new networks. Input the country code and the network code then press OK soft key.

Delete: You can cancel the chosen network.

Band

Press the ▲ or ▼ key to view choose the desired band, press the OK soft key to confirm.

There are three bands are provided: GSM850/1800, GSM1900 and Automatic. You can select one of them.

Security

Check PIN

Press the "OK" left soft key to enter this function. 2 options are available:

PIN Enabled: Enter the PIN code and enable the function of PIN check by pressing the left soft key.

PIN Change: To change the PIN, you have to set PIN check on first.

Note: If you have enabled the function of PIN check, you'll have to input the PIN code each time you switch on your mobile phone. If you input the wrong number for three times in succession, the SIM card will be locked. In this case, you'll need to enter the PUK code to unlock the SIM card. More details, please contact with your service provider.

Password

Enter the menu, you'll have the following options:

Enable PWD: Allows you to set the PWD check Activate or cancel.

PCK Change: 1. Press OK or left soft key and input the old PWD, then press left soft key.
2. Input the new password and press left soft key.
3. Re-input the new phone password and press left soft key.
4. 'Phone Password Changed' displays.

Set lock

If you activate this function by choosing 'Activate', only the current SIM card is valid. When changing to another SIM card, phone code will be required. To set the function, you have to enter the PWD first.

PIN Change:

1. Press OK soft key to enter 'PIN Change'.
2. Input the old PIN code and press left soft key.
3. Input the new PIN code (four to eight digits) and press left soft key.
4. Re-input the new PIN code and press left soft key.
5. LCD indicates "PIN Changed".

Note: Only when the PIN check is set on can you alter the PIN code.

Note: PIN code is provided with the SIM card, which is used for some special service such as "Call Charge" function etc. If you want to know

whether your SIM card can support these functions, please contact the network service supplier.

PIN2 Change:

The process is the same as "PIN1 Changed"

TOOLBOX

Calendar

When you enter the menu, a calendar displays with the current date highlighted.

Scroll the calendar:

1. You can move the underscore to Year, Month and Day fields by pressing ◀ or ▶.
2. When the desired field is highlighted, press the ▲ or ▼ to move up or down the Date.

You can also enter the desired date by using the numeric key.

When the time is highlighted, press OK left soft key to get the following options:

Set: Set a new log for Memo, Call & Anniversary. Enter one type:

- **Memo:** Make a note of general schedule, i.e. appointments or meetings. It allows you to set the title and reminder date for your memo.
- **Call:** Schedule a call. Enter the scheduled call number or search one from the phonebook. The phone will remind you automatically at the scheduled time. You can set the phone to remind you on time, 1 hour before, 1 day before, 2 or 3 days before the scheduled time.

- **Anniversary:** Select to make notes for anniversaries. Set the scheduled time and the time for the phone to remind you.

View

Press the View soft key to view the schedules you've set, press ▲ or ▼ to scroll through these notes.

Delete

Delete the note.

- Delete One by One
- Delete All
- Expired

Calculator

By this function, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Performing the Calculation

1. Use the numeric key to enter the first desired number.
2. Press ▲ for multiplication sign 'x', ▼ for division sign '/', ◀ for plus sign '+', and ▶ for subtraction sign '-';
3. Enter the second number.
4. To calculate the result, press left soft key to get the result.

5. Repeat steps 1 to 4 as many times as needed.

*Notes: To erase any mistakes and clear the display, press the 'Clear' (Back) soft key. Press the * key to enter a decimal point and the # key to change the sign of a number to a negative (-).*

World Time

The display shows:

- City name
- Current date and time according to the time format setting (12/24 Hours)

To...	Then...
Select the time zone	Press ◀ or ▶
Select the city in the same time zone.	Press ▲ or ▼
Make some settings (Set as local, Enable DS, Disable DS)	Press OK left soft key and scroll to desired one

Voice Memo

With your phone, you can record 2 voice memos (including recording conversation) of 30 seconds in length.

Note: Recording voice conversations is illegal in some countries. Make sure to get the consent from the other party.

Record

1. Press the OK left soft key to enter the Record.
2. Record the voice memo by speaking into the microphone.

Note: When recoding, press Pause soft key to have a pause then Record key to continue; A timer displays to show you the elapsed time. When recording time expires, the phone will automatically save the memo already recorded by that time.

3. When recording is completed, press **End** soft key; the record will be kept at once with the date and time together.

Play

1. Press the left soft key to enter the Play, the recorded voice memo display.
2. Press ▲ or ▼ key to scroll to the desired one and press the left soft key to play it back.

Note: While playback, press the End soft key to stop playing and exit the playing mode.

Label

You can make a label for your voice memo by this operation.

1. Press ▲ or ▼ key to choose the memo you want to label.
2. Press the alphanumeric key to enter the desired character as the memo's label.
3. Press the Save left soft key to save the operation.

Delete OneByOne

It allows you to delete the memo one by one. Use ▲ or ▼ key to scroll to the desired memo, press Delete left soft key to delete it.

PRIVATE INFO

The Private menu allows you to maintain a lot of private information.

Call Lists

This menu allows you to view the timers for calls made and received.

The following timers are available:

Missed: Enter the missed call menu, you'll see the details of the call (time of the call, the caller's name if available). Press the Option left soft key to have the following options:

Edit: Edit the missed call number and name.

Delete: Delete the missed call record.

Delete All: Delete all the records in the missed call list.

Incoming: Enter the incoming call list. The available operations are the same as the Missed.

Outgoing: Enter the outgoing call list. The available operations are the same as the Missed.

Calls

Last: You can see the duration of the last call.

Total: You can see the duration of your total calls (incoming and outgoing).

Incoming: Allows you to view the duration for the incoming calls. Press the Reset left soft key and then OK left soft key to reset the record back to zero.

Outgoing: Allows you to view the duration for the outgoing calls.
Press the Reset left soft key and then OK left soft key to reset the record back to zero.

Reset: Reset all the record (Last, Total, Incoming & Outgoing) back to zero.

Bio Rhythm

You can check the physical, emotional, or intellectual rhythm of your or your friend's body for today or a specified day. To check the bio rhythm, you must enter your or your friend's birthday in the Settings.

Me: Enter it to view the bio rhythm of yourself.

Friend: Enter it to view the bio rhythm of your friend.

Spec Days: If you want to know your friend and your bio rhythm of a special day, enter the day you want. Then press the OK left soft key to view.

Settings: Allows you to enter your birthday and your friend's birthday. To get the bio rhythm, you have to enter the birthday first.

Monthly Care

Enter the time for your last menses. When finish, press the OK left soft key to enter the longest menstrual cycle. Then press the left soft key, you'll see your ovulation day and conceptive period.

GAMES

Eat Bean

A big mouth eating beans. Press OK left soft key to enter the game, you'll have the the options as follows, press the direction soft key to choose the desired one:

Start: Start playing the game

Load Game: Load the game.

Record: Record the scores of the best winner.

Help: Provides you with some instructions on playing the game.

Push Box

You are successful if you can push all boxes to destinations.

You can push boxer by ▲▼◀▶ key and restart/end game by pressing some keys, and you can select pass by pressing "2" and "8" key.

Start: Start a game.

Help: Describes operation and rules in the game.

Beep: Allow you to select voice on/off of the game.

REFERENCE INFORMATION

Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorized use.

Phone Password

The security code can be used to avoid unauthorized use of your phone. The security code 0000 is usually supplied with the phone. Change the security code before you start using your phone. Keep the new code secret and in a safe place, which is separate from the phone.

PIN Code

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code is enabled, the code is required each time the phone is switched on.

Note: If you key in an incorrect PIN code three times in succession, the SIM card will be locked. To unlock the SIM card, you'd key in the PUK code and press the OK soft key, and key in a new PIN code twice.

PIN2 code

The PIN2 code, supplied with some SIM cards, is required to access

some functions, such as charging unit counters. These functions are only available if supported by your SIM card.

If you key in an incorrect PIN2 code three times in succession, the PIN2 will be locked. To unlock the PIN2, you'd key in the PUK2 code and press the **OK** soft key (or **OK** key), and key in a new PIN2 code twice.

PUK code

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code.

If you key in an incorrect PUK code ten times in succession, the SIM card cannot be used anymore. Contact your service provider for a new card.

You cannot change the PUK code. If you lose the code, contact your service provider.

PUK2 code

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code.

If you key in an incorrect PUK2 code ten times in succession, you cannot use the functions requiring the PIN2 code. Contact your service provider for a new card.

You cannot change the PUK2 code. If you lose the code, contact your service provider.

Using the Batteries

A rechargeable Li-ion standard battery powers your phone. The following batteries are also available (ask your local dealer for further details):

Type	Capacity	Talk Time	Standby Time
Li-ion	650mAh	2~3hrs	80~120hrs

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

- If left unused, a fully charged battery will discharge itself over time.

- Use only approved batteries; and recharge your battery only with approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first. Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.

- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and allow you to enjoy this product for many years. When using your phone, battery, charger, or any accessory:

- Keep it and all its parts and accessories out of small children's reach.
- Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its moving parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up (to its normal operating temperature), moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth slightly dampened in a mild soap-and- water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications of attachments could damage the phone and may violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility.
- This phone features large inner & outer display screens, which are damageable. Please be most careful to avoid dropping or knocking it or scratch it with a sharp thing.

GLOSSARY

Antenna

A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

Alarm Clock

Your pager alarm can be set for a specific time and date or can be used as a daily alarm.

AMOI Smart Dial

An intelligent way to dial a number which is stored in your phonebook. Say you want to dial Steven, at idle, press st, then press *, you can find the number of Steven. Or press st when you select Smart Dial in phonebook.

Band

Range of radio frequencies between two defined limits which are used in wireless communications.

Call Barring

Enable it to restrict outgoing and incoming calls.

Call Divert

Allows you to set your phone to forward calls to an alternate phone number. (network and subscription dependent feature -- not available in all areas).

Call Holding

You can put callers on hold. (network and subscription dependent feature -- not available in all areas).

Call Waiting

While making a call, the phone will alert you that another person is trying to call you. You can choose to answer the call or it will forward to your voice mail. (Network and subscription dependent feature -- not available in all areas).

Conference Calling

Able to establish a conference call involving up to five additional parties.

DTMF (Dual-Tone Modulated Frequency)

You send DTMF signals when you enter numbers by pressing the digit keys.

GPRS—General Packet Radio Service

GSM (Global System for Mobile Communication)

GSM is the pan-European standard for digital cellular telephone service. It is also one of the technologies available in the Americas. GSM was designed for markets to provide the advantage of automatic, international roaming in multiple countries. The SIM (Subscriber Identification Module) card is a vital component in GSM operation. The user can store all relevant data for the phone on a removable plastic card. The card can be plugged into any GSM compatible phone and the phone is instantly personalized to the user.

GSM850--The digital GSM network used in America

GSM1800--The digital GSM network used in Europe and Asia.

GSM1900

The digital GSM network of GSM1900 is widely used in North America and Latin America.

Hands-Free

A feature that permits a driver to use a wireless phone without lifting or holding the handset - an important safety feature for automobiles, tractors and most other motorized vehicles.

LCD (Liquid Crystal Display)

It is commonly used to refer to the screen display on the wireless phone.

LED (Light Emitting Diode)

It is commonly used to refer to a small light on the wireless phone or on the desktop charger. The LED lights on the phone to indicate an incoming call. The lights on the charger indicate that battery charging is taking place.

Line Identification Services

Service allowing subscribers to view or block the telephone numbers of callers.

Mobile Phone

The term that can be inter-changed with cellular phone or wireless

phone.

PIN (Personal Identification Number)

Security code that protects the phone against unauthorized use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, if required.

PUK (PIN Unlocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

Roaming

A service offered by most cellular service providers that allows subscribers to use cellular service while traveling outside their home service area. When they are outside their home service area and come within range of another cellular system, the ROAM indicator on the cellular phone will light to show that they are in range.

SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot in the back of the

phone and is protected by the battery.

SMS (Short Messaging Service)

Network service that allows you to send and receive messages to and from another subscriber without speaking to the correspondent. The message created or received (up to 160 characters) can be displayed, received, edited or sent.

Soft Keys

Keys marked **•** and **o** on the phone, the purpose of which:

- Varies according to the function that you are currently using
- Is indicated on the bottom line of the display just above the corresponding key.

Standby Time

The time a battery can power a phone in the standby mode, ready to make or receive a call, without being used for an actual call. The longer a phone is in standby mode, the less standby time remains in the battery.

Talk Time

The total time a battery can power a phone for cellular calls. As the phone drains the battery during a call, the talk time left in the battery

diminished until the phone is turned off or the battery is recharged.

Tri-Band

Wireless phone that operates on any of the three digital GSM frequencies-typically, 850 MHz, 1800 MHz and 1900 MHz-to increase service coverage. (1800 MHz is a GSM digital network used in Europe. This frequency allows for global roaming, where roaming agreements are in place.)

Voice Mail

Computerized answering service that automatically answers your calls when you are not available, plays a greeting (Optionally in your own voice) or records a message.

TROUBLESHOOTING

If the phone does not work properly, please check the following troubleshooting and find a solution. If you can't solve the problems, please contact your local dealer for help.

Questions	Solutions
Cannot make or receive calls.	<ul style="list-style-type: none"> ● Check whether the phone is powered on or not. ● Check if the battery is lack of power. ● Check if the signal is strong enough. ● Check if you've set 'Call Barring', SDN or the other options in Call Set menu. ● Check if you've set the 'Call Divert'. ● Check if you've placed the SIM card properly.
Conversation volume is low.	<ul style="list-style-type: none"> ● Check if you've set the Voice Volume too low.
Does not ring when an incoming calls comes in.	<ul style="list-style-type: none"> ● Check if you've set 'Silent' or 'Vibrator' modes. ● Check if the ring volume is set too low. ● Check if the surrounding noise is too loud. ● Check if you've set the 'Call Divert'.
LCD is not clear.	<ul style="list-style-type: none"> ● Check if you've set the LCD contrast too low.
The keypad doesn't work.	<ul style="list-style-type: none"> ● Check if you've locked the keypad.
The one on the other part of the line cannot hear you.	<ul style="list-style-type: none"> ● Check if you've set 'Mute'. ● Check whether you speak near the MIC.

For body worn operation this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.”

We hold the privilege of modifying the product described in this manual without prior notice. For any errors in publishing, we will make some necessary modification in the new edition.

Printed in China
FKV2.198.556SSUSA
English-USA 11/ 2004 Rev. 2.0