

Thank you very much for choosing Amoi CS6, the fashionable and elegant color screen mobile phone. The CS6 is perfect integration of unparalleled contemporary design and consummate craftsmanship, bringing you easy communication and entertainment, as well as highlighting your tastes.

**Key features:**

- SMS+MMS
- Radio
- Calculator
- Countdown
- Notebook
- Internet access and surf
- Color bar alarm function
- 40-polyphonic ringtone
- Schedule and Person Info
- Various screen saver images
- PC Sync
- Voice memo
- 3 Alarm clocks
- Intelligent speed dial
- Vivid standby theme
- Games, music player
- Phonebook memory of 200 entries
- Speaking Clock

---

**Specifications:**

- GSM 900/1800MHz
- HR, FR and EFR voice codec
- Music ringing/Vibrating
- GPRS class 10, WAP 2.0
- Size: 91.5 x44x20.2mm
- Weight: 82 g with slim batter

*The manufacturer may, at any time and without notice, make changes or improvements to the products offered, but provide necessary corrigendum with this manual or release new version of this manual for the following lot. The Amoi logo and trademark are the property of the manufacturer. January 2004*

## TABLE OF CONTENTS

Safety precautions.....	7
Unpacking.....	9
<b>Your Phone</b> .....	10
Phone Layout.....	10
Keys Description.....	12
Display.....	13
<b>Getting Started</b> .....	14
Installing a SIM Card.....	14
Charging a Battery.....	16
Switching the Phone On/Off.....	20
Your Phones Modes.....	21
<b>Call Function</b> .....	22
Making Calls.....	22
Receiving Call.....	23
Missed Calls.....	24
Call Menu.....	25
Conference Call.....	27
<b>Using Menus</b> .....	28
Select functions of options.....	28
Speaking Clock.....	31
<b>Phonebook</b> .....	31

Storing a Phone Number in PB .....	31
PB Menu .....	32
PHBook Manager.....	34
Info.....	35
<b>SMS</b> .....	36
Inbox.....	37
Outbox.....	39
Write SMS.....	39
Delete.....	40
Memory.....	41
Set.....	41
Broadcast.....	43
Voice Mail.....	44
Models.....	44
<b>MMS</b> .....	44
New.....	44
Inbox.....	45
Outbox.....	46
Drafts.....	46
Sent.....	46
Templates .....	46
Memory .....	47
Settings.....	47
<b>Entering Text</b> .....	48
Changing Text Input Mode.....	49
Using User's Dictionary .....	50
Insert Symbol.....	51

eZi English Mode.....	52
Abc Mode.....	52
123 Mode.....	53
<b>List of Menu Functions.....</b>	<b>54</b>
<b>Fun.....</b>	<b>64</b>
<b>FM Tuner.....</b>	<b>64</b>
<b>Karaoke.....</b>	<b>65</b>
Games.....	66
<b>Internet/WAP.....</b>	<b>67</b>
<b>Personality.....</b>	<b>70</b>
Display.....	70
<b>Sound.....</b>	<b>71</b>
<b>Settings.....</b>	<b>72</b>
Clock.....	73
Mobile.....	74
Call.....	75
Network.....	78
Security.....	79
<b>Toolbox.....</b>	<b>82</b>
Voice Memo.....	82
PC Sync.....	84
Calculator.....	85
World Time.....	86
Countdown.....	86
<b>Multimedia File.....</b>	<b>86</b>
<b>Private.....</b>	<b>87</b>
<b>Call Lists.....</b>	<b>87</b>

---

Calendar.....	88
Notes.....	91
<b>Reference Information.....</b>	<b>91</b>
Access Code.....	91
Using The Batteries.....	93
Care And Maintenance.....	95
Glossary.....	97
<b>Troubleshooting.....</b>	<b>101</b>

---

## SAFETY PRECAUTIONS



Read these brief guidelines. Failure to comply with them may be dangerous or illegal.



### **Road safety comes first**

Do not use a hand-held mobile phone while driving; park the vehicle first. Remember that in some countries, it is illegal to use a mobile phone while driving.



### **Switch off on aircraft**

Mobile phones can cause interference. Using them on aircraft is both illegal and dangerous. (Please also close the power-off alarm clock.)



### **Switch off near an explosion place**

Do not use the phone near an explosion place, because it likely disturbs the remote control of the explosion.



### **Switch off when refueling**

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

**Switch off in hospital**

Follow any regulations or rules. Switch phone off near medical equipment.

**Interference**

All wireless phones may be subject to radio interference, which may affect their performance.

**Accessories and batteries**

Use only approved accessories and batteries.

**Use sensibly**

Use only in the normal position (to ear). Do not touch the antenna unnecessarily when the phone is switched on.

**Emergency Call ( SOS)**

By pressing the soft key SOS you can reach an emergency call on any network without a SIM card and without entering a pin ( not available in all countries )

**Radio frequency exposure information**

These guidelines are consistent with the safety standard for human exposure to radio frequency electromagnetic energy previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

 
To maintain compliance with FCC RF exposure guidelines, if you wear a headset on your body, use the supplied or approved carrying case, holster, or other body - worn accessory.



---

## UNPACKING

Your package contains the following items.

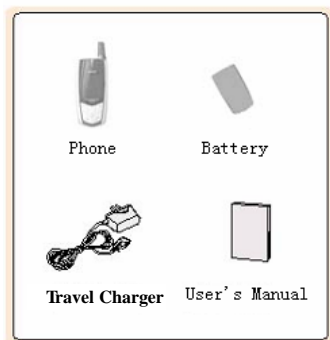

In addition, you can buy the following accessories for your phone from your local dealer:

- Standard, slim batteries
- Data kit
- Desktop charger
- Earphone
- Leather case


---

# YOUR PHONE

## Phone Layout

The following illustrations show the main elements of your phone.


### **Open View**

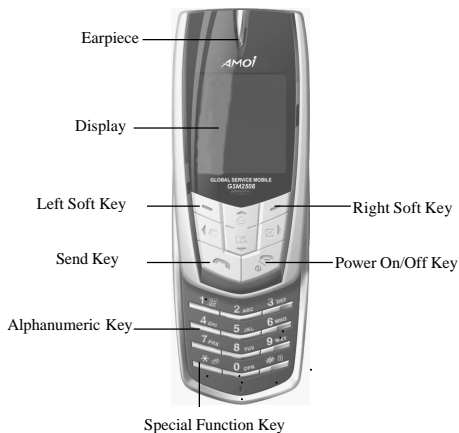






 
## Closed View

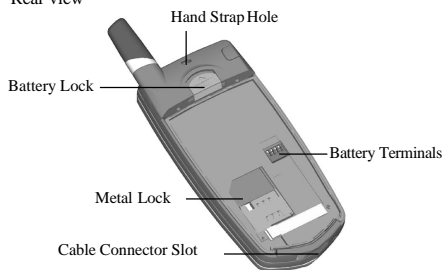

## Rear view



## Keys Description


Key	Description
	Two soft keys perform the functions indicated by the text above them (in the bottom line of the display).
	Navigation Keys: Scroll through the menus ; In Standby mode, the ▼ key to view the call records , the ◀ key to enter Amusement Menu and the ▶ key to use SMS (Short Message Service) feature. Press ▲ key to give the current time ;press and hold ▲ key to use Internet feature.
	Send key: Makes or answers a call. In Standby mode, recalls the last number dialed.
  	Power On/Off key: Hold it to switch on/off the phone; End a call; In the menu facility, returns to the Standby mode and cancels your input.  Enter numbers, letters and some special characters.  Use these keys for various special functions.

## Display

### Display Layout

The display comprises three areas.

Area	Description
First line	Displays various icons
Middle lines	Displays messages, instructions and any information that you enter
Last line	Shows the functions currently assigned to the two soft keys.

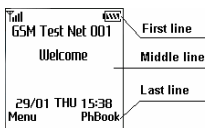

The diagram shows a phone screen with three horizontal sections. The top section is labeled 'First line' and contains icons for signal strength, GSM, and a test message 'Test Net 001'. The middle section is labeled 'Middle lines' and contains the text 'Welcome'. The bottom section is labeled 'Last line' and contains the date '29/01 THU 15:38' and two soft key labels 'Menu' and 'PhBook'.

### Icons



**Signal strength:** Shows the received signal strength. The greater the number of bars, the better the signal strength.



**New Message:** Appears when a new message has been received; flash indicates that your message box is full.



**Vibrate Mode:** Indicates the phone vibrates when a call coming.



**Ring+Vibrate:** Indicate that your phone will ring and vibrate when a call coming.



**Mute Mode:** Appears when the quiet mode is active.



**Call Divert:** Appears when the call divert is active.



**Alarm:** Appears when the alarm is active.



**Battery status:** Shows the level of your battery. The more black area you see, the more power you have left.



**New MMS:** Appears when a new mms has been received; flash indicates that your message box is full.

---

## GETTING STARTED

You must insert the SIM card and charge the battery before you can use the phone.

### Installing a SIM Card

---

When you subscribe to a mobile network, you are provided with a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details (PIN, Phone book information, and so on).

**Note:**

*The SIM card can be easily damaged by scratching or bending, so you should be careful when handling, inserting or removing the card. Follow the instructions supplied with the SIM card. Keep all SIM cards out of the reach of small children.*

1. Switch the phone off.
2. Remove the battery. To do so:
  - ? Pull the battery lock above the battery toward the top of the phone and hold it in the position.
  - ? Lift the battery away, as shown.



- 
3. Insert the SIM card ensuring that the cut corner is at the top left and the gold contacts of the card face into the phone. Slide the metal lock.



4. Reinstall the battery To do so:
- ? Place the battery so that the tabs on it align to the notches at the bottom of the phone.





- ? Push the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.

## **Charging a Battery**

Your phone is powered by a rechargeable Li-ion battery.

You are provided with a travel charger when buying the phone. Use only approved batteries and chargers. Ask your local dealer for further details.

***Note:***

***You must fully charge the battery before using your phone for the first time. The phone can be used while the battery is charging.***



---

## Using a Travel Charger

1? Place the battery on the back of the phone (see" reinstall the battery" ), connect the lead from the travel adapter to the connector at the bottom of the phone.

2? Connect the adapter to a standard AC wall outlet.



3? When charging is finished (the full battery icon becomes solid), disconnect the adapter from the AC wall outlet, then from the phone.

*Note: When disconnect the lead of the adapter from the phone, you should press the buttons on both sides of it, otherwise it's easily damaged.*

## Using a Desktop Charger


1. Insert the battery alone into the slot making sure that the terminals on the battery contact to the terminals on the charger.




2. Push down the battery until you hear a click.
3. Insert the lead of the travel adapter into the connector socket of the desktop charger.
4. Connect the adapter to a standard AC wall outlet.
5. The colour indication of the LED on the charger is as follows:
  - Red: charging
  - Green: fully charged
6. When charging is finished , unplug the power cord of the adapter from the AC outlet and remove the battery from the charger.

**Note:** *This charger is applicable to the series of S6 battery.*

#### **Low Battery Indicator**

When the battery charge level gets low, you can see an empty battery icon  at the top right of the display and a text notification.

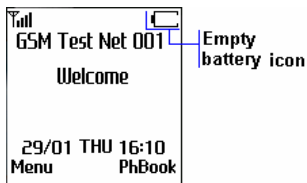


If the battery level gets too low, the phone will turn off automatically. Unfortunately, if this happens, you'll lose whatever you are doing, including dropping your call. Watch the battery strength icon and make sure your battery is adequately charged.

---


## Switching the Phone On/Off

---

1. Press and hold the key  until switch the phone on.
2. Enter your PIN , if you have one for your SIM card. (refer to Glossary/PIN)
3. Press the left soft key, then your phone connects to the GSM network, and you'll see the following screens.



*Note: If the network signal is very weak, 'No Service' appears in the display, and you cannot place and receive calls. Wait a little while for a better signal or move into an open area to regain the service.*

4. To switch the phone off, hold down the  key for more than two seconds.

### **WARNING!**

*Do not switch on the phone where mobile phone use is prohibited or when it may cause interference or danger.*

 

*Note: Do not touch the antenna on the phone unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.*



---

## **Your Phone's Modes**

---

### **Standby Mode**

 Standby is the basic mode of your phone. The phone goes into Standby mode soon after you turn it on, or whenever you briefly press the  key. When your phone is in Standby mode, you will typically see the current date and time. If you enter a phone number, you can press the  key to dial it.

Press the  key at any time to return to Standby mode. Be careful; if you are on a call when you press the  key, you will return to Standby mode, and the call disconnected.

### **Talk Mode**

You can place and answer calls only when your phone is turned on. During a call, the phone is in Talk mode. While you are in Talk mode, pressing the left soft key gives you a list of Options referred to as "Call Menu."

---

# CALL FUNCTIONS

---



## Making Calls

---

Before you can make or receive a call, you must turn on the phone and be within range of a network.


1. In Standby mode, enter the phone number. (If you make a mistake while dialing, use ◀ or ▶ key to move the cursor to the right of the digit, press the right soft key to erase it; Press and hold to erase the entire number.)

***TIP:** When inputting a number, you can insert a pause by holding the # key (for example: between the switchboard and the extension), the latter number will be dialed several seconds after the former one.*

2. Press the  key to make the call.
3. When you finish talking, press  or close the phone to end the call.



***TIP:** When using the handsfree kit, you can press the Send key on it to end the call.*

## Making a Call from the Phonebook

See “entering the phonebook” to search for a desired number, and press the  key to dial.


---

## Last number redialing

In standby mode, press the  key to access the list of the 20 numbers you last called; scroll to the number or name you want, and press  to call the number.

*Note: If you have set Auto Redial menu to On, if there is no answer or the line is busy, the phone automatically retries to make the call.*

## Making International Calls



1. Press and hold the “0” key until a “+” sign appears in the display.
2. Enter the country code, area code, and phone number, then press the  key to begin dialing.

---

## Receiving Calls

When a call is received, the phone alerts you by ringing and/or vibrating; the screen displays an incoming call message. If you have subscribed to the Line Identification Service (contact your service provider), the caller's phone number is displayed; if you have saved the number in your phone book, the name is displayed

Three modes are provided for receiving a call. Refer to *Settings/Call/Answer mode* for the details.


Press  to answer a call and  to reject.

**Note:** If you receive a call while using the phone functions and menus, the current operation will be halted.


## **Missed Calls**

---

When an incoming call is not answered, the Missed Call log is displayed on your screen.

- To view the missed call immediately, press the left soft key, the number or the name is displayed, if available. Scroll through the missed calls, press  to call the number.
- Press the Option soft key, you'll enter the missed calls menu. The following options are available:

<b>Call</b>	To press Left soft key to call the number.
<b>Detail</b>	To view the details (name, number, time)
<b>Save</b>	To store the number to the phonebook.(refer to <i>Storing a phone number in PB</i> )
<b>Send</b>	Edit the message to this number.
<b>Delete</b>	To delete the number from the missed calls list.
<b>Delete All</b>	Delete all number from the missed calls list.

**Tip:** You can press the  key at any time to exit the Missed Call menu. You can view the missed calls at any time. Refer to **Call list** for details.



---

## Call Menu

---

Some of the features you can use during a call depends on whether your network provides these services.

During a call, press Option soft key to enter Call Menu. The options change in different conversation circumstance.

The followings are the possible options.

**Record:** You can record the current call for the maximum of 30 seconds.

**Mute:** You can switch microphone off so that the caller can't hear you.

**Hold ( current call ):** You can hold the current call.

**Hold current call/Dial new number:** You can hold the current call and dial new number.

**Hold current call/ Answer new call:** You can hold the current call and answer a new call.

**Connect held call to conference call:** You can connect the held call to a conference call.

**End the current call:** Select to end the current call.

**End held call:** Select to end the held call.

**End current call/ Answer new call:** You can end the current call and answer the new call.

**End current call/ Answer held call:** You can end the current call and

---

answer the held call.

**End all calls:** Select to end all the calls.

**Main menu:** Select to enter the main menu and make the general operations.

### Other Options in the Call Menu

You may also directly press the number-keys to choose the functions and press **OK** to make it.

#### Hold/ Switch

The 'Hold' function can switch the current call to a held one and recover the previous call.

When there is a held call and a current call:

Press 0 + **OK** to end the held call

Press 1 + **OK** to end the current call and recover the held call.

Press 2 + **OK** to switch the current call to a held one and switch the held one to the current call.

#### Call Waiting

If your network supports this function and you have activated the feature, the phone will remind you when there's a new incoming call during a call.

#### Call Hold

If your network supports this function you can dial another number while you have a call in progress.

Method 1: (1) Dial the required number or find the required number from telephone book and then press **OK** to make

the second call.






- (2) The first call will be put on hold automatically.

Method 2: (1) Press  to hold the current call.

- (2) Dial the second call. When the new call is connected, the previous one will be held automatically. These two calls can be switched freely. Please refer to Hold/Switch function.

## **Conference Call**

Conference Call is a network service. It allows up to six people to take part simultaneously in a call.

- (1) Dial the first number.
- (2) Dial the second number and the first number is held automatically after the first is connected.
- (3) Press 3 +  to let the first number to participate in the conference.
- (4) Repeat Step 2 and 3 to add more numbers to participate in the conference.
- (5) Press  and 3 +  to allow the new number to participate in the conference, repeat the operation to have more numbers to the conference.
- (6) Press 1 + x +  to refuse one current number, repeat the operation to refuse more numbers (x means the number you choose to refuse).
- (7) Press  to end the whole conference call.



---

# USING MENUS

---

## Select functions of options

 
---

Your phone offers a set of functions that allow you to customize your phone. These functions are arranged in menus and sub-menus, accessed via  . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

To view the various functions/options available and select the one required, proceed as follows.


1. Press the corresponding soft key.

2. To...	Then press the...
Select the function displayed	<b>Left soft key</b>
Move up or down in the options	▲ or ▼ key.
Move right or left in the options	► or ◄ key.
Back to the previous menu	<b>Back</b> soft key.
Exit without changing the settings	the  key

*In some functions, you may be asked for a password or PIN. Enter the required code and press the Left soft key.*

### Example: Setting the Display Language

- 1? In the standby mode, press the **Menu** soft key to enter the main menu .
- 2? Scroll through the menus until the **Settings** menu, by pressing the **??** or **??** key repeatedly.
- 3? To enter the **Settings** menu, press the **Left soft key**.
- 4? Scroll through the sub-menus until you reach the **Mobile** sub-menu, by pressing the **▲** or **▼** key

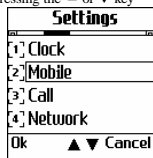

- 5? To enter the **Mobile** menu, press the **Left soft key**.
- 6? Scroll through the sub-menus until you reach the **Language** sub-menu, by pressing the **▲** or **▼** key




- 7? To view the languages available, press the **Left soft key**.

The display shows the current setting.



8? Find the appropriate language by pressing the ? or ? key.

9? Press the **Left soft key** to confirm your selection.

10? Press the **Back** soft key or the  key to exit the menu structure.

### By shortcut

The menus, submenus and setting options are numbered and you can access them by using their shortcut number.

1. In Standby mode, press the Menu soft key.
2. Within three seconds, key the index number of the menu function you want to access.

### Notes:

*The numbers assigned to each menu function are indicated on the list of the following pages. They may not match the menu number on the phone. It depends on the services supported by the SIM. For example, the STK menu will locate the first main menu and all the other menu functions backspace. By press the ► navigation key you can access the SMS function.*

---

## **Speaking Clock**

Press the ? key in the standby mode, the phone will give the current time.

*Note: This function is available only in non-silent style*

## **PHONEBOOK (NAMES)**

You can store your phone numbers and the relative name in SIM card or in your phone memory. Phone memory can store 200 entries at the most; in every entry including a name, three phone numbers, two email addresses, one fax number, one OICQ number and one remark. The quantities of the entries, which SIM can store, depend on the type of SIM; for every entry including a name and a number.

*Tip: If you change phones, any numbers stored in your SIM card are available with the new phone.*

### **Storing a Phone Number in PB**

1. Key in the number to be stored.
2. Press the Store soft key.
3. Select Local PB or SIM PB then press Left soft key.

#### **Save Local :**

- (1) Input name, press Left soft key.
- (2) Enter three phone numbers by sequence (after input the Mobile Number, press Next soft key and then enter the Home Number and

the Office Number).

- (3) Enter Private email address, Public email address, Fax number, OICQ number and Memo separately (the same method as step 2).
- (4) Press Left soft key and "Saved" is displayed.

#### **Save SIM:**

- (1) Input name, press Left soft key.
- (2) Key in the numbers, press Store soft key.
- (3) Press Left soft key and "Saved" is displayed.

There are three ways to enter phonebook in standby mode:

- ✧ Press right soft key.
- ✧ Enter the serial number.
- ✧ Enter the associated alphanumeric keys then press \*. For example, enter 866\* to search the name of Tom.


*Tip: In standby mode, press right soft key to enter PB Menu.*

## **PB Menu**

In the PB (PhoneBook) Menu, the following operations are available:

### **Smart Dial**

This Option allows you to find an entry quickly in your PB.

1. When Smart Dial is highlighted, press Left soft key to enter.
2. Input the correspondent numerical key of the desired name (see the third way to enter PB).
3. Press Left soft key. Scroll to your desired entry.
4. Press  to dial it or press Select soft key to enter "Select operation" to display the following Options:



- 
- Edit:** Edit the details of the selected entry.
- Copy:** Allows you to copy the selected entry from the phone memory to the SIM memory and vice versa.
- Delete:** Press the OK key and phone will display " Delete?"  
Select "Yes" to delete this entry. Select "No" to cancel this operation.
- Call:** Press the OK key to dial this number.
- Write SMS:** Refer to Messages/Write .
- Send number:** Send all the numbers in this entry to the appointed number.

### **View**

This Option allows you to find a Phonebook entry by searching from the list of all entries sorted by name.

- (1) Press the ▲ or ▼ key until you find the desired entry from the list.
- (2) Press the ↵ key to dial the number for more details.

### **Search Name**

Enter the character(s) of the desired name by pressing the associated alphanumeric key(s) and press the Search soft key to see the details in your phonebook.

### **New**

When new contact is highlighted, press Left soft key. Choose the Local PB or SIM PB. (refer to [Storing a phone number in PB](#))

**Note:** If the input position already exists, the phone will display "Message Full".

## PhBook Manager

**Copy** ( Take "Local to SIM" for example)

- (1) Copy One: Press ▲ or ▼ to view the phone number one by one and press left soft key to copy the desired one.
- (2) Copy Range: Input the start number and the end number, then press Left soft key to copy these entries you want to SIM card. (view the following picture)
- (3) Copy All: Copy all the numbers stored in phone to SIM card.

Local to SIM	
1	Copy One
2	Copy Range
3	Copy All
Ok	Back

Range:	1-200
Start:	1
End:	
Ok	Back

**Note:** If the entry already exists in target PB, the entry will not be copied.

If the space of target PB is not enough for **the** copy, only the front phone numbers will be copied until the target PB is full.

If the name length of target PB is less than that of original PB, the exceeded part will **be** lost.

### Delete

Just same as Copy, you can delete One, All and the specified Range.

## Memory

---

Check the total capacity and the amount of used entries of PB of SIM card and Local.

## Info

### Country/Area Codes

Select this function, press ◀ or ▶ to view the country/area code;

Press left soft key to search by name or by code:

Search	
[1]	Search Name
[2]	Search Code
Ok	Back

### Own Number

Store the SIM cardnumber of local phone for reference.

## SMS




The SMS (Short Message Service) function is a network service and may not be supported by your network. Message can be sent by text,

fax, E-mail and paging messaging systems, to send text messages by phone, you must obtain the number of the SMS center from your service provider. This number may be automatically available from your SIM.

Two message boxes are available: Personal SM and Broadcasting SM.

**Personal SM:** It is the message which the mobile users use to transmit information.

**Broadcast SM:** If you select this option, you can receive public information from Network Operators such as Weather Broadcasting and so on.

**SM Indicator:** When you receive a new message,  and  will appear respectively in the internal and external screen. If the message memory is full,  is displayed and you cannot receive or save any new messages. Use the 'Delete' menu to delete obsolete messages.



If you enable the SMS key in Setup, you must enter right SIM Lock code, otherwise you will not be able to read SMS.

*Note: In standby mode, use ► or after entering Main menu to select*

*Messages, both can enter Message option. But if your SIM card has the function of STK, you can only use the former.*

## **Inbox**

Inbox stores the messages that you have received, the one with \*8\* is new message.

1. Press ▲▼ key to choose the desired message.
2. Press Left soft key to view details of message. (To scroll through the message, press ▲ or ▼ key.)
3. Press ? or ? key to show the previous or next SMS.



4. Press '**Option**' left soft key and you can operate as follows:

Options	
1	Reply
2	Forward
3	Extract Number
4	Delete
Select	Back

- **Reply:**

Reply to the sender. You can write a piece of new message and then choose 'Send', 'Store & Send', 'Store' or 'Mul Send' to do with the Message.

- **Forward:**

Send the message to others. You can edit the message and then choose 'Send', 'Store & Send', 'Store' or 'Mul Send' to do with the Message.

- **Extract Number:**

You can extract numbers from this message and store to SIM/Phone.

- **Delete:**

Delete this message.

## Outbox

Outbox stores the messages that you have already sent or unsent. The

letter with '\*' is unsent message.

1. Press ▲ ▼ key to choose the desired message.
2. Press Left soft key to view details of message.
3. Press 'Option' soft key and you can operate as follows:



**Write SMS:** You can write a piece of new message or edit the message and then choose 'Send', 'Store & Send', 'Store' or 'Multiple Send' to do with the Message.

**Extract Number:** You can extract numbers from this message, and store to phone/SIM.

**Delete:** Delete this message.

## Write SMS

The text message can be made up of 160 **letters at most** (or 70 Chinese **characters**). Edit a new message or press 'Send' key and enter the "eZi Menu", select "Insert Template", press left soft key to insert the desired custom. After inputting the text message, press **left** soft key and you have the following options:

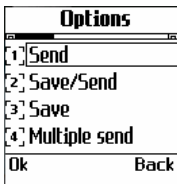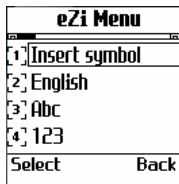

**Send:** Send the message.

**Save/Send:** Allows you to save and send the message. Even if it fails, it can be stored in the outbox.

**Save :** Allows you to save the message so that it can be sent later.

**Multiple Send:** Allows you to send the message to multiple receivers. You can send the message to less than 5 phone numbers.

*Note:*

- 1. To send text messages by phone, you must obtain the number of the SMS centre from your service provider. The number of the SMS centre is included in the SIM card mostly.*
- 2. Enter the number of destination, or press left soft key to enter the PhoneBook, select the number by Name.*

---

## **Delete**

You can delete the messages in Inbox or Outbox.

For example: Press 'OK' left soft key to select 'Inbox', select 'One By One', press ▲ ▼ keys to select the message you want and then press 'Delete' left soft key to delete it. You can also select 'Delete All' to delete all messages in the inbox.

---

## **Memory**




---

You can select the menu to check total space available.



**Set**

---

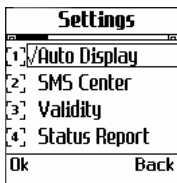

**Auto display:** Select this function and press 'Ok' soft key. When you receive a new message, it can display automatically. You can select 'Cancel' to cancel this function.



**SMS Center:** Allows you to store or change the number of your SMS center while sending messages. You can obtain this number from your service provider.

**Validity:** Allows you to set the length of time for which your text messages will be stored at the message center while attempts are made to deliver them to you. 1 hour, 6 hours, 12 hours, 1 day, 2 days, 1 week, and Max are available.

**Status Report:** You can select 'On' to require the SMS center to inform whether your message has been sent or not.

**SMS PWD:** You can select 'On' to require operator to input SIM Lock Code when the operator want to read inbox and outbox.

## **Broadcast**

You can receive broadcast messages with various contents via this network service, such as weather or traffic.



**Read:** You can view the up to date broadcast message.

**Auto Display:** If you set this function 'on', messages are displayed immediately when they are received.

**Filter:** Helps you choose the channels you like from which you can receive broadcast messages.

**Languages:** Helps you select the language you prefer in which the broadcast message displays.

**CB Tone:** You can select to turn on or off broadcast tone.

**Note:**

*Language support depends on the Network operator.*

## **Voice Mail**

---

This menu provides you with a quick way of accessing your voice mail (if provided by your network):

**Number:** Allows you to input the mailbox number obtained from

your service provider.

**Call** : press the 'Send' soft key to listen to your messages.

## **Models**

---

Several **customized** short message have been stored in this item and you can edit some customized message to be sent conveniently later.

### **MMS**

*Note: Both WAP and MMS Server have the correct settings to use MMS function.*

### **New**

You can create one new message by selecting 'New' or 'From Template'

The following process to edit and send a message:

1. Press **▲** or **▼** key to choose the content:

**Add Text** : Enter the text. Press left soft key to enter, the cursor glints in the editing frame, enter the text directly. Press **\*\*** key to change the text mode; press left soft key to confirm.

**Add Image** : Press left soft key to select the stored pictures ;

**Add Sound** : Press left soft key to select the stored music ;

**Add Slide** : Press left soft key to add one slide.

2. When you finish editing, press option soft key:

Select 'send', select the number or e-mail address from your PhoneBook, or input it directly, use the blank key if there are several.

---

## Inbox

1. In the message list displayed the receiving messages, with indicated icon, title, time and size of every message.

2? Press ▲ or ▼ key to select a desired one.

3? Press 'Option' soft key:

**View(or Receive):** Press left soft key to view the received message or to receive a new one.

**Delete :** Press left soft key to delete the message.

**Detail:** Press left soft key to view the title of the message, the sender, the time and the size.

## Outbox

The message you've failed sending are stored in the Sent box when you make some settings: Select *Settings->Store the sent message->Activate?*

Enter the Sent Box, the available options and operations are the same as those in Inbox.

## Drafts

When editing or viewing message, you can store it in Draft box, and select one to reedit and send.

## Sent

The messages you've sent are stored in the Sent Box if you make some settings: *Setting ->Store the Sent Message->Activate.*


### Templates


When editing or viewing the MMS, you can store it in the 'Template' in order to edit or sent it later.

Icons:

 New Message

 Fail receiving

 Fail sending


 To be checked

 Been read

 Forwarded

 Replied

 Image

 midi audio file

 amr sound file



fr sound file

## Memory

You can check up the total space and the space available in each box.

## Settings

Connection: You can choose from 'Proxy Server', 'Add Server', 'Add from preset list' to add up to 9 proxy servers in the connection list. Select one to reset its parameters. ( Refer to Parameter Table in appendix ) .

Adverts: You can choose whether or not receive the adverts.

Validity: Allows you to set the length of time for which your messages will be stored at the MMS center while attempts are made to deliver them to you.

Save Sent: To set whether or not store the messages which have been sent.

Receiving Mode: To set the mode of receiving MMS.



---

## ENTERING TEXT

When storing a name in the phonebook, creating your personal greetings or scheduling events in your calendar, you will need to enter text.

You are provided with the following text input modes.


 
 
- **Symbol :** Allows you to enter the symbols or punctuation marks.
- **English:** Allows you to enter the English letters by pressing each key once for each character.
- **Abc:** Allows you to enter letters by pressing the key labeled with the desired letter once, twice, or three times until the letter appears on the display.
- **123 :** Allows you to enter numbers.



---

## Changing Text Inputting Mode

---

When in a text entry screen, Press the  key to enter the **eZi Menu** list, and press the  or  key to find the desired input mode from the list.

The following options are available:

- **Insert Symbol**
- **English**
- **Abc**
- **123**
- **Insert Template**
- **Insert Phone No.**
- **Dictionary**

You will see the text input mode indicator in the top line of the display:

- eng > eZi English mode
- Abc > Abc mode
- 123 > Numeric mode

**Note:**

*The current input method will be the same as the one you last used before you quite the input mode.*


---

## **Using User's Dictionary**

---

While entering a SMS message, you can use your own dictionary which allows you to add a new word and then the word has a high priority in eZi English mode.

### **Adding a Word to the Dictionary**

1. In the text entry mode, press the  key.
2. Press the ? or ? key to scroll to Dictionary and press the Left soft key.
3. Select New and input the word you want to add, then press the Options soft key.
4. Press the ? or ? key to scroll to Add to UPD and press the Left soft key to add the word.

Now, the added word becomes the first candidate for the associated keypress. You can check the added words on the List Dictionary menu.

### **Deleting the Words from the Dictionary**

1. In the screen of eZi text mode, press Left soft key.
2. Use the ? or ? key to scroll to List Dictionary and press Left soft key. You can see the list of the words you have added.
3. Use the ? or ? key to find the word you want to delete, and press the Options soft key.
4. Press the ? key to scroll to Del from UPD then Left soft key to delete the selected word.


---


## Insert Symbol

---

Symbolic mode enables you to enter symbols into a text message.

To enter a symbol,

1. Press the  key in the text entry mode.
2. Press the ? or ? key to select the column which including the symbol mark you want to use.
3. Press the corresponding numeric key to insert the desired symbol mark.

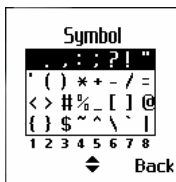

Then, the phone automatically switches back to the text entry mode used just prior to selecting Symbols mode.

**Tip:**

*The alternate method to enter a common symbol is pressing the 1 key one or more times in the text entry mode.*

---

## **eZi English Mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter – when you press once, J, K or L may be displayed. The English mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the ABC mode.

### **For example:**

To enter 'hello', press the following keystrokes: 4, 3, 5, 5, 6. If the word that appears in the display is not the word that you desire, press the ► or ◀ key to display alternate word choices for the keys you have typed. (For example, 'of' and 'me' both shares the sequence 6, 3) The phone displays the most commonly used choice first.

---

## **Abc Mode**











This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed. For example, you press the 2 key three times quickly to display the character "C", the 5 key two times quickly to display the character "L".

There are three models: ABC, abc and Abc, press the # key to change the inputting mode.

*Note:*

*When entering the same character twice (or a different character on the same key), just wait for a second for the cursor to move right automatically, and then select the next character.*

**List of characters available:**

Key	Characters in the Order Displayed									
	-	!	'	,	-	?	@	1	_	
	A	B	C	2						
	D	E	F	3						
	G	H	I	4						
	J	K	L	5						
	M	N	O	6						
	P	Q	R	S	7					
	T	U	V	8						
	W	X	Y	Z	9					
	Space	0								

(Caps Lock mode)

## 123 Mode

Numeric or 123 indicate numeric mode. It enables you to enter numbers into a text message. Press keys corresponding to the desired digits, and manually switch back to the text entry mode of choice.

---

## List of Menu Functions

---

The list shows the menu structure available and indicates the number assigned to each option.

### 1? Fun

1-1: FM Tuner

1-2:Karaoke

1-3: Games	1-3-1: Test Vision
	1-3-2: Snake
	1-3-3: Teris

### 2? Internet

2-1 :Homepage

2-2 :Bookmarks

2-3 :Go To URL

2-4 :Settings	2-4-1:Connection
	2-4-2 :Clear Cache
	2-4-3 :Reset

### 3? Personality :

3-1: Display

3-1-1: Standby

3-1-2: Power on

3-1-3: Power off

3-2: Sound

3-2-1:Music Select

3-1-1-1: Picture

3-1-1-2: Calendar

3-1-1-3: Text

3-1-1-4: Downloaded

3-1-2-1:Text

3-1-2-2:Animation

3-1-3-1:Text

3-1-3-2:Animation

3-2-1-1:Incoming Tone

3-2-1-2:SMS Tone

3-2-1-3:AlarmClock Tone

3-2-1-4:Calendar Tone

3-2-1-5:Countdown Tone

3-2-1-6:Power on Tone

3-2-2:Volume

3-2-3:Call prompt

- 3-2-3-1:Tone
- 3-2-3-2:Vibrator
- 3-2-3-3:Tone&Vibrator
- 3-2-3-4:No Notify

3-2-4:Key Sound

- 3-2-4-1:DTMF Tone
- 3-2-4-2:Silence

3-2-5Prompt Sounds

- 3-2-5-1:Inf Beep
- 3-2-5-2:Service Beep

## 4? Settings

4-1: Clock

4-1-1:Alarm

4-1-1-1:Alarm 1

- 4-1-1-1-1: Time
- 4-1-1-1-2:Mode
  - 4-1-1-1-2-1:Everyday
  - 4-1-1-1-2-2:Workday
  - 4-1-1-1-2-3:personal



---

4-1-1-2:Alarm Clock2

4-1-1-3:Alarm Clock3

4-1-1-4:Cancel All

4-1-2:Auto On/Off

4-1-2-1:Power On

4-1-2-1-1:On

4-1-2-1-2:Set

4-1-2-2:Power Off

4-1-2-2-1:On

4-1-2-2-2:Set

4-1-3: Time

4-1-4: Date

4-1-5: Time Format

4-1-5-1:24 h

4-1-5-2:12 h

4-1-6: Date Format

4-1-6-1:D/M/Y

4-1-6-2:M/D/Y

4-1-6-3:Y/M/D

4-2: Mobile

4-2-1:Language

4-2-1-1:English

4-2-2:Auto Key Lock

4-2-3:Contrast

4-2-4:Backlight

4-2-5:Reset All

4-3: Call

4-3-1:Divert

4-3-1-1:Not reachable

4-3-1-2: No Reply

4-3-1-3:All

4-3-1-4: Busy

4-3-1-5:Status

4-3-1-5-1:Not Reachable

4-3-1-5-2: No Reply

4-3-1-5-3:All

4-3-1-5-4: Busy

4-3-1-6:Cancel All

4-3-2:Incoming Filter

4-3-2-1: Reject

4-3-2-1-1: list

4-3-2-1-2: Number

4-3-2-2: Accept

4-3-2-2-1: List

4-3-2-2-2: Number

---

4-3-3:Volume

4-3-4:Answer Mode

4-3-4-1:Call Key

4-3-4-2:Any key

4-3-4-3:Auto

4-3-4-4:ProSlide Answer

4-3-5:Auto Redial

4-3-6:Send Number

4-3-6-1: Set by Net

4-3-6-2:On

4-3-6-3:Off

4-3-7:1' Beep

4-3-8:Call Waiting

4-3-8-1:Activate

4-3-8-2:Cancel

4-3-8-3:Status

4-4:Network

4-4-1:Mode

4-4-1-1:Auto

4-4-1-2:Manual

4-4-2: Search

4-4-3: Sequence

4-4-4:Band

4-4-4-1:GSM1900

4-4-4-2:GSM900/1800

4-4-4-3:Automatic

4-5: Security

4-5-1: SIM Lock

4-5-2: Check PIN

4-5-3: PIN1 Change

4-5-4: PIN2 Change

4-5-5: PWD Change

4-5-6: Fixed Numbers

4-5-7: Bar Calls

## 5? Toolbox

5-1: Voice Memo

5-1-1: Record

5-1-2: Play

5-1-3: Label

5-1-4: Delete OneByOne

5-1-5: Delete All

5-2: PC Sync

5-3: Calculator

5-4: Word Time

5-5: Countdown

5-6: Multimedia File

5-6-1: Image

5-6-2: Audio

5-6-3: Karaoke

5-6-4: Memory

## 6? Private

6-1: Call Lists	6-1-1: Incoming
	6-1-2: Missed
	6-1-3: Outgoing
	6-1-4: Last
	6-1-5: Total
	6-1-6: Charge Info
	6-1-7: Blacklist

6-2-1:Calendar

6-3: Notes

## 7? Messages

7-1: SMS

7-1-1:Inbox

7-1-2:Outbox

7-1-3:Write SMS

7-1-4:Delete

7-1-4-1:Inbox	7-1-4-1-1:Delete OneByOne
	7-1-4-1-2:Delete All
	7-1-4-2:Outbox
	7-1-4-2-1: Delete OneByOne
	7-1-4-2-2:Delete All

7-1-5:Memory

## 7-1-6: Set

- 7-1-6-1:Auto Display
- 7-1-6-2:SMS Center
- 7-1-6-3:Validity
- 7-1-6-4:Status Report
- 7-1-6-5:SMS PWD

## 7-1-7:Broadcast

- 7-1-7-1:Read
- 7-1-7-2:Auto Display
- 7-1-7-3:Filter
- 7-1-7-4:Languages
- 7-1-7-5:CB Tone

## 7-1-8:Voice Mail

- 7-1-8-1:Number
- 7-1-8-2:Call

## 7-1-9:Models

## 7-2:MMS

### 7-2-1:New

- 7-2-1-1:New
- 7-2-1-2:From Template

### 7-2-2:Inbox

### 7-2-3:Outbox

### 7-2-4:Drafts

### 7-2-5:Sent

### 7-2-6: Templates

7-2-7:Memory

7-2-8:Settings

7-2-8-1:Connection

7-2-8-2: Adverts

7-2-8-3: Validity

7-2-8-4:Save Sent

7-2-8-5:Receiving Mode

## FUN

### FM Tuner

You can listen to the FM radio

**Caution:** 1.The frequency is from 87.9MHZ- 108.0MHZ.  
2.This function has to be used with earphone.

#### Operate

Press ? ? to choose the volume of the sound.

Press ? ? to choose the channel (You can save 10 channels)



---

## Operating menu

Edit name:

Give the current channel a name (In 4 Chinese characters or 8 English letters).

Automatic Tuning

Press **?** **?** to search and the system will stop at the first channel which you searched.

Manual Tuning

Press **?** **?** to search(the frequency will change 0.1MHZ every time you press the **?** **?** key)

Set frequency

You can set the current frequency.

*Note: You should save the frequency which you set,or it will disappear next time.*

Switch Off

Press left soft key to close (the radio will be closed if you take off the earphone)

## **Karaoke**

---

You can enjoy some music with words and flash animation through



this music player. There're two songs stored in this player. Press ▲ or ▼ to scroll to your desired song.

To...	Then press...
Send Key	Pause
Play the song	Left soft key
Repeat	Left soft key
Advance or back	◀ or ▶
Adjust the music scale	▲ or ▼
Exit	Right soft key

## Games

### Test Vision

**Start :** Start a new game?

**Help:** Describes the rules in the game.

**Beep:** Allow you to select voice on/off of the game.

### Snake

---

The directional key controls the direction of snake moving. The snake will lengthen when you eat. If you can eat much food without bumping the wall and itself, you can get higher score.

**Start :** Start a new game

**Level:** The speed will go up with the class increasing.

**Help:** Detailed operation method in offering.

**Score:** Five best scores are recorded.

## Tetris

**Start:** Start a new game.

**Level:** The speed of the descending

**Help:** Describes the rules in the game.

**Score:** You can look up score list.

**Beep:** Switch on/off the sound.

## INTERNET/WAP

WAP is a platform of combining wireless communication with internet, you can gain abundant internet information and some application of e-commerce by phone.

*Note: To connect wap net, you need network sustain and you should apply for the service of surfing internet, the method of setting details*

---

in 'Settings/WAP Settings'.

Select Internet -> Homepage to connect WAP. You can also select Go to URL from WAP Settings to visit a certain URL.

*Note: Press and hold the key \* to enter the browser menu.*

The following options are available when visit WAP.

**Back:** To return the previous window.

**Home:** Skip to the homepage.

**Exit:** Exit the browser window.

**Mark Site:** Allow user to add website in bookmark, in order to visit anon.

**Bookmarks:** Display the websites list you have added, select one to visit the corresponding web.

**Inbox:** You can check up what's in your inbox.

**Save Image:** You can store your favorite pictures.

**Reload:** Exit browser menu, return to the page you just visiting.

**Settings:** You can make some modifications on settings of homepage and proxy server.

**About:** You can look up some information about the browser.

*Note: Your network serves possible non-support in some functions*

### **Keyboard use:**

Press "end" key to shift letter symbol or number input, press "\*" key to shift letter, press "right" soft to delete, hold "right" soft key to clean edited text. Press ▲ ▼ key to move the cursor.

## Shortcut:

In WAP window, press and hold I-9 key, to enter directly the corresponding website in your bookmark; hold 0 key to enter your Inbox; hold 0\ to exit the browser.

## Amoi WAP Special area

Select the function of amoi WAP special area to enter, you can view information from the WAP website that is cooperated between sina and Amoi, to download the ring or picture.

*Note: Service provider dependent, please check with local dealers for more details.*

## Setting

### 1. connection

You can choose from the preset options or according to your own meaning.

Take Telcom GPRS for example:

**Name:** Set your favorite names such as Telcom.

**Homepage:** You can set the homepage, such as <http://wap.monternet.com>.

**Security:** You can set it as On or Off. Off is recommended.

**IP Address:** Set IP address linking to homepage. For example:  
010.000.000.172

**Bearer:** Set the types of data service, choose from GPRS and Data.

**AP Name:** Input AP name, such as cmwap.

**User Name:** Set the user name for WAP, for example, lovely.

**Password:** Set password for WAP.

---

## 2. Bookmarks

**New Bookmark:** You can add a URL which you visit frequently to your Favorite and entitle it so that you can visit it easily.

**Go To Bookmark:** Enter the favorite, select one URL title and link to the correspondent homepage.

## 3. Go to URL

Enter an URL and press the ok key, then your handset can start to link. When your handset can not link to the URL, it will link to the homepage automatically.

## 4. Settings

Reset all of the settings of WAP.

# PERSONALITY

## Display

---

### Menu Style

This option allows you to select the menu display style. You can choose between Bitmap and Animated.

### Display

## Standby

Your phone provides you with a variety of items to display in Standby mode. You can change the idle screen to one of the following items depending on your preference.

The following Options are available:

**Picture:** Display the selected **picture**.

**Calendar:** Display a calendar. You can select Monthly calendar.

**Text :** Display the text you have created as your preference. Create your message up to 19 characters.

**Downloaded:** You can use RAF to download back images.

## Power On

You can select the Animation or Text for your phone's display when the phone is switched on or turned off.

## Power Off

## Sound

You can select the music styles of your phone's ringing and set the different profiles.

### Music Select

Incoming **Tone**

There are 27 kinds of rings for you to choose ;

---

### Message Tone

There are 5 kinds of rings for you to choose ;

### AlarmClock **Tone**

There are 27 kinds of rings for you to choose ;

### Calendar Tone

There are 27 kinds of rings for you to choose ;

### Countdown **Tone**

There are 27 kinds of rings for you to choose ;

### Power on **Tone**

There are 27 kinds of rings for you to choose ;

## **Volume**

You can adjust the volume of ring. Press ? key to increase volume and ? key to decrease .

## **Call Prompt**

You can select **Tone** , Vibrator, **Tone&**vibrator, or **No Notify** when there is an incoming call. Scroll to the option you want, press 'Ok' soft key to confirm.

## **Key Sound**

To adjust the Key sound, you can select 'DTMF Tone', or 'Silence'.

## **Prompt Sounds**

Info Beep: The information indication tones of the phone. For example: tone if low battery. Select it and then press

'on' soft key. To cancel this feature, press 'off'.

Service **Beep**: The phone will send out the service tone when it connects to the network for the first time, if it is active.

## SETTINGS

Many different features of your phone can be customized for your preferences.

### Clock

#### Alarm

There are three alarm clocks to be used. For every alarm, you can make the following operations:

Time: Set the time when the alarm will work.



Mode: There are three modes.

1. Everyday: The alarm works at the set time every day.
2. Workday: The alarm works at the set time from Monday to Friday.
3. **Personal**: You can choose one or several days of one week for the alarm to work.

Cancel All: Close all alarms.

Deleted: [X]

Note:

*The alarm works at the set time, press any key except  and  to stop it; if not, it continues to alarm for one minute.*

#### Auto On/Off



---

The phone will switch on or off at the preset time.

**On:** Enable the automatic power on/off of the phone.

**Set:** Enter the time when you want your phone to switch on/off.

### **Time**

This function allows you to change the current time displayed in standby state.

### **Date**

This function allows you to change the current date displayed in standby state.

### **Time Format**

Choose between 24 hours mode and 12 hours mode.

### **Date Format**

Format date: Select the day format:

- ☐ D/M/Y
- ☐ M/D/Y
- ☐ Y/M/D

---

## **Mobile**

### **Language**

◇ **English:** All the menus and information is displayed in English.

### **Auto Key Lock**

You can use the auto key lock to avoid touching keyboard wrongly. When you choose this function, the keyboard will be locked after 30seconds idle.

*Note:*

*You can lock the keyboard by hands.*

## Contrast

You can adjust the contrast of by pressing ? ? keys.

## Backlight

You can select whether or not to use the backlight of phone and its contract. The backlight comes on when you open your phone and switches off if no key is pressed within the set time.

Deleted:

Deleted: ing

You can choose among Always On/5 seconds/10 seconds/20 seconds.

## Reset All

You can reset some settings to factory set. You need enter PCK number.

## Call

### Divert

This network service enables the incoming calls to be transferred to the number that you specify. For example: You may hope to transfer your business calls to a colleague while you are on holiday.

---

**Not reachable:** Calls are transferred if you are not in an area covered by your service provider.

**No reply:** Calls are transferred if you do not answer the call.

**All:** All calls are transferred.

**Busy:** Calls are transferred if you are already making another call.

*Note: This option is invalid if Call Waiting is activated, unless you reject the incoming call.*

**Status:** You can inquire the network about the current status of Call Transfer function.

**Cancel all:** All Call Transfer functions are cancelled.

Select one item to divert your phone, you should:

- 1.Scroll to the desired item then press Left soft key.
- 2.Select 'Divert On' and press Left soft key (If you want to cancel this operation, select 'Divert Off')
- 3.Input the number you want to divert to, press Left soft key.
4. The info is displayed to indicate if you've succeeded this execution or not.

### **Incoming Filter**

With this operation, you can put numbers into Reject Number that will never get through your phone; and put numbers into Accept Number so that the others can't get through your phone.

**Reject/Accept List:** The rejected/accepted numbers are listed and you can get the prompt information in the standby mode.

**Reject/Accept Number:** Enter the numbers that you want to reject/accept.


### Volume

Adjust volume of talk by pressing the ◀ or ▶ key or via side keys during a call.

### Answer Mode


There are three methods to answer a call.

#### Call Key:

Press  to answer a call.


**Any Key:** Press any key to answer a call.

#### Auto:

If you insert Car Kit, the phone can automatically answer after 3 seconds. Before the auto answer, you can also press  to answer it.

**ProSlide Answer:** Slide the phone to answer a call.

### Auto Redial

If switching auto redial on, the phone will display “Auto redial” after an unsuccessful call. Press  to redial.

### Send Number

This function must be supported by network.

#### Set by Net:

Your phone number will be hidden or displayed according to the network when making a call



**On:** Your phone number will be displayed to receiver.

**Off:** Your phone number will be hidden and unknown to receiver.

### **1' Beep**

Set to hear an elapsed time reminder in the 50<sup>th</sup> second of every minute during your calls.

### **Call Waiting**

The phone supported the function of 'call wait' and 'call hold' of GSM net. If you select this function, the network will tell you there is a new call coming in during another call. You can receive the new call by hold the present call.

**Activate:** The Call-Wait Tone will be heard when there is another new call coming during one call. If it's a domestic fixed phone, its city name will be displayed, otherwise 'Incoming' will be displayed.

**Cancel:** By selecting it this function will be canceled.

**Status:** By Selecting it the status of this network function will be displayed: 'Active' or 'Off'.

### **Network**

When you use the phone, the phone will auto select the Internet service. When the phone is beyond the service area or in abroad, you can select the appropriate Internet manually.

### **Mode:**

Switch between these two modes.

. Auto Net Sel

. Manual Net Sel

### Search:

To select this item, the LCD will display " searching .....". After you get it, the GSM will auto display the found network. If there are two available networks, you can use the ? or? to select.

Those with the mark "G" are forbidden to be used.

### Sequence :

This item allows you to list out the Internet you can use when your GSM in the roaming. If the listed network can be used, your phone will select the network from the prior list. Three operations are available.

**Move:** To press the key ? or? to shift it to your desired place.

**New:** You can add the new Internet. Input the country code and the Internet code then press the "confirm" button.

**Delete :** You can delete the chosen network.

**Band:** You have 3 choices, American, European and Automatic.

### Security

#### SIM lock:

If enable d, only the current SIM card is valid. When change another SIM, the mobile will request the phone code.

#### Check PIN:

Press the "Select" left soft key to **enable** this function.

1. To press the "On" left soft key.
2. Input the PIN code and start up the function of PIN check by press Ok left soft key.

**Note:**

*If you have started up the function of the PIN check function, you have to input the PIN code every time when you switch on your mobile phone. If you input the wrong number for three times in succession, the SIM card will be locked.*

3. Press Off right soft key to cancel this function.

### **PIN1 Change**

To select the "PIN1 Change" by the navigation key? or? .

1. Press the "select" soft key.
2. Input the old PIN code and press the "Ok" key.
3. Input the new PIN code (four to eight digit) and press the "Ok" left soft key.
4. Input the new PIN code again and press the "Ok" left soft key.
5. LCD indicate "PIN CHANGED".

**Note:**

*Only first start up the PIN check can alter the PIN code.*

### **PIN2 Change**

The process is the same as "PIN Changed"

PIN code is provided with SIM card, which is used to some special service such as "call charge" function etc. If you want to know whether your SIM card can support these functions, please contact with the network service.

### **PWD Change**

1. Press select left soft key and input the old password, then press the "Ok".
2. Input the new password and press Ok left soft key.
3. Input the new phone password again and press the Ok left soft key.
4. The screen indicate " phone password changed".

### **Fixed Numbers**

If the network service can support and your SIM card has this function, you can limit the out going telephone number.

If this function is set in the "On" mode, your mobile phone can only call the number in the fixed telephone number book. If you dial the other number (except the urgent number), the phone will display "Forbidden number". You need input PIN2 code to set this function.

### **Bar calls**

The calling limitation function can help you to limit the incoming and outgoing calls but this service may not be available on all networks.

The following operations are available:

- . **All Out:** To select this item, the phone will be restricted to dial any calls(except the urgent calls)
- . **Out Intl:** To select this item, the phone will be restricted dialing the



international calls.

. **Out Intl Roam:** To select this item, the phone will restrict dialing the international calls except to your home country.

**All In:** To select this item, it will restrict all incoming calls.

**In When Roam:** To select this item, it will restrict all incoming calls when roaming.

. **Status:** To select this item, you can query the present state.

. **Cancel All:** To select this item, the phone will allow dialing and answering all the calls.

## TOOLBOX

### Voice Memo

With your phone, you can record up to 5 voice memos (including recording conversation) of 30 seconds in length.

*Note: Recording voice conversations is illegal in some countries. Make sure the other party has stated its consent to being recorded.*

### Record

1. Scroll to Record, press **Left soft key**.

- 
- 
2. Record the voice memo by speaking into the microphone.

*Note: When recoding, press **Pause soft key** to have a pause then **Record key** to continue; A timer displays to show you the elapsed time. When recording time expires, the phone will automatically save the memo already recorded by that time.*

3. When recording is completed, **then** press **End** soft key; the record will be kept at once with the date and time together.

## **Play**

1. Scroll to Playback, press **Left soft key** and then **Play** soft key, the latest memo displays.
2. Press the **▲** or **▼** key to scroll to the desired memo and press **Left soft key** to play it back.

*Note: While playback, press the **End soft key** to stop playing and exit the playback mode.*


## **Label**

You can make a label for your voice memo by this operation.

1. Press the **▲** or **▼** key to select "label", the recording list is displayed
2. Press **Direction** soft key to select recording record that you want

---

to label. Entering the label edit interface, input some letter labels or press ▲ key to enter ZI proceed Chinese edit (limit length is three Chinese characters), press Save soft key to save in order to will search later on.

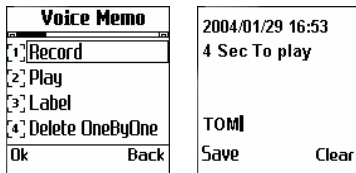

### Delete OneByOne

Use the ▲ or ▼ key to select the one you want to delete, press Erase soft key to delete it.

### Delete All


1. Press the ▲ or ▼ key to select Delete All, and press Left soft key.
2. When a confirming message appears (Delete all memos?), press Yes soft key to delete all memos or No soft key to cancel deleting.

### PC Sync

---

With this function, your PC can make a data communication with your phone through “PC Sync Program”, such as read and edit phonebook; read, edit and send a message; download ring tones, pictures, e-book and so on.

To use this function, you should enter the “PC Sync” window to switch off AT and activate PC Sync

In the course of communication, don't exit this window and make sure that the data line is well connected. You can press  to exit.

*Note: A coming call maybe break RAF.*




 
*Please refer to Help Menu of “PC Sync” for more detail operations.*

## Calculator

---

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

### Performing a Calculation

1. Enter the first number using the numeric keys.
2. Press     to set the operator for your calculation referring to the screen: + (add), - (subtract), x (multiply), / (divide).

- 
- 
3. Enter the second number.
  4. To calculate the result, press the Left soft key.
  5. Repeat steps 1 to 4 as many times as required.

Each time you change the operator without pressing Left soft key, the previous calculation is performed and the result is displayed as the top number in the display.

**Notes:** • *To erase any mistakes and clear the display, press the Clear soft key. You can reset the calculator by pressing the Reset soft key.*

- *Use the OK or \* key to enter a decimal point and the # key to change the sign of a number to a negative (-).*

## **World time**

---

The display shows:

- City name
- Current date and time according to the time format setting (12/24 Hours)

<b>To...</b>	<b>Then...</b>
Select the time zone	Press ◀ or ▶
Select the city in the same time zone.	Press ▲ or ▼
Make some settings (Set as local, Enable PS, Disable PS)	Press Left soft key, Scroll to desired one

---

## Countdown

---

You can set countdown, when the time reaches, the phone will alert.

**Enable:** Set Time and Start the countdown.

When the countdown starts, you can enter “Enable” menu to look over the time; press Stop soft key to cancel this countdown

## Multimedia File

---

**Image:** Store the downloaded data of pictures.

**Audio:** Store the downloaded data of music.

**Karaoke:** Store the downloaded data of karaoke songs.

**Memory:** You can check up the total space and the space available in each box.

Press the ▲ or ▼ key to select the desired entry, then press left soft key to confirm your choice.

## Private

The Private menu allows you to maintain various private information and activate the password to keep the phone from being used by unauthorized persons.

---

## Call Lists

---

This menu allows you to view the timers for calls made and received.

---

The following timers are available:

**Incoming**

**Missed**

**Outgoing**

**Last:** You can see the duration of the last call.

**Total:** You can see the duration of your total calls (incoming and outgoing).

For these two items, press the Reset soft key to reset the call timer as zero or Cancel key to exit.

**Charge Info**

1. **Total Charge:** Displayed and it can be reset to zero with the Reset soft key. You must enter the PIN2 code when Reset.
2. **Max Charge:** Input a sum as max charge that can be used for making calls. When your call charge exceeds this limit, no more calls (except free calls) unless you reset the sum. You must input PIN2 code when make modification.
3. **Unit Price:** You can inquire and modify the unit price through this function. Input PIN2 code when make modification.

**Blacklist:** The number in the blacklist is forbidden to redial automatically. While redialing automatically, the phone judge automatically whether to continue redialing on the basis of the times of redialing and the failure cause of connections. If the phone judge that the number should not be redialed, it will be stored in Blacklist.

---

## Calendar

---

When you enter this menu, a calendar is displayed with the current date indicated by a point.

### Scrolling through the Calendar

1. You can move the underscore to Year, Month and Day fields by pressing ◀ or ▶.
2. When the desired field is underlined, press the ▲ or ▼ to move up or down the date.  
You can also enter the desired date using the number keypad.

### Enter the Log Manager Menu

Highlight a desired date in calendar, press OK. The following operations are available in this section.

#### 1. Set

To create a new log, you should :

(1) Select one type of schedule:

- **Memo**: Make a note of general schedule, i.e. appointments or meetings.

- **Call**: Schedule a call.

- **Anniversary**: Select to make note of anniversaries.

(2) Enter a subject of your schedule up to 25 characters and press the Left soft key. If you are scheduling a call, enter a phone number.

(3) Select the date and the time when the scheduler will alarm you the scheduled event.



*Note: At the specified time on the scheduled day, the alarm will sound and the note will display. If you schedule a call, the phone will dial automatically.*

Set	Memo
<div style="border: 1px solid black; padding: 5px;"> <div style="text-align: center; font-weight: bold;">Set</div> <div style="margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">1 Memo</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">2 Call</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">3 Anniversary</div> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>Ok</span> <span>Back</span> </div> </div>	<div style="border: 1px solid black; padding: 5px;"> <div style="display: flex; justify-content: space-between;"> <span>english</span> <span>Memo</span> </div> <div style="margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Jan 18-Ran's Birthday  </div> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>OK</span> <span>Clear</span> </div> </div>

Input Time	Time before
<div style="border: 1px solid black; padding: 5px;"> <div style="text-align: center; font-weight: bold;">Input Time</div> <div style="margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px; background-color: #f0f0f0;">24h mode</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">17:50</div> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>Ok</span> <span>Back</span> </div> </div>	<div style="border: 1px solid black; padding: 5px;"> <div style="text-align: center; font-weight: bold;">Time before</div> <div style="margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">1 On Time</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">2 1 hour</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">3 1 day</div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">4 2 days</div> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>Ok</span> <span>Back</span> </div> </div>

For example: Make the settings as the above diagrams show, the phone will remind you that Jan 18 is Ran's birthday at 7:00 on Jan 17.

## 2. View

- (1) View the schedules you've set, press ? or ? to scroll through these notes.

(2) Select desired one, press Option soft key.

**Modify:** Make some modifications to this note.

**Log Delete:** Delete this note.

3. **Delete:** Delete the schedules.

- One By One
- All
- Expired

*Notes:*

*You can store 10 notes in this box, up to 32 characters for each note.*

## REFERENCE INFORMATION


### Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorized use.

#### **Phone Password**

The security code can be used to avoid unauthorized use of your phone. The security code 0000 is usually supplied with the phone.

Change the security code before you start using your phone. Keep the



---

new code secret and in a safe place, which is separate from the phone.

### **PIN Code**

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the code is asked each time the phone is switched on.

If you key in an incorrect PIN code three times in succession, the SIM card will be locked. To unlock the SIM card, you'd key in the PUK code and press the **Left soft key**, and key in a new PIN code twice.

### **PIN2 code**

The PIN2 code, supplied with some SIM cards, is required to access some functions, such as charging unit counters. These functions are only available if supported by your SIM card.

If you key in an incorrect PIN2 code three times in succession, the PIN2 will be locked. To unlock the PIN2, you'd key in the PUK2 code and press the **Left soft key**, and key in a new PIN2 code twice.

### **PUK code**

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card.



---

If not, contact your local service provider for the code.

If you key in an incorrect PUK code ten times in succession, the SIM card cannot be used anymore. Contact your service provider for a new card.

You cannot change the PUK code. If you lose the code, contact your service provider.

### **PUK2 code**

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code.

If you key in an incorrect PUK2 code ten times in succession, you cannot use the functions requiring the PIN2 code. Contact your service provider for a new card.

You cannot change the PUK2 code. If you lose the code, contact your service provider.

### **Using the batteries**


---

A rechargeable Li-ion standard battery powers your phone. The following batteries are also available (ask your local dealer for further details):

Type	Capacity	Talk Time	Standby Time
Li-ion Slim	780mAh	2~5hrs	80~110hrs

#### **Precautions When Using Batteries :**

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only approved batteries; and recharge your battery only with approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first. Do not leave the



---

battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C.

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## **Care and maintenance**

---


Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and allow you to enjoy this product for many years. When using your phone, battery, charger, or any accessory:

- Keep it and all its parts and accessories out of small children's

---

reach.

- Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its moving parts can be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store it in cold areas. When the phone warms up (to its normal operating temperature), moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna.



---

Unauthorized antennas, modifications of attachments could damage the phone and may violate regulations governing radio devices.

- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility.
- This phone features large inner & outer display screens, which are damageable. Please be most careful to avoid dropping or knocking it or scratch it with a sharp thing.

---

## **Glossary**

### **Antenna**

A device for transmitting or receiving signals. The size and shape of antennas is determined, in part, by the frequency of the signal they receive. Wireless phones and the base station must have antennas.

### **ALS (Alternate Line Service)**

ALS provides the capability of associating two alternate lines with one SIM card. You can make and receive calls on either line as desired with this service.

### **Call Barring**



---

Ability to restrict outgoing and incoming calls.

## **Call Diverting**

Ability to reroute calls to another mobile or fixed line.

## **Call Holding**

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

## **Call Waiting**

Ability to inform users that they have an incoming call when engaged on another call.


## **Conference Calling**

Ability to establish a conference call involving up to five additional parties.

## **DTMF (Dual-Tone Modulated Frequency)**

You send DTMF signals when you enter numbers by pressing the digit keys.

## **GSM (Global System for Mobile communication)**



---

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

### **LCD (Liquid Crystal Display)**

Commonly used to refer to the screen display on the wireless phone.

### **LED (Light Emitting Diode)**

Commonly used to refer to a small light on the wireless phone or on the Desktop Charger. The LED lights on the phone to indicate an incoming call. The lights on the charger indicate that battery charging is taking place.

### **Line Identification Services**

Service allowing subscribers to view or block the telephone numbers of callers.

### **PIN (Personal Identification Number)**

Security code that protects the phone against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

### **PUK (PIN Unlocking Key)**

---

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

## **Roaming**

Use of your phone when you are outside your home area (when traveling for example).

## **SIM (Subscriber Identification Module)**

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.


## **SMS (Short Message Service)**

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

## **Soft Keys**

Keys marked **•** and **o** on the phone, the purpose of which:

- Varies according to the function that you are currently using.

- 
- 
- Is indicated on the bottom line of the display just above the corresponding key.

## **Voice Mail**

Computerized answering service that automatically answers your calls when you are not available, plays a greeting (Optionally in your own voice) or records a message.

## **TROUBLESHOOTING**

If the phone does not work properly, please check the following troubleshooting and find a solution. If you can't solve the problems, please contact your local dealer for help.

Question	Solution
Cannot make or receive calls.	<ul style="list-style-type: none"> <li>❑ Check whether the phone is power on or not.</li> <li>❑ Check whether the battery is lack of power.</li> <li>❑ Check whether the field signal strength is enough.</li> <li>❑ Check whether to set up the Call Barring, SDN or the other options in Call Set menu.</li> <li>❑ Check whether to set up the Call Divert.</li> <li>❑ Check whether to place the SIM card properly.</li> </ul>
Conversation volume is low.  Does not ring when an incoming calls comes in.  LCD is not clear.	<ul style="list-style-type: none"> <li>❑ Check whether to set the Voice Volume too low.</li> <li>❑ Check whether to select the Silent or Vibrator modes.</li> <li>❑ Check whether the ring volume is set too low.</li> <li>❑ Check whether the surrounding noise is too loud.</li> <li>❑ Check whether to set up the Call Divert.</li> <li>❑ Check whether the LCD Contrast is set too low.</li> </ul>
The keypad does not work  The other part cannot hear you.	<ul style="list-style-type: none"> <li>❑ Check whether the keypad is locked or not.</li> <li>❑ Check whether to select Mute.</li> <li>❑ Speak near the MIC.</li> </ul>

For body worn operation this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the headset a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.