


RC LOCHNESS

RADIO CONTROL SWIMMING PLESIOSAURUS

JURASSICA
THE MOST REALISTIC PLESIOSAURUS EVER

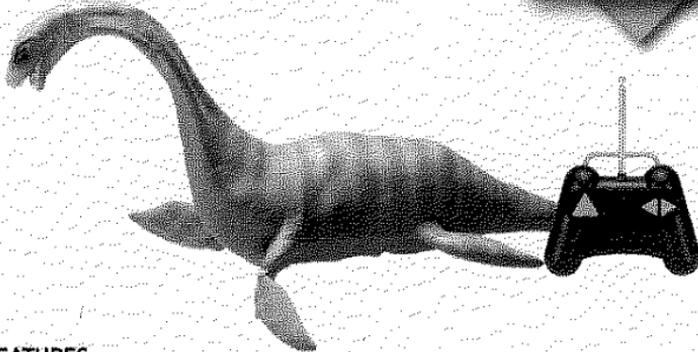

FEATURES

Movement: Forward, left/right turn and stop.
Neck control: Up and down.

BATTERY REQUIREMENTS (not included)

Controller: 1x "D" (9v) battery

RC Loch Ness: 4x "AA" alkaline (1.5v) batteries. Battery life approximately 20 minutes.

WARNING! Always use under direct supervision of an adult. For use ages 6 and up.

Please read instruction booklet carefully before operating RC Loch Ness.
Please keep instruction booklet and display box for future reference.

Any Questions?


PLEASE DO NOT TAKE YOUR PRODUCT TO THE STORE.

Call our Customer Service :

Takara Customer Service
toll free at 1-888-238-8103

TAKARA®

CONTENTS

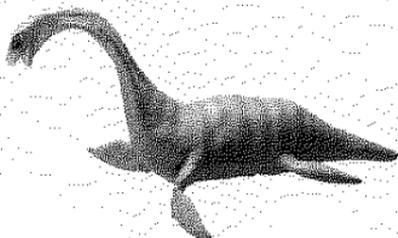

RC LOCH NESS




Controller




Instruction Manual

1. Inserting Controller Batteries

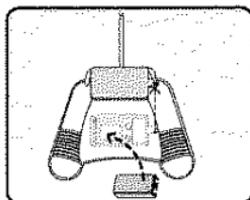


a. Remove battery cover using Phillips screwdriver.

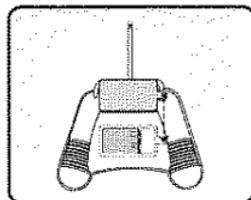


b. Insert batteries, matching up the plus/minus symbols as indicated inside battery compartment. Replace battery cover firmly.


2. Inserting RC Loch Ness batteries

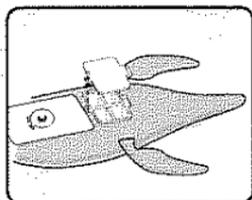

a. Remove battery cover in RC Loch Ness belly using Phillips screwdriver.

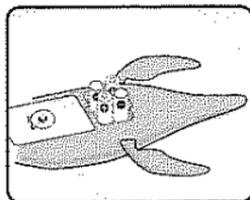


b. Insert batteries, matching up the plus/minus symbols as indicated inside battery compartment.

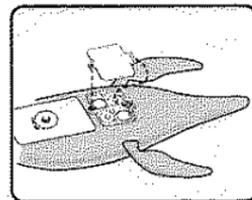


c. Replace battery cover firmly.


3. Using your RC Loch Ness

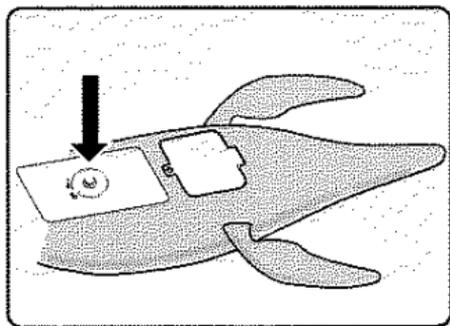


a. Turn on by using switch located on belly.

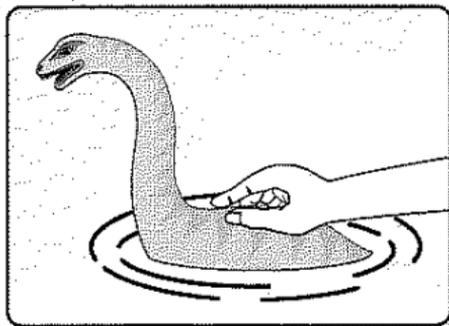


b. Carefully place on water surface.

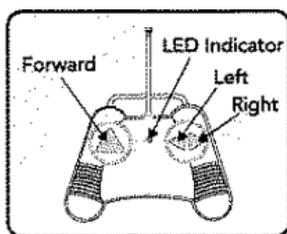

c. LED Indicator illuminates when controller is turned on.

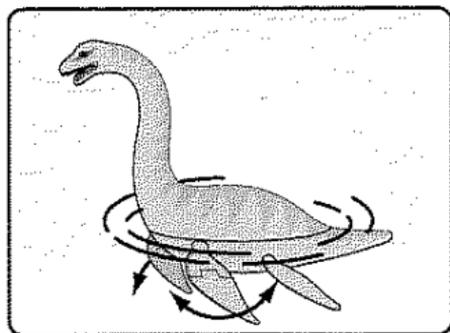


d. When forward button is pressed both front flippers will begin to move, propelling RC Loch Ness forward.

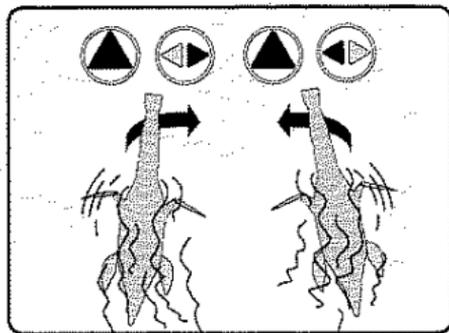


e. To steer left or right, WHILE HOLDING DOWN FORWARD BUTTON press left or right arrows.

*Signal range is 60 feet. Motor will stop if this range is exceeded. Please move closer to your RC Loch Ness if this occurs.


4. After Play

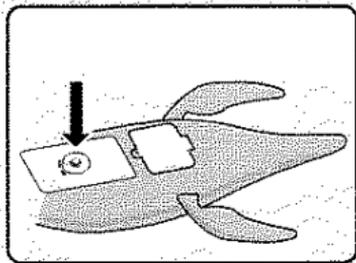



a. Turn off RC Loch Ness AND CONTROLLER using on/off switches

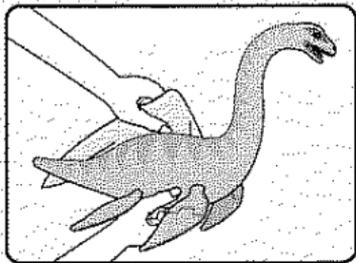


b. After play, wipe excess moisture from your RC Loch Ness using a soft cotton.

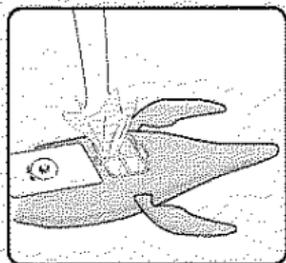


c. If water ever enters battery compartment, carefully wipe off in order to prevent rusting.

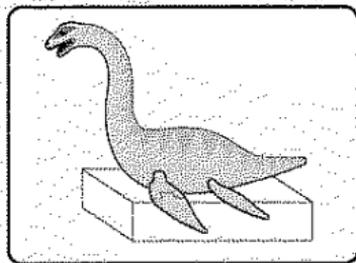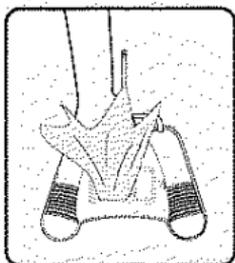


d. Please store in the original package, or using a stand, to avoid damaging flippers.

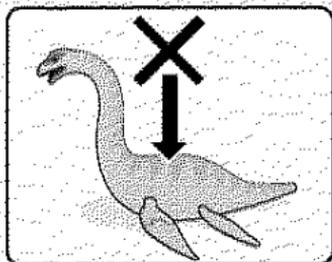

e. If stored in a flat location, do not place weight on top, as this will damage flippers.

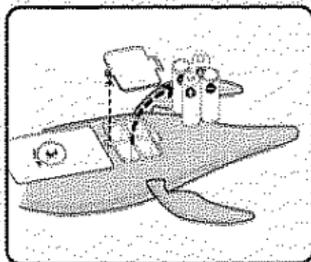

f. If RC Loch Ness is not used for a long period, please remove batteries to avoid corrosion.

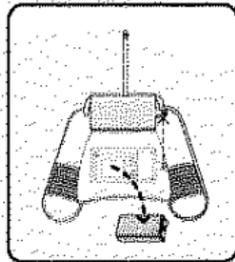

Getting the most out of your RC Loch Ness

1. **Proper Battery Use:** Make certain all batteries are fresh. Ensure batteries are correctly aligned to +/- signs indicated on battery compartment. When not in use, make certain RC Loch Ness and controller are both turned off.
2. **Paying attention to Range and Run-time:** Fresh batteries can be used non-stop for approximately 20 minutes. The RC Loch Ness has a range of 60 feet. If this limit is exceeded the motor will stop. If this occurs, simply move closer to your RC Loch Ness in order to control it.
3. **Avoiding frequency interference:** If your RC Loch Ness is behaving strangely this may be due to frequency interference, which will not damage your RC Loch Ness. Your RC Loch Ness operates in the 27MHz range. Please do not use other devices operating in this band nearby. Frequency interference may also be caused by sources such as CB radios, microwave transmitters, cordless telephones, wireless communication or security systems, high-voltage transformers or even certain buildings. If you encounter frequency interference simply move to a different location and the problem should disappear.
4. **Caring for your RC Loch Ness:** Please be responsible when controlling your RC Loch Ness, and avoid striking or ramming obstacles.
5. **Servicing your RC Loch Ness:** Please do not return RC Loch Ness to the store where purchased. If you have any service problems with your RC Loch Ness just give us a call at our customer service hotline.

FCC REQUIREMENT

1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
2. Do not attempt to repair or modify this equipment. Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION/WARNING

Please read instruction book carefully before operating product.

Please keep these instructions for future reference.

Adult supervision is recommended. Keep out of reach of children below 6.

Children should be made aware of the dangers associated with playing near water.

Ensure both product and controller are turned OFF before attempting to pick up product.

Never attempt any repair as this may void your warranty.

Install batteries accurately in the battery compartment.

Do not mix old and new batteries.

Do not mix alkaline, carbon-zinc, or rechargeable batteries.

Do not operate in bodies of water where plants, rubbish or other obstacles are present.

Do not operate in areas of strong current, or when wind is strong.

Do not operate in salt water (i.e. the ocean) due to rusting problems.

Do not use during thunderstorms.

Do not touch moving parts while the RC Loch Ness is in use.

Be careful to return product to shore before battery runs out (approximately 20 minutes)

WARRANTY

This product is warranted against manufacturing defects in both material and workmanship for 60 days from the date of original purchase. Within this period, TAKARA U.S.A. CORPORATION will either repair or replace this product without charge for parts or labor. Do not attempt to repair or modify this equipment, as this may void your warranty.

IMPORTANT: PLEASE KEEP YOUR ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE.

Without the required Proof of Purchase you may not be eligible for coverage under this Limited Warranty. If you have any problems with this product, please call Takara Customer Service toll free at 1-888-238-8103. Our Customer Service Operator will provide you with the proper information and instructions to deal with your questions or problems with this product.

The decision whether to either repair or replace this product is at the sole option of Takara U.S.A. Corporation. This warranty does NOT cover damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, or any repairs (other than those provided by Takara U.S.A. Corporation)

or shipping costs incurred in transporting this product to Takara U.S.A. Corporation. Some states do not allow the limitation or exclusion of incidental or consequential damages and some states do not allow limitation or exclusion of implied warranties; therefore the aforesaid limitation(s) or exclusions may not apply to the purchaser. This warranty gives you specific legal rights and you may have other rights which vary from state to state. This Limited Warranty is VOID if this product is purchased outside of either the U.S.A. or Canada.



Manufactured for TAKARA USA, Corp.
©2004 TAKARA USA, New York, NY 10001 USA
All Right Reserved. Patent Pending.
MADE IN CHINA

