

Applicant: FOB Instruments Ltd.

FCC ID: RYI901

User Manual

90.1 RF Indoor/ Outdoor Thermometer

To set clock:

1. Slide the switch at the back to clock, then press 'Set'.
2. Press 'Min' to set hour.
3. Press 'Max' to set minute.
4. Press 'Set' again to confirm setting.

To see the minimum temperature of the day

1. Slide the switch at the back to Outdoor.
2. Press 'Min' once to see the max outdoor temperature and the recorded time.
3. Press 'Min' twice to see the max indoor temperature and the recorded time.
4. Press 'Min' again to go back to room temperature.

To see the maximum temperature of the day

- Same operation as minimum temperature by pressing 'Max' instead.

To clear the minimum temperature of the day

1. Press 'Min' and 'Max' at the same time to clear min outdoor temp reading in min mode.
2. Press 'Min' and 'Max' at the same time to clear min indoor temp reading in min mode.

To clear the max temperature of the day

- Same operation as min temperature but in max mode instead.

To clear all the max and min temperature record

- Press 'Min' and 'Max' at the same in room temp mode.

Change of battery

- Change battery when low battery icon appears on display

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The users manual or instruction manual for an unintentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.