



GABB Phone 2

STARTUP GUIDE

About this guide

Thank you for choosing Gabb Phone 2. For optimal experience with this phone, please read this guide first.

Copyright

Copyright © 2023 Gabb Wireless. All rights reserved.

No part of this document may be duplicated, reproduced, shared, or used in any form, regardless written or electronically, without the prior written consent of Gabb Wireless.

Disclaimer

Information about your wireless device and third-party services.

Gabb Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Gabb Wireless is not responsible for your use of this device or any non-Gabb Wireless applications, products and services, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms, conditions and policies prior to using this wireless device and any associated application, product or service.

Notices

Gabb Wireless ensures the ultimate care and handling of this guide. However, the contents of this document are subject to change without prior notice, as our software or hardware is on constant upgrades for optimal user experiences. Gabb Wireless reserves the rights to make modifications, fix errors, or update functionality for this document without prior notices.

About your phone



NOTE: Devices and software are constantly evolving. The screen images and icons you see here are for reference only.

Parts	Description
Power/Lock key	<ul style="list-style-type: none"> • Press to turn the screen on/off • Press and hold to popup menu to select Emergency, Power Off, or Restart • Press it along with Volume Down key to capture screenshot • Long press to force reboot
SIM/microSD card slot	Insert or remove SIM card/microSD card
Volume Up/Down	<ul style="list-style-type: none"> • Adjust volumes for calls, music, video and ringtones • Press both Volume Up and Volume Down to enable/disable Accessibility features.
USB-C/Charger Port	Connect a USB cable (included) for charging, data transfer, or external accessories.
Front Camera	Take pictures or record videos while facing the screen.
Rear Camera	Take pictures or shoot videos. It is the main camera of the phone.
Microphone	Transmit your voice electronically to other party through this. Use while on a call, a voice recording or Google Assistant.
Speaker	Output the sound of calls, audio, or video
Proximity/Light Sensor	<ul style="list-style-type: none"> • The Proximity Sensor locks the touchscreen when positioned near an object. The prevents fault operations during a call. • The Light Sensor brightens or dims the touchscreen based on ambient light source.
Flash	Brighten the object for photoshoot at night.

CAUTION: Inserting an accessory into an incorrect jack may damage the phone.

Setting up your phone

Your phone already has a SIM card installed. For an optimal wireless experience, use the SIM installed in your new phone.

However, if you purchase this phone without SIM card pre-installed, or if you wish to replace your SIM card for any reason, follow the steps below. The following steps also guide you to install your microSD card.

1. Use the SIM ejector tool.


Use the supplied SIM ejector tool to insert into the small hole on the SIM/SD Card tray.

2. Pull the tray out to place SIM/microSD card.

Pull the tray out and place your Nano SIM card and microSD card on the tray. Make sure you align the cards as designated by the tray.

3. Push the tray back into its place.

Slide the tray attached with your Nano SIM card and microSD card all the way into the slot.

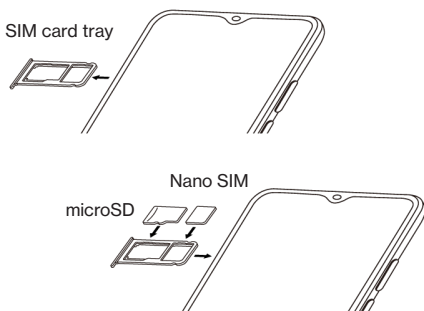

NOTE: The microSD card is sold separately.

4. Charge your phone.

Before turning on your phone, charge it fully.


1. Plug in the USB-C connector (the smaller end) of the USB charging cable into the USB-C/Charger port of your phone.
2. Plug in another end of the cable (the larger end) into the USB connector of the supplied AC adapter.
3. Plug the AC adapter into an available power outlet.



WARNING: Only use approved chargers with your device. Incompatible chargers or tampering with the charger port could damage your device and void the warranty.

5. Turn your phone on/off.

To turn your phone on, press and hold the **Power/Lock** button until the phone vibrates.

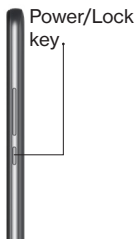

NOTE: The first time you turn on your phone, you will need to activate it. See the **Activation Insert** included with your phone.

To turn your phone off, press and hold the **Power/Lock** key and then tap Power off.

Locking/unlocking the screen

To turn on your screen, press the **Power/Lock** key. Then swipe up on the screen to unlock it.

To turn off your screen and prevent accidental key presses, press the **Power/Lock** key.

Support and More



From the MyGabb app, tap the hamburger menu on the top right and select **Support** to learn more.



From your computer, visit gabb.com/account to manage your account, track your usage, edit account information, pay your bill and more.



From your computer, visit gabb.com/support, or email us at support@gabb.com.

gabb®

