Instruction of Remote Controller

1. Brief Account:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1). This device may not cause harmful interference, and
- (2). This device must accept any interference received, including interference that may cause undesired operation.

2. The Device Data:


Model designation: YLT-5C

Power: 12V Battery

Frequency: 315MHz

3. Parts Description

Figure 1

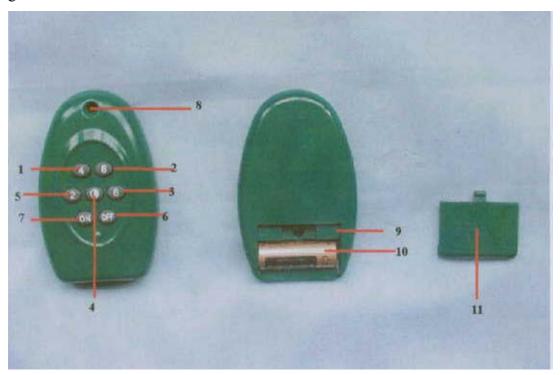

1: 4 hour working

3: 8 hour working

5: 2 hour working

7: ON

9: battery compartment

11: battery cover

2: 6 hour working

4: nature lighting activation

6: OFF

8: indicator light

10: battery

4. Use Description:

The EUT is a wireless remote controller. It can control the photoelectric switch.

If users press the keys (Please see the Parts Description above), the photoelectric switch will make 6 kinds of indicator lights shine individual and working till end the site time each other.

Each of receiver's individual function (normal open \cdot 2 hour setting \cdot 4 hour

setting \cdot 8 hour setting \cdot nature lighting activation \cdot off and waiting) can be turned into active status by pressing transmitter's corresponding function key "ON \cdot 2 \cdot 4 \cdot 6 \cdot 8 \cdot \square \cdot OFF". The status of receiver's each individual function can also be distinguished by observing its corresponding indicator (ON \cdot 2 \cdot 4 \cdot 6 \cdot 8 \cdot \square \cdot ON flashing).

- 1> Press the transmitter key "ON" can turn into active the receiver corresponding function indicator "ON", normal light open.
- 2> Press the transmitter key "2" can turn into active the receiver corresponding function indicator "2", and let it working 2 hours.
- 3> Press the transmitter key "4" can turn into active the receiver corresponding function indicator "4", and let it working 4 hours.
- 4> Press the transmitter key "6" can turn into active the receiver corresponding function indicator "6", and let it working 6 hours.
- 5> Press the transmitter key "8" can turn into active the receiver corresponding function indicator "8", and let it working 8 hours.
- 6> Press the transmitter key "\(\infty\) " can turn into active the receiver corresponding function indicator "\(\infty\)", nature lighting activation.
- 7> Press the transmitter key "OFF" can turn into active the receiver corresponding function indicator "ON Flashing", off and waiting.

Regarding the device parts detail, please read the parts description as above. This device can automatically deactivate the transmitter within not more than 5 seconds of being released.

5. Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.