


Bluetooth Water Speakers

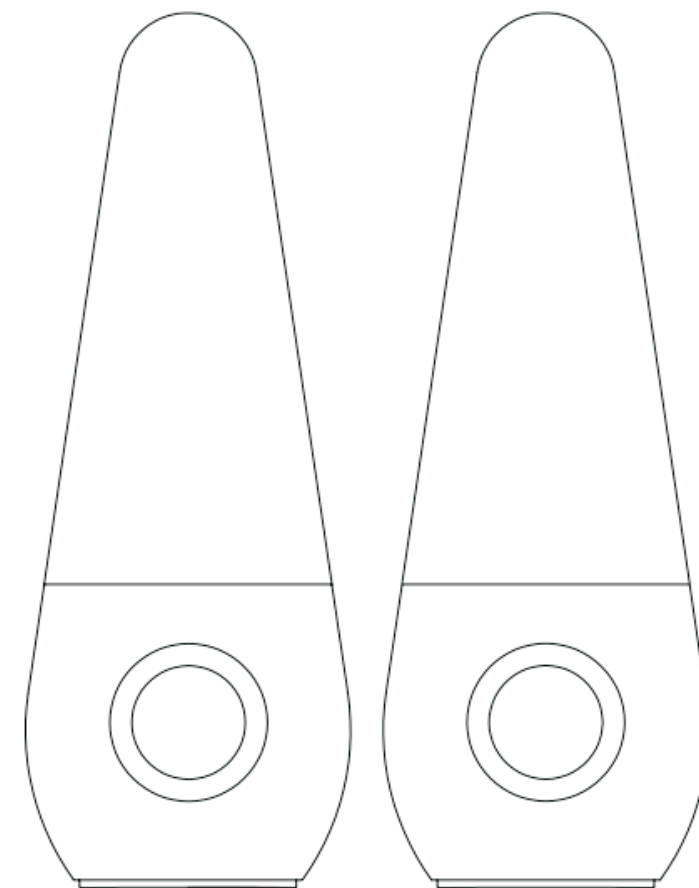

**Please read these instructions thoroughly
before use and retain for future reference**

FCC ID: SLFEF-B205

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference,

and (2) this device must accept any interference received, including interference that may cause undesired operation.


FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Specifications

Bluetooth specification	Bluetooth 2.1+EDR
Operating distance	10 meters (max.)
Frequency response	100Hz~18KHz
Working time	1 ~ 2hours
Charging time	About 1-2 hours
Standby time	100 hours
Speaker power	2 x 3W
Built-in Battery	D.C. 3.7V/700mAh
USB Charging	D.C. 5V/1000mA
Maximum ouput power	3mW

 **Bluetooth®**

is a trademark on a registered trademark of Bluetooth SIG Inc.

Guidelines for protection of the environment



This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Made in China



Charging Instructions

The speaker comes with a built in rechargeable battery. Connect the Micro USB cable to a computer USB port and the other end to the Micro USB supply port of the speaker. The Red LED illuminates while the speaker is charging. It takes around 1-2 hours for the unit to fully charge. When the battery is fully charged, the red LED will switch off.

You can also use the speakers whilst powered through the USB charging cable.

Storage

Turn off the power when you not in use, clean and store safety.

Cleaning & Maintenance

Unplug the product from the supply if it is left unattended and before cleaning. NEVER immerse the product into water and use a dry cloth for cleaning.

Do's and Do not's

- ❑ Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- ❑ Don't use abrasive cleaning solvents to clean the speaker.
- ❑ Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- ❑ Don't dispose of the speaker in a fire as it will result in an explosion.
- ❑ Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.
- ❑ Don't let the speaker drop on to the floor. The internal circuitry might get damaged.
- ❑ Don't attempt to disassemble the speaker as it may get damaged if you are not professional.
- ❑ Use only the cell or battery in the application for which it was intended.
- ❑ Dispose of properly.
- ❑ Retain the original product literature for future reference.
- ❑ Do not dismantle, open or shred secondary cells or batteries.
- ❑ Do not leave a battery on prolonged charge when not in use.
- ❑ Do not expose the speakers to heat or fire. Avoid storage in direct sunlight.
- ❑ Do not subject the speakers to mechanical shock
- ❑ In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- ❑ Batteries give their best performance when they are operated at normal room temperature
- ❑ Do not use any cell or battery which is not designed for use with the equipment.
- ❑ Secondary cells and batteries need to be changed before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.

Instructions for use

Please read all instructions carefully

Getting started

Remove the speaker from the box
Remove any packaging from the product
Place the packaging inside the box and store for safekeeping

In the box

Bluetooth Water Speakers
AUX Cable
USB Charging Cable
Speakers Connecting Cable
Instruction Manual

Features


- Sound responsive light and water display.
- Connect via Bluetooth or AUX in.
- Compatible with all music player, for example, MP3/4 players, mobile phone, computer, iPhone, iPad or iPod etc.
- 2 x 3W output power.
- Built in 700mAh Lithium rechargeable battery for use on the go!
- Portable ?use anywhere

SAFETY INSTRUCTIONS

When using any electrical product, basic safety precautions should always be followed including the following:

1. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
2. Incorrect operation and improper use can damage the product and cause injury to the user.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
4. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the service agent or qualified person in order to avoid an electrical hazard.
5. Do not use the product if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/ or repair by an authorised service agent.
6. Never immerse the unit in water or any other liquid for cleaning purposes.

Product Diagram

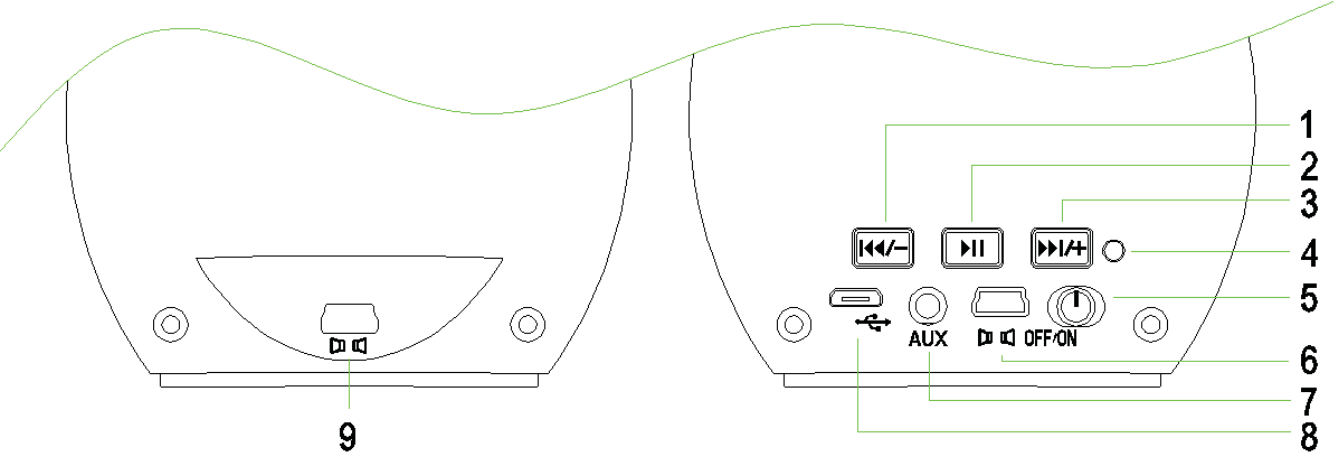

- 1 / Previous song / Volume decrease
- 2 / Play / Pause
- 3 / Next song / Volume increase
- 4 Bluetooth / Charging LED
- 5 Power ON/OFF
- 6 / Main box Stereo connection
- 7 AUX input
- 8 / Micro USB Supply
- 9 / Pair box Stereo connection

Instructions for use (Bluetooth Pairing)

Remove AUX cable from AUX input (7).
Turn ON the unit.
You would now hear a Beep tone indicating that the speaker is pairing with the last device.
To pair with a new device, press and hold ? button to search for the new device.
The Blue LED flashes quickly.
Turn on the Bluetooth function on your Bluetooth Device (Mobile Phone or Tablet). Please refer to manufacturer instructions on enabling Bluetooth on your device.
Once you have turned on Bluetooth on your device, select the device from the list of available Bluetooth devices.

If required, enter the password **0000** to confirm to pairing.
Once paired successfully, the blue LED will flash slowly.

The speaker will remember this device and will pair automatically when the device?s Bluetooth is activated and in range. You do not need to pair any previously connected devices again.

Please Note

- ☐ Not all devices have the same operation. Please refer to your device s user s manual for further information.
- ☐ If the speaker cannot pair up with new device for around 10 minutes, it will turn to standby mode; please turn off the speaker and reboot to pair.

Listening to Music

Once the speaker is paired with your device you can stream music wirelessly through the speaker. Should you encounter any problems while streaming please refer your device?s user manual for further information.

Control Functions

Function	Operation	Button
Increase Volume	Playing music	A short press on th button once will increase the volume
Decrease Volume	Playing music	A short press on th button once will decrease the volume
Next Track	Playing music	A long press on th button once will go to next track
Previous Track	Playing music	A long press on th button once will return to previous track
Pause	Playing music	A short press on th button will pause the music
Play	Pausing	A short press on th button will restart the music

(Note: Above mentioned functions can be used in Bluetooth mode only. In Aux mode, you need to control through your source device.)
An indication tone will alert you when the volume is adjusted to the maximum or minimum level.

Instructions for use (AUX cable)

You may also connect any device with a socket using the 3.5mm audio cable (included). Connect this cable to your device and to the AUX input (7).

Please Note

⌘ **All buttons cannot be used when in AUX input (7) in plugged.**