



FAA4913-202 SINGLE GAS SENSOR MODULE - FRONT VIEW

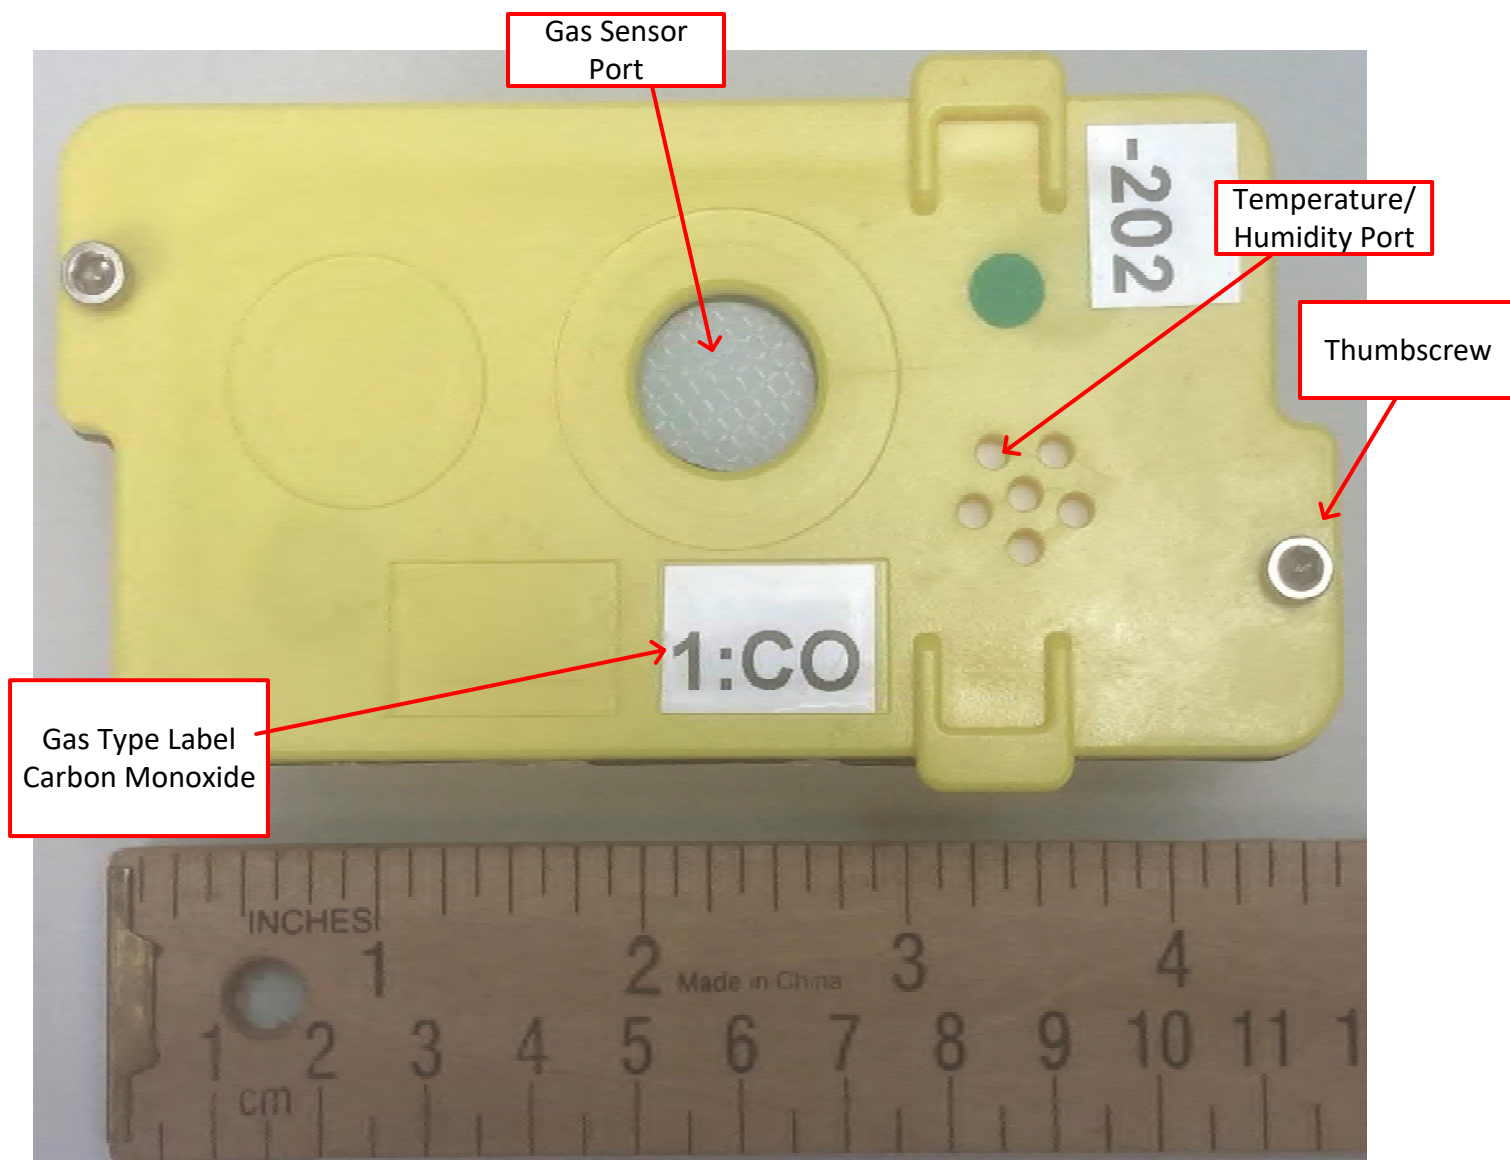


FAA4913-202 Sensor Module can be used in the products tabulated below.

IWT Product Number	Acronym	No. of gas modules	Battery configuration
FAP4913-030	WGM	1	Internal
FAP4913-032	WGM	2	Internal
FAP4913-040	WGM+	1	Internal
FAP4913-090	WGM+	1	external


**FAA4913-202 SINGLE GAS SENSOR MODULE -
BACK VIEW**

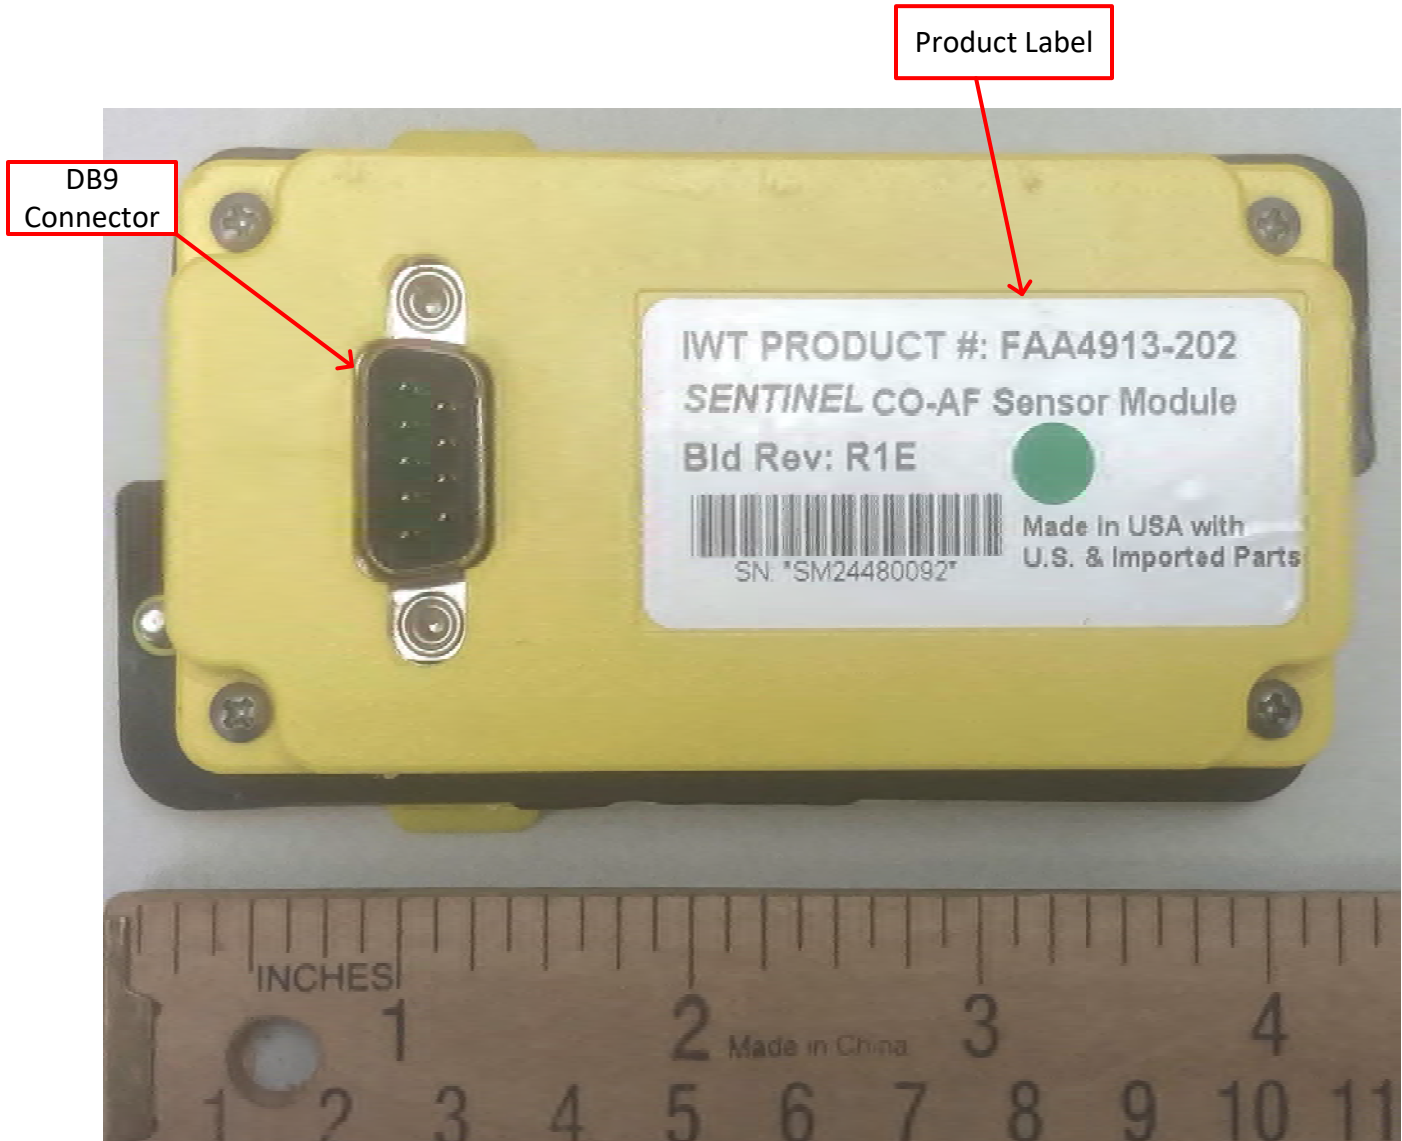

**FAA4913-202 SINGLE GAS SENSOR MODULE -
LONG SIDE 1 VIEW**

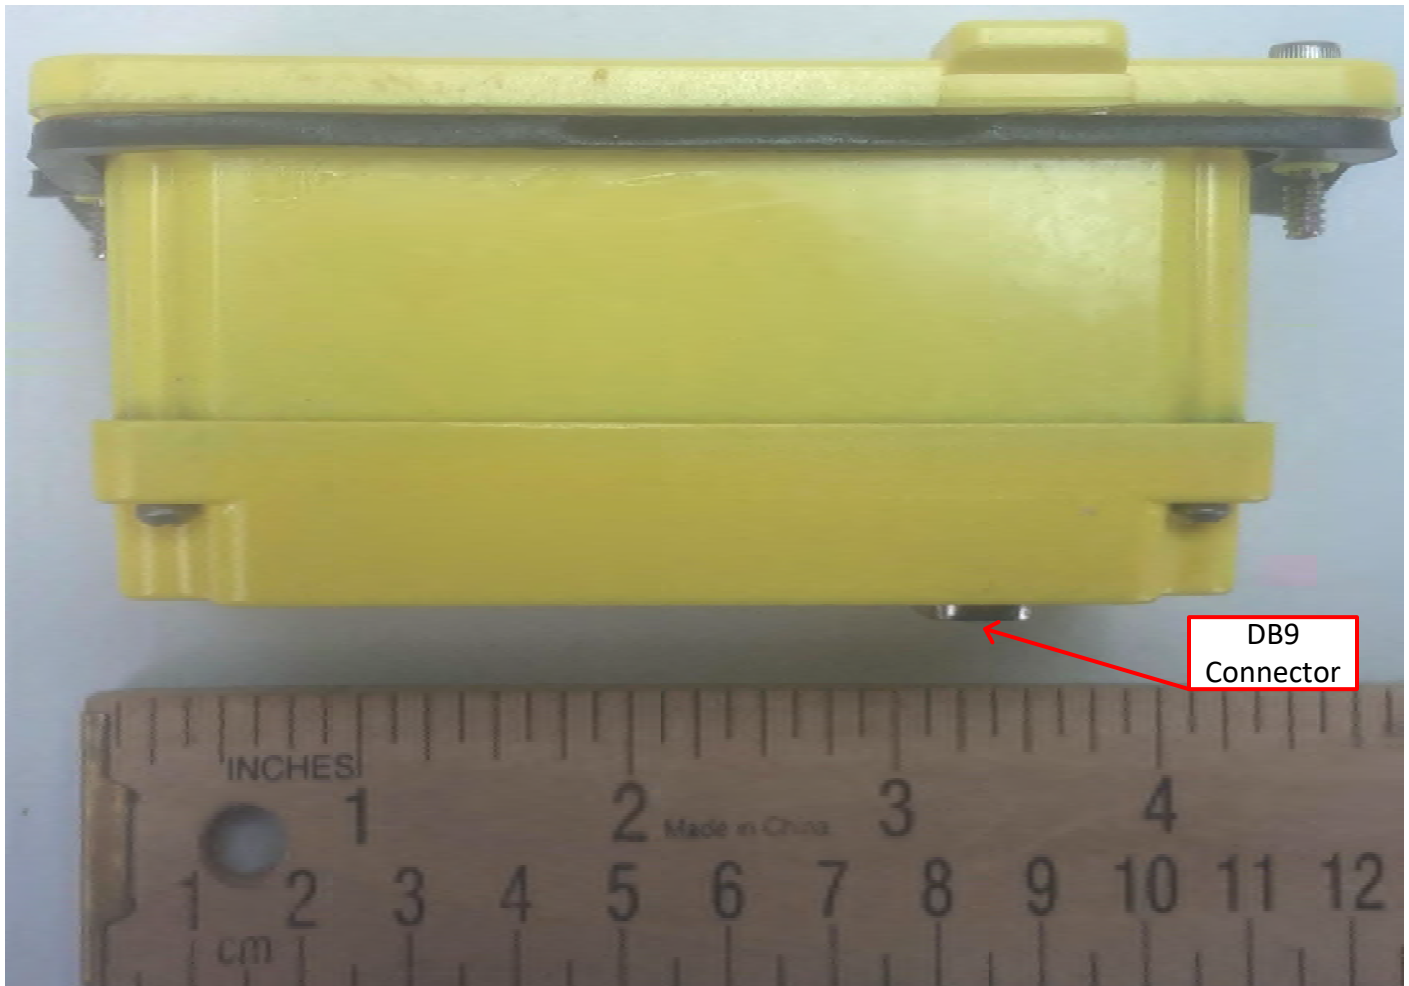

**FAA4913-202 SINGLE GAS SENSOR MODULE -
LONG SIDE 2 VIEW**

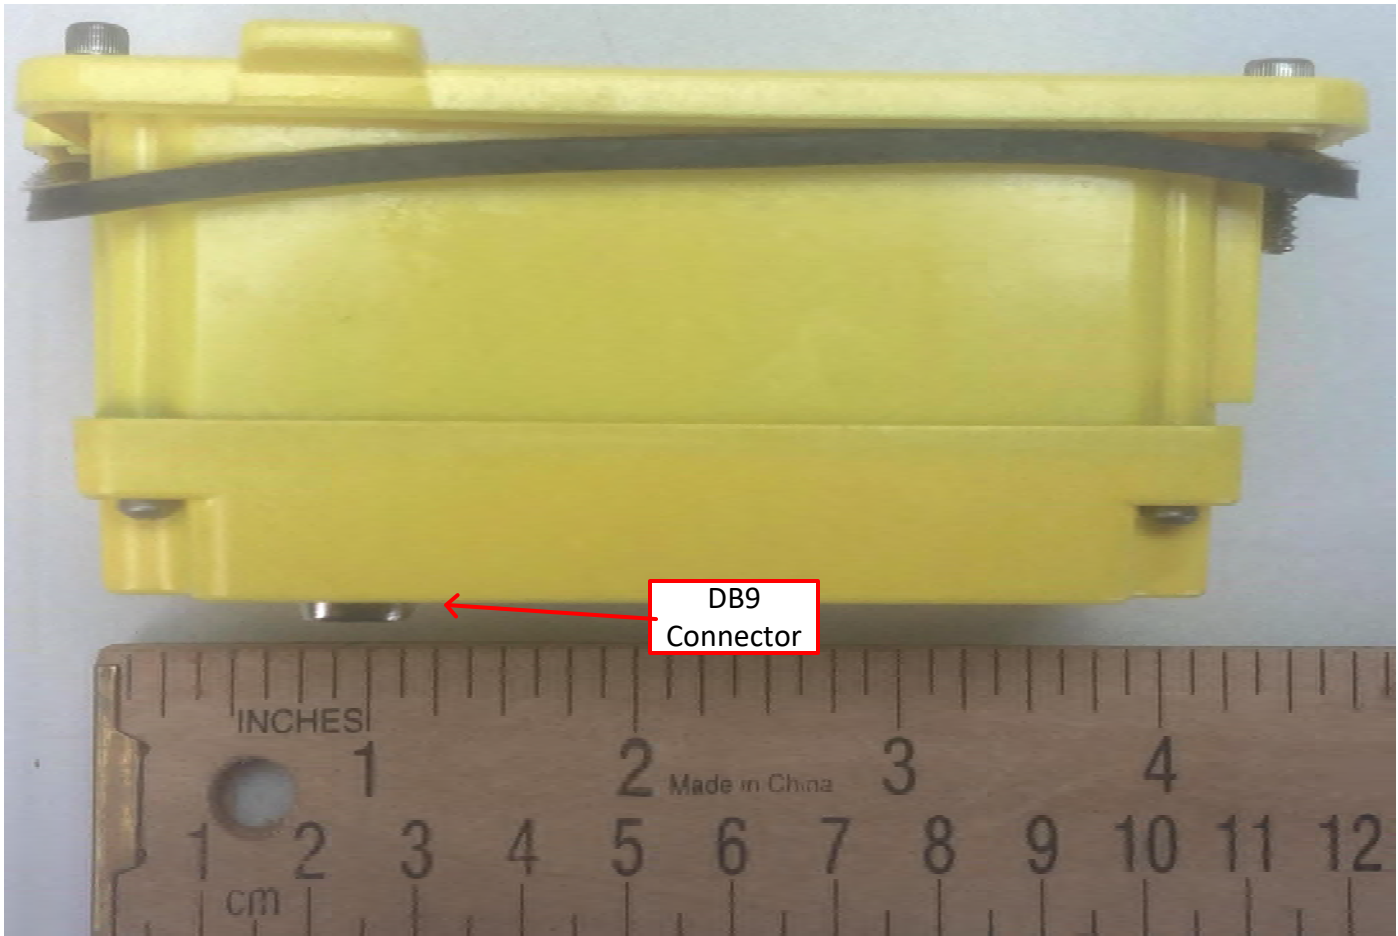


**FAA4913-202 SINGLE GAS SENSOR MODULE -
SHORT SIDE 1 VIEW**



**FAA4913-202 SINGLE GAS SENSOR MODULE -
SHORT SIDE 2 VIEW**



FAA4913-014 SINGLE GAS SENSOR MODULE (DUAL GAS PCB)- FRONT VIEW

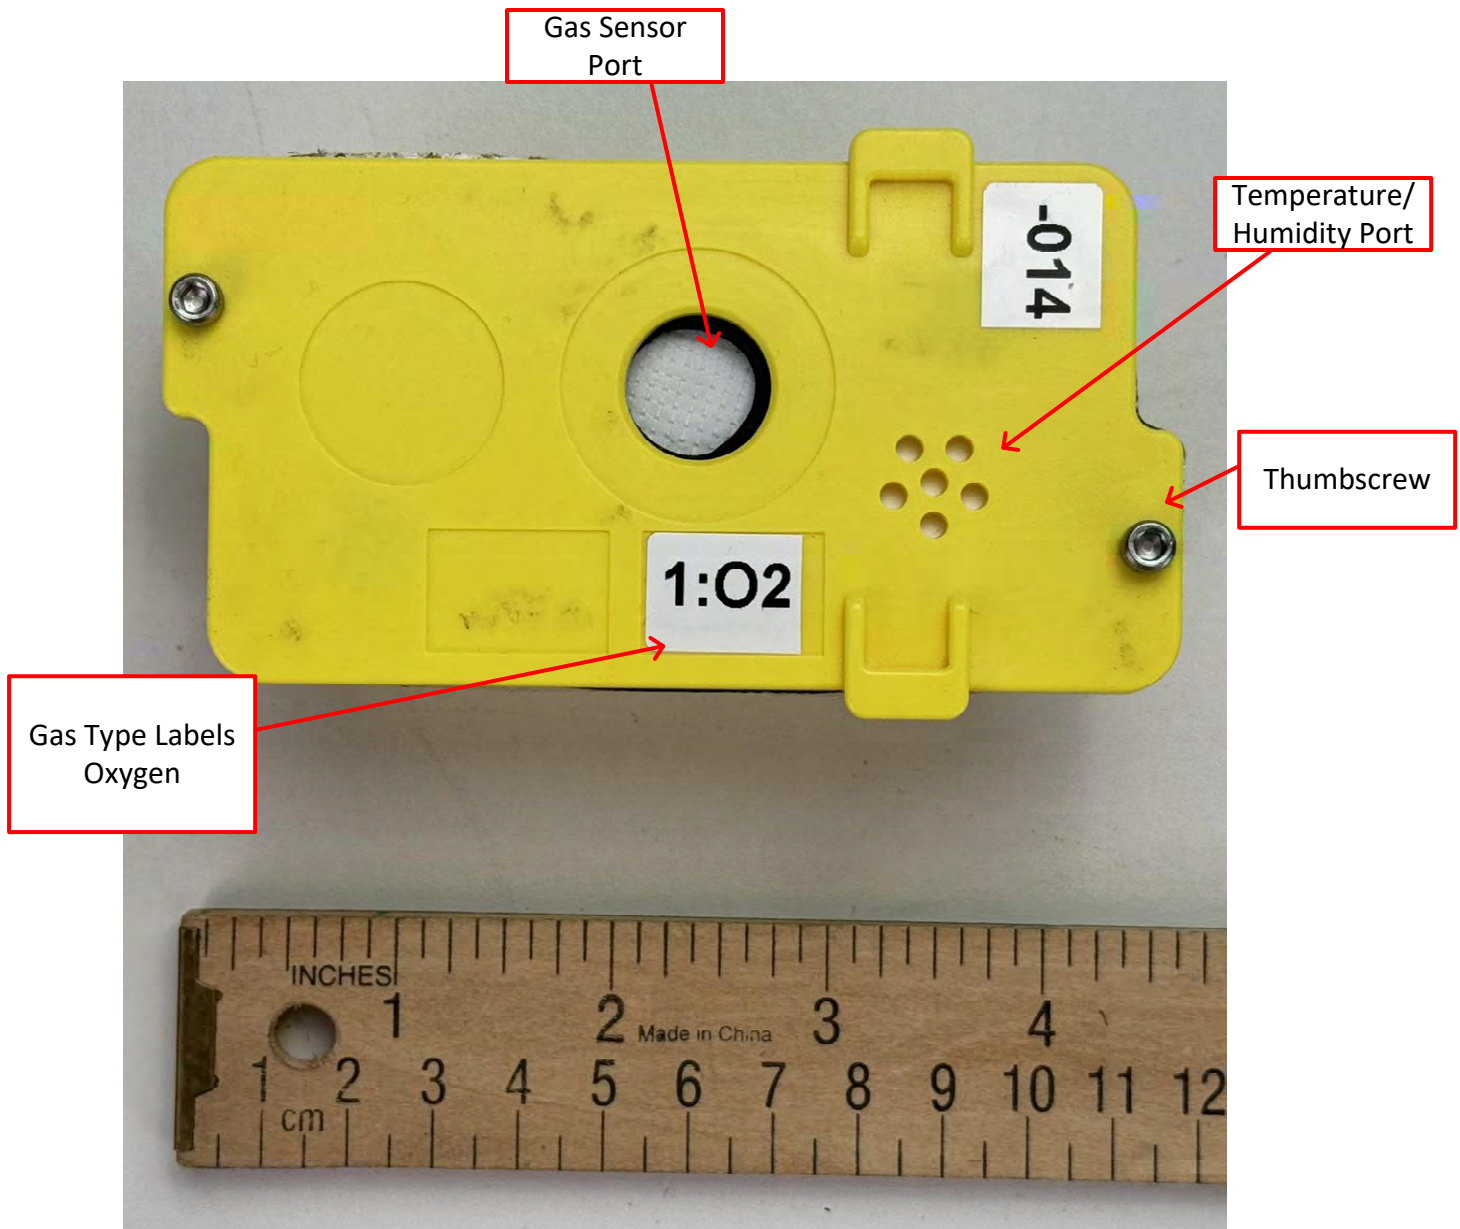


FAA4913-014 Sensor Module can be used in the products tabulated below.


IWT Product Number	Acronym	No. of gas modules	Battery configuration
FAP4913-030	WGM	1	Internal
FAP4913-032	WGM	2	Internal
FAP4913-040	WGM+	1	Internal
FAP4913-090	WGM+	1	external

**FAA4913-014 SINGLE GAS SENSOR MODULE (DUAL GAS PCB)-
BACK VIEW**

**FAA4913-014 SINGLE GAS SENSOR MODULE (DUAL GAS PCB)-
LONG SIDE 1 VIEW**

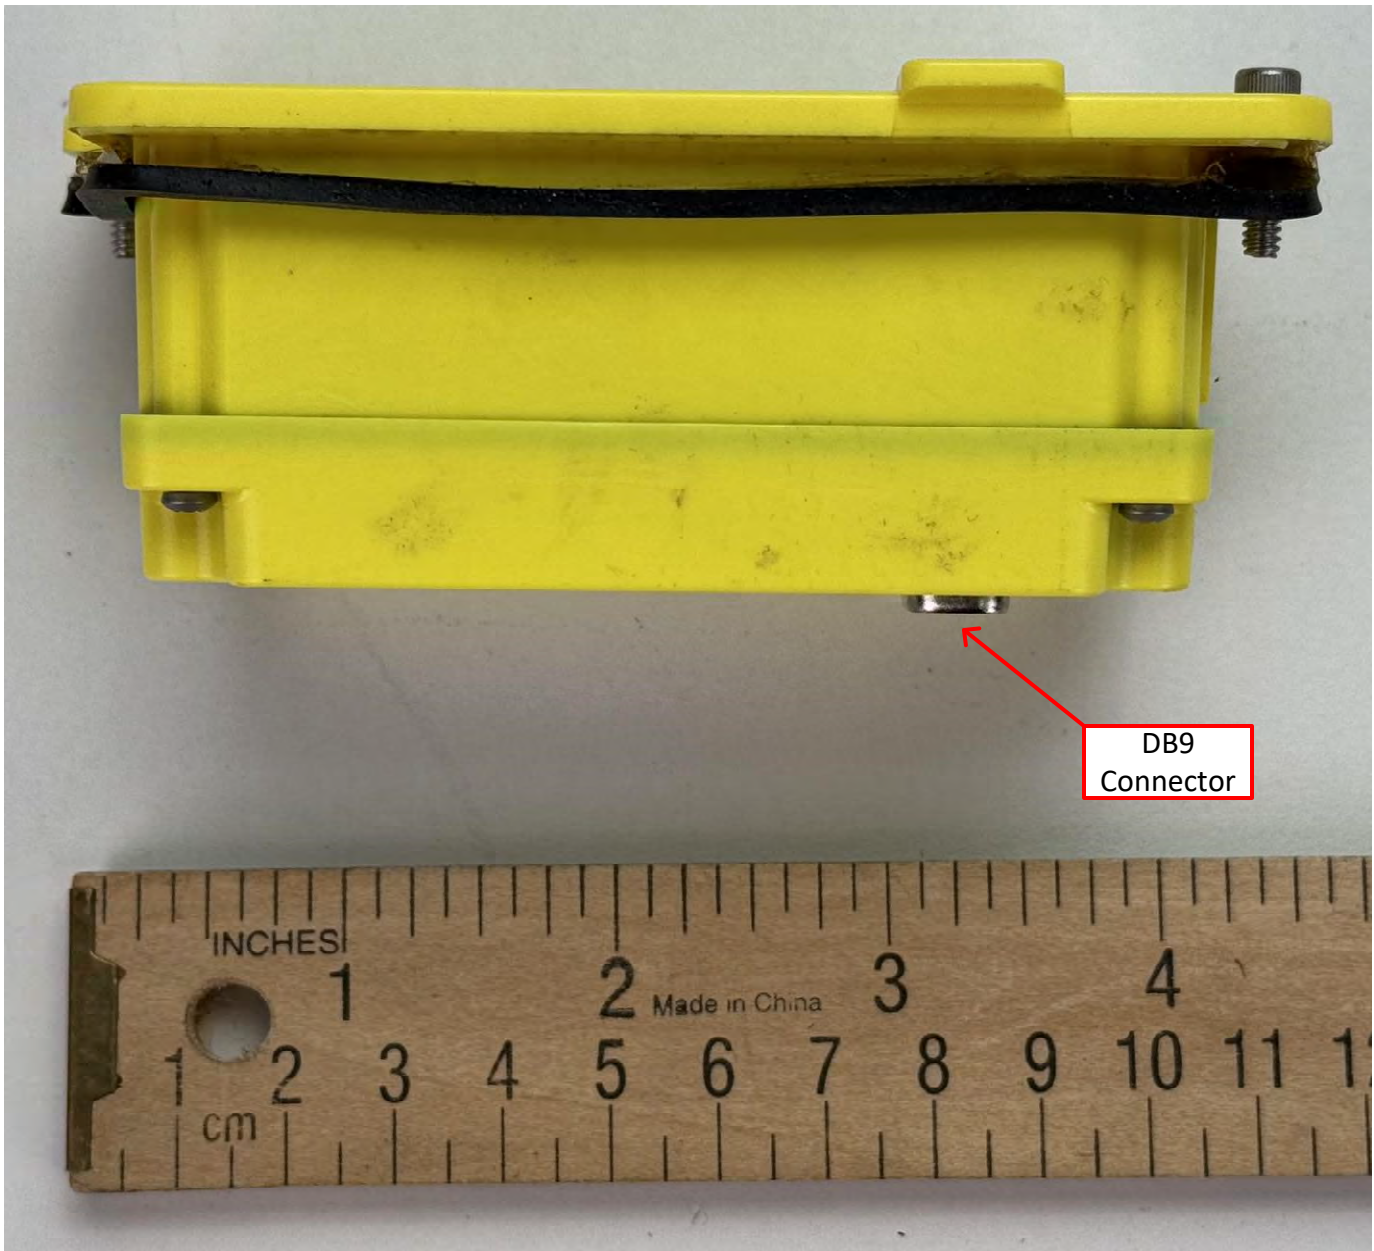

**FAA4913-014 SINGLE GAS SENSOR MODULE (DUAL GAS PCB)-
LONG SIDE 2 VIEW**

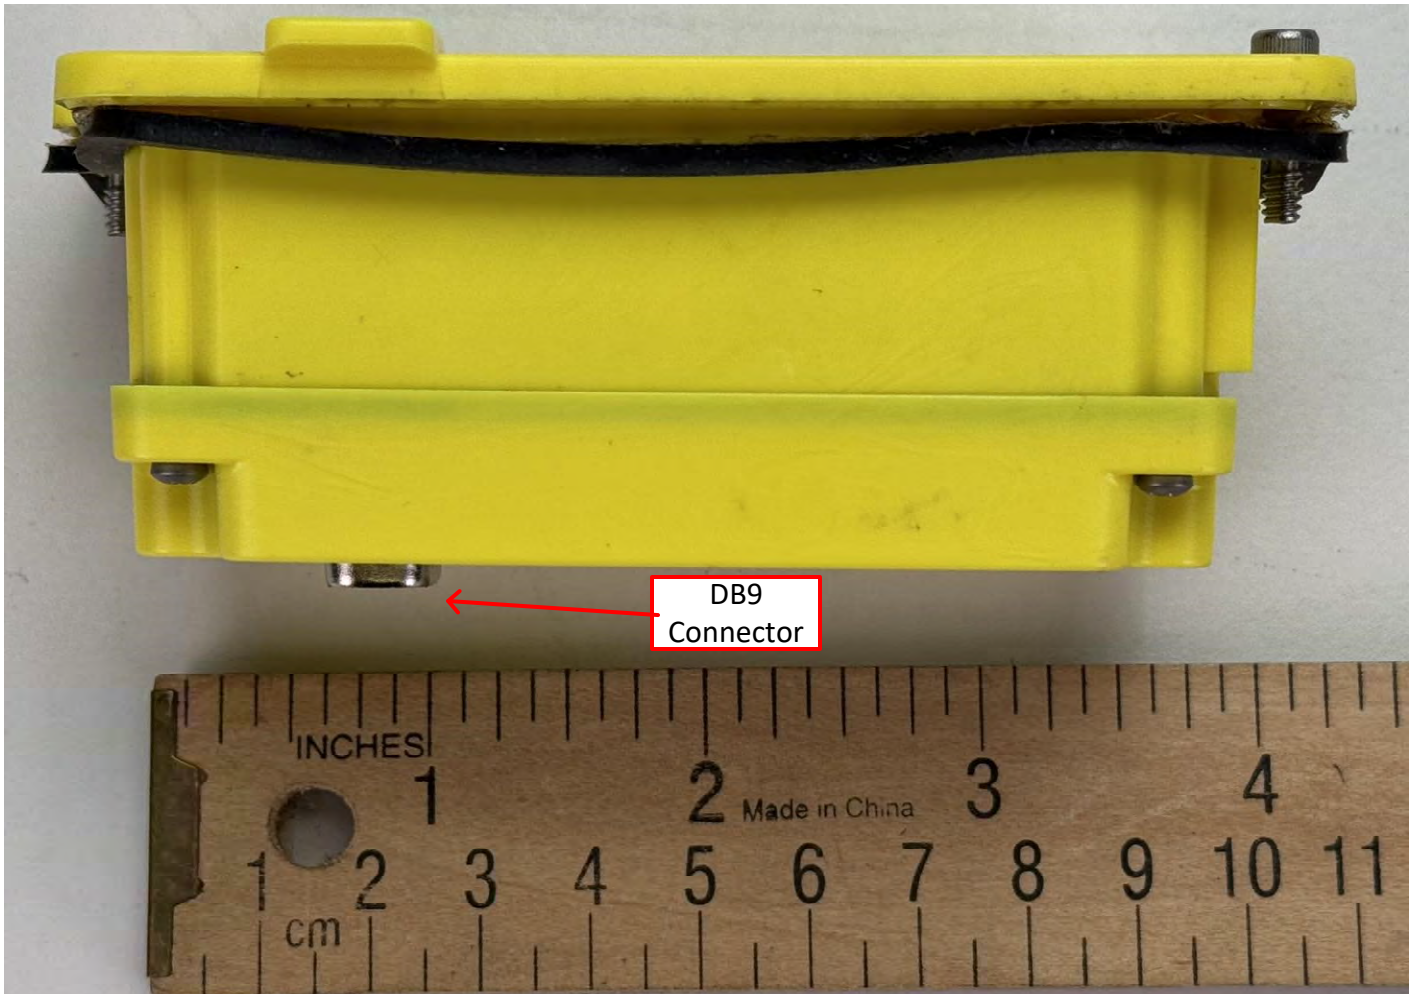

**FAA4913-014 SINGLE GAS SENSOR MODULE (DUAL GAS PCB)-
SHORT SIDE 1 VIEW**



**FAA4913-014 SINGLE GAS SENSOR MODULE (DUAL GAS PCB)-
SHORT SIDE 2 VIEW**

