

SAMSUNG



Bluetooth Speaker

ADSP100BBE

English

» **Getting started**

1. Unpacking	3
2. Speaker Overview	3
3. Button Functions	4
4. Charging the Battery	6
5. Replacing the Battery	8
6. Indicator light status	9

» **Before using your speaker**

7. Turning the speaker On or Off	10
8. Pairing the speaker with a compatible phone	10
9. Connecting the paired speaker to the phone	12

» **Using the speaker**

10. Making and answering a call	13
11. Rejecting a call	14
12. Switching the call between phone and speaker	14
13. Activating Call-Waiting function	14
14. Activating 3-way Call function	15
15. Adjusting the speaker volume	15
16. Muting an ongoing call	15

» **Care and Maintenance**

17. Storing the speaker	16
18. Precautions when using batteries	16
19. Frequently asked questions	17
20. Certification and safety approvals	19
21. Warranty and parts replacement	21
22. Correct Disposal of This Product	22
23. Glossary	23
24. Specifications	24



Thank you

Thank you for purchasing the Samsung Bluetooth Speaker ADSP100BBE, we hope you will be delighted with its operation. Please read the instruction manual to get started and to make best use of the speaker's many features.



Drive safely

Using a mobile phone while driving creates a distraction to the driver which may increase the likelihood of an accident.

When using the phone while driving, keep conversations short and do not make notes or read documents. Before answering calls consider your circumstances. Pull off the road and park before making or answering calls when driving conditions require (e.g. bad weather, high traffic density, presence of children in the car, difficult junctions or manoeuvres.)

Remember, driving comes first, not the call!

Abide by local laws.



Check phone compatibility

The Samsung Bluetooth Speaker ADSP100BBE is compatible with most **Bluetooth¹** (see **Glossary**) phones that are compliant with Bluetooth version 1.1 or higher specification and support **Hands-free profile, Headset profile and Serial port Profile²**. Ensure that your phone has Bluetooth capability by visiting your phone manufacturer's web site.

Getting Started

Explains what to remember for a proper use of your Bluetooth speaker.

1 Unpacking



Bluetooth Speaker



Battery




Charger



User Manual

2 Speaker Overview

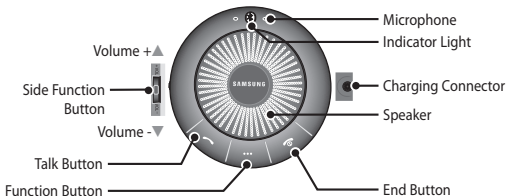

3 Button Functions

Refer to **Before using the product** and **Using the product** sections for further details about button functions.



Talk Button

Press to answer a call.

Press and hold for 2 seconds to connect to the phone after the pairing is completed.

Press in standby mode⁵ to redial the last dialed number.

Press and hold for 2 seconds to put current call on hold and answer a second call.



End Button

Press and hold for 2 seconds to end a call.

Press and hold for 2 seconds in standby mode to disconnect the phone.

Press and hold for 2 seconds when a call comes in to reject a call.

Press and hold for 3 seconds to power on/off.



Function Button

Press and hold for 2 seconds in standby mode to flash GREEN light to notify the remained battery amount.

- Flashes once : Approx 5~20% charged
- Flashes twice : Approx 20~50% charged
- Flashes three times : Approx 50~80% charged
- Flashes four times : Approx 80~100% charged

Press and hold for 2 seconds while Call-Wating is activated to activate 3-way call.

Press and hold for 3 seconds in idle mode when ready to be paid or connected to the phone.



- The buttons detect the signal through magnetic sensor. Please make sure to press the buttons with hands until the sensor recognizes the signal. The product may malfunction if you press the buttons with plastics (Nonconductors) or press too shortly.



Side Function Button

	Move left/right to adjust speaker volume. (8 Steps)
	Move left/right while pressing and holding to adjust speaker volume step by step automatically.
	Press and hold for 3 seconds to switch the call to the product while talking on the phone.
	Press and hold for 3 seconds to switch the call to the phone while talking on the product.
	Press and hold for 2 seconds to mute the microphone while talking on the product. (To unmute, press or move left/right)

4 Charging the Battery

This device has an internal battery which is non-removable and rechargeable. Please make sure that you should charge the battery fully before using the speaker for the first time.



Plug the charger into the Speaker's charging connector.

Plug the charger into the electrical outlet.

About the charging

- > RED indicator light is on while charging, and GREEN indicator light is on if the charging is completed.
- > You can use the speaker while charging.
- > It indicates that the battery may explode if ORANGE light is on while charging. (In direct sunlight or in a hot vehicle) If this happens, remove the battery from the charger or move to proper place to use the product.

Battery charging and standard operation time

	charging time	Standard operation time	
Battery operation time	Approximately 3hr.	Talk time	Standby time
		Up to 10hr.	Up to 80hr.




- Disconnect the charger from the power source or the speaker after completing the charging.
- Use only Samsung-approved charger. Unauthorized charger may cause an explosion or damage on the speaker.
- Always try to keep the battery at room temperature (0°C~ + 40°C).
- Try connecting again if the battery has been recharged after fully consumed and turned off.

When the battery charge falls low

- > RED indicator light flashes 3 times every 10 seconds.
- > In that case, switch the call from the speaker to the phone.
(While on call)
- > The speaker will be automatically turned off.
Please charge the battery.
- > If the battery is fully consumed and turned off, the speaker and the phone will not be automatically connected when turning on again.

To check the charging status

- > Press and hold  for 2 seconds in standby mode.
- > The GREEN indicator light flashes from 1 to 4 times depending on the remaining battery amount.
- > The more it flashes, the more the battery is remained.
(Refer to **3. Button Functions** section.)