

User Guide

AT&TZ830



Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit att.com/privacy.



microSDHC™ is a trademark of SanDisk. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



SRS TruMedia™ is a trademark of SRS Labs, Inc. SRS TruMedia technology is incorporated under license from SRS Labs, Inc.

SRS TruMedia™, a feature-rich audio solution tuned specifically for mobile devices, provides a cinema-like surround headphone performance with deep, rich bass.

CORPORATION. All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : V1.0

Edition Time: April 2014

Manual No. :

Contents

Contents.....	4
Phone Setup.....	13
Switching Your Phone On/Off	16
Getting Around	17
Get to Know Your Phone.....	18
Key Functions	20
Status and Notification icons	23
Phone Calls	26
How to Make Calls	26
How to Receive Calls.....	27

Contacts	29
Importing and Exporting Contacts.....	29
Creating a Contact	30
Adding a Contact to Favorites.....	31
Searching for a Contact.....	31
Creating a New Group	31
Entering Text	32
Android Keyboard.....	32
Google Voice Typing.....	33
TouchPal X Keyboard.....	33
Choosing Touch Input Settings.....	36
Messaging.....	38

Message Box	38
Sending a Message	38
Changing Message Settings	39
Email	41
Creating an Email Account.....	41
Receiving Email	41
Composing and Sending an Email.....	41
Replying to or Forwarding an Email.....	42
Deleting an Email Account.....	42
Email Settings.....	42
Connecting to the Internet	43
Adding a New GPRS/EDGE/3G/4G/4G LTE Connection	43

Turning on Wi-Fi.....	43
Connecting to a Wi-Fi Network.....	44
Checking the Wi-Fi Network Status	44
Browsing the Internet.....	45
Opening a Web Page.....	45
Browsing Options.....	45
Opening Another Browser Window.....	46
Using Bookmarks	46
Changing Browser Settings	47
Using Google Chrome	47
Bluetooth	49
Using Bluetooth	49

Entertainment.....	50
Taking Pictures with Your Camera	50
Adjusting Camera Settings.....	50
Sharing a Picture	51
Opening Your Gallery	52
Shooting Video with Your Camcorder.....	53
Adjusting Your Video Settings.....	53
Adjusting other Settings	54
Sharing a Video	55
Playing Your Videos.....	55
Adding Music to Your Phone	57
Playing Your Music.....	58

Making Memorable Memos	60
Applications	61
Clock.....	61
Calculator	61
Facebook.....	61
File Manager	62
Kingsoft Office	62
NotePad	62
Task Manager	62
Timer.....	63
Twitter.....	63
Voice Dialer	63

Google Applications	64
Google Search and Google Now	64
Gmail	65
Google Play	66
Using Google Calendar	66
Google Music	67
Google+	67
Maps	67
Hangouts	67
Maps	67
Voice Search	68
YouTube	68

Phone Settings	69
Mobile Network Services.....	69
Sound Settings	69
Display Settings.....	69
Setting Date and Time	70
Language Settings	70
Managing Your Device Memory	70
Security Settings	71
Managing Applications	73
Factory Reset	75
Managing Other Settings	75
For Your Safety	77

General Safety	77
FCC Regulations	78
RF Exposure Information (SAR).....	79
Hearing Aid Compatibility (HAC) Regulations for	80
Mobile Phones	80
Distraction.....	82
Product Handling	82
Electrical Safety.....	86
Interference	86
Explosive Environments.....	88
Specifications	89

Warranty	90
LIMITED WARRANTY	91
How to Get Warranty Service	92
Other Warranty Programs	92

Phone Setup

 
Installing the SIM Card and Battery

Power off your phone before installing or replacing the battery or SIM card.


- ① Remove the back cover as shown.




- ② Insert the SIM card into the card slot with the cut corner oriented as shown.

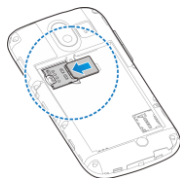

 - ③ Insert the microSDHC™(sold separately) with the gold-colored contacts facing down.

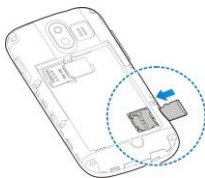

 - ④ Carefully insert the battery with the contacts located against the metal springs. Push down on the battery until it is fully seated.

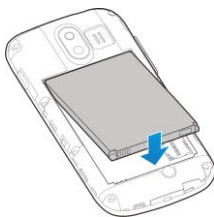

- ⑤ Replace the back cover

Charging the Battery

Note: For best performance, charge the battery fully prior to using the phone for the first time.

- ① Insert the charger's connector into the charging port. Be sure to insert the connector in the correct orientation. Do not force the connector into the port.



- ② Plug the charger into a standard AC wall outlet.
- ③ When the battery is fully charged, unplug the charger and disconnect it from the phone.

Switching Your Phone On/Off

Make sure the SIM card is in your phone and the battery is charged.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Tap **Power off** > **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see *Phone Settings – Factory Reset*), you need to set up your phone settings before using it.

- ① Tap the language field to select the language you want to use and then tap ►.
- ② Select a Wi-Fi network or tap **Skip**.
- ③ If you've got a Google Account or Gmail, tap **Yes** to sign in to your account. Or tap **No** to get an account.
You can also tap **Not now** to set up an account later.
- ④ Configure the Google location options and tap ►.
- ⑤ If prompted, set the date, time, and time zone. Then tap ►.
- ⑥ Enter your name which the phone uses to personalize some apps and tap ►.
- ⑦ You will be prompted to accept the terms of Google service. Tap ► to complete the setup.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your phone in a low-power-consumption state while the display is off. Your phone also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time, which you can set by pressing  > **System settings** > **Display** > **Sleep** from the home screen.

Press the **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

① Press the Power Key to activate your screen display.

② Tap and hold a blank area to unlock the screen.

Note: If you have set an unlock pattern, PIN, or password for your phone (see *Settings – Security*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around

Touch Control

Use the touchscreen to control your phone. The controls on your touchscreen change dynamically depending on the tasks you're performing.

① Tap the buttons, icons, or applications to select items or to open applications.

Keep your finger on an item to see the available options.

 
② Swipe the screen to scroll up, down, left, or right.

 
③ Drag and drop to move particular items across the screen.

④ Pinch with two fingers or double-tap the screen to zoom in/out on a web page or an image.

Note: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side.

Get to Know Your Phone

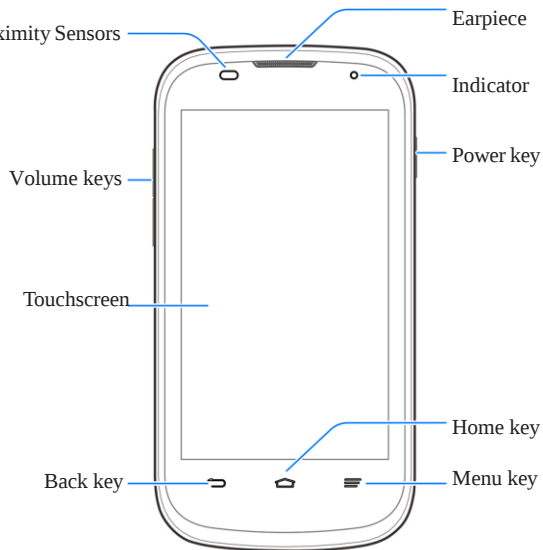

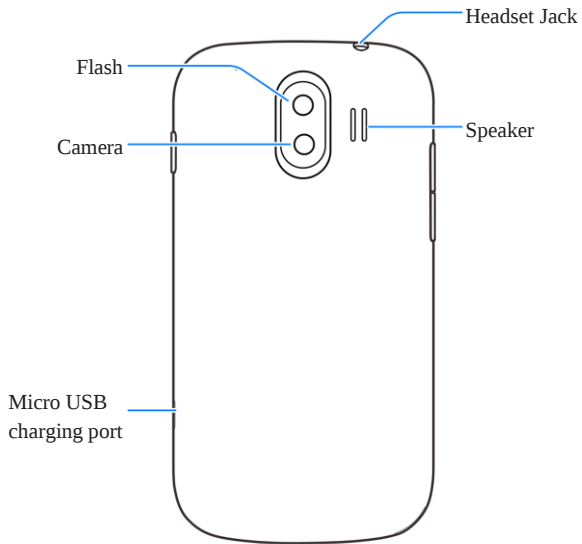


Key Functions

Key	Function
Power Key	Press and hold to turn phone on/off, change sound setting to silent/vibration/sound, set to Airplane mode, or to restart the phone. Press to switch your phone to Sleep Mode. Press to wake up your phone.
Home Key	Tap to return to the main home screen from any application or screen. Tap and hold to use Google search.
Menu Key	Tap to see the options for the current screen. Tap and hold to see recently used applications.
Back Key	Tap to go to the previous screen.
Volume Keys	Adjust the volume of the phone.

Home Screens

 You can customize your home screens. Set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

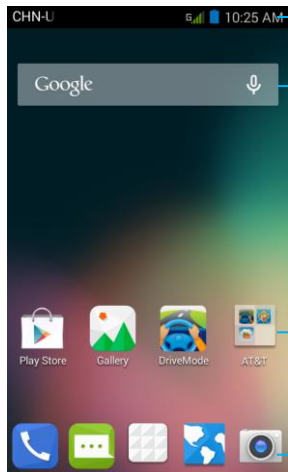

Status and
notification bar

Widget

Shortcuts

Favorite shortcuts

Navigating Your Home Screens

Your phone comes with five home screens, giving you more space to add more items. Simply swipe your finger to the left or right to see each home screen.

Choosing Your Wallpaper

- ① Tap and hold a blank part of the home screen and tap **Wallpaper**.
- ② Tap **Wallpaper for home screen** or **Wallpaper for lock screen**.
- ③ Tap **Gallery, Live , Photos** or **Wallpapers** and choose the image or animation you want to use as the wallpaper.
- ④ Tap **OK** (for Gallery images) or **Set wallpaper**.

Note: Live wallpapers are not available for the lock screen.

Adding Items to Your Home Screen

- ① Tap and hold a blank part of the home screen and tap **Widgets** or **Apps**.
- ② Tap and hold the icon of the item you wish to add and then drag it to a home screen thumbnail at the bottom.

Removing Items from Your Home Screen

- ① Tap and hold the item you want to delete until  **Delete** appears on the screen.
- ② Drag the item to  **Delete** and release your finger.

Creating a Folder

- ① On a home screen, tap and hold an app icon and drag it to  **Folder**.
- ② You can add more apps to the folder by dragging icons to the folder.
- ③ Tap the folder to open it and access items in the folder.
- ④ To name the folder, open it and tap Unnamed Folder.
- ⑤ Enter a name and tap **Done**.

Deleting Items from a Folder

- ① Tap a folder to open it.
- ② Tap and hold an icon and drag it to  **Delete**.

Status and Notification icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

Indicators and Icons

Indicator	What it means
	GPRS connected
	EDGE connected
	3G connected
	4G connected
	Airplane mode
	Battery empty
	Battery low
	Battery partially drained
	Battery full
	Battery charging

Indicator	What it means
	No signal
	Signal strength
	Mobile data in use
	Ringer off
	Vibrate mode
	<i>Bluetooth on</i>
	Connected to a Wi-Fi network
	Wired headset connected
	Alarm set
	microSDHC card removed

Indicator	What it means
	No SIM card installed
	New SMS/MMS
	New email
	New Gmail message
	Problem with SMS/ MMS delivery
	Missed call
	Call in progress
	Song is playing

Indicator	What it means
	Upcoming event
	Call on hold
	New Wi-Fi network detected
	Downloading data
	Sending data
	Updates available
	USB connected
	GPS on

 
Using the Notifications Panel

The Notifications panel provides quick access to alerts including new messages, emails, and software updates.

- To open the Notifications panel, tap the top of the home screen and swipe down with your finger.
- Swipe left or right to clear individual notifications or tap X to clear all.
- Tap  to access the full Settings menu.
- To close the Notifications panel, swipe up from the bottom of the screen or press .

Reopen Recently Used Applications

- ① Press and hold  from any screen. The phone will display applications you used recently.
- ② Tap the application you want to open.

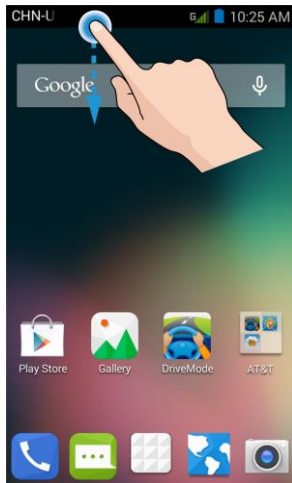

Phone Calls

How to Make Calls

There are many ways to make a call with your phone, and they're all easy to do.

Calling from the Dialer

- ① From the home screen, tap  > .
- ② Enter the phone number with the on-screen keypad. Tap  to delete wrong digits.
- ③ Tap  to place the call.

 
Tip: To make international calls, tap and hold the 0 Key to enter the “+”.

Calling from Your Contacts

- ① From the home screen, tap  > **Contacts**.
- ② Swipe your finger to scroll the contacts list and tap  next to the contact you want to call.

Tips:

- You can search for a contact by typing  and entering the contact name.
- You can also access your contacts by

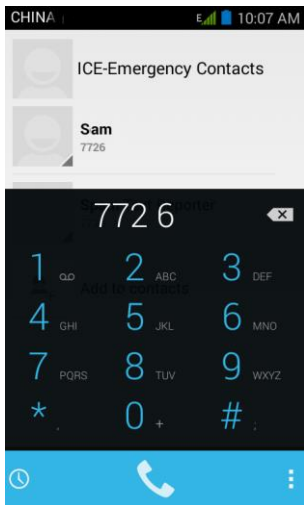

tapping  > **All contacts.**

Calling from Your Call History

- ① From the home screen, tap  > .
- ② Tap  next to the number you want to call.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

- ① From the home screen, tap .
- ② Tap the conversation and then the message that contains the phone number you need.
- ③ Tap the number.
- ④ Tap **Call**.

How to Receive Calls

Answering a Call

Slide  down to answer the call.

Rejecting a Call

Slide  up to reject the call.

Slide  up to send a text message to the caller. Choose the default message or send a custom one.

Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap **Mute** to turn your microphone off. To turn your microphone back on, tap **Mute** again.

Putting a Call on Hold

During a call, you can put it on hold by tapping **More** > **Hold**.

Tip: If you accept an incoming call while you're on another call, the first call automatically goes on hold. Tap **Swap** to switch between the two callers.

Turning the Speakerphone On/Off

Tap **Speaker** during a call to turn the speakerphone on. Tap **Speaker** again to turn off the speakerphone.

Adding a Call

During a call, tap **Add call** and dial a number. When you call another number, the first call automatically goes on hold.

Swapping Calls

To switch between callers, tap **Swap**.

Merging Calls

To merge two calls and create a conference call, tap **Merge calls**.

Note: The maximum number of callers on a call varies by carrier.

Ending a Call

Tap  to finish a call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, tap  > **Contacts** on the home screen. From there, you can tap the tabs on the top to quickly switch to **Favorites** or **Groups**.

Importing and Exporting Contacts

You can import or export contacts from/to your SIM card or microSDHC card. This is especially useful when you need to transfer contacts between different devices.

Importing Contacts from the SIM Card or Exporting to the Card

- ① From the Contacts screen, press  > **Import/export**.
- ② Choose to import or export contacts. If you have more than one account set up on your phone, you will need to select the account to which you'd like to import contacts. If not, your phone will automatically display the contacts.
- ③ Tap the contacts you want to import or export.
 - For import, just tap the contacts you needed one by one, or tap  > import all.
 - For export, tap the contacts you want to export and tap , or tap  >  to export all contacts.

Importing Contacts from microSDHC Card or Exporting to microSDHC Card

- ① From the Contacts screen, press  > **Import/export**.
- ② Choose to import or export contacts. If you have more than one account set up on your phone, you will need to select the account to which you'd like to import contacts.

Note: Files will be saved to/pulled from the microSDHC card when one is inserted in the phone.

- For import, you should have vCard files saved on the microSDHC card. If there's more than one vCard file, choose to import one, multiple, or all vCard files. Tap the vCard file and tap **OK**.
- For export, select a vCard type and tap **OK** to create the file on the Phone/microSDHC card.

Creating a Contact

- ① From the Contacts screen, tap  to add a new contact.
- ② Tap **AT&T Address Book Contact** to choose where to save the contact.
- ③ Enter the contact name, phone numbers, email addresses, postal addresses, and other information.
- ④ Tap **DONE** to save the contact.

Adding a Contact to Favorites

- ① From the Contacts screen, tap the contact you want to add to **Favorites**.
- ② Tap  next to the contact's name.

Searching for a Contact

- ① Tap  at the bottom of the Contacts screen.
- ② Enter the contact name you want to search for. Matching contacts will be listed.

Creating a New Group

- ① From the Contacts screen, tap .
- ② Tap .
- ③ If you have added contact accounts other than the phone, tap to choose an account for the new group.
- ④ Enter the group name.
- ⑤ Tap **Add member** and select the contacts you wish to be the group members.
- ⑥ If necessary, tap **Default** below **RINGTONE** or **NOTIFICATION RINGTONE** to set a special ringtone for incoming calls or messages from the group members.
- ⑦ Tap **DONE**.

To send messages to the group members, you can tap a group and then press  > **Send group message**.

Entering Text

 
When you tap a field that needs text or numbers, a keyboard automatically appears on the screen. Open the Notifications panel and tap Choose input method to change input method.

Android Keyboard

The Android keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape.

To use the landscape keyboard, from the home screen, press **≡** > **System settings** > **Display** > **Auto rotate screen**.

Note: The landscape keyboard is not supported in all applications.

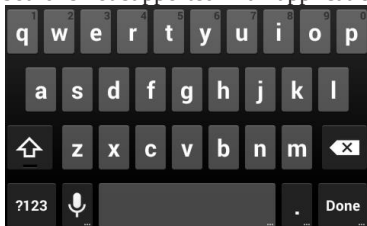

- Tap the alphabetic keys to enter letters. Tap and hold the keys to enter associated accented letters or numbers. For example, to enter È, tap and hold **e** and the available accented letters and number 3 appear. Then slide your finger to choose è
- Tap **⇧** to use uppercase or lowercase letters. This key also changes to indicate the

current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase. Tap and hold  to lock the keyboard in uppercase.

- Tap  to delete any text you have entered.
- Tap  to select numbers and symbols. You can then tap  to access more.
- Tap  to use Google's networked voice input.
- Tap and hold  and then release it to change the input language or the Android keyboard settings.

Google Voice Typing

Google Voice typing uses the Google voice recognition service to convert speech to text. You must have a data connection on a mobile or Wi-Fi network to use it.

- ① Flick down the status bar when entering text and tap Choose input method, and then select Google voice typing.

Or tap  to access the voice typing feature when you are using the Android Keyboard.

- ② When you see the microphone image, speak what you want to type.

- ③ You can continue entering text to keep it or to delete it.

TIP: Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.

TouchPal X Keyboard

 
The TouchPal keyboard offers three layouts: **T26**, **T12** and **T+**.

To Switch the Keyboard Layout

You can tap  to select a layout.

The T26 layout

- Tap the alphabetic keys to enter letters.
- Tap  to use uppercase or lowercase letters. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Slide right on  to enable word prediction. Slide left on  to disable word prediction.
- Tap  to change the input language.
- Tap  to enter digits, symbols and emoticons. Tap  or  to access more. Tap  to go back to entering letters.
- Tap or tap and hold  to delete text before the cursor.
- Tap  to access the quick settings of TouchPal keyboard.
- Tap  to open text editing options. You can select, cut, copy, paste, and delete text, or move the cursor.
- Tap  to use voice input.
- Tap  to hide the on-screen keyboard. Tap the text field again to show the keyboard.

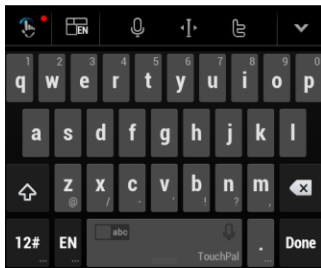

The T12 layout

Tap a key repeatedly until the desired letter or symbol appears. If word prediction is enabled (), just tap the keys once and choose the right word.



The T+ layout

Tap to enter the left letter on the key; Double-tap to enter the desired letter/symbol on the key. If word prediction is enabled (), just tap the keys and choose the right word.



To Enable and Use TouchPal Curve

- ① On the TouchPal keyboard screen, tap , check the box next to **Curve**, and tap **OK**.
- ② Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

Note: TouchPal Curve is only available in the **26-Key PhonePad** layout.



Tips:

- To enter a single letter, tap it.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Choosing Touch Input Settings

Choose the tap input settings by pressing  > **System settings > Language & input** from the home screen.

In the **KEYBOARD & INPUT METHODOS METHODS** section, you can set the

default input method and choose the settings for input methods.

Messaging

Your SMS (text message) and MMS (multimedia message) are combined into one menu under .

Message Box

Instead of an inbox and outbox your phone organizes all messages you sent and received into one box, where messages exchanged with the same number are grouped into one message thread on the Messaging screen. You can tap a thread to see the conversation you have had with someone.

Message threads are sorted in chronological order with the latest one on top.

Sending a Message

- ① From the home screen, tap .
- ② Tap .
- ③ Enter the recipient's number or name in the To field. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient or tap  to access your contacts or call logs.
- ④ Tap the **Type message** field and enter your message.
 - Press  to insert a smiley, contact, or Quick Text.
 - If you are sending an MMS, tap  to attach a file to the message.
- ⑤ Tap  to send your message.

Note: Add an attachment to a text message and it will be converted into an MMS automatically. Likewise, if you remove all attachments from an MMS, it will automatically become a text message.

Changing Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, press  > **Settings** from the Messaging screen.

SMS Enabled: Tap to set the default SMS app.

Storage settings:

- **Delete old messages:** Delete old messages as limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text (SMS) message settings:

- **Manage SIM card messages:** Manage the messages stored on your SIM card.
- **Service Center:** Enables you to view and edit the service center number.

Multimedia (MMS) message settings:

- **Group messaging:** Set to use MMS to send a single message when there are multiple recipients.
- **Auto-retrieve:** Automatically download multimedia messages.

Display settings:

- **Bubble and background:** Select a dialog bubble and background.

Notification settings:

- **Notifications:** Show message notifications in the status bar.
- **Choose ringtone:** Choose a ringtone for your incoming messages.

- **Vibrate:** Make your phone vibrate when a new message arrives.

Signature settings:

- **Edit signature:** Edit your signature, which can be added automatically to outgoing messages.
- **Add signature:** Add the signature to all outgoing messages.

WAP push switch settings:

- **Enable wap push receiving:** Allow your phone to receive WAP push.

Emergency alert settings:

- **Receive emergency alerts:** Choose the types of alerts you'd like to receive.
- **Notification for unread alerts:** Set a notification reminder for every 10 minutes.
- **Alerts notification preview:** Preview settings for alert tones and vibration cadence.

Email

With the Email application, you can access your email from various providers, including Yahoo!® and Gmail.

Creating an Email Account

- ① From the home screen, tap  > **Email**.
- ② Enter your email address and password.
- ③ Tap **Next** to let the phone retrieve the network parameters automatically.

Note: You can also enter these details manually by tapping **Manual setup** or when automatic setup fails.

- ④ Follow the on-screen instructions to finish the setup. Your phone will display your email inbox and start to download email messages.

Tip: To add more email accounts, open Email to get the Inbox screen and press  > **Settings** > **Add account**.

Receiving Email

When you are in an email account, tap  to download recent emails.

You can adjust how often your account downloads new email by pressing  > **Settings** > **name of the account** > **Inbox check frequency**. Tap an option to select it.

Composing and Sending an Email

After creating an email account, you can compose and send email messages.

- ① From your inbox, tap .
- ② Tap the **To** field and enter the recipient's address or tap  to select a contact or group. When you enter the address, matching contacts on the phone will be displayed. Separate each recipient with a comma.

Tip: You can also press  > **Add Cc/Bcc** to add more recipients.

- ③ Enter the subject and the content of your email.
- ④ Press  > **Attach file** to add files to the email.
- ⑤ Tap **Send** to send the message.

Replying to or Forwarding an Email

- ① From your inbox, open the email you want to reply to or forward
- ② Tap  or  to reply to or forward the email. You can also tap  to reply to all recipients of the email.
- ③ Enter the contents/recipients of your email.
- ④ Tap **Send**.

Deleting an Email Account

- ① From your inbox, press  > **Settings**.
- ② Tap the account you want to delete and then tap **Remove account**. Tap **OK** to confirm. All email messages in the account will be deleted.

Email Settings

General settings apply to all email accounts you add.

- ① From your inbox, press  > **Settings** > **General**.
- ② Make the changes you want and press  when you're finished.

Connecting to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease. You can use default connection settings to connect to the web via your mobile network (GPRS/EDGE/3G/4G/4G LTE) or Wi-Fi. The GPRS/EDGE/3G/4G/4G LTE connection can be enabled/disabled manually. From the home screen, press  > **System settings** > **Mobile networks** and check or uncheck the **Data enabled** check box.

Adding a New GPRS/EDGE/3G/4G/4G LTE Connection

To get connected via GPRS/EDGE/3G/4G/4G LTE, you need a data plan with your service provider. If the GPRS/EDGE/3G/4G/4G LTE settings are not pre-configured on your phone, please contact your provider to get the necessary information.

① From the home screen, press  > **System settings** > **Mobile networks** > **Access Point Names**.

② Tap .

③ Tap each item to enter the information you receive from your service provider.

④ Tap **Save** to complete.

Tip: To set the APN to default settings, press  > **Reset to default**.

Turning on Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (90 meters).

Open the **Notifications panel** and tap  > **Wi-Fi**.

Connecting to a Wi-Fi Network

- ① From the home screen, press  > **System settings** > **Wi-Fi**. The Wi-Fi network points, or “hotspots,” that your phone has detected are displayed with their names and security settings.
- ② Tap a network to connect to it. If security features are implemented, you’ll need to enter a password and then tap **Connect**.
- ③ To disconnect from a network, tap the network name and then tap **Forget**.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar. Or, tap the network the phone is currently connected to on the Wi-Fi screen. You can then check the network status from the pop-up window.

Browsing the Internet

Your phone has two options for Internet access. Use the Browser or Google Chrome to view web pages and search for information.

From the home screen, tap .

Opening a Web Page

- Tap the address bar, enter the website you want to browse, and tap **Go**.
- Tap  beside the address bar or press  > **Bookmarks**. Tap a bookmark to open it.
- Press  > **Bookmarks**. Choose an item from the **HISTORY** tab or **SAVED PAGES** tab.

Browsing Options

While viewing most web pages, you can do the following.

- Scroll: Swipe the screen in any direction.
- Zoom out: Tap the screen or pinch two fingers together.
- Zoom in: Tap the screen or spread two fingers apart.
- Go back: Tap  to return to the page you viewed previously.
- Go forward: Tap  > **Forward**.
- Refresh the page: Tap .
- Find text on the page: Press  > **Find on page** and type the terms you want to search for.

- Send the page URL to friends: Press  > **Share page** and select how you want to send the URL.
- Follow a link: Tap a link on the web page to open it.
- Save the page for offline reading: Press  > **Save for offline read**. To read saved pages, press  > **Bookmarks** > **SAVED PAGES**.

Opening Another Browser Window

You can have multiple windows open in the browser. While in the browser, tap  >  to open a new window. To view your open windows, tap . Tap  on a window to close it.

Using Bookmarks

To bookmark a web page, open it and tap  or , and then tap **Save to bookmarks**. Give the bookmark a name and tap **OK**.

Editing a Bookmark

- ① From the home screen, tap .
- ② Press  > **Book marks**.
- ③ Tap and hold the bookmark you want to edit until the shortcut menu pops up.
- ④ Tap **Edit bookmark**.
- ⑤ Edit the name (Label) or location (Address), and then tap **OK** to save it.

Deleting a Bookmark

- ① From the home screen, tap .
- ② Press  > **Bookmarks**.
- ③ Tap and hold the bookmark you want to delete until the shortcut menu pops up.
- ④ Tap **Delete bookmark** > **OK**.

Changing Browser Settings

Press  > **Settings** from a browser window to change browser settings.

Using Google Chrome

Use Google Chrome to browse the Internet. Chrome on your AT&T Z830 can sync bookmarks, browsing history, and opened tabs from your Google account.

- ① From the home screen, tap  > **Chrome**.
- ② Read the terms of service and tap **Accept and Continue**.
- ③ You can choose to **Sign in** to Chrome to sync it with your open tabs, bookmarks, and omnibox data from your computer. If you choose **No thanks**, you can sign in later via the Settings menu.
- ④ To enter a URL, tap the web address bar, enter an address and tap **Go**.
- ⑤ Scroll to navigate and tap links to open them. Use a pinching gesture to zoom out. Spread your fingers apart to zoom in. Press  to access additional settings.
- ⑥ To open a new browser tab, tap  > **New tab**.

Syncing Chrome

From the home screen, tap  > **Chrome** >  > **Settings** > **SIGN IN TO CHROME** > **Sign in.**

Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a distance of about 32 feet (10 meters). The *Bluetooth* devices must be paired before the communication is performed.

Using Bluetooth

- ① Before you begin, place the *Bluetooth* device in pairing mode. From the home screen, press  > **System settings** and slide the **Bluetooth** switch to turn on Bluetooth. When Bluetooth is on, the  icon will appear in the status bar.
- ② Tap **Bluetooth**. Your phone will automatically search for Bluetooth devices and will show all visible devices in range.
- ③ Tap the device you want to pair with.
- ④ If necessary, confirm that the Bluetooth passkeys are the same between the two devices and tap **Pair**. Alternately, enter a Bluetooth passkey and tap **Pair**.
Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

Notes:

- The *Bluetooth* passkey may be fixed for certain devices, such as headsets or hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.
- To allow compatible *Bluetooth* devices to find your phone for pairing, tap Z830 on the *Bluetooth* settings screen. Your device will be visible for 2 minutes.

Entertainment

Taking Pictures with Your Camera

Your phone has a 5-megapixel camera.

- ① From the home screen, tap .
- ② Zoom in or out by pressing the Volume Key. To change color effects, tap  and select an option. To change shot modes, tap  and select an option.
- ③ Tap  to take a picture. To view it, tap the picture thumbnail in the corner of the screen.

Adjusting Camera Settings

Before taking a photo, you can tap  >  to open the following camera settings.

Grid	Set the composition line to help you to aim the camera at the subject.
Self-timer	Set a time delay before the camera takes a picture automatically after you tap the shutter icon, or turn off this feature.
Auto-review	Set the lapse time for viewing a photo after you take it.
Picture Size	Choose the size of the photo.

Shutter Tone	Turn shutter tone on or off.
Geo-tag	Choose to store location information with each photo you take.
Anti- banding	Set anti-band as auto, 50 Hz, or 60 Hz.

Sharing a Picture

- ① After taking a picture, tap the thumbnail in the corner of the screen and then tap . If the icon is invisible, tap the screen first.
- ② Scroll through options to send via text messaging or email, Picasa™, and more.

Opening Your Gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of your pictures, set them as wallpaper or contact photos, or share with friends.

① From the home screen, tap .

② Tap an album.

③ Tap a photo or video to view it.



Number	Function
1	Tap to return to the album or thumbnails of all the pictures and videos in the album, which are displayed in a grid.
2	Swipe horizontally to see more; double tap a picture to view it in full screen.
3	Delete, edit, set the picture as contact photo or wallpaper, share, or lock screen wallpaper.
4	Browse the album contents in a slideshow.

Shooting Video with Your Camcorder

- ① From the home screen, tap Camera .
- ② Zoom in or out by pressing the Volume Key.
- ③ Tap  to begin recording and  to stop.
- ④ Tap the video thumbnail in the corner of the screen to view the video you've just taken.

Tip: Take a still photo while recording by tapping .

Adjusting Your Video Settings

Before recording a video, you can tap  >  to open the following camcorder settings.

Video Quality	Choose the video quality as 1280×720, 720×480, 640×480, or MMS Video.
Time Lapse	Set the lapse time for recording video.
Silent camcorder	Check this option if you want to capture silent video clips.

Adjusting other Settings

You can tap  >  to open the following other settings.


Geo-tagging	Choose to store location information with each picture or video you take.
Storage location	Choose where to store the picture or video you take.
Restore Defaults	Restore default camcorder settings.

Sharing a Video

- ① After recording a video, tap the thumbnail in the corner of the screen and then tap .
- ② Scroll through options to send via text messaging or Gmail, Picasa, and more.

Playing Your Videos

 From the home screen, tap  > **Video Player**. This will open your video library and show the video files saved in your memory card. Tap a video file to start playing.

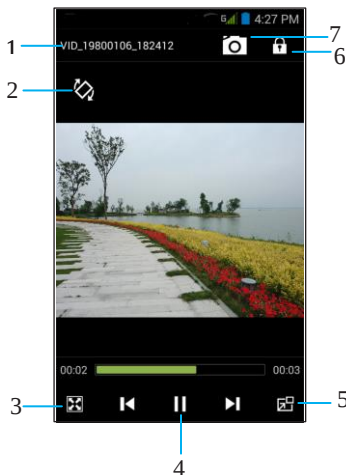

Number	Function
1	Video name.
2	Tap to rotate the screen.
3	Crop or fit the screen.
4	Pause.

5	Enable video pop.
6	Tap to lock the screen.
7	Tap to save the frame as a separate photo.

Adding Music to Your Phone

You can add music to your phone's internal storage or to a removable microSDHC card (*see Phone Setup – Inserting a microSDHC Card*).

Note: Steps may vary depending on your operating system.

① Connect your phone to your computer with a USB cable.

② Tap **Media device (MTP)**.

Note: If you have a microSDHC card in your phone, you may be presented with additional options. Open the Notifications panel and tap **Connected as an installer** > **Media device (MTP)**.

③ On your PC, choose to view files through Windows Explorer. If you have a Mac, visit <http://www.android.com/filetransfer> to download the necessary software.

 
④ Choose whether you want to add files to your phone's internal storage or to the microSDHC card, and then drag and drop the files you want to transfer.

⑤ When you're finished transferring files, open the Notifications panel and tap **Connected as a media device** > **Charge only**. You may now safely disconnect your phone from the computer.

Playing Your Music

You can play the audio files stored in your phone's microSDHC card in Music.

- ① From the home screen, tap  > **Music** to access the music player.
- ② Select **Songs / Playlists / Folders / Albums/Artists /Genre** to find the songs you want to play.
- ③ Tap an item from the list to start playing.
- ④ Adjust the volume with the **Volume Keys**.

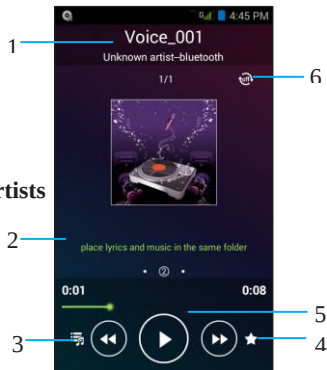

Number	Function
1	Song and artist information.
2	Album artwork and lyrics (if available).
3	Album artwork and lyrics (if available).
4	Add the song to your favourites.
5	Playback control. Skip songs or pause and resume playback. Drag
6	Tap to shuffle the songs in the playlist or toggle repeat modes.

Creating Playlists

Playlists help you organize your music files.

- ① Tap  next to the song in the music library.
- ② Tap **Add to playlist**.
- ③ Tap **New**.
- ④ Type the playlist name and tap **Save**.

Managing Playlists

- ① Tap the Playlists tab in the music library to see your playlists.
- ② Tap  next to a playlist.
- ③ Tap **Play**, **Add to favourites**, **Rename Playlist**, or **Delete Playlist**.

Note: These options may not be available for certain automatically created playlists, such as Recently added.

Adding a Song to a Playlist

- ① Tap  next to the song in the music library.
- ② Tap **Add to playlist**.
- ③ Tap a playlist.

Setting a Song as Ringtone

- ① Tap  next to the song in the music library.
- ② Tap **Use as phone ringtone**.

Making Memorable Memos

Sound Recorder enables you to record your voice memos.

① From the home screen, tap  > **Tools** > **Sound**

Recorder.

② Tap  to start recording.

③ Tap  to stop recording or tap  > **OK** to cancel recording.

④ Tap  to play the memo.

Tip: You can find your recordings by tapping **My recordings**.

Play Any Saved Memo

① From the home screen, tap  > **Tools** > **Sound Recorder**.

② Tap **My recordings**.

③ Tap the title of a memo to play it.

Note: You can also tap  next to the memo to delete, share, rename, tag, trim, view file details, or use as a ringtone.

Applications

Clock

- ① From the home screen, tap  > **Tools** > **Clock**.
- ② Tap a default alarm to configure it or tap  to create a new alarm.
- ③ Set up the alarm options, such as time, repeat, alarm sound and label.
- ④ Tap **SAVE** to save and exit.
- ⑤ Tap  next to an alarm to turn on the alarm.

Calculator

From the home screen, tap  > **Tools** > **Calculator**.

Tip: Tap  or  to switch between different panels. You can also turn the phone to landscape to see all of the calculator buttons.

Facebook

- ① From the home screen, tap  > **Facebook**.

- ② Log in and choose sync options.

Tip: You can change your Facebook sync settings by pressing  > **Settings** > **Sync Contacts**.

- Tap  to access your profile, news feed, messages, and more.
- Press  > **Settings** to change your account settings.
- Tap **Status**, **Photo**, or Check In to update your status, upload a photo, or check in at a location.

File Manager

From the home screen, tap  > **File Manager**. The folders are organized by category and phone storage.

- Tap folders and files to access stored items.
- Tap **PHONE** >  to create a new folder in the current directory.

Kingsoft Office

Create, view, and edit Word documents, PowerPoint presentations, spreadsheets, and other types of files. From the home screen, tap  > **Kingsoft Office**.

Tip: Tap  and scroll to the right to view options.

NotePad

From the home screen, tap  > **NotePad** to save and view your text notes.

- ① Tap  to create a new note.
- ② Enter your text and tap **Save** to save it.
- ③ Tap a note to view it. You can also edit, delete, share, or export it.

Task Manager

From the home screen, tap  > **Task Manager** to view or stop applications.

- Tap a task in the **Tasks** tab to force stop or disable the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card; or tap  next to a task to close it.
- Tap the **Apps** tab to manage all the apps on your phone.
- Tap the **Resources** tab to view the real-time system resources information.

Tip: If your phone is running slow, close applications you are not using by pressing

and holding  and swiping left or right on applications you wish to close.

Timer

From the home screen, tap  > **Tools** > **Clock** > **Stopwatch** or **Countdown**.

Note: You can set up to 20 laps with the stopwatch.

Twitter

① From the home screen, tap  > **Twitter** and sign up for or sign in to your account.

② Tap  to compose a tweet.

Voice Dialer

From the home screen, tap  > **Voice Dialer** and speak a command.

Google Applications

Signing in to your Google account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. If you don't have an account, you can easily create one.

- ① Tap a Google application that needs a Google account, such as Gmail or Google+.
- ② If you've got a Google account, tap **Existing**. Enter your user name and password and then tap . (Or tap **New** if you don't have a Google account.)
- ③ Read the instructions and tap **OK**.
- ④ Set the backup and restore option and tap .

Google Search and Google Now

Find whatever you're looking for with Google Search. Google Now tailors your search options over time, learning your preferences and making more accurate predictions for your needs. Google Now will also keep track of what you're doing and appear when you need it, like showing the next appointment on your calendar and what the traffic is like to get to it.

Performing a Search

From the home screen, tap  > **Google**. You can type in search terms, or say "Ok, Google" to begin a voice search.

You will see results for your search. To search images, places, and more, tap an option on the bar at the bottom of the screen. For additional web results, simply scroll down the screen.

Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web.

Creating and Sending an Email Through Gmail

- ① From the home screen, tap  > Gmail.
- ② Tap  > **Compose**.
- ③ Enter an email address in the **To** field. If you're sending the email to several people, separate the email addresses with commas. You can add as many recipients as you want.
- ④ Enter the email subject, and then write your email. To add an attachment, press  > **Attach picture** or **Attach video**.
- ⑤ Tap  to send your email.

Adding Another Account

- ① From the home screen, press  > **System settings** > **Add account** > **Google**.
- ② Choose to add an existing account or create a new one and follow on-screen instructions to finish account setup.

Accessing Account Settings

- ① From your Gmail inbox, press  > **Settings**.
- ② Tap an account name, or tap General settings to change settings for all accounts.

Google Play

Google Play gives you access to thousands of free and paid apps, games, books and magazines, music, and movies.

From the home screen, tap .

Navigating Google Play

From Play Store, you will have multiple ways to search for apps, games and more.

- ① Tap a category to browse popular apps, games, movies, books, and music organized by popularity or category.
- ② Tap  to search the Play Store for a specific item, such as a game or app.
- ③ To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the App tray .

Note: A Google Wallet™ payment method is required to purchase apps.

Adding a Password

Help prevent unauthorized app purchases by entering a password.

- ① While in Google Play, tap  > **SETTINGS** > **Require password for purchases**.
- ② Tap the option you want to use and enter the Google password and tap **OK**.

Using Google Calendar

From the home screen, tap Calendar to use Google Calendar, Google's time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the screen as they are scheduled. You can also synchronize appointments to your Google account, which enables you to manage your schedule online on your PC.

Accessing Calendar Settings

- ① While in the calendar, press  > **Settings**.
- ② Tap an account name, or tap **General settings** to change settings for all accounts.

Google Music

You can access up to 20,000 songs from your music collection by storing them in the cloud. You can also purchase music through Google Play with this app.

From the home screen, tap  > **Play Music** to access Google Music.

The app searches your online library and your phone for music and playlists before displaying your combined music library, organized by **GENRES**, **ARTISTS**, **ALBUMS**, and **SONGS**. You can tap  > **My Library** to view your library or tap  > **Playlists** to view existing playlists.

Google+

Connect with friends and family via Google's social networking site. Set up circles to organize people into groups for sharing content. Create hangouts for group video chats, upload photos and videos, and much more.

Maps

Find local businesses, view maps, and get driving directions.

Hangouts

With Google Hangouts, you can bring groups of friends together into a simple group conversation with text, photos, and video chat.

Maps

Get free, voice-guided turn-by-turn navigation and 360° views of your destination,

whether you're driving, walking, or taking public transit. See estimated time to your destination based on live traffic information.

Voice Search

Find what you're looking for by speaking your search terms into your phone.

YouTube

View videos and share your own with your friends, family, and the world.

Phone Settings

Mobile Network Services

From the home screen, press  > **System settings** > **Mobile networks** to enable or disable data service, allow data services when roaming, or set access point names for data access.

Note: Data roaming may incur significant roaming charges.

Sound Settings

From the home screen, press  > **System settings** > **Sound** to adjust volumes, toggle sound and mute, set up ringtone and notification sound, and select system sounds.

Tap **Silent mode** to turn off all sounds except media and alarm, or enable silent mode with vibration.

Display Settings

You can adjust your phone's display settings. From the home screen, press  > **System settings** > **Display**.

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the home screen.
- **Auto rotate screen:** Change the orientation of some on-screen content based on the position of the phone.
- **Sleep:** Set the length of time of inactivity before the screen turns off.

- **Daydream:** Control what happens when the phone is docked and / or sleeping.
- **Font size:** Set the font size of the text on the screen.
- **Pulse notification light:** Flash the LED light to notify you of missed calls, new messages, and other events.
- **Touch key light duration:** Set the backlight duration of the touch key.

Setting Date and Time

- ① From the home screen, press  > **System settings** > **Date & time**.
- ② Uncheck the **Automatic date & time** and **Automatic time zone** check boxes if you want to set the time, date, and time zone by yourself.
- ③ Set date, time, time zone, and date/time format.

Language Settings

You can change the language of your phone system in two simple steps.

- ① From the home screen, press  > **System settings** > **Language & input** > **Language**.
- ② Tap a language to select it.

Managing Your Device Memory

From the home screen, press  > **System settings** > **Storage**. You can view the space information of the microSDHC card as well as the phone storage.

- **Unmount/Mount SD card:** You can unmount the microSDHC card to safely remove it, or mount the card.
- **Erase SD card:** Erase all data on the microSDHC card.

Security Settings

Protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Screen Unlock Pattern

Creating your screen unlock pattern

① From the home screen, press  > **System settings > Security Screen lock > Pattern.**

② With a finger, draw your own pattern and tap **Continue.**

③ Draw the pattern again and tap **Confirm.**

④ Press the **Power Key** to lock the screen.

Tip: Uncheck the Make pattern visible check box if you want to hide the pattern as you draw it on the screen.

Unlocking the Screen with Your Pattern

① Press the **Power Key** to wake up the screen.

② Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

Cannot Recall Your Screen Unlock Pattern?

You have up to five attempts to unlock your phone. If you still cannot recall the screen unlock pattern, tap **Forgot pattern?** and enter your Google account user name and password to reset the screen unlock pattern.

Note: You must sign in or create a Google account on your phone before using the preceding method to reset the pattern.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password

- ① From the home screen, press  > **System settings** > **Security** > **Screen lock**.
- ② Tap **PIN** or **Password**.
- ③ Enter a numeric PIN or any password you like, and tap **Continue**.
- ④ Enter it again and tap **OK** to confirm.

Unlocking the Screen with Your PIN or Password

- ① Press the **Power Key** to wake up the phone.
- ② Enter the PIN or password you set.
- ③ Tap .

Cannot Recall Your PIN or Password?

You have up to five attempts to unlock your phone. If you still cannot recall the PIN or password, you will need to either contact your carrier for the PUK (PIN Unlock Key) code for the device or return it for service.

Disabling Screen Lock Settings

If you have created an unlock pattern, PIN or password, you can disable it.

- ① From the home screen, press  > **System settings** > **Security** > **Screen lock**.
- ② Draw the screen unlock pattern or enter the PIN/password you have created.
- ③ Tap **Next** > **None**.

Setting Up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Enabling Secure Credentials

- ① From the home screen, press  > **System settings** > **Security**.
- ② Tap **Install from SD card** to install certificates from your microSDHC card.

Deleting Secure Credentials

- ① From the home screen, press  > **System settings** > **Security**.
- ② Tap **Clear credentials** > **OK** to clear credentials.

Managing Applications

From the home screen, press  > **System settings** > **Apps** to see apps installed on your phone and manage them.

Tap an app in the **DOWNLOADED**, **RUNNING**, or **ALL** tabs to see its information. You can stop the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card.

Note: Not all applications can be moved or uninstalled.

From the home screen, press  > **System settings** > **Security** and check the **Unknown sources** check box if you want to install applications from sources other than Google Play Store.

Note: Installing applications from unknown sources may compromise your phone and personal data.

Make sure that you select an application developed for your phone and processor type before installing it.

- ① Copy the application file to the microSDHC card and install the card on your phone.
- ② From the home screen, tap  > **File Manager**, and open the folder where the application file is.

- ③ Tap the file to start installation.
- ④ Read the installation instructions that come with the application and follow them to complete the setup.

Factory Reset

Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased, including your Google account, system and app data and settings, and downloaded apps. You can also erase the data on the memory card during the process.

From the home screen, press  > **System settings** > **Backup & reset** > **Reset to factory** > **Reset phone** > **Erase everything**.

WARNING! All your personal information and downloaded applications on your phone will be erased after resetting the phone.

Managing Other Settings

Search Settings

From the home screen, tap  > **Google** >  > **Settings**.

You can set searchable items.

Voice Interaction

From the home screen, press  > **System settings** > **Language & input** > **Voice Search** or **Text-to-speech output** to set text-to-speech and voice recognition options.

Accessibility

From the home screen, press  > **System settings** > **Accessibility** to configure options for accessibility-related applications.

TalkBack: Device provides spoken feedback, such as describing what you tap, select, and activate, to help blind and low-vision users.

Captions: Tap to enable or disable captions.

Magnification gestures: When enabled, you can zoom in and out by triple-tapping the screen.

Large text: Tap this checkbox to use large font size.

Power button ends call: When enabled, you can press the Power Key to end phone calls without turning the screen off.

Auto-rotate screen: Change the orientation of some onscreen content based on the position of the device.

Speak passwords: Check this box to enable the speak passwords function.

Accessibility shortcut: Enable this option to get spoken feedback when you tapping the screen or pressing the key.

Text-to-speech output: Change settings for text to speech and adjust the rate at which your phone speaks, to help blind and low-vision users.

Touch & hold delay: Select the time delay for the phone to distinguish finger tap and hold gestures.

About Phone

From the home screen, press  > **System settings** > **About phone** to check system updates, phone status and battery use, or view legal information and software version.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at gas stations.
	Keep your phone at least half an inch (15 mm) away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in a fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR.
The SAR limit set by the FCC is 1.6W/kg.

This device is complied with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528. This device has been tested and meets the FCC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SRQ-Z830.

For this device, the highest reported SAR value for usage against the head is 1.16 W/kg, for usage near the body is 1.32 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and your body. RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing

device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/ higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Your phone meets the M3/T4 level rating.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.

- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 23 °F and maximum 122 °F (minimum – 5 °C and maximum + 50 °C).
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom toward your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the keys lightly.
- Use the special features that are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile phone and a pacemaker

to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics, or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a ‘flight mode’, this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted with power off “two-way radios” or “electronic devices” notices to avoid interfering with blasting operations.

Specifications

Handset specifications are shown in the following table.

Handset standards	GSM/ UMTS / LTE support
Dimensions (L x W x H)	125*65*11.5mm
Platform	Qualcomm MSM8926 1.2GHz Quad Core
OS	Android 4.4 KitKat
Display	4.0inch WVGA 480x800 16M TFT
Camera	5M AF camera
Interface	3.5mm Earphone Port, 5pin Micro USB
Memory	1GB DDR RAM + 4GB ROM
Battery	1820mAh
Features	AGPS/FOTA WiFi 802.11b/g/n Bluetooth 4.0 Accelerometer, Proximity, Ambient Light, Digital Compass

Warranty

ZTE offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end user purchaser of the Product and provided that your purchase was made from a supplier authorized by the Seller. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States.

1. This product or phone is warranted for 12 (twelve) months from date of purchase.
2. For warranty service information, please call ZTE service number (877) 817-1759 (Toll Free). The manufacturer's website, <http://www.zteusa.com>, is also available for assistance.
3. This warranty only applies if the product has been used in accordance with the manufacturer's instructions under normal use and with reasonable care.
4. What this warranty does not cover:
 - a) Defects or damages resulting from the misuse of this product.
 - b) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture, dampness or corrosive environments, unauthorized modifications, unauthorized repair, neglect, rough handling, abuse, accident, alteration, improper installation, incorrect voltage application, food or liquid spoilage, acts of God.
 - c) Normal wear and tear.
 - d) If the Product has been opened, modified or repaired by anyone other than a

warranty service center or if it is repaired using unauthorized spare parts.

- e) If the serial number or mobile accessory date code has been removed, erased, defaced, altered or are illegible in any way subject to sole judgment of ZTE.

LIMITED WARRANTY

TO THE EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITED WARRANTY IS YOUR SOLE AND EXCLUSIVE REMEDY AGAINST ZTE AND ZTE'S SOLE AND EXCLUSIVE LIABILITY IN RESPECT OF DEFECTS IN PRODUCT. HOWEVER, THIS LIMITED WARRANTY SHALL NOT EXCLUDE NOR LIMIT ANY OF YOUR LEGAL (STATUTORY) RIGHTS UNDER THE APPLICABLE NATIONAL LAWS.

TO THE EXTENT PERMITTED BY APPLICABLE LAW ZTE DOES NOT ASSUME ANY LIABILITY FOR LOSS OF OR DAMAGE TO OR CORRUPTION OF DATA, FOR ANY LOSS OF PROFIT, LOSS OF USE OF PRODUCTS OR FUNCTIONALITY, LOSS OF BUSINESS, LOSS OF REVENUES OR LOSS OF ANTICIPATED PROFIT, INCREASED COSTS OR EXPENSES OR FOR ANY INDIRECT, OR SPECIAL OR CONSEQUENTIAL LOSS OR DAMAGE. TO THE EXTENT PERMITTED BY APPLICABLE LAW, ZTE'S LIABILITY SHALL BE LIMITED TO THE PURCHASE VALUE OF THE PRODUCT.

THE ABOVE LIMITATIONS SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CAUSED BY DEFECT OF PRODUCT IN MATERIAL, DESIGN AND WORKMANSHIP.

How to Get Warranty Service

To obtain warranty service, please call (877) 817-1759. Please have the following information available when you send the phone in for repair:

- A valid Proof of Purchase
- Return address
- Daytime phone number or fax number
- Model #
- IMEI # (Look for the 15-digit IMEI # behind the battery of the device.)
- Complete description of the problem
- Transportation prepaid

Other Warranty Programs

You may have other warranty programs with your purchase, such as warranty exchange. If so, please refer to equipment package or the original point of sale.