

UNDERCABINET CD PLAYER

**with AM/FM Alarm Clock Radio and
Bluetooth® Wireless Technology**

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CKR1307

IMPORTANT SAFETY INSTRUCTION

	CAUTION RIKS OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

DANGER

Invisible and hazardous laser radiation when open and inter-lock failed or defeated. Avoid direct exposure to beam.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void users authority to operate this device.

LASER SAFETY : This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION : USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HERENIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

1) Read these instructions.

All the safety and operating instructions should be read before the product is operated.

2) Keep these instructions.

The safety and operating instructions should be retained for future reference.

3) Heed all warnings.

All warnings on the product and in the operating instructions should be adhered to.

4) Follow all instructions.

All operating and use instructions should be followed.

5) Do not use this apparatus near water.

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) Clean only with dry cloth.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug.

A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

An appliance and cart combination should be moved with care.

Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.



13) Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15) Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16) Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper to grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

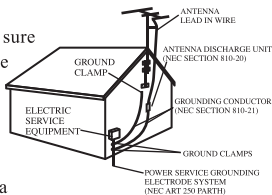

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions.

Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore in the product to its normal operation.

- e) If the product has been dropped or the cabinet has been damaged.
- f) When the product exhibits a distinct change in performance-this indicates a need for service.

25) Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

 
NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

PREPARATION FOR USE

Power Sources

Main Unit:


Unwind the AC power cord and extend it to its full length. Insert the AC plug of the cord into any convenient AC 120V~ 60Hz household outlet as the illustrated on right:

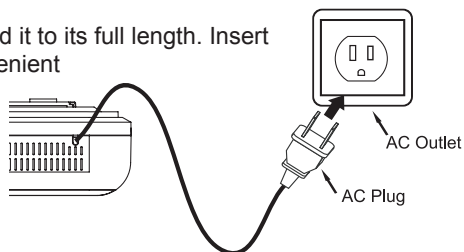

NOTES:


- This unit is equipped with a polarized AC plug which has one blade wider than the other. This is a safety feature to reduce the likelihood of electric shock. This polarized AC plug will only fit in a polarized AC outlet. If you find that you cannot insert this plug you're your outlet, you may have an obsolete non-polarized outlet. Please do not try to defeat this safety feature by using a non-polarized adaptor or by filling the wider blade to make it fit into your outlet. If this plug does not fit into your outlet, you should contact a qualified licensed electrician to replace your obsolete outlet
- If the AC power failure, this electronic clock is designed to continue operating internally (without showing the time on the Clock Display) with three (3) AAA size batteries (not included). Install the batteries as follows:

 1. Open the battery door on the left side of the unit by sliding it out and then lifting it as the illustrated on right:
2. Insert three (3) AAA size batteries (not included) according to the polarity diagram inside the battery compartment. (Alkaline batteries are recommended.)
3. Replace the battery door.

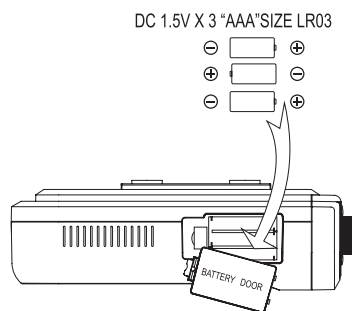

Remote Control:

 In first time use, remove and discard the insulation film on the battery compartment as the illustrated follows:

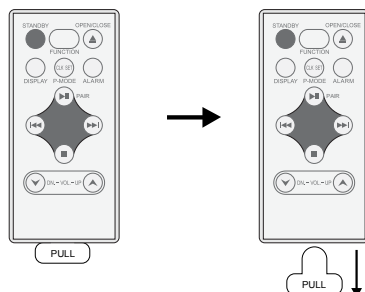

To replace the button cell if it is consume:

1. Push and slide out the battery tray as the illustrated below.
2. Replace the button cell by a new CR2025 button cell with the polarity “+” face up as the illustrated below and the marking on the rear of Remote Control.
3. Close the battery tray.



 
BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. Do not dispose of battery in fire. Battery may explodes or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


LOCATION OF CONTROLS

Main Unit:

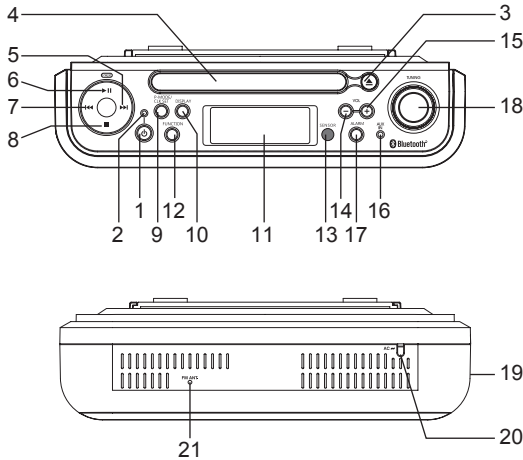

1. STANDBY Button
2. STANDBY Indicator
3. CD Door Open/Close Button
4. CD Door
5. Fast Search Forward/Skip Forward Button
6. PAIR (Play-Pause/BT Pair) Button
7. Fast Search Backward/Skip Backward
8. Stop Button
9. P-MODE/CLK SET (Program-Mode/Clock set) Button
10. DISPLAY Button
11. LCD Display
12. FUNCTION Button
13. (Remote) SENSOR
14. VOL - (Volume down) Button
15. VOL + (Volume up) Button
16. AUX IN Jack
17. ALARM Button
18. TUNING Knob
19. Battery Compartment
20. AC Cord
21. FM Antenna

 Remote Controls:

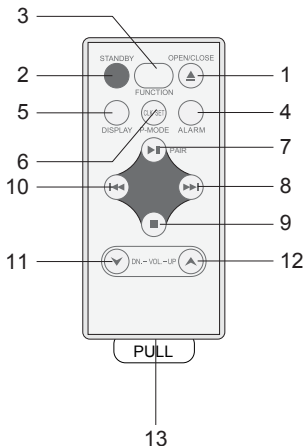


1. (CD Door) OPEN/CLOSE Button
2. STANDBY Button
3. FUNCTION Button
4. ALARM Button
5. DISPLAY Button
6. CLK SET/P-MODE (Clock set/Program-Mode) Button
7. PAIR (Play-Pause/BT Pair) Button
8. Fast Search Forward/Skip Forward Button
9. Stop Button
10. Fast Search Backward/Skip Backward Button
11. VOL DN (Volume down) Button
12. VOL UP (Volume up) Button
13. Battery Tray


INSTALLATION

Install the unit to the bottom of cabinet (if need) as follows:


 
1. Detach the Plastic Assemble Plate from the top of unit by slide it to rear of unit as the illustrated:

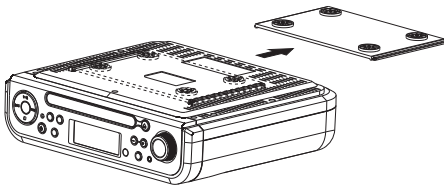

 2. Mount the Plastic Assemble Plate on the desired location as follows illustrated:

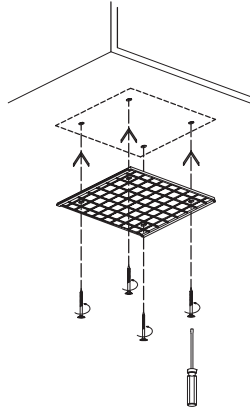

  3. Replace the unit to the mounted Plastic Assemble Plate as follows illustrated:

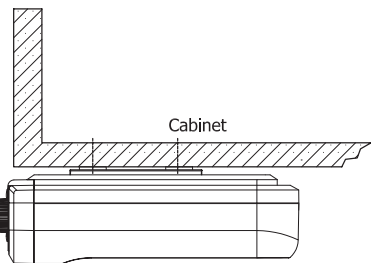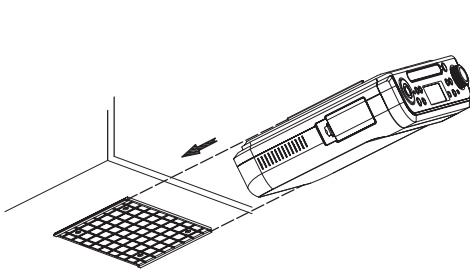



Side View

CAUTION:

To reduce the risk of fire, never mount the unit near any heat elements such like stoves; oven ... etc.





OPERATION

GENERAL OPERATION:

1. Connected the unit to AC power as instructed earlier. The Red Indicator will illuminate.
2. Press the  Button on the unit or Remote Control to power on the unit from standby mode. The Red Indicator will not light and the LCD Display will illuminate.
3. Press the FUNCTION Button on the unit or Remote Control repeatedly to select the playback source.
4. Press the VOL +/- Buttons on the unit or the VOL DN/UP Buttons on the Remote Control to adjust volume level as desired.
5. When finished listening, press the  Button on the unit or Remote Control to turn off (standby) the unit. The Red Indicator will illuminate.




ACTUAL TIME SETTINGS:

To set or reset the actual time:

1. In power off (Standby) mode. Press and hold the P-MODE/CLK SET Button on the unit or Remote Control approximately 2 seconds until the digit of Hour on the LCD Display is blinking.
2. Press the  or  Button on the unit or Remote Control repeatedly to set hour. (Make sure the PM Indicator appears on the display if the time is PM and the AM Indicator appears on the display if the time is AM).
3. Press the P-MODE/CLK SET Button again, the digit of Minute will blink.
4. Press the  or  Button repeatedly to set minute.
5. When finished, press the P-MODE/CLK SET Button to save the settings and exit. The display will stop blinking.

BT (BLUE TOOTH)



In first time use or re-pairing to a new BT Device, pairing it as below:

1. In standby mode, press the  Button to power on the unit.
2. Press the FUNCTION Button repeatedly until the indicator  appears on the display and blink.
3. Power on the external BT Device and enter to BT searching mode. Start pairing as the on screen instructions on the external BT Device. After paired, the indicator  will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT Device.).
4. Plays the music in the paired BT Device as usual.

Notes:


- When the external BT Device searched the unit, our model number “CKR1307” will appear on the display of external BT Device.
- Pairing code “0000” or “1234” may need to enter.

Normal operation after paired:

1. Turn on the BT function of the external BT Device.
2. Power on the unit and enter to BT mode as the instructed earlier. The indicator  will appear on the display and blink.
3. Wait a few seconds until the unit auto paired to the external BT Device. (The indicator  will stop blinking).
4. Plays the music in the paired BT Device as usual.
5. During playback:
 - Press the PAIR/ ►II Button to pause; press again to resume normal playback.
 - Press the ◀◀/HR or ►►/MIN Button to skip tracks.


Note:

If the unit already paired to an external BT Device and you wants to pair the unit to another new external BT Device in BT paired mode.

Press and hold the PAIR/ ►II Button on the unit or Remote Control approximate 2 seconds until the indicator  on the display start blinking to unpaired it.

And then pair the new BT Device to the unit as the instructed earlier.

CD:

1. In standby mode, press the  Button to power on the unit.
2. Press the FUNCTION Button repeatedly until “---” or “no” (No Disc) appear on the display.
3. Press the ▲ Button to open the CD door then place a CD disc on the tray, with the printed label side up.

4. Close the CD door by press the ▲ Button; the unit will start playback automatically.
5. During playback:
 - A. Press the PAIR/ ►|| Button to pause; press again to resume normal playback.
 - B. Press the ◀◀ or ▶▶ Buttons repeatedly to skip tracks.
 - C. Press and hold the ◀◀ or ▶▶ Buttons to fast searching the specific section then release the button to resume normal playback.
 - D. Press the DISPLAY Button to read the actual time.
6. To stop CD playback, press the ■ Button. The total number of tracks will appear on the display.
7. When finished listening, press the ⏻ Button to power off (standby mode) the unit.

Repeat Playback:

1. During playback, press the P-MODE/CLK SET Button once. The repeat indicator "REPEAT 1" will appear on the display. The current track will playback repeatedly.
2. During playback, press the P-MODE/CLK SET Button twice. The repeat all indicator "REPEAT ALL" will appear on the display. All the tracks on the current disc (or program) will be playback repeatedly.
3. To cancel the repeat function, press the P-MODE/CLK SET Button repeatedly until all the repeat indicators disappear on the display.


Programmed Playback:

Up to 20 tracks can be programmed playback as follows:

1. In CD STOP playback mode, press and hold the P-MODE/CLK SET Button until "PROG 00" appear on the display.
2. Select the first specific track to be programmed by press the ◀◀ or ▶▶ Buttons.
3. Press the P-MODE/CLK SET Button again to store the selected track into the memory.
4. Repeat steps 2 and 3 until all the specific tracks were stored into the memory.
5. Press the PAIR/ ►|| Button to start playback.
6. To stop playback, press the ■ Button.
7. To cancel the program, press the ■ Button again in stop mode. Indicator "PROG" will disappear on the display.


RADIO:

FM Band:

1. In standby mode, press the  Button to power on the unit.
2. Press the FUNCTION Button repeatedly until "FM XX.X MHz" appear on the display.
3. Turn the TUNING Knob to receive the desired FM station.
4. To read the actual time during listening, press the DISPLAY Button once.

Note: If the receiving FM station is stereo, the unit will auto plays it in stereo mode.

AM Band:

1. In standby mode, press the  Button to power on the unit.
2. Press the FUNCTION Button repeatedly until "AM XXX kHz" appear on the display.
3. Turn the TUNING Knob to receive the desired AM station.
4. To read the actual time during listening, press the DISPLAY Button once.

Antennas:

AM:


This unit has a build in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, reassemble the unit to other location to improve reception.

FM:

The FM Antenna Wire on the rear of unit is for FM reception only. If reception is weak, unwind it to full length and/or relocation.

AUX IN

Listen music from the external Audio Player as follows:

1. Connected the external Audio Player by an audio connection cable with 3.5mm stereo plugs (Cable not included).
2. Insert one end to the AUX IN Jack on the front of unit.
3. Insert the other end to the Phones Jack; Line Out Jack or AUX Out Jack on the external Audio Player.
4. Press the  Button to power on the unit from standby mode.
5. Press the FUNCTION Button repeatedly until indicator "AUX" appear on the display.
6. Plays the music on the connected external Audio Player as usual.

Note: Make sure the volume level of the external Audio Player was set to high. Otherwise, sound from this unit may weak.

ALARM SET:

1. In power off (Standby) mode. Press and hold the ALARM Button on the unit or Remote Control approximate 2 seconds until indicator "TIMER" and alarm time appear on the display and the digit of hour of it is blinking.
2. Press the ◀◀ or ▶▶ Button on the unit or Remote Control repeatedly to set the Hour of alarm. (Make sure the PM Indicator appear on the display if the alarm time is PM and the AM Indicator is appear on the display if the alarm time is AM).
3. Press the ALARM Button again, the digit of Minute will blink.
4. Press the ◀◀ or ▶▶ Buttons repeatedly to set minute.
5. Press the ALARM Button again, "Cd" will appear on the display.
Press the ◀◀ or ▶▶ Buttons repeatedly to select the weak up mode as desire as below:
 - Cd= CD Mode
 - FM rd= FM Radio
 - AM rd= AM Radio
 - bu= Buzzer
7. When finished setting, press ALARM Button again to save the settings and exit. The actual time will appear on the display and the indicator "TIMER" will stop blinking.

Important:

- If radio AM/FM was selected as the weak up mode, received the desired radio station before activate alarm. Otherwise, when Alarm goes off, no sound output from the speaker or sound weak.
- If CD was selected as weak up mode, make sure you were place the CD disc into the CD disc tray before activate alarm. Otherwise, when Alarm goes off, no sound output from the speaker.
- In power on mode, alarm will not functioning.

Shut off alarm:

- When alarm goes off, press the ALARM Button to turn off alarm, the alarm will be reset for next day. (The indicator "TIMER" will keep in display).
- To turn off the alarm completely (not reset for next day). Press the ALARM Button repeatedly until the indicator "TIMER" disappear on the display.

CARE AND MAINTENANCE

 
Caring for Compact Discs

Treat the disc carefully. Handle the disc only by its edges.


Never allow your fingers to come in contact with the shiny, unprinted side of the disc.

Do not attach adhesive tape, stickers, etc.

To the compact disc label.



Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit. If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched). When cleaning the disc, wipe in straight lines from the center of the compact disc to the outer edge of the disc. Never wipe in circular motions.

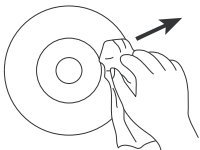 

This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly. Compact Discs should be stored in their cases after each use to avoid damage.



Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.

Do not stick or write anything on either side of the compact disc, Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit


To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.

The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts. Mild soap and a damp cloth may be used on the front panel.

TROUBLE SHOOTING GUIDE

Symptom	Possible Cause	Solution
Power		
No power	Plug from AC Power Cord had not inserted to AC wall outlet.	Insert the plug to wall outlet having AC 120V~, 60 Hz.
Radio		
Noise or sound distorted on radio broadcasts	Station not tuned properly.	Retune the radio station.
	The location not good for radio reception.	Unwind the FM Antenna Wire on the rear of to full length and/or relocation it.
		Reassembly the unit to another location for better Radio reception.
No sound	Volume at minimum.	Increase Volume level by press the VOL + (VOL UP) Button.
BT		
BT not functioning	The BT Device had not paired to the unit.	Paired the BT Device to the unit as page 8-9
Sound distortion	The BT Device too far from the unit.	Place the BT Device close to the unit.
CD		
CD not play	Unit not set to CD mode.	In power on mode, press the FUNCTION Button repeatedly until "----" or "no" (No Disc) appear on the display to enter to CD playback mode.
	CD is installed incorrectly.	Place the CD disc on the CD tray, with the printed label side up.
Distortion or Intermittent sound	Dirty or defective disc.	Try others CD disc.

GENERAL SPECIFICATIONS:

Power Source:	AC 120V~, 60 Hz, 15W
Clock back up:	DC  4.5V, 3 x AAA size batteries; Not included
Audio Power:	1.2 W (RMS) x 2
Impedence of Speakers:	8 Ohm; 2W
Radio Band Coverage:	AM 520 - 1710 kHz FM 87.5 - 108 MHz
BT Version:	2.1 + EDR
BT Effective Range:	32 feet in open area

ACCESSORY:

- 1 x User's Manual
- 4 X Assembly screws (3 x 18)

**SPECIFICATIONS AND ACCESSORY ARE SUBJECT TO CHANGE
WITHOUT NOTICE**

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email: service@craigelectronics.com