

ANIMALS
TALK!

LES ANIMAUX
PARLENT !
LOS ANIMALES
HABLAN!
DIE TIERE KÖNNEN
SPRECHEN!
GLI ANIMALI
PARLANO!

- Interactive sound feature.
- Drop a piece inside to hear one sound, pull it out to hear another sound.
- Each piece makes two different sounds.

- Émet des sons interactifs.
- L'objet produit un son quand il est introduit et un autre son quand on le retire.
- Chaque objet produit deux sons différents.
- Con mecanismo interactivo de sonido.
- La pieza produce un sonido cuando se le introduce y otro cuando se le retira.
- Cada pieza hace dos sonidos distintos.
- Interaktive Geräusche.
- Beim Hineinwerfen ertönt ein Geräusch und beim Herausziehen ertönt ein anderes Geräusch.
- Jedes Teil macht zwei verschiedene Geräusche.
- Produce suoni interattivi.
- L'oggetto produce un suono quando viene fatto cadere e un altro suono quando viene recuperato.
- Ogni oggetto emette due suoni diversi.



9+
m

ANIMALS
TALK!

LES ANIMAUX
PARLENT !
LOS ANIMALES
HABLAN!
DIE TIERE KÖNNEN
SPRECHEN!
GLI ANIMALI
PARLANO!



Big Top Sounds™

Activity Toy

Jouet d'activités

Juguete de actividades

Aktivitätsspielzeug

Gioco attività

- Push star on door to activate.
- Pour déclencher, appuyer sur l'étoile située sur la porte.
- Zum Aktivieren auf den Stern an der Tür drücken.
- Per attivare, premere la stella sulla porta.
- Para activar, oprima la estrella de la puerta.

- Battery Replacement Instructions
- Remplacement des piles
- Istruzioni per la sostituzione delle batterie
- Anweisungen für den Batteriewechsel
- Instrucciones para cambiar las pilas

1. Open Flap on bottom of truck.
2. Using a Philips screwdriver, turn screw in the center of the battery compartment door until it's loose.
3. Then, using two fingers, squeeze and lift both door clips AT THE SAME TIME to open door.
4. Remove exhausted batteries and replace with 3 fresh AA batteries.
5. Snap door closed and tighten center screw.
6. Close flap on bottom of truck.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

10. Non cortocircuitare i morsetti di alimentazione.

1. No combine pilas viejas con nuevas.
2. No mezcle pilas alcalinas, convencionales (cinc/carbono) y recargables (níquel/cadmio).
3. Las pilas que no son recargables no se deben recargar.
4. Saque las pilas recargables del juguete antes de recargarlas.
5. Las pilas recargables deben recargarse siempre con la supervisión de un adulto.
6. No mezcle pilas de clases diferentes ni pilas nuevas con pilas viejas.
7. Utilizar solamente pilas del mismo tipo que las indicadas.
8. Coloque las pilas en la dirección indicada de los polos.
9. Las pilas gastadas se deben sacar del juguete.
10. No provoque cortocircuitos en los terminales de alimentación.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Different types of batteries or new and used batteries are not to be mixed.
7. Only batteries of the same equipment type as recommended are to be used.
8. Batteries are to be inserted with the correct polarity.
9. Exhausted batteries are to be removed from the toy.
10. The supply terminals are not to be short-circuited.

1. Ne pas mélanger des piles neuves et anciennes.
2. Ne pas mélanger des piles alcalines, standard (zinc-carbone) et rechargeables (nickel-cadmium).
3. Ne pas recharger des piles non-rechargeables.
4. Retirer les piles rechargeables du jouet avant de les recharger.