

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed.

THIS OUTDOOR SMART WI-FI YARD STAKE IS A "GROUNDED" DEVICE

The male plug contains a ground pin and is only intended for use with a three-pronged grounded outlet.

DO NOT ATTACH A DEVICE THAT EXCEEDS THE UNIT RATINGS

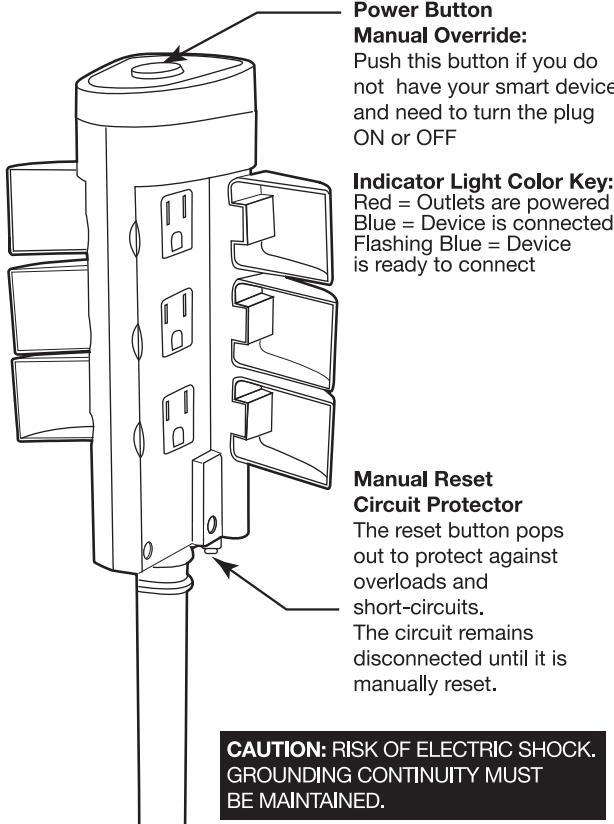

TROUBLESHOOTING TIPS

If you are having difficulty connecting:

- Make sure the Wi-Fi network is a 2.4 GHz network. The outdoor Smart Wi-Fi Yard Stake will not connect to a 5 GHz network.
- Test your Wi-Fi network with other devices such as your phone to make sure it is operating properly.
- The Wi-Fi connection may not have good coverage during set up. Try moving the Smart Wi-Fi Yard Stake closer to your Wi-Fi router.
- Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.

Devices plugged into your Smart Wi-Fi Yard Stake must be ON in order to be controlled via the mobile app.

Please also check the App User Guide for more information

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC REGULATORY STATEMENT

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:

The equipment complies with IC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

MODEL:

PLUG/WIFI/STK/WP (P)



Smart Wi-Fi Yard Stake

Quick Install Guide



Works with
Feit Electric app



Only supports
2.4GHz Wi-Fi
networks

FCC RF exposure statement:
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance between 20cm the radiator your body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

French:

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

Cet appareil ne doit pas causer d'interférences.

Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF:

L'équipement est conforme à la limite d'exposition aux radiations de la IC établie pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

ELECTRICAL RATINGS:

125VAC 60 Hz

15A, Max. 1875W Resistive or Tungsten

FEIT ELECTRIC COMPANY

Pico Rivera, CA, USA

(800) 543-3348 | FAX (562) 908-6360

www.feit.com


Getting Started:

1

Download the Feit Electric app on your smart device





Feit Electric app

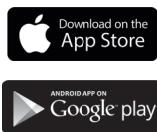

2

Assemble and Install your outdoor Smart Wi-Fi Yard Stake

A) Firmly push the barbed stake into the bottom of the Smart Wi-Fi unit until a firm connection is made.

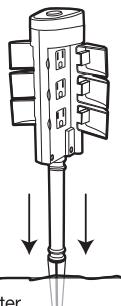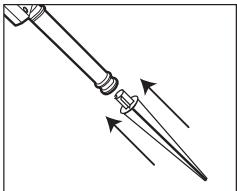


B) With the barbed stake attached, firmly push the Smart Wi-Fi unit into the ground at a suitable location.

NOTE: When installing product in hard or dry soil, water the soil several hours beforehand to make the installation easier. Do not force stake into the ground as excess force can break or bend the stake.

3

Plug in your outdoor Smart Wi-Fi Yard Stake

Plug the Smart Wi-Fi Yard Stake into an outdoor rated GFCI receptacle with an appropriate outdoor cover.

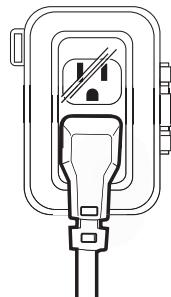

WARNING: These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC).

4

Launch and use the Feit Electric app to complete the set up

Tap Add Device or the + sign, then select Outdoor Plug and confirm. You will be prompted to enter your Wi-Fi network and password.

Indicator light must be rapidly blinking to connect. If not already blinking, press and hold the power button for five seconds.


Be sure to connect to a 2.4 GHz Wi-Fi network that covers your installation location.

5

Plug your device into the outdoor Smart Wi-Fi Stake

Ensure your device is switched to the ON position and plug it into the outdoor Smart Wi-Fi Yard Stake.

NOTE: To protect the unit, each outlet has an individual spring-operated cover which closes automatically when a cord is unplugged or not in use.

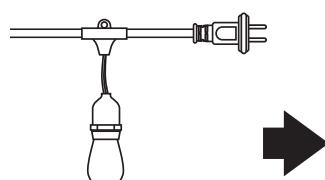


DEVICE



OUTDOOR SMART WI-FI YARD STAKE

(Optional) Connect to Google Assistant or Alexa using the in App guide

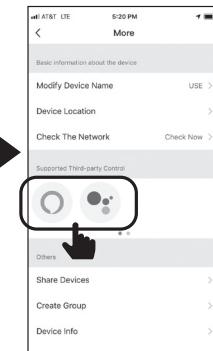

Tap Pen icon

Choose Alexa or Google

Need Help?

FAQs and the latest versions of user guides can be found at feit.com/help and feit.com/smart. To reach customer support please visit feit.com/contact-us

WARNING:

- CAUTION – Risk of Fire. Not for permanent installation. Use only with outdoor equipment, Christmas-tree, or other seasonal decorative-lighting products having a total of 12 Ampere maximum. Do not install or use this product for more than a 90-day period.
- If using Christmas tree or decorative-lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midget (pushin) lamps to this cord set.
- Cord sets shall be plugged into a GFCI-protected receptacle.
- If using an outdoor-use cord set for an extended period of time (greater than 90 days) please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a Licensed electrician for proper installation of permanent wiring.
- After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.
- SUITABLE FOR OUTDOOR USE, WET LOCATION. STORE IN DRY LOCATION WHEN NOT IN USE
- For temporary outdoor installation and use - Not to exceed 90 days.