

Common questions

Why do I need to enable HDMI-CEC and ARC on my TV?

HDMI-CEC lets you control your TV's power with the Roku remote while ARC makes sure all of your TV inputs send sound through your Streambar SE. TV manufacturers may use different names for these settings and some, including Roku TVs, automatically enable them. Refer to your TV manual or visit the link below for help.

How do I use my Streambar SE remote with my Roku TV?

By default, your Streambar SE will work as a soundbar when connected to a Roku TV, so you only need to use your Roku TV remote. To use your Streambar SE as a streaming player, visit "TV inputs" in your Roku TV's settings menu. There, you can choose to show your Roku Streambar SE's HDMI input tile on your Roku TV home screen.

Why do I need to create a Roku account?

You'll need a Roku account to stream, add channels, easily manage subscriptions, rent movies, and more.


Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

Visit go.roku.com/streambar-se for more information

Easily expandable

Roku
Wireless Bass

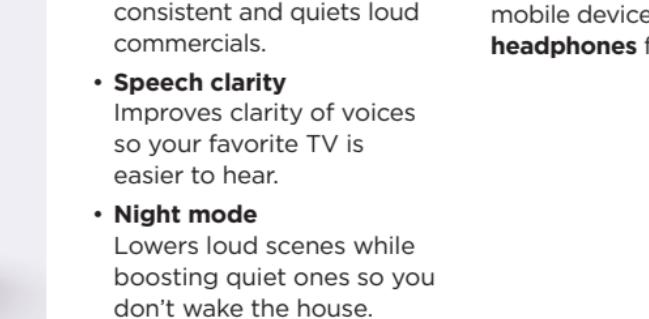

Add some boom to your room.

Sold separately.

Tips and tricks

Using sound settings

While streaming, press ***** to view **Sound settings**, like:

- **Volume leveling**

Helps keep your volume consistent and quiets loud commercials.

- **Speech clarity**

Improves clarity of voices so your favorite TV is easier to hear.

- **Night mode**

Lowers loud scenes while boosting quiet ones so you don't wake the house.

Pairing a Bluetooth® device

- From the home screen, go to **Settings > Remotes & devices**.

- Choose either **Smartphones & tablets** to stream from your mobile device or **Wireless headphones** for private listening.

Need more help?

support.roku.com



Video tutorials



Wi-Fi help

Save money. Stream big.

streamandsave.com



Free TV



Live TV

See what's streaming for free, tips, and more

roku.com/blog

Follow us



4100001003_01

Just wait until you hear this

Roku® Streambar® SE

QuickStart Guide

Roku®

© 2023 Roku, Inc. All rights reserved. Roku, Roku TV, the Roku logo, Streambar, the purple d-pad design, and the purple fabric tag design are trademarks or registered trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.

What's included



Power adaptor



Two AAA batteries





Premium High Speed HDMI® Cable




Optical cable (optional)
Only use if your TV doesn't have an HDMI-ARC port.

Details

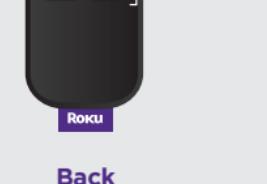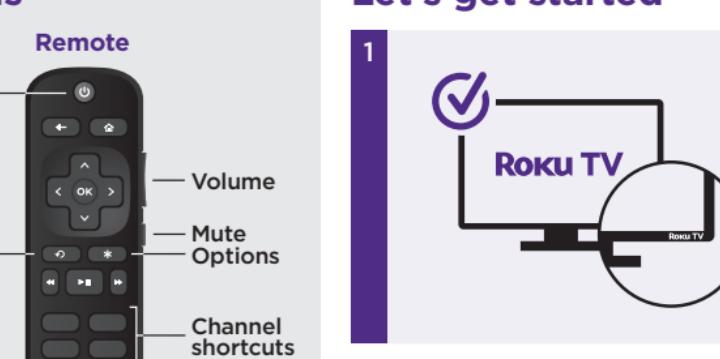

Let's get started

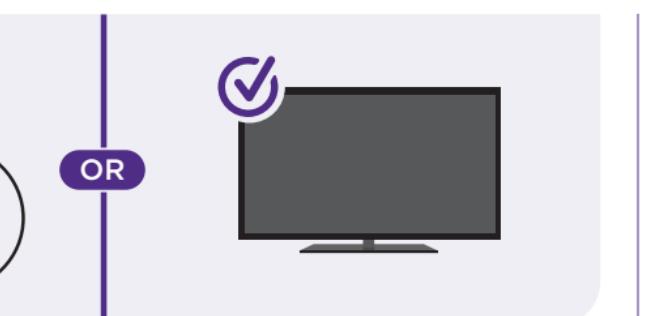

STEP 1: Adjust TV settings


Have a Roku TV™?

Just use the remote that came with your Roku TV and follow **steps 2 and 3**. The rest is automatic, even linking your Roku account.



STEP 2: Connect to power

You may need to enable your TV's HDMI-CEC and ARC settings. TV manufacturers use different names for these settings. For help, visit go.roku.com/streambar-se

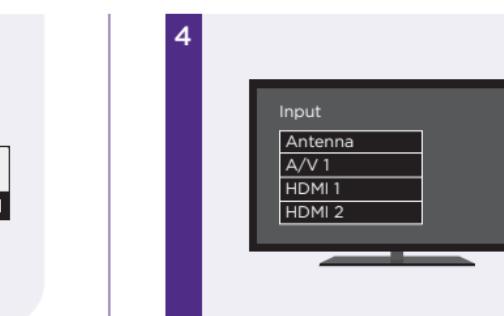


STEP 3: Connect to TV

Use the included power adaptor to connect your Streambar SE to a wall outlet.




STEP 4: Select input

Use your TV remote to select the HDMI input (source) you used to connect your Streambar SE.

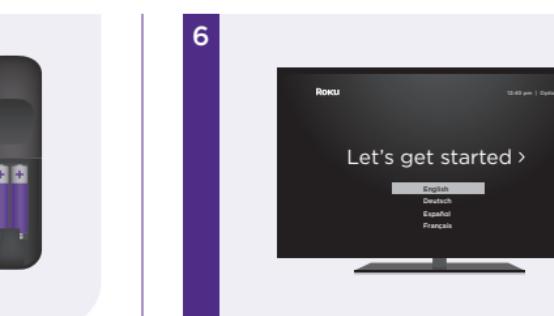

STEP 5: Insert batteries

 Slide open the cover on the back of your remote and insert the included batteries. Your remote will be ready to use.



STEP 6: Follow on-screen setup

Follow the instructions on your TV screen. Activate your Streambar SE by using your computer or smartphone to link to a Roku account.

IMPORTANT:
Roku never charges for activation or support.

Roku® Streambar® SE (“Streambar”), including Roku Remote (“Remote”), and any accessories that may have come with the product, collectively the “Product”

The Streambar which accompanies this Important Product Information allows you to stream online entertainment to your TV and hear audio from the built-in speakers. A Roku account is required to activate your Streambar. When you sign up for a Roku account, you will be asked to provide your contact information and a payment method so that you can easily rent movies or sign-up for additional services. Your authorization is required for any such charges. There are no equipment rental fees for owning the Streambar. However, a paid subscription or other form of payment may be required to access some channels or content. Channel availability is subject to change and varies by region. Check with each channel provider for specific bandwidth requirements to stream SD, 720p, 1080p HD, 4K, and HDR content (subject to TV compatibility).

Please read and keep all safety and use instructions.

Important Product Information Safety Precautions

 Any electrical device, if used improperly, has the potential for causing fire, electrical shock, property damage or personal injury. To help ensure accident-free and enjoyable

operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Regularly inspect the AC power adaptor and power cable, as applicable to your Product, for damage.
- If the Product has been damaged, cracked or punctured, or if the Product functions in an abnormal manner, produces unusual sounds or smells or becomes hot, immediately stop use, unplug the AC power adaptor or power cable from the electrical outlet and disconnect any other cables.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- For more information on product safety and troubleshooting, please go to support.roku.com

Use and Handling

- The Streambar contains magnetic material. Contact your physician if you have questions on whether this might affect the operation of your implantable medical device.
-  The Product is not a toy. Keep out of reach of children and pets. The Product packaging may include plastic bags, cable ties and fasteners. Dispose of these properly and keep them out of reach of children, as they could present a choking hazard.
- The Product should not be exposed to dripping, spraying, or splashing.
- Do not submerge in water or allow liquid to get into the Product.
- Do not touch the Streambar or connected

cables during an electrical storm.

- Do not allow small particles or other foreign objects to get into the Product.
- Do not expose the Product to high temperatures, high humidity, direct sunlight, heat sources, smoke or steam.
- Do not place naked flame sources, such as lighted candles, on or near the Product.
- Do not place anything on top of your Streambar, cover or place it in an enclosed cabinet or on a soft surface; it may cause the Streambar to get hot or overheat.
- Do not drop, crush or disassemble the Product.
- Do not clean with chemical cleaners. Use a soft, dry cloth.
- Do not place Streambar directly on oil or wax based wood finished surfaces.
- Never attempt to repair or disassemble the Product yourself due to the danger of electric shock/injury. Any modification to the Product may cause damage not covered by the warranty.
- Use intended for indoors only.
- Dispose of the Product according to local standards and regulations.
- The Remote may have a jack for earpieces. Use only compatible earpieces. Permanent hearing loss may occur if the Product or earpieces are used at high volume. To prevent possible hearing loss, limit the amount of time you use the Product or any earpieces at high volume.



Never insert batteries positive (+) side first.

Replacing batteries: Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries.

Disposal of batteries: Always dispose of batteries following federal guidelines or local ordinances. Do not dispose of used batteries in an open fire.

Warning Signs: If your Product gets warm/hot during use, discontinue use and contact Roku Customer Support immediately at support.roku.com. There is a risk of explosion if a battery is replaced by an incorrect type.

License and Warranty

Use of the Product constitutes your agreement with the End User License Agreement set forth herein and at roku.com/legal and the limited warranty set forth below. If you disagree and you are within the allowable time period for returns under the return policy applicable to your Product, you may return the Product to the place where you obtained it for a refund, subject to the terms of the applicable return policy.

Limited Warranty & Warranty Service Process

Limited Warranty

For any Product purchased and delivered to end users in the US, go to support.roku.com for the limited warranty terms and conditions. You may also request a copy of such terms by mail by contacting us at 1155 Coleman Ave, San Jose, CA 95110.

Important Tips About Battery Handling

Inserting batteries: Be sure to insert each battery negative (-) side first, pushing it into the coil and then into the compartment.

Additional Legal Notices

[Federal Communication Commission](#)

[Interference Statement](#)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by Roku, Inc. could void the user's authority to operate this equipment.

2.4 GHz band operation of this product in the US is firmware-limited to channels 1 through 11.

IMPORTANT NOTE:

[FCC Radiation Exposure Statement](#)

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

Apple, Apple Home, AirPlay, HomeKit and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Google and Google Home are trademarks of Google LLC.

Third party features and services may be subject to change or removal without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Roku is under license.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Copyright © 2023 Roku, Inc. All rights reserved.



4100001004_01