


Settings and Operations

Note


Depending on certain TP or satellite, the Network Search function may not work.

10. To use the Multi Search function, connect the DiSEqC switch or set the DiSEqC 1.2 of Installation. You can search all the channels from the satellites which you select.

Select the satellites by FAV button, and press Multi Search.

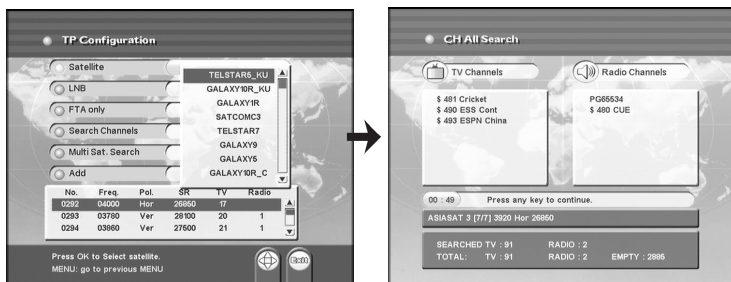

11. In case of searching a certain satellite which can not be searched by TP Search, add channels by PID. Select Add Channel and input proper Channel name and input the values of Video PID, Audio PID and PCR PID. Then, press OK button from the Add item.

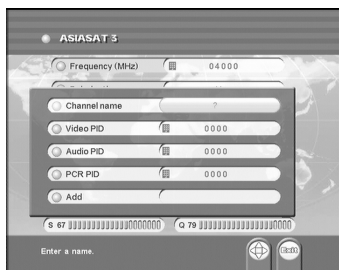


[Network Search]


Network search function is enable to search new TPs and all channels in all TPs.

*Network Search : TP Configuration --> Search Channels(Network Search)
--> Network Search(Search TP)

4.2 Viewing TV(or Radio)

1. Press the Power button.
2. Press the TV(or Radio) button.
3. If you want to see all TV channel list, click the MENU button and then select the TV Channels(or Radio Channels) window will appear.

Click the  , you will see current Satellite name box. Select any satellite in the satellite name box, only the TV list of selected satellite will be displayed.

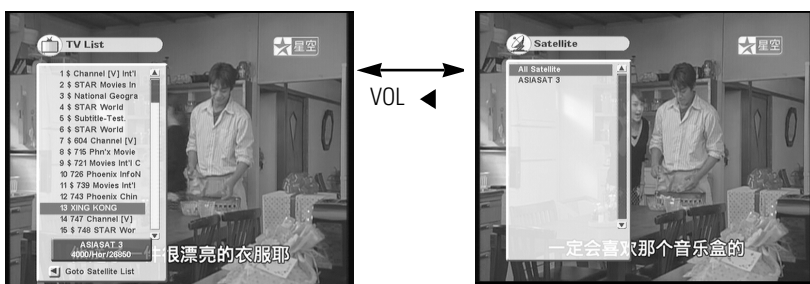

Viewing Favorite Channel



1. Press FAV key.
2. Select a CH  . To move to next or previous page, press PAGE UP/DOWN buttons on Favorite TV(or Radio) List.

Settings and Operations

Edit TV Channels / Edit Radio Channels

From these menus you can create and edit channel list.

Press OK button from Edit TV Channels and similar screen will be shown as below.



Edit Satellite List.

You can select your own satellites by creating favorite satellite list.

To change the name of satellites, press "INFO" button on RCU.



Arrange channel

To change the channel orders from TV List, press OK button from your desired channel. Then you should move to desired number by pressing CH ▲ ▼, after then press OK button. Its orders will be changed.

Delete channel

To delete a certain channel from current TV List, press CLEAR button on the channel to be deleted. To confirm the deletion, press CLEAR button once more. To cancel the deletion procedure, press FAV button.