

# Installation Guide

## 1. Requirement

|                  |  |
|------------------|--|
| Memory           | 256MB RAM or higher  |
| Operating System | Windows 2000/XP/XP-Tablet/Windows VISTA  |
| CPU              | Pentium500MHz or better/compatible CPU   |
| Device for       | Lap-top computer and PC supported to<br>USB1.1 port and CD-ROM   |
| Operating area   | 148x111, 148x83[wide], 210x158, 210x118[wide],<br>297x223, 297x167[wide]mm<br>(NAVInote Pen mode : A4, Letter) |
| Resolution       | about 600 DPI (Sampling) / valid with 0.2mm  |
| Power resource   | USB 5V Power   |
| Application SW   | "NAVIboard 2.0", "MS Office Annotator", "HWN"  |

## 2. Contents



Software CD  
- Operating SW  
- Application SW  
- User Guide



Installation Guide



USB cable



NAVInote - Wireless  
TabletMouse  Wireless  
 Wired



Mouse pen-tip  
(Included in digital pen)



Tip of ball point pen  
(for NAVInote only)



Station(Receiver)



Cell Battery

(Compatible with LR41, L736, AG3, G3, V36A)

## 3. Hardware

### 1. Station

1) USB connector : It stays on the back of the station. Which is connected to computer with MINI USB connector.

### 2. Digital pen

- Digital pen is designed to be operated with any position, thus grip the pen naturally.

- The pen and the station must be communicated directly by ultrasonic and IR, Therefore, be clear out obstacles between digital pen and station.

1) Pen-tip : It operates like pressing Left button of Mouse with pressure of pen-tip.

2) L/R button : It stays on grip area of the pen and operates with left and right button of Mouse.

3) Replacement of pen-tip : Push Eject bar down in the back of pen and pull the pen-tip out. Insert an alternative pen-tip at the end.

Do not push pen-tip hard if it is blocked.  
Remove pen-tip and insert it again smoothly.


**If you don't use the pen for a while, pen will be on sleep mode.**  
It will be woke up pressing any button automatically. (It is not error.)

## Installation Guide

- 4) Battery insertion in wireless pen : Turn the pen battery cap to counter clockwise, open and insert batteries. Bulgy side(- terminal) must be forward to Pen head.



- 5) Battery rejection : Turn the pen battery cap to counter clockwise and open the pen battery cap. Pull the battery terminal out such as below, you can separate batteries from the pen.

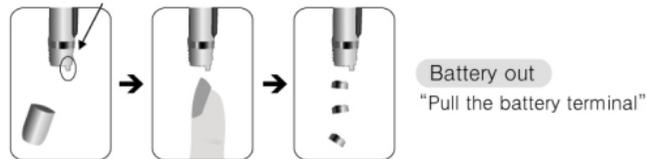

- 6) Connects Wired pen : It is operated with USB connector of wired pen to connect with Computer or USB hub.

## 4. Operation of Product

### 4-1. Hardware Installation

Insert Software CD into CD-Rom drive and install software on auto-executed pop-up window. If it would not be installed automatically, please execute "POP Starter.exe"

-If you connect MINI USB located in the back of the station to the computer, it is connected with your PC as hardware detection automatically. It comes icon like Picture 1. in connection on under-right side of screen.



Picture 1


(Monitor icon is displayed with blue color in right connection. Device is operating properly.)



Picture 2

(If it does not connect, icon will be displayed with gray color like picture 2.)

### 4-2. Software Installation

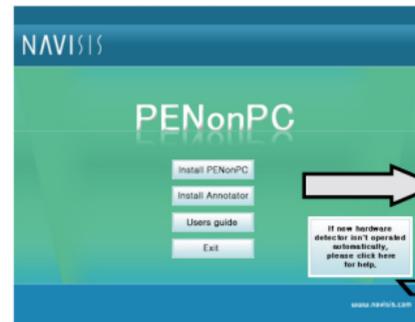

Install PENonPC S/W


Install Office Annotator

User guide

Close

If new H/W detector would not work automatically, please click to refer to help screen


## 4-2-1. Installation of PENonPC

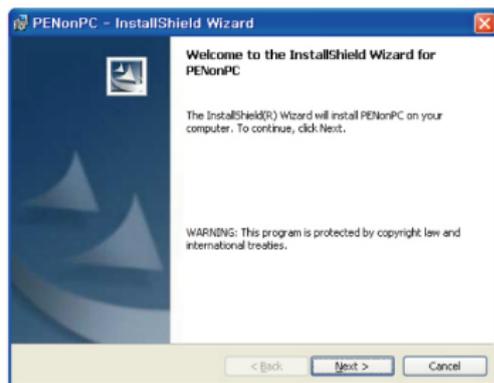

1. When it comes pop-up window, press "Next" button.




3. If you can see left window, click "Finish" button and complete installation. (Please refer to User Guide for more information in CD. Users can select to read the User Guide from the automatic pop-up window after inserting CD to CD-Rom drive. If the pop-up window would not be seen automatically, see the manual in Help folder.)

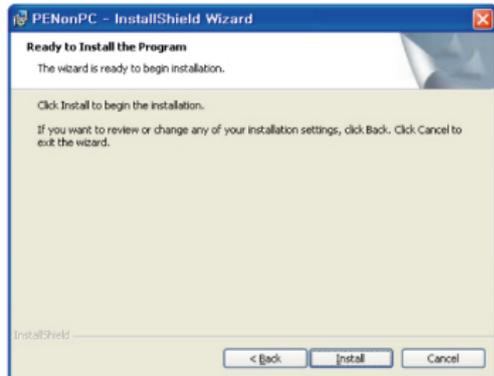


2. If you can see the left, click "Install" button.

## 4-2-2. Installation of Office Annotator

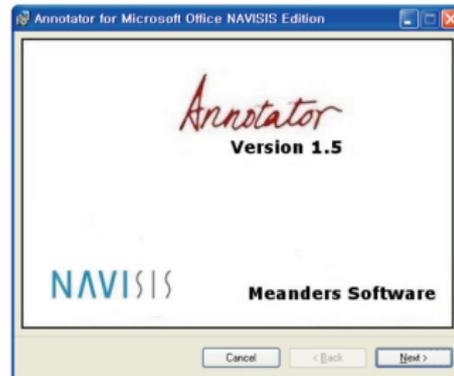


\* Office Annotator is a free handwriting software for in Microsoft Office. In order to use this software properly, Microsoft Word, PowerPoint, Excel and Outlook must be pre-installed before installation of office Annotator.  
1. When it comes such as the left, click "Next" button.

⋮ (Next on)

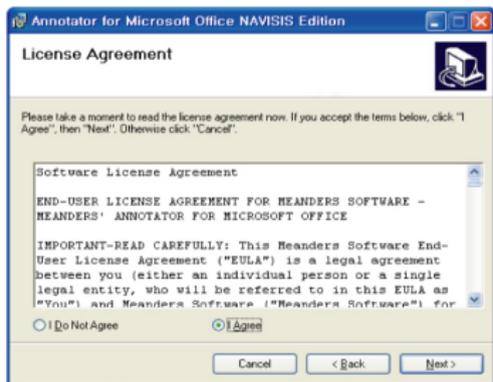


2. When you see like the left, select "I Agree" and press "Next" button.

⋮ (Next on)

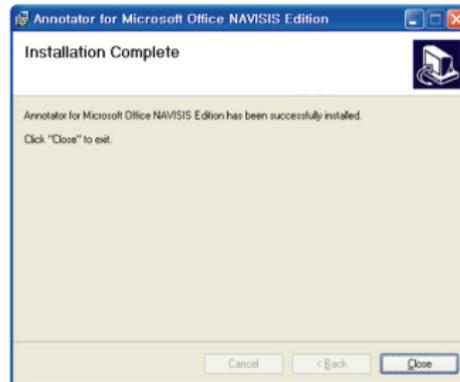


4. When you see the left pop-up, click "Close" button and complete installation of operating software. (\*Please refer to the USER GUIDE in CD if you need. If it does not operate automatically, refer to the manual in Help.)

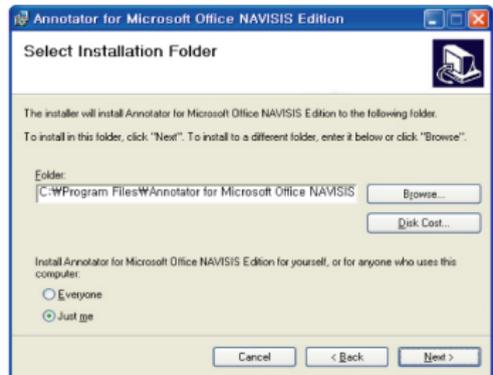

3. If it comes such as left window, select Everyone for all PC ID users or Just me for only present log-in ID user, and click "Next" button.

### 4-2-3. User Manual

You can read manuals to click below buttons.

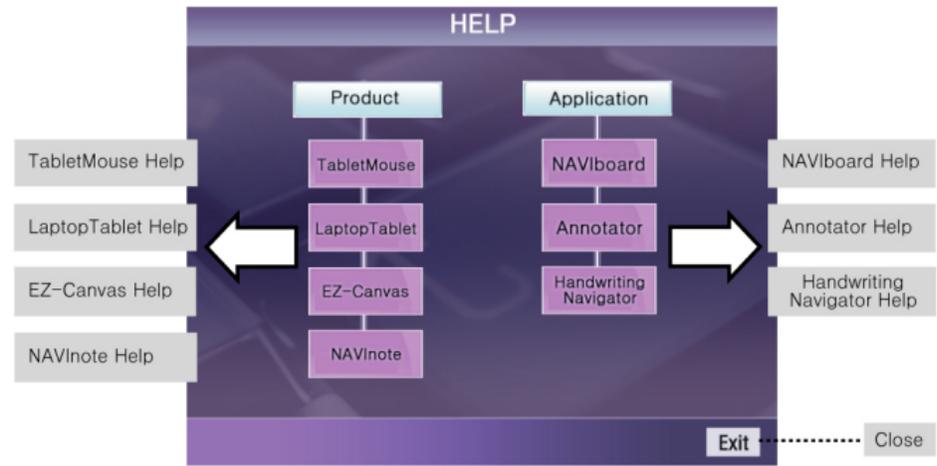

# Warranty Card

|         |     |
|---------|-----|
| Name    | TEL |
| Address |     |

Distributor(Agent): TEL Seller

Date Warranty Period from (1 year)

Purchaser Repair Standards

● Serial No. :

|   | Description | Warranty   |                           |
|---|-------------|------------|---------------------------|
|   |             | Within     | Over                      |
| Repair for out of order/error on usual circumstance |             | Replace    | Chargeable repair/replace |
| Careless/faults by user                             |             | Chargeable | Chargeable repair/replace |

| Grade                | Note   |
|----------------------|--|
| FCC Part 15B Class B | This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:<br>(1)This device may not cause harmful interference, and<br>(2)This device must accept any interference received, including interference that may cause undesired operation |

\* Contact - Web : [www.navisis.com](http://www.navisis.com) / e-mail : [sales@navisis.com](mailto:sales@navisis.com)

### FCC NOTICE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.  
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,  
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE  
OPERATION.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.