


FRONTSIDE

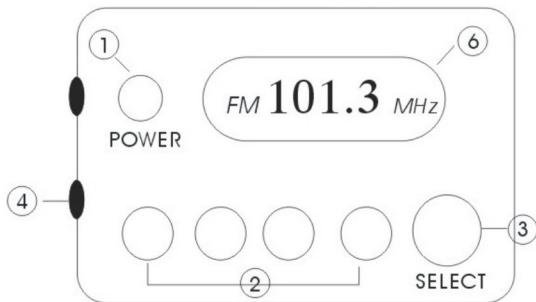

BACKSIDE



- ① Power Switch: Hold it for 6sec to turn on/off.
- ② Press 3sec to save frequency setting.
- ③ Turn left or right to select suitable FM frequency channel.
- ④ Audio Jack (Audio cable included).
- ⑤ Battery compartment: 2 x AAA batteries for operation
- ⑥ During the transmission, the transmitter will automatically be turned off, when it is not detected any audio signal frequency within 15sec.

FCC Statement

- ① This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- ② Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.