



Powered by **Microsoft®**

UVO SYSTEM USER'S MANUAL

SEDONA

A9MS7-F2004



The Power to Surprise

Congratulations on the Purchase of your new UVO system!

Your new UVO system allows you to enjoy various audio and multimedia features through the main audio system.

For the latest information about this product or other Kia products and accessories, visit <http://www.Kia.com>

Please read this manual to get the full benefit of the system.

These operating instructions are designed to help ensure that you can operate the UVO system in a proper and convenient way.

We recommend that this manual be kept in the car so that it will be easier for you to find information in case of an emergency.



Copyright(c) 2011 Kia Motors America, Inc. All Rights Reserved.

Warning: The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Bluetooth®

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth*® SIG, Inc. and any use of such marks by Kia is under license. A *Bluetooth*® enabled cell phone is required to use *Bluetooth*® wireless technology.

Microsoft®

Microsoft is a registered trademark of Microsoft Corporation in the United States and/or other countries.

zune®

zune® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

SIRIUS XM

Sirius™, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Table of contents

WARNING & SAFETY INFORMATION	PART 1 GETTING STARTED	PART 2 AUDIO FEATURES
Safety Symbols	Controls and Features	FM/AM MODE
FCC Information	Control Panel	FM/AM Mode Screens and Features
Warning	Steering Wheel	Listening to the FM/AM radio
Caution	Basic Features	1. Selecting a broadcast frequency
	System Power	● Selecting through SEEK
	1. Turning System Power On	● Selecting through manual search
	2. Turning System Power Off	● Storing presets
	Select Display Language	2. Scanning FM/AM broadcast frequencies
	Resetting and Initializing UVO system	3. Viewing FM/AM Station information
	1. Resetting the system	SIRIUS™ MODE
	2. Initializing the system	SIRIUS™ Mode Screen and Features
	Sound and Display Settings	Listening to the SIRIUS™ radio
	Sound Settings	1. Selecting a SIRIUS™ channel
	1. FADER/BALANCE	● Selecting through SEEK
	2. TONE	● Selecting through manual search
	3. Touch Screen Beep	● Selecting through preset
	4. Speed Dependent Volume Control	● Selecting through channel search
	Display Settings	● Selecting through SIRIUS™ category list
	1. Setting Brightness	2. Using Skip
	● Automatic Brightness Control	3. Storing presets
	● Manual Brightness Control	4. Viewing SIRIUS™ channel information
	Turning Display On and Off	

Table of contents

MEDIA MODE

Common Features	2-9
● Play/Pause	2-9
● REW/FF	2-9
● Jump	2-10
● Using Repeat	2-10
● Using Shuffle	2-10

AUDIO CD MODE

Cautions upon handling Audio CDs	2-11
1. Supported disc format	2-11
2. Disc/content format and compatibility	2-12
AUDIO CD Mode Screen and Features	2-13
Inserting/Ejecting a Disc	2-13
1. Inserting a Disc	2-13
2. Ejecting a Disc	2-13
Listening to an Audio CD	2-14
Selecting a CD track	2-14
1. Selecting through Track Up/Down	2-14
2. Selecting through manual search	2-14

MP3 CD MODE

Cautions upon handling MP3 CD	2-15
MP3 CD Mode Screen and Features	2-16
Listening to an MP3 CD	2-16
Selecting an MP3 CD song	2-17

1. Selecting through song Up/Down	2-17
2. Selecting through manual search	2-17
3. Selecting from MP3 list	2-17
4. By Artists, Albums, Genres, Songs Composers	2-17

Explore CD	2-18
Viewing song information	2-18
Copying songs into JUKEBOX	2-18
1. Copying the current song	2-18
2. Copying songs from list	2-19

USB MODE

Cautions upon handling USB MP3	2-20
Precautions upon handling USB	2-21
Connecting your USB device	2-22
USB Mode Screen and Features	2-22
Listening to USB music	2-23
Selecting USB music	2-23
1. Selecting through song Up/Down	2-23
2. Selecting through manual search	2-23
3. Selecting from the list	2-24
4. By Folders, Artists, Albums, Genres Songs, Composers	2-24
Explore USB	2-24
Viewing song information	2-25

Copying songs into JUKEBOX	2-25
1. Copying the current song	2-25
2. Copying songs from list	2-26

iPod® MODE

About iPod®	2-27
1. Trademark	2-27
2. Connecting your iPod® Device	2-27
iPod® Mode Screen and Features	2-28
Listening to your iPod®	2-28
Selecting iPod® music	2-29
1. Selecting through song Up/Down	2-29
2. Selecting through manual search	2-29
3. Selecting from the list	2-29
4. By Artists, Albums, Genres, Songs, Podcasts, Composers, Audiobooks	2-29
Viewing song information	2-30

zune® MODE

About zune®	2-31
1. Trademark	2-31
2. Connecting your zune® Device	2-31
zune® Mode Screen and Features	2-31
Listening to your zune®	2-32
Selecting zune® music	2-32
1. Selecting through song up/down	2-32

2. Selecting through manual search	2-32
3. Selecting from the list	2-32
4. By Songs, Genres, Albums, Artists, Playlists	2-33
Viewing song information	2-33
AUX MODE	
AUX Mode Screen	2-34
Connecting an AUX media device	2-34
Listening to AUX media	2-34
BT AUDIO MODE	
BT Mode Screen and Features	2-35
Listening to music from your <i>Bluetooth</i> [®] wireless technology enabled device	2-36
Selecting a song	2-36
REW/FF a song	2-36
JUKEBOX MODE	
JUKEBOX Mode Screen and Features	2-37
Listening to JUKEBOX	2-38
Selecting a JUKEBOX song	2-38
1. Selecting through Track Up/Down	2-38
2. Selecting through manual search	2-38
3. Selecting from the list	2-38
4. By Artists, Albums, Genres, Song, Composers	2-39

Adding Favorites	2-39
Playing Favorites	2-40

Memory Management

Checking System Information	2-41
Deleting JUKEBOX	2-41
1. Deleting JUKEBOX	2-41
2. Deleting all files	2-42

PANDORA MODE

About PANDORA	2-43
1. Trademark	2-43
2. Before Starting PANDORA	2-43
PANDORA Mode Screen and Features	2-44
Listening to your PANDORA	2-44
Selecting PANDORA station	2-45
Bookmark Track or Artist	2-45

PART 3 PHONE FEATURES

Using your *Bluetooth*[®] wireless technology

Handsfree system	3-2
Smart driving practices	3-3

Pairing your handset device to the handsfree system

Pairing a <i>Bluetooth</i> [®] wireless technology enabled device for the first time	3-4
Deleting a paired handset device	3-5
Connecting a handset device	3-6
Setting Priority	3-7

Using the phone features

Phone Mode Screens and Features	3-8
1. When a mobile phone is connected	3-8
2. When making a call	3-8
3. When receiving an incoming call	3-9
4. When on a call	3-9
Answering an incoming call	3-10
Rejecting an incoming call	3-10
Call waiting	3-10

Table of contents

Placing a call	3-11	1. Switching the call between handsfree and handset device	3-20	2. SIRIUS™	4-7
1. By recent calls	3-11	2. Transferring the handsfree call to your Handset device	3-20	3. MEDIA	4-8
2. By contact list	3-12	3. Transferring a call on your Handset device to handsfree	3-20	4. JUKEBOX	4-9
3. By dialing a number	3-12			5. PANDORA Radio	4-10
Contact list	3-13			Command List - UVO eServices Commands(Optional)	4-10
1. Downloading contact list (from mobile phone)	3-13			Command List - Phone Commands	4-11
Searching your contacts	3-14	Phone settings			
1. By alphabet	3-14	Setting Phone Volume	3-21	PART 5 UVO eServices(Optional)	
2. By name	3-15	SMS	3-22		
3. By number	3-16	Changing passkey	3-22	Using UVO eServices and Cautions	
Checking missed calls	3-17			5-2
Favorites	3-17	PART 4 VOICE COMMANDS			
1. Placing a call by favorites	3-17			The 911 Connect feature	
2. Adding favorites	3-18			may not operate in the following situations	
3. Deleting favorites	3-18			5-3
SMS	3-19	Conditions for voice command system			
1. Downloading SMS messages (from mobile phone)	3-19			About UVO eServices	
2. Checking an SMS message	3-19			5-4
3. Sending an SMS message (Custom Messages)	3-19	Operating Voice Command		Before using UVO eServices	
4. Editing Custom Messages	3-19	Using Voice Command	4-3	Installing the UVO eServices App on your Smartphone	5-6
Switching the call	3-20	Voice Command Help	4-3	Connecting <i>Bluetooth</i> ® wireless technology	5-6
		Turning Command Feedback On and Off	4-4	Activating UVO eServices	5-7
		Adjusting Voice Command Volume	4-5		
		Voice Command List			
		Command List - General Commands	4-6		
		Command List - Audio Commands	4-7		
		1. FM/AM Radio	4-7		

911 Connect		Parking Minder		PART 6 Rear Camera Display
Initiating a 9-1-1 Call	5-8	Sending Parking Location.....	5-13	
Roadside Assist		My Car Zone		Rear camera display
Roadside Assist	5-10	Curfew Limit Alert	5-14 6-2
Vehicle Diagnostics		Speed Alert	5-15	
Conducting Vehicle Diagnostics	5-11	eServices Guide		PART 7 TROUBLESHOOTING GUIDE
Scheduled Diagnostics	5-12	eServices Guide	5-17	
Conducting Auto Diagnostics	5-12	UVO eServices Settings		TROUBLESHOOTING GUIDE
		UVO eServices Activation	5-18	Before thinking the product has
		911 Connect Setting	5-18	malfunctioned..... 7-2
		Trip Info Sync Reminder Setting	5-19	Troubleshooting
		My Car Zone Setting	5-20	7-3
				PART 8 INDEX
				INDEX
			 8-2

WARNING & SAFETY INFORMATION

Safety Symbols

Warning

- When encountering this symbol in the manual, you must follow these recommendations to help avoid accidents that might cause serious injury or death, irreparable damage to your car, system or connected devices.

Caution

- When encountering this symbol in the manual, you must be very careful and follow the recommendations to help avoid being injured, damaging your car, system, parts or connected devices.

Note

- Information or recommendations for specific features that facilitate proper product use and functional understanding and/or provide information on terminology used within this manual.

FCC Information

This device complies with the Federal Communications Commission rules located at Code of Federal Regulations, Title 47, Part 15 ("FCC Rules").

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

FCC notification to users

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to help provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by consulting with a Kia dealer or an experienced technician for technical assistance.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

WARNING & SAFETY INFORMATION

Warning

Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and/or death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



- Read and understand all instructions before you use the system. If damage is caused by failure to follow instructions, the warranty will not apply.
- It is best to avoid operating the audio system while driving. Operating the audio system while driving could lead to accidents, severe personal injury and/or death.
- Do not dismantle, assemble, or modify the audio system.
- Do not look at the screen for long periods of time while driving.
- To reduce the risk of traffic accidents which could cause severe injuries and/or death.
- Set the volume to a level which allows you to be fully aware of external conditions.
- Use only the supplied mounting hardware for proper operation.

Caution



- Do not operate the audio system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.

- Do not expose the device to water.
- Never insert foreign objects into the slots or other openings on the device.

- Do not cause severe shock to the device. Direct pressure to the front side of the monitor may cause damage to the LCD or touch panel.

- In case of product malfunction, contact your nearest, or preferred, Kia dealer or service center.

- Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration.

- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

WARNING & SAFETY INFORMATION

Note

• SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call us at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes apply. All fees and programming are subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. Certain channels are not available on our Internet radio service or on mobile devices. SiriusXM Traffic available in select markets. See siriusxm.com/traffic for more information. © 2013 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

- Infinity is a trademark of Harman International Industries, Inc.
- UVO eServices is compatible with many popular smartphone devices. Please see MyUVO.com for phone compatibility.
- App Store and Google Play are service marks of Apple Inc. and Google Inc. respectively. No subscription fee for UVO eServices. No charge for the UVO eServices app. App uses your smartphone cellular data service. Normal cellular service rates will apply.
- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
- 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
- The Rear Camera Display is not a substitute for proper and safe backing-up procedures. The Rear Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

PART 1 **GETTING STARTED**

Controls and Features

Control Panel



※ No ∞ will be shown if the exterior Amplifier feature is not supported.

1 | DISC EJECT

Ejects the inserted disc.

2 | FM/AM

Turns on FM/AM mode. Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.

3 | SAT

Turns on SIRIUS™ mode.

4 | MEDIA

Turns on MEDIA mode. Each press of the **MEDIA** key will change the mode in the order of CD → USB/iPod®/zune® → JUKEBOX → AUX → BT Audio → PANDORA → CD.

5 | POWER/VOL

Push : Turns Power On/Off.
Dial : Turns Volume Up/Down.

6 | V SEEK/TRACK ^

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, automatically searches and plays the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), plays the previous or next track, song, or file. In PANDORA Radio, PANDORA Radio skip (Seek up). In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

7 V CATEGORY ^

In SIRIUS™ mode, moves to the previous or next SIRIUS™ category.

8 TUNE/ENTER

In FM/AM mode, turn the knob to manually search for frequencies.

In SIRIUS™ mode, turn the knob to manually search for channels. Press the knob to receive the selected channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®), turn the knob to manually search for the previous or next track, song, or file. Press the knob to receive the selected track, song, or file. In PANDORA Radio, PANDORA Radio skip (Seek up).

In JUKEBOX mode, turn the knob to manually search for the previous or next track. Press the knob to receive the selected track.

9 SETUP

Displays SETUP mode.

10 PHONE

Displays *Bluetooth*® wireless technology Phone mode.

11 eServices(Optional)

Displays UV0 eServices mode.

12 JUKEBOX

Displays JUKEBOX mode.


13 DISP

Turns off the screen.

14 RESET

Reset the system to be used if system is acting abnormally.

Steering Wheel

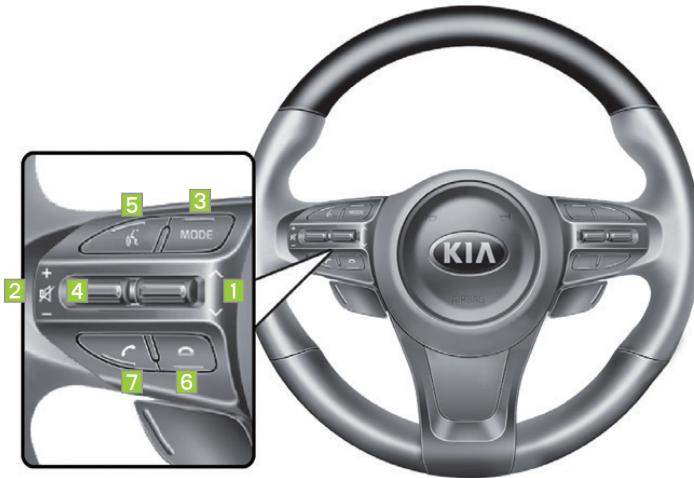

1 V SEEK/TRACK ^

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next preset frequency.

In SIRIUS™ mode, automatically searches and plays the previous or next preset channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), plays the previous or next track, song, or file. In PANDORA Radio, PANDORA Radio skip (Seek up).

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), REW/FF the current

track, song, or file.

In JUKEBOX mode, REW/FF the current track.

2 + VOLUME -

Turns Volume Up/Down.

3 MODE

Short (under 0.8 seconds)

Changes the mode. Each press will change modes in the order of FM → AM → SIRIUS™ → CD → USB/iPod®/zune® → JUKEBOX → AUX → BT Audio → PANDORA → FM.

Long (over 0.8 seconds)

While the system is off, turn the system on.

While the system is on, turn off the system.

4 MUTE

Mutes the sound.

5 Voice Command

Short (under 0.8 seconds)

If Voice recognition is off, turns on Voice recognition.

If system is speaking, interrupts speaking and enters listening mode.

Long (over 0.8 seconds)

If Voice recognition is on, turns off Voice recognition.

6 SEND (*Bluetooth® wireless technology Phone*)

Pressing this key will receive an incoming call. If the Audio is on, the *Bluetooth®* wireless technology phone screen will be displayed.

When a SMS message is received, reads back message.

7 END (*Bluetooth® wireless technology Phone*)

Pressing this key will reject an incoming call. If pressed during a call, the current call will be ended.

When a SMS message is received, ignores message.

Basic Features

System Power

1. Turning System Power On



1. Turn on the ignition.



2. While the system is off, press the **POWER/VOL** knob to turn the system on.

3. The system will automatically restore the most recently played mode. For example, pressing the **POWER/VOL** knob will turn on the system and display FM radio mode if FM mode had been the last operated mode prior to turning off the system.
4. You can also turn the system on by pressing the **FM/AM**, **SAT** and **MEDIA** keys.

Note

- If the system power was on when the ignition was turned off, the system will turn back on automatically. Conversely, if the system power was off when the ignition was turned off, the system will remain off.
- If the battery voltage is low, the audio may take a prolonged time to boot upon turning on the vehicle.

Note

- Pressing any one of the **FM/AM**, **SAT**, and **MEDIA** keys will turn on the system and display the last mode corresponding to each key. For example, pressing the **MEDIA** key while a CD or other media source is loaded, will turn on the system and display CD mode if the last operated MEDIA mode prior to turning off the system had been CD mode.

2. Turning System Power Off

1. While the system is on, press the **POWER/VOL** knob to turn off the system.

Select Display Language


The UVO system allows you to select the preferred display language for maximum convenience and system usability. The system provides you with options of three languages - English, French (Canadian) and Spanish. The default language is English.



1. Press the **SETUP** key on the control panel.



2. Press the **Main** button.

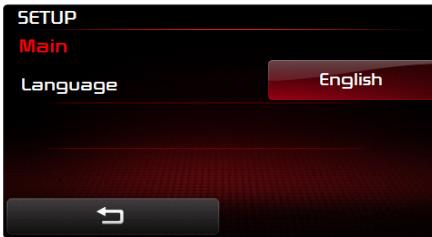

3. Press the **English** button next to the Language menu.



4. Select the desired language.

5. The system will reboot and automatically restore the most recent mode in the new language.

Resetting and Initializing UVO system

1. Resetting the system

If the system is behaving abnormally, press the reset button to reset the system.



1. Use a ball-point pen or similar object to press the **RESET** key.

2. The system will reboot and automatically restore the most recent mode.

Caution

- The reset button should only be used in case of system malfunction. Never use the reset key while the system is operating normally as it may cause damage to the system.
- If you wish to reset while the system is operating normally, turn the power off first then reset.

PART 1 | GETTING STARTED

2. Initializing the system



1. Press the **SETUP** key on the control panel.
2. Press the **System** button.



3. Press the **Factory defaults** button.

Note

- Initializing the system will erase all Phone settings, and other changes which you have made to the system.
- Some songs in the USB or CD may be misrecognized during the indexing process. If such problems persist, reset the device using the Factory Defaults button in **SETUP>System**.
- For updating the system, visit <http://www.kia.com>

Sound and Display Settings

Sound Settings

Sound settings can be adjusted from any audio mode. The system allows you to optimize various sound settings to add convenience when listening to the system.



Press the **Sound** button on the main screen of each audio mode (FM/AM, SIRIUS™, MEDIA,

PANDORA Radio, JUKEBOX) to enter Sound Setup.

Note

- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

1. FADER/BALANCE

Fader/Balance allows you to adjust the position of sound within the vehicle. For instance, adjusting the sound so that it is closer to the driver-side seat will proportionally lower the volume in the passenger-side and rear seats.



- Press the Fader/Balance setting button.



- Use the **▲**, **▼**, **◀**, **▶** buttons to make adjustments to the sound position.
- Press the **Back** button to return to Sound Setup.

Note

- Press the **Default** button to restore the default setting.

2. TONE

Tone allows you to make changes to the Treble, Middle and Bass settings.



1. Press the Tone setting button.



2. Use the and buttons to make adjustments to the Treble, Middle and Bass. Press the button to return to Sound Setup.

Note

- Press the **Default** button to restore the default setting.

3. Touch Screen Beep

Touch Screen Beep allows you to turn on/off the beep that sounds when you touch the screen.



1. In Sound Setup, press the or button next to the Touch Screen Beep menu to turn the feature on or off.

4. Speed Dependent Volume Control

Speed Dependent Volume Control allows you to automatically control the volume according to the speed of the vehicle. This feature will gradually increase the volume as speed increases to offset outside noise.



1. Press the or button next to the Speed Dependent Volume Control menu to turn the feature on or off.

Display Settings

The various Display setup options offered within the UVO system allow you to change display settings according to your personal preference.



1. Press the **SETUP** key on the control panel.



2. Press the **Display** button to enter Display Setup mode.

Note

- Changes are saved as they are made. In other words, once you change a setting, the new setting will become saved.

1. Setting Brightness

The UVO system allows you to control the screen brightness automatically and manually.

• Automatic Brightness Control

When the Display brightness is set to automatic, the brightness will be controlled automatically by assessing the amount of ambient light.



1. Press the **Display** button.



2. Press the **Automatic** button.

• Manual Brightness Control



1. Press the **Display** button.

PART 1 | GETTING STARTED



2. Press the **Daylight** or **Night** buttons.



3. Use the **◀**, **▶** buttons to make adjustments to the display brightness.

Note

- When Brightness control is set to **Automatic**, the manual **◀**, **▶** buttons are not active.
- Press the **Default** button to restore the default setting.

Turning Display On and Off

This feature turns off the display, allowing you to listen only to the audio. It is a useful feature when you are driving at night and wish to eliminate glare from the display. Even when the display is off, audio will still be played.



1. Press the **Display** button.



2. Press the **Display off** button.

3. Press any key on the control panel or steering wheel controller to turn the display back on.

Note

- Touching any place on the screen will also turn on the display.

PART 2 **AUDIO FEATURES**

FM/AM MODE

FM/AM Mode Screens and Features



1 Mode display

Displays the FM /AM mode.

2 Frequency

Displays the current frequency.

3 Program Service Name

If data is being transmitted, displays the program service name.

4 Program Type

If data is being transmitted, displays the program type.

5 Stored Preset

Displays the saved preset.

A short press will activate the button and shift the radio to the saved frequency.

A long press will save the current playing frequency to the preset button.

6 Info

When pressed while listening to RDS radio station, displays information about the current station (frequency, station, artist, title).

7 Preset On/Off

Displays or removes the presets from the screen.

8 Next/Previous Presets

Displays the next or previous 6 presets.

9 Scan

Scans all frequencies and plays only frequencies with high quality reception for 5 seconds each.

10 Sound

Enters Sound Setup.

Listening to the FM/AM radio



1. Press the **FM/AM** key on the control panel. The most recently played FM/AM radio band will automatically begin playing.
2. Press the **FM/AM** key to switch to the desired radio band.

Note

- Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.
- Even when the system power is off, press the **FM/AM** key to turn on the most recently played FM/AM mode.
- The RDS (Radio Data System) operates in areas with FM stations broadcasting RDS signals.

1. Selecting a broadcast frequency

The UVO system provides you with various ways to search for radio broadcasts. There are 3 ways to select radio broadcasts- selecting through SEEK, selecting through manual search, and selecting through presets.

• Selecting through SEEK

Press the **SEEK TRACK ^** or **SEEK TRACK ^** keys on the control panel for under 0.8 seconds. As SEEK operates, the previous or next radio broadcasts with high quality reception will automatically be searched and played.

Note

- While SEEK is operating, pressing the same **SEEK TRACK ^** key will terminate SEEK. Pressing the opposite key will operate SEEK in the reverse direction.
- Press and hold the **SEEK TRACK ^** or **SEEK TRACK ^** keys (over 0.8 seconds) to quickly move through the frequencies while the button is pressed and held. Once released, the system will automatically search and play the previous or next frequency.

• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will increase or decrease the frequency by 1 step (FM: 0.2MHz, AM: 10kHz).
2. When you find the desired radio broadcast, stop turning the **TUNE** knob to listen to the selected frequency.

• Storing presets

Presets are a way for you to save your favorite radio broadcasts. Up to 12 presets can be saved in FM mode while up to 6 frequencies can be saved in AM mode.

1. Select the desired radio broadcast.



2. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.
3. The current radio broadcast will automatically be saved to the preset number. A beep will signify that the preset has been saved if the beep is set to ON in the sound settings.

2. Scanning FM/AM broadcast frequencies

Radio broadcasts can be scanned to conveniently find radio broadcasts with high quality reception. Each radio broadcast will be played for 5 seconds. This feature is particularly useful when traveling in new areas.



1. Press the **Scan** button.

Note

- When scanning has completed an entire revolution, the scan function will terminate automatically and the previously played frequency will be restored.

3. Viewing FM/AM Station information

When listening to an RDS radio station, you will be able to view station information.



1. Press the **Info** button.
2. Information about the current station (frequency, station, artist, title) will be displayed.

SIRIUS™ MODE

SIRIUS™ Mode Screen and Features



1 Mode display

Displays the current mode as SIRIUS™ mode.

2 Channel number

Displays the current channel number.

3 PRESET indicator

If listening to a preset, displays the preset number.

4 Category name

Displays the category name.

5 Channel name

Displays the channel name.

6 SIRIUS™ Icon

When pressed, displays information about the current channel (artist, title, composer and other information).

7 Presets

Enters Preset list screen.

8 List

Displays the channel or category list.

9 Search

Displays the channel search screen.

10 Sound

Enters Sound Setup.

11 Artist

Displays the artist name.

12 Title

Displays the title.

Listening to the SIRIUS™ radio

Press the **SAT** key on the control panel. The most recently played SIRIUS™ channel will automatically begin playing.

Note

- Even when the system power is off, pressing the **SAT** key will turn on the most recently played SIRIUS™ channel.

1. Selecting a SIRIUS™ channel

• Selecting through SEEK

Press the **SEEK TRACK** \wedge or **SEEK TRACK** \vee keys on the control panel for under 0.8 seconds. As SEEK operates, the previous or next SIRIUS™ channel will automatically be searched and played.

Note

- Press and hold the **SEEK TRACK** \wedge or **SEEK TRACK** \vee keys (over 0.8 seconds) to quickly move through the channels while the button is pressed and held. Once released, the system will automatically search and play the previous or next channel.

PART 2 | AUDIO FEATURES

• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display the corresponding channel information.
2. When you find the desired SIRIUS™ channel, press the **TUNE** knob to listen to the selected channel.



• Selecting through preset



1. Press the **Presets** button.
2. Select the desired preset and press the **button** to start listening.

Note

- Press the **^**, **▼** keys (under 0.8 seconds) on the steering wheel controller to flip through the presets sequentially.

• Selecting through channel search



1. Press the **Search** button. The channel search screen will be displayed.
2. Input the desired channel number and press the **Done** button. To delete entries, press the **Delete** button.

Note

- If you input a number where there is no channel, the **Done** button will become inactive.

● Selecting through SIRIUS™ category list



1. Press the **List** button.



2. Select the desired channel to start listening or press the **Category List** button to display the channels in the selected category.

2. Using Skip



1. Press the **List** button.



2. Press the **Skip Setting** button.



3. Select the channels you wish to skip.

When selected, an **X** will be displayed next to the selected channel.

PART 2 | AUDIO FEATURES

3. Storing presets



Presets are a way for you to save your favorite SIRIUS™ channels. Up to 18 presets can be saved in SIRIUS™ mode.

1. Select the desired SIRIUS™ channel.
2. Press the **Presets** button.



3. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.

4. The current radio broadcast will automatically be saved to the present number. A beep will signify that the preset has been saved if the beep is set to ON in the sound settings.

4. Viewing SIRIUS™ channel information



1. Press the SIRIUS™ icon.



2. Information about the current channel (channel, category, artist, title) will be displayed.

MEDIA MODE

The MEDIA mode within your UVO system offers a variety of media modes which allow you convenience and ease in operating your system. Media mode includes a variety of modes, such as audio CD, MP3 CD, USB, iPod®, zune®, BT audio, Aux and PANDORA. The features listed below describe common features which you will encounter when operating Audio CD, MP3 CD, USB, iPod®, zune®, and JUKEBOX modes.

Common Features

• Play/Pause



1. Insert or connect the desired media (Audio CD, MP3 CD, USB, iPod®, zune®) or press the **MEDIA** key on the control panel if the desired media has already been inserted or connected.
2. Each press of the **MEDIA** key will change the mode in the order of CD → USB/iPod®/zune® → JUKEBOX → AUX → BT Audio → PANDORA → CD.
3. When a desired media is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

• REW/FF



1. Press and hold the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys (over 0.8 seconds) on the control panel or the **▲**, **▼** keys (over 0.8 seconds) on the steering wheel controller.
2. The song will rewind or fast-forward at a rate 20 times faster than normal while the key is being held.
3. Release the key to play from the current position.

Note

- If you rewind to the beginning of the current song, the current song will automatically begin playing.
- If you fast-forward to the end of the current song, the next song will automatically begin playing.

PART 2 | AUDIO FEATURES

• Jump



1. You can jump to different points in a song by touching the position on the progress bar.

• Using Repeat

The repeat setting can be used to repeat the song that is currently playing.



1. Press the **Repeat** button. The 'Repeat' icon will be displayed.
2. Press once to turn on the Repeat setting and again to turn off.

• Using Shuffle

The Shuffle setting can be used to play all song in the current mode randomly.



1. Press the **Shuffle** button. The 'Shuffle' icon will be displayed.
2. Press once to turn on the Shuffle setting and again to turn off.

AUDIO CD MODE

Cautions upon handling Audio CDs

! Precautions upon handling discs

- Store discs within their intended cases to prevent scratches.
- Never use heart-shaped, octagon-shaped or any other abnormally shaped discs.
- Never expose discs to direct sunlight for prolonged periods of time. Such exposure may lead to disc deformation.
- Never clean with solvents, such as anti-static sprays, cleaners, benzene, or thinners.
- Dust, scratches, and other foreign substances may cause popping sounds as well as sound deterioration.
- Never place paper on either side of the disc or write on disc surfaces.
- Clean fingerprints and dust off the signal surface (coated side) of the disc with a soft cloth.

- Copy-protected CDs, such as S-type CDs may not operate properly in the system.
- Data CDs are not supported by the system.

! For safe and efficient operation

- Never disassemble the CD Player(CDP) for repair purposes. Contact your place of purchase in case of malfunction. (Full service assistance will not be provided if the user disassembles the device.)
- Never use water to clean the system.
- Use caution not to introduce foreign substances into the disc slot.
- The system may not operate in extremely hot or cold temperatures. (The operational temperature range is: 14°F ~ 149°F).
- Steam may condense on the fiber optic lens due to rain, wet conditions, or heat caused by system operation.
- Never clean the system with chemical solvents. Always use a clean and dry cloth.

1. Supported disc format

- The disc types supported by this device are as shown below.

Disc format	Disc media	Format
CD	CD	CD-DA
	CD-R	MP3
	CD-RW	WMA
		CD-ROM
		CD-TEXT

Disc Size	5inch (12.7cm)
-----------	----------------

Disc Format	Audio Format
CD	LPCM
MP3	MPEG1, Layer3
	MPEG2, Layer3
	MPEG2.5
WMA	Ver. 9

- CD-R or CD-RW DISC burned with a bulk CD without quality guarantees may not be recognized by the device.
- Inserting an abnormal disc may result in faulty operation.

2. Disc/content format and compatibility

Ordinary disc compatibility

- This system has been designed to be compatible with software bearing the following logo marks.



- CD-R/RW discs (Audio CD and MP3 CD) created with CD-writing devices or personal computers may not operate properly.

Special formats or special features regarding software

CD-R/RW Compatibility

- This system operates as a CD-ROM and supports CD-R and CD-RW discs in CD audio or MP3 CD format.

- CD-R/RW discs burned as audio CDs which have not been finalized are not supported by the device. However, some information, such as play time, may still be displayed.

PC-created DISC compatibility

! When burning a disc with a personal computer, even discs compatible with the formats described above may not operate properly due to software settings within the burning application. In such cases, contact the software developer.

- Additional information regarding compatibility can be found on the CD-R/RW software disc box.
- DVD-R/RW discs are not supported by the device.

Compressed audio compatibility

This system plays audio files compressed by MPEG-1 audio stream layer 3(MP3) using 32, 44.1 and 48kHz fixed bit rates. Incompatible files are not supported.

- Variable bit rate files may operate, but the play time information may not be properly

displayed.

- Physical formats of CD: Model 1, Model 2 XA format 1.
- This system only supports tracks with file extension of ".MP3" or ".WMA".
- This system does not support multisession discs.
- This system supports a maximum of 256 folders and maximum 512 files. Folders and files which exceed this limit will not be supported.
- There are various bit rates which can be encoded onto MP3 files. This system has been designed to be compatible with various bit rates. Audio which has been encoded at 128kbps will sound similar to CD audio sound quality. Although this device supports low bit rate MP3 files, such files may result in a low quality sound.
- For stable operation, the use of files in 95kbps~192kbps bit rate range and 44.1kHz sampling frequency is recommended.
- For Mixed CDs (MP3+CD-DA), only CD-DA files will be recognized and supported.

AUDIO CD Mode Screen and Features



1 Mode Display

Displays that the current mode is CD mode.

2 Repeat

If Repeat is operating, the current track will be repeated and the corresponding icon will be displayed.

3 Shuffle

If Shuffle is operating, the tracks will be played in random order and the corresponding icon will be displayed.

4 Sound

Enters Sound Setup.

5 Track Number

Displays the track number

6 Play Time

Displays the play time.

7 Current/Total Track Number

Displays the current track number and total number of tracks on CD.


8 DISC indicator

Displays that a DISC has been inserted.

Inserting/Ejecting a Disc

1. Inserting a Disc

Insert the disc into the slot. The disc will begin playing automatically after it has been inserted.

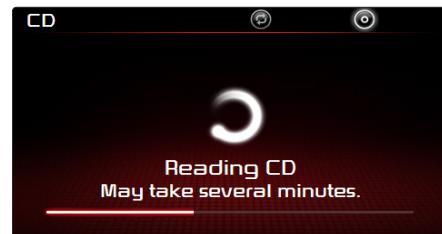

2. Ejecting a Disc

Press the  button.

The disc will immediately be stopped and ejected.

Note

- If the disc is straddled on the slot without removing for approximately 10 seconds, the disc will be re-inserted automatically into the disc player. In such cases, the disc will not begin playing automatically.

PART 2 | AUDIO FEATURES

Listening to an Audio CD

1. Insert a CD or press the **MEDIA** key on the control panel if the CD has already been inserted.



2. When a track is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the track.

Note

- When playing a CD-TEXT, the title and artist will also be displayed.

Selecting a CD track

1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired track.
2. The previous or next track will begin playing.

2. Press the **TUNE** knob to play the selected track.

Note

- The current track will continue playing even as you search tracks through the **TUNE** knob.

Note

- If the **SEEK TRACK** **▼** key on the Control panel or **▼** key on the steering wheel controller are pressed and released after the track has played for more than 3 seconds, the start of the current track will begin playing. If the track has been playing for less than 3 seconds, the start of the previous track will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected track.

MP3 CD MODE

Cautions upon handling MP3 CD

1. Precautions upon handling discs

- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (KHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
- Recommended bit rate & reference sampling frequency: sampling frequency 96,128, 192 kbps fixed bit rate /44.1KHz

2. ID3 tag

- This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

3. Supported media

- The MP3 media supported by the device are CD-ROM and USB.

4. Supported media formats

- This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 8 layers
- Maximum folder length: 64 Bytes, file name length: 64 Bytes
- Maximum number of folders which can be stored onto one disc: 256 folders (including ROOT directory)
- Maximum number of files which can be stored onto one disc: 512 files

6. Precaution

- Use an MP3 bit rate which is less than 128 kbps. The sound quality cannot be guaranteed for MP3s exceeding 128kbps.

5. Precautions upon burning MP3 files

- The use of ISO 9660 LEVEL 2 JULIET format is recommended when burning MP3 files. Burning in other formats may abnormally display the file names.
- It is possible to display up to 32 characters for file and folder names in case of UNICODE, and up to 64 characters in case of ASCII.
- The full length of the artist name and the song title can be displayed by using the scroll function.

MP3 CD Mode Screen and Features



1 Mode Display

Displays that the current mode is MP3 CD mode.

2 Menu

Displays the categories and song lists for the MP3 CD.

3 Copy

Copies current song into JUKEBOX.

4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.

10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

12 DISC indicator

Displays that a DISC has been inserted.

Listening to an MP3 CD



1. Insert an MP3 CD or press the **MEDIA** key on the control panel if the CD has already been inserted.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Note

- For some media formats, the system may require time for media indexing. In the case of MP3 CDs, the system may take 1.5sec / song.

Selecting an MP3 CD song

1. Selecting through song Up/Down

1. Press the **SEEK TRACK**  or  keys on the control panel or the  or  keys on the steering wheel controller to play the desired track or song.

Note

- If the  key on the Control panel or  key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

3. Selecting from MP3 list



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the name of the song from the list. The song will automatically start playing.

Note

- In the MP3 list screen, the **TUNE** knob can also be used to select songs.

4. By Artists, Albums, Genres, Songs, Composers



1. Press the **Menu** button.



2. Choose the category through which you

wish to select the song. MP3 CD mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.

Explore CD

Explore CD is a feature which allows you to browse files and folders of the CD by the names of categories.

1. While in the MP3 CD Menu screen, press the **Explore CD** button.



2. Search the corresponding files and folders to select the desired song.

Viewing song information

When listening to an MP3 CD song, you can browse through song details and information.



1. Press the Album art icon.
2. The song information (Artist, Title, Album, Genre) for the current MP3 song will be displayed.
3. Press the **→** button to return to the previous screen.

Note

- Even as you browse through song information, you can use the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys on the control panel or **▲** or **▼** keys on the steering wheel controller to select different MP3 songs. For more information, refer to the 'Selecting an MP3 CD song' section.

Copying songs into JUKEBOX

1. Copying the current song

The UV0 system allows you to copy songs from an MP3 CD into JUKEBOX.



1. Press the **Copy** button.



2. Once copying is complete, you can listen to copied music in JUKEBOX mode.

2. Copying songs from list

Copying MP3 songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the **Edit** button.



4. Select the songs you wish to copy. When selected, a will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

Note

- If memory is already full and songs can no longer be copied, the “Memory full! Please delete music from your JUKEBOX” message will be displayed and you must delete songs from JUKEBOX in order to add additional songs. For more information on deleting JUKEBOX songs, refer to the ‘Deleting JUKEBOX’ section.
- When copying MP3 CD songs, you can listen to all modes except CD mode and JUKEBOX mode.
- Copying can be canceled at anytime. While copying is in progress, press the **Cancel** button.

USB MODE

Cautions upon handling USB MP3

1. The MP3 file standards supported by the device are as follows.

- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (kHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, and 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96,128, 192 kbps fixed bit rate /44.1kHz

2. ID3 tag

- This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

3. Supported media

- The MP3 media supported by the device are CD-ROM and USB.

4. Supported media formats

- This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.
- Maximum directory layers: 16 layers

5. Precautions upon formatting USB & downloading MP3 files

- The device only supports FAT type USB file system. The device will not play USB media content if the USB is NTFS type.

6. Precautions

- Use an MP3 bit rate which is less than 192kbps and a fixed bit rate. The sound quality cannot be guaranteed for MP3s exceeding 192Kbps. Certain features may operate abnormally when playing MP3 formats with variable bit rates, such as being limited to FF/REW.

Precautions upon handling USB

Caution

- When using an external USB device, make sure to connect the device after turning on the ignition. The USB device may be damaged if connected before the ignition is turned on.
- The USB device may fail to operate when playing formats other than MP3 or WMA formats.
- Only MP3 files with compression rates between 8kbps~320kbps are supported.
- Only WMA files with compression rates between 8kbps~320kbps are supported.
- Be cautious of static electricity when connecting/disconnecting an external USB device.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting a USB device, the system may not properly recognize some USB states.

- When formatting an external USB device, the system may not properly recognize byte/sector selections other than 512Byte or 2048Byte.
- The device will recognize only USB devices formatted in FAT 12/16/32.
- Some USB devices may not operate properly due to compatibility issues. Verify that the external device is supported by the system before use.
- Avoid contact between the USB connector with bodily parts and foreign substances.
- Repeatedly connecting/disconnecting the USB in a short period of time may damage the system.
- A sound may occasionally occur when disconnecting the USB device.
- Do not disconnect a USB device when it is operating. Make sure to disconnect the USB device only after the audio power is turned off or when operating a different mode.
- The time required to recognize a USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in time are not indications of malfunction. Please wait until the system becomes recognized.
- This system supports only USB devices used to play music files.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. This may lead to worsened performance or system damage.
- This system may not recognize the USB device if a separately purchased USB hub or extension cable is used. Connect the USB device directly to the terminal in the vehicle.
- Some mass storage USB devices may have multiple logical drives partitioned for user convenience. In such cases, only music files within the top-level logical drive will be supported.
- This system may not operate normally if the USB terminal is used to connect MP3 Players, mobile phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives).

- This system may not operate normally when using a USB memory type other than a metal cover type USB device.
- This system may not operate normally when using HDD, CF, or SD memory formats.
- This system does not support DRM (Digital rights management) locked files.
- The device may not operate normally during severe vehicle vibrations.
- Avoid using USB devices also used as key chains or mobile phone accessories.

Connecting your USB device

Connect the USB as shown in the picture.



USB Mode Screen and Features



1 Mode Display

Displays that the current mode is USB mode.

2 Menu

Displays the categories and song lists for the USB.

3 Copy

Copies current song into JUKEBOX.

4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.

10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

Listening to USB music

1. Connect a USB device or press the **MEDIA** key on the control panel if a USB device has already been connected.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Note

- For some media formats, the system requires time for media indexing. In the case of USB mp3 songs, the system will take 1.5ms/song (Flash/HDD) or 40ms/song (mp3 players).

Selecting USB music**1. Selecting through song Up/Down**

Press the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired song.

Note

- If the **SEEK TRACK** **▼** key on the Control panel or **▼** key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

3. Selecting from the list



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the name of the song from the list.
The song will automatically start playing.

Note

- If in the MP3 list screen, the **TUNE** knob can also be used to select songs.

4. By Folders, Artists, Albums, Genres, Songs, Composers



1. Press the **Menu** button.



2. Choose the category through which you wish to select a song. USB Mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.

Explore USB

Explore USB is a feature which allows you to browse files and folders of the USB by the names of categories.



1. While in the USB Menu screen, press the **Explore USB** button.

2. Search the corresponding files and folders to select the desired song.



Viewing song information

When listening to USB music songs, you can browse through song details and information.



1. Press the Album art icon.



2. The song information (Artist, Title, Album, Genre) for the current USB song will be displayed. Press the  button to return to the previous screen.

Note

- Even as you browse through song information, you can use the  or  keys on the control panel or  or  keys on the steering wheel controller to select different USB songs. For more information, refer to the 'Selecting music songs' section.

Copying songs into JUKEBOX

1. Copying the current song

The UVO system allows you to copy songs from your USB device into JUKEBOX.



1. Press the  button.




2. Once copying is complete, you can listen to copied music in JUKEBOX mode.



2. Copying songs from list

Copying USB music songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.

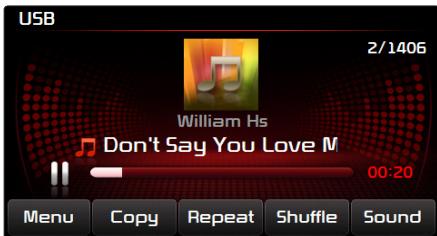

1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the **Edit** button.



4. Select the songs you wish to copy. When selected, a will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

Note

- If memory is already full and songs can no longer be copied, the “Memory full! Please delete music from your JUKEBOX” message will be displayed and you must delete songs from JUKEBOX. For more information on deleting JUKEBOX songs, refer to the ‘Managing JUKEBOX’ section.
- When copying USB songs, you can listen to all modes except USB mode and JUKEBOX mode.
- Copying can be canceled at anytime. While copying is in progress, press the **Cancel** button.

iPod® MODE

About iPod®

1. Trademark

iPod®, iPhone® and iTunes® are registered trademark of Apple, Inc.

2. Connecting your iPod® Device

Connect your iPod® device as shown in the picture.



The identification of the iPod® device, battery recharge, and other functions provided by the iPod® device is normally supported by using your iPod® connector cable.

Caution

- If a playing iPod® is connected to the audio system, a high-pitched tone may occur for approximately 1-2 seconds. Please pause/stop the iPod® device prior to connecting it to the vehicle.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects.

Note

- Supported iPod® devices include: iPod Nano 2G/3G/4G/5G/6G, iPod Classic 5G/6G, iPod Touch 1G/2G/3G/4G, iPhone 3G/3GS/4/4S.

iPod® Mode Screen and Features



1 Mode Display

Displays that the current mode is iPod® mode.

2 Menu

Displays the categories and song lists for the iPod®.

3 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

4 Shuffle

If Shuffle is operating, the song will be played in random order and the corresponding icon

will be displayed.

5 Sound

Enters Sound Setup.

6 Play Time

Displays the play time.

7 Artist name

Displays the artist name.

8 Song Title

Displays the song title.

9 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

10 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

Listening to your iPod®

1. Connect an iPod® device or press the **MEDIA** key on the control panel if an iPod® device has already been connected.

2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Selecting iPod® music

1. Selecting through song Up/Down

Press the  or  keys on the control panel or the  or  keys on the steering wheel controller to play the desired song.

Note

- If the  key on the Control panel or  key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

2. Selecting through manual search

- Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
- Press the **TUNE** knob to play the selected song.

3. Selecting from the list



- Press the **Menu** button.



- Press the **Now Playing** button.



- Press the name of the song from the list.

The file will automatically start playing.

Note

- In the iPod® list screen, the **TUNE** knob can also be used to select the desired song.

4. By Artists, Albums, Genres, Songs, Podcasts, Composers, Audiobooks



- Press the **Menu** button.



2. Choose the category through which you wish to select. iPod® mode allows you to select by Playlists, Artists, Albums, Genres, Songs, Podcasts, Composers and Audiobooks.

Viewing song information

When listening to your iPod®, you can browse through song details and information.



1. Press the Album art icon.



2. The song information (Artist, Title, Album, Genre) for the current iPod® song will be displayed.

3. Press the button to return to the previous screen.

Note

- Songs in the iPod® can be properly played in UVO system only when they have been downloaded through iTunes®.
- If you receive a call or SMS while playing music from an iPhone®, the music may not properly be restored after the call or SMS. In this case, disconnect and reconnect the iPhone®.
- After upgrading the iPod® or iPhone® firmware, reboot the iPod® or iPhone® and connect with the UVO system for normal operation.
- Songs cannot be copied from iPod® or iPhone® to JUKEBOX.

zune® MODE

About zune®

1. Trademark

zune® is a registered trademark of Microsoft Corporation in the United States and or other countries.

2. Connecting your zune® Device

Connect your zune® device as shown in the picture.



zune® Mode Screen and Features



1 Mode Display

Displays that the current mode is zune® mode.

2 Menu

Displays the categories and song lists for the zune®.

3 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

4 Shuffle

If Shuffle is operating, the songs will be played in random order and the corre-

sponding icon will be displayed.

5 Sound

Enters Sound Setup.

6 Play Time

Displays the play time.

7 Artist name

Displays the artist name.

8 Song Title

Displays the song title.

9 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

10 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

PART 2 | AUDIO FEATURES

Listening to your zune®

1. Connect zune® device or press the **MEDIA** key on the control panel if zune® device has already been connected.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Note

- When connecting some external media formats, the system requires time for media indexing. In the case of zune® files, the system will take 60ms/song.
- Songs cannot be copied from zune® to JUKEBOX.

Selecting zune® music

1. Selecting through song up/down

Press the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired song.

Note

- If the **SEEK TRACK** **▼** key on the Control panel or **▼** key on the steering wheel controller is pressed and released after the song has played for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

3. Selecting from the list



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the name of the song from the list.
The song will automatically start playing.

4. By Songs, Genres, Albums, Artists, Playlists



1. Press the **Menu** button.



2. Choose the category through which you wish to select. zune® mode allows you to select by Songs, Genres, Albums, Artists, and Playlists.

Viewing song information

When listening to your zune®, you can browse through song details and information.



1. Press the Album art icon.



2. The song information (Artist, Title, Album, Genre) for the current MP3 song will be displayed.

3. Press the **Menu** button to return to the previous screen.

AUX MODE

AUX Mode Screen



1 Mode Display

Displays that the current mode is AUX mode.

2 AUX Status

Displays the AUX connection status

3 Sound

Enters Sound Setup.

Connecting an AUX media device

Connect a cable from the headphone jack on your AUX device to the jack located in your vehicle.



Note

- Connecting your AUX device with the vehicle will not provide power to your AUX device. If you plan on using your AUX device for long periods of time, make sure to charge the device using an A/C power adapter or a separate USB cable.

Listening to AUX media

1. Connect an AUX device or press the **MEDIA** key on the control panel if the AUX device has already been connected.



2. Once in AUX mode, the connected audio will automatically begin playing from the car system provided that your external device is turned on and playing audio.

BT AUDIO MODE

BT Audio mode is a feature which allows you to stream music stored in your handset device via a *Bluetooth®* wireless technology connection. Music saved in the handset device can be played in the car through *Bluetooth®* wireless technology audio streaming. BT audio can be played only when a handset device has been connected. To play BT audio, pair a handset device with the system. If *Bluetooth®* wireless technology is disconnected while playing BT audio, music play will be discontinued. The audio streaming function may not be supported in some handset devices. Only one function can be used at a time between the *Bluetooth®* wireless technology handsfree or BT audio function. Playing music from the car is not possible when there are no music files stored in the handset device.

BT Mode Screen and Features



1 Mode Display

Displays the current mode as BT Audio mode.

2 Artist name

Displays the artist name.

3 Song Title

Displays the song title.

4 Play/Pause

Plays/pauses the song.

5 Sound

Enters Sound Setup.

6 Phone Battery charge status

Displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.

7 Signal Strength

Displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.

8 *Bluetooth®* wireless technology connection state

Becomes displayed when a *Bluetooth®* wireless technology enabled phone has been connected with the car system.

Listening to music from your Bluetooth® wireless technology enabled device

1. Pair your Bluetooth® wireless technology enabled device to the handsfree system. For more information on pairing your Bluetooth® wireless technology enabled devices, refer to the 'Pairing your handset device to the handsfree system' section.
2. Press the **MEDIA** key on the control panel to turn on BT audio mode.
3. When streaming music from your Bluetooth® wireless technology enabled device and you wish to pause, press the **▶ II** button next on the screen. Press the **▶ II** button to restart music.

Note

- While music saved in the Bluetooth® wireless technology enabled device will automatically begin playing after converting to the BT Audio screen, this music player function may not be supported in some Bluetooth® wireless technology enabled devices.

- If music does not begin playing even after displaying the Phone music screen, try starting the music directly from the Bluetooth® wireless technology enabled device.

Selecting a song

1. Press the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys on the control panel or the **^** or **▼** keys on the steering wheel controller to play the desired song.
2. The previous or next song will begin playing.

Note

- File selection may not be supported in some Bluetooth® wireless technology enabled devices.

REW/FF a song

1. Press and hold the **SEEK TRACK** **^** or **SEEK TRACK** **▼** keys (over 0.8 seconds) on the control panel or the **^**, **▼** keys (over 0.8 seconds) on the steering wheel controller.
2. The track will rewind or fast-forward at a rate 20 times faster than normal while the key is being held.
3. Release the key to play from the current position.

Note

- The play/pause, song selection and REW/FF features are supported only in handset devices with AVRCP Ver. 1.3 or higher. If play control features are not working, first check the AVRCP version of your Bluetooth® wireless technology enabled device.
- When such operations are not supported, use the handset device to perform these functions.

JUKEBOX MODE

The UVO system offers you maximum convenience by allowing you to copy songs from your MP3 CD and USB and store them to the JUKEBOX within the system. For more information on copying songs into JUKEBOX, refer to the 'Copying songs into JUKEBOX' section.

JUKEBOX Mode Screen and Features



1 Mode Display

Displays that the current mode is JUKEBOX mode.

2 Menu

Displays the JUKEBOX folder and file lists.

3 Favorite

Adds/removes current song to Favorites list.

4 Repeat

If Repeat is operating, the current song will be repeated and the corresponding icon will be displayed.

5 Shuffle

If Shuffle is operating, the songs will be played in random order and the corresponding icon will be displayed.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.

10 Album Art Icon

When pressed, displays information about the current song (artist, title, album and other information).

11 Current/Total Track Number

Displays the current track number and total number of tracks on the current playing list.

PART 2 | AUDIO FEATURES

Listening to JUKEBOX

1. Press the **MEDIA** key on the control panel to turn to JUKEBOX mode.
2. The system will automatically restore the most recently played song.

Selecting a JUKEBOX song

1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired track.
2. The previous or next song will begin playing.

Note

- If the **SEEK TRACK** key on the Control panel or **▼** key on the steering wheel controller is pressed and released after the track has played for more than 3 seconds, the start of the current track will begin playing. If the song has been playing for less than 3 seconds, the start of the previous song will begin playing.

2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected song.
2. Press the **TUNE** knob to play the selected song.

3. Selecting from the list



1. Press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the name of the song from the list. The song will automatically start playing.

4. By Artists, Albums, Genres, Song, Composers



1. Press the **Menu** button.



2. Choose the category through which you wish to select. JUKEBOX mode allows you to select by Favorites, Artists, Albums, Genres, Songs, and Composers.

Adding Favorites

The Favorites feature allows you to create a separate Favorites list of songs.



1. While listening to JUKEBOX, press the **Star** button.



2. The **★** icon will be displayed on the screen to signify that the song has been saved in Favorites.

3. To delete a song from Favorites, press the **Star** button.

PART 2 | AUDIO FEATURES

Playing Favorites



1. While playing JUKEBOX, press the **Menu** button.



2. In the JUKEBOX Menu screen, press the **Favorites** button.



3. Press the name of the song from the list.
The song will begin playing.

Note

- The Favorites button will be inactive when there are no songs saved as Favorites.
- When deleting favorites from the Favorites list, the deleted favorites will be removed from the favorites list. The songs will not be deleted from the system.

Memory Management

Checking System Information

1. Press the **SETUP** key on the control panel.



2. Press the **System** button.



3. Press the **System Information** button.



4. The system information screen shows you the memory currently in use.

Deleting JUKEBOX

1. Deleting JUKEBOX

1. While in JUKEBOX mode, press the **Menu** button.



2. Press the **Now Playing** button.



3. Press the **Edit** button.

PART 2 | AUDIO FEATURES



4. Select the songs you wish to delete. When selected, a will be displayed next to the selected song. To select all songs, press the **Select All** button. All of the songs in the play list will be selected.
5. Press the **Delete** button.

2. Deleting all files

1. Press the **SETUP** key on the control panel.



3. Press the **Delete all copied files** button.
4. The system will reboot and automatically restore the FM mode.

Note

- When using the **Delete all copied files** feature, all JUKEBOX files will be deleted.



2. Press the **System** button.

PANDORA MODE

About PANDORA

1. Trademark

iPod® is a registered trademark of Apple, Inc.

2. Before Starting PANDORA

1. Connect your iPod® or iPhone® device as shown in the picture.



The identification of the iPod® device, battery recharge, and other functions provided by the iPod® device is normally supported by using your iPod® connector cable.

2. Start the PANDORA Radio application.



3. Log into PANDORA Radio.

(This step can be omitted if you are already logged in.)

Note

- Supported iPod® devices:iPod® Touch 2G/3G/4G, iPhone® 3G/3GS/4/4S
- PANDORA Radio is supported only in iOS devices.

PANDORA Mode Screen and eatures



1 Mode Display

Displays that the current mode is PANDORA mode.

2 Menu

Displays the PANDORA Station lists and Bookmark options.

3 Thumbs Up

Approves the song and keep it in your playlist.

4 Thumbs Down

Disapproves the song and prevents that song from playing again.

5 Skip

EMoves to the next file.

6 Sound

Enters Sound Setup.

7 Play Time

Displays the play time.

8 Station Name

Displays the station name.

8 Artist name

Displays the artist name.

9 Song Title

Displays the song title.


Listening to your PANDORA

1. Press the **MEDIA** key on the control panel if an iPod device has already been connected and the PANDORA application is activated.
2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Selecting PANDORA station



1. Press the **Menu** button.

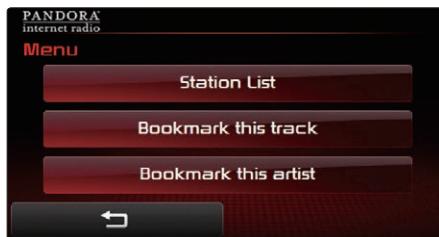

2. Press the **Station List** button.



3. Press the name of the station from the list.
The station will automatically start playing.

Note

- In the station list screen, the **TUNE** knob can also be used to find the desired station.
- Upon selecting "Shuffle" from the Station list screen, stations are selected randomly and played.

Bookmark Track or Artist



1. Press the **Menu** button.



2. Press the **Bookmark this track** or **Bookmark this artist** button.
3. The current track or artist is bookmarked on the currently connected device.

PART 3 PHONE FEATURES

Using your *Bluetooth*[®] wireless technology handsfree system

Welcome to Kia's connected world of wireless personal networking. The UVO system with *Bluetooth*[®] wireless technology allows you to conveniently use various *Bluetooth*[®] wireless technology enabled phone features as you drive your vehicle.

The *Bluetooth*[®] wireless technology handsfree system offers:

- Pairing mobile phones (Up to 5 phones)
- Connecting/disconnecting mobile phones
- Making/Answering phone calls
- Downloading Contacts
- Downloading Call history lists
- Playing music saved in a *Bluetooth*[®] wireless technology enabled phone in the vehicle

Smart driving practices

Check related laws and regulations on using mobile devices and their accessories and always make sure to obey them.

The use of such devices may be prohibited or restricted in certain areas.

Your mobile device helps you communicate through voice and data almost anywhere and anytime. When driving a car, driving comes first. If you choose to use your mobile device while driving, remember the following:

- Always drive safely and obey all traffic laws.

Some laws do not allow the use of handheld devices while driving.

Always obey federal, state and local laws and, even if permitted, it is recommended that you do not use your handheld device while driving to help avoid the risk of accidents, injuries and/or death.

- **Get to know your mobile device and features.**

Knowledge of your mobile device and its features will help you to use the features more easily.

- **Place your mobile device in easy reach.**

Be able to access your mobile device without removing your eyes from the road.

- **Do not search for phone numbers while driving.**

- **Let the other person know you are driving; when necessary, suspend the call to help avoid risks of accidents or injuries.**

Rain, sleet, snow, ice or heavy traffic may increase the risks of driving.

- **Use your mobile device to call for help.**

Dial 911 or other local emergency number in case of fire, traffic accident, or medical emergencies.

Warning

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Pairing your handset device to the handsfree system

Before you can use the *Bluetooth*[®] wireless technology handsfree system to make hands-free calls, you must create a *Bluetooth*[®] wireless technology connection between your handsfree system and handset device. A *Bluetooth*[®] wireless technology connection is made between your handsfree system and handset device with a paired link.

After setting up a paired link, the handsfree system will always remember your handset device. Once the system is paired with the device, your hand-free system can be set so that it automatically connects to your handset each time you start your vehicle.

Caution

- For safety, make pairings between your handsfree system and handset only while the vehicle is parked.


Pairing a *Bluetooth*[®] wireless technology enabled device for the first time

- Press the  button on the steering wheel or the **PHONE** key on the control panel.
- Perform a device discovery from the handset device. For details on device discovery for your handset device, refer to the handset device user's manual.



Non SSP(Secure Simple Pairing) supported device

- Once the device is discovered, input the passkey in the handset device.

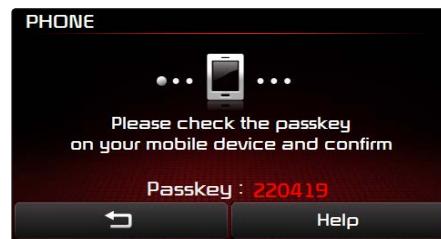

SSP(Secure Simple Pairing) supported device

- Once the device is discovered, check the passkey on your handset device and confirm.



4. Once pairing is complete, the handset device will be shown in the Connections list.


Note

- Initial pairing may require some time due to initial uploading of your contacts into the system. The contacts upload feature may not be supported in some handset devices.
- Before connecting the Bluetooth® wireless technology handsfree system with the handset device, check to see that the handset device supports Bluetooth® wireless technology handsfree and Bluetooth® wireless technology is turned on.
- The process for initiating Bluetooth® wireless technology connections may vary depending on the manufacturer. Use the handset device user's manual as a reference guide.
- The UVO system supports up to 5 pairings. After 5 handsets have already been paired, you must delete a handset in order to pair a new handset.
- Some phones may offer an option to allow acceptance of all future Bluetooth® connection requests by default.
- Visit <http://www.kia.com/#/bluetooth> for additional information on pairing your Bluetooth® enabled mobile phone, and to view a phone compatibility list.

Deleting a paired handset device




1. While in Phone mode, press the **Connections** button.

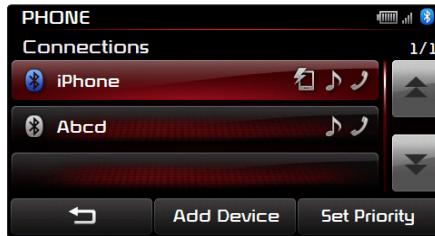

2. Select the handset device you want to delete.

PART 3 | PHONE FEATURES

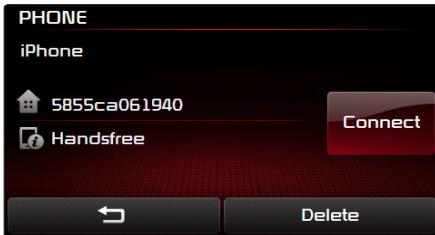

3. Once the phone is selected, press the **Delete** button.



4. Press the **Yes** button.

Note

- When you delete a paired phone, data will also be erased. For instance, deleting a paired phone will also erase recent calls, contact lists, and SMS data from the system.

Connecting a handset device

The system automatically connects the *Bluetooth*® wireless technology enabled device set at the highest priority. As a result, in order to connect a different phone, follow the following steps.



1. While in Phone mode, press the **Connections** button.



2. Select the handset device you want to connect.



3. Press the **Connect** button.

Note

- After initial pairing, your highest priority handset device will automatically connect with the handsfree system when you start your vehicle (if your handset device is powered on and the relevant *Bluetooth*® priority settings are not changed).

Setting Priority

When more than one device has been paired to the system, you can set the connection priority so that a certain phone is connected with priority starting from the next time you turn on the system.



1. While in Phone mode, press the **Connections** button.



2. Press the **Set Priority** button.



3. Select the phone you wish to set as preferred priority.

Using the phone features

Phone Mode Screens and Features

1. When a mobile phone is connected



1 Favorites

Up to 20 frequently used contact saved so help your fast call.

2 Recent Calls

Displays the Recent Calls list.

3 Contacts

Displays the Contacts list.

4 Dial Number

Displays the Dial Pad screen.


5 Connections

Displays the Connections screen.

6 Settings

Displays the Settings screen.

2. When making a call

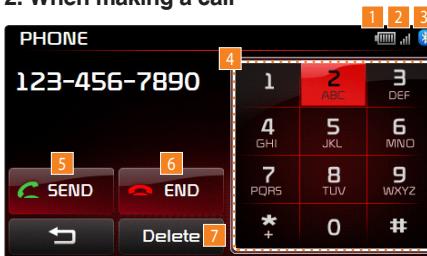

1 Phone Battery charge status

Displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.

2 Signal Strength

Displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.

3 Bluetooth® wireless technology connection state

Becomes displayed when a Bluetooth® wireless technology enabled phone has been connected with the car system.

4 Dial

Input the phone number through the dial pad.

5 SEND

Makes the call to the dialed number. If a number has not been entered into the phone number input window, pressing the send button displays the call history list screen.


6 END

Ends the call. If a number has been inputted, then erases the entire number.

7 Delete

Deletes one digit at a time.

3. When receiving an incoming call

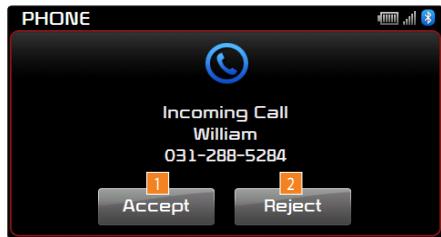

1 Accept

Accepts the incoming call.

2 Reject

Rejects the incoming call.

4. When on a call



1 Call state

Displays the call state, such as talk time, phone connection, and end time.

2 END

Ends the call.

3 Name of the other party

Displays the name of the other party. The name of the caller will not be displayed if the caller's phone number has not been saved in contacts.

4 Number of other party

Displays the number of the other party.

5 PRIVATE

When talking on the car handsfree, use this function to switch the call to the mobile phone.

6 MUTE

Mutes the sound of the call. The caller will not be able to hear the conversation taking place in the car.

PART 3 | PHONE FEATURES

Answering an incoming call



1. When there is an incoming call, an incoming call window will be displayed on the screen. Press the **Accept** button on the screen or the  key on the steering wheel controller to answer the call.
2. The call will be connected.

Note

- You can also accept an incoming call using your handset device if you wish to talk in private mode.

Rejecting an incoming call




1. Press the **Reject** button on the screen or the  key on the steering wheel controller.
2. The call will be rejected.

Call waiting

Call waiting is a feature which allows you to place the current call on hold in order to receive a second call. When you are in a call, the incoming call window will be displayed to the sound of a beep to signal a second incoming call.

1. If a second call is received while already on a call, the incoming call window will be displayed on the screen.

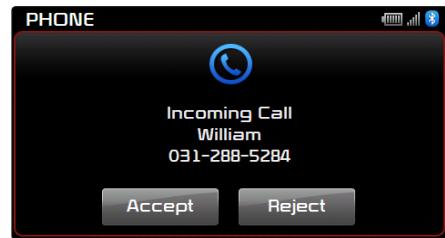

2. Press the **Accept** button or the  key on the steering wheel controller to take the second incoming call. Press the **Reject** button to reject the second incoming call.



3. To switch again to the other caller, press the **SWITCH** button or the **📞** key on the steering wheel. The other call will be received and the previous call will switch back to call waiting.

Note

- The call waiting function may not be supported in some handset devices.

Placing a call

1. By recent calls



1. While in Phone mode, press the **Recent Calls** button.



2. Select the contact you want to call from the list.



Note

- If you want to connect to the most recent call you made, press and hold the **SEND** button in the 'Dial Number' screen or the **📞** key on the steering wheel.
- Recent calls will be deleted automatically when a handset device is disconnected from the system.
- Recent calls can be sorted. Use the **Sort by** button to sort recent calls by All, Dialed, Received and Missed calls.
- The recent calls function may not be supported in some handset devices.

PART 3 | PHONE FEATURES

2. By contact list



1. While in Phone mode, press the **Contacts** button.



2. Press the spell you wish to find.



3. Select the contact you want to call from the list.




4. Press the **SEND** button on the screen or the **key** on the steering wheel controller to connect the call.

3. By dialing a number



1. While in Phone mode, press the **Dial Number** button.

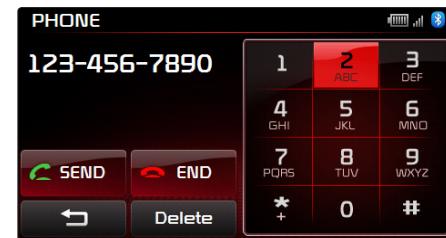

2. Use the dial pad on the right side of the screen to enter the phone number.