


Deleting a Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]

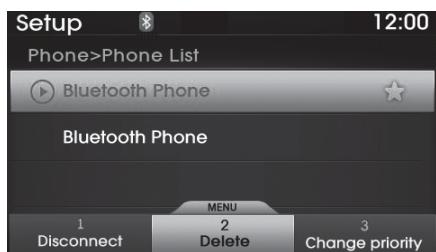

From the paired phone list, select the device you want to delete and select the **Delete** button.

* NOTICE

- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth®* Wireless Technology device is deleted, the device's call history and contacts data will also be deleted.
- To re-use a deleted device, you must pair the device again.

Features of your vehicle

Phone Menu Screen

Phone Menus

With a *Bluetooth®* Wireless Technology device connected, press the **PHONE** key to display the Phone menu screen.



- 1) Favorite : Up to 20 frequently used contacts saved for easy access
- 2) Call History : Device the call history list screen
- 3) Contacts : Displays the Contacts list screen
- 4) Dial Number : Displays the dial screen where numbers can be dialed to make calls
- 5) Setup : Displays Phone related settings.

* NOTICE

- If you press the [Call History] button but there is no call history data, a prompt is displayed which asks to download call history data.
- If you press the [Contacts] button but there is no contacts data stored, a prompt is displayed which asks to download contacts data.
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

Favorites

Press the **PHONE** key ▶ Select [Favorites]



- 1) Saved favorite contact : Connects call upon selection
- 2) To add favorite : Downloaded contacts be saved as favorite.
- 3) Delete All : Deletes all stored favorite contacts

* NOTICE

- To save Favorite, contacts should be downloaded.
- Contacts saved in Favorites will not be automatically updated if the contact has been updated in the phone. To update Favorites, delete the Favorite and create a new Favorite.

Call History

Press the **PHONE** key ▶ Select [Call History]



A list of incoming, outgoing and missed calls is displayed.

Select the **Download** button to download the call history.

1) Call History :



- Displays recent calls (call history)
- Connects call upon selection

2) Download : Download Recent Call History

- Call history may not be saved in the call history list in some mobile phones.
- Calls received with hidden caller ID will not be saved in the call history list.
- Calling through the call history is not possible when there is no call history stored or a *Bluetooth®* Wireless Technology phone is not connected.
- Up to 50 received, dialed and missed calls are stored in Call History.
- Time of received/dialed calls and call time information are not saved.

Contacts

Press the **PHONE** key ▶ Select [Contacts]

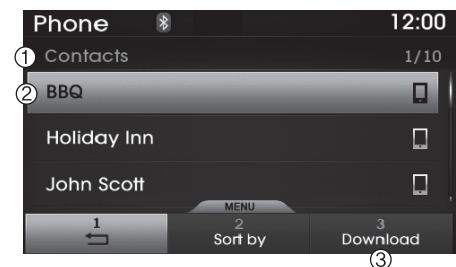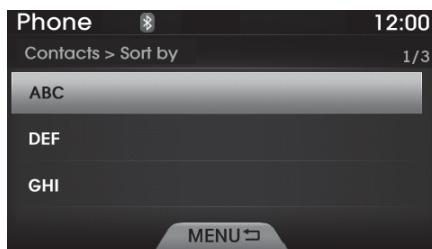

The list of saved phone book entries is displayed. Select the **Download** button to download the call history.

1) Contacts List :

- Displays downloaded contacts entries
- Connects call upon selection

2) Sort by : Find a contact in an alphabetical order.

3) Download : Download contacts entries

* NOTICE

- Up to 1,000 contacts saved in your *Bluetooth®* Wireless Technology phone can be downloaded into the car contacts. Contacts that have been downloaded to the car cannot be edited or deleted on the phone.
- Mobile phone contacts are managed separately for each paired *Bluetooth®* Wireless Technology device (max 5 devices x 1,000 contacts each). Previously downloaded data is maintained even if the *Bluetooth®* Wireless Technology device has been disconnected.
(However, the contacts and call history saved to the phone will be deleted if a paired phone is deleted.)
- It is possible to download contacts during *Bluetooth* streaming audio.
- When downloading contacts, the icon will be displayed within the status bar.


(Continued)

(Continued)

- It is not possible to begin downloading a contact list when the contact download feature has been turned off within the *Bluetooth®* Wireless Technology device. In addition, some devices may require device authorization upon attempting to download contacts. If downloading does not normally occur, check the *Bluetooth®* Wireless Technology device settings or the screen state.
- The contacts download feature may not be supported in some mobile phones. For more information of supported *Bluetooth®* devices and function support, refer to your phone's user manual.

Calling by Dialing a Number

Press the **PHONE** key ▶ Select [Dial Number]

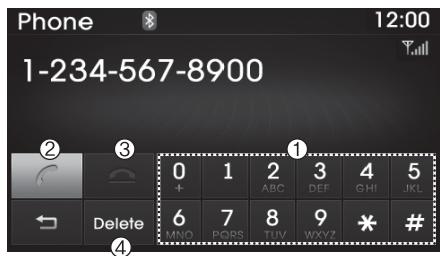


- 1) Dial Pad : Used to enter phone number
- 2) Call : If a number has been entered, calls the number. If no number has been entered, switches to call history screen
- 3) End : Deletes the entered phone number
- 4) Delete : Deletes entered numbers one digit at a time

Answering Calls

Answering a Call

Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

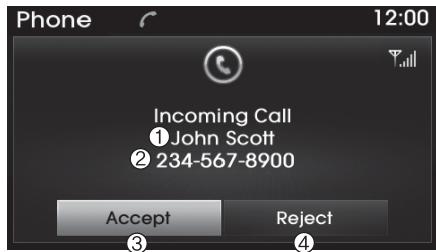


- 1) Caller : Displays the other party's name when the incoming caller is saved within your contacts
- 2) Incoming Number : Displays the incoming number
- 3) Accept : Accepts the incoming call
- 4) Reject : Rejects the incoming call

* NOTICE

- When an incoming call pop-up is displayed, most Audio and SETUP mode features are disabled. Only the call volume will operate.
- The telephone number may not be properly displayed in some mobile phones.
- When a call is answered with the mobile phone, the call mode will automatically revert to Private mode.

During a Handsfree Call

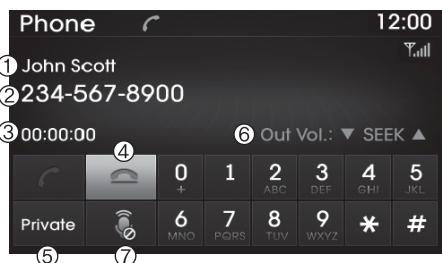

- 1) Caller : Displays the other party's name if the incoming caller is saved within your contacts
- 2) Incoming Number : Displays the incoming number
- 3) Call time : Displays the call time
- 4) End : Ends call
- 5) Private : Converts to Private mode
- 6) Out Vol. : Sets call volume as heard by the other party
- 7) Mute : Turns Mic Mute On/Off

* NOTICE


If the mic is muted, the other party will not be able to hear your voice.

VOICE RECOGNITION (If equipped)

Using Voice Recognition

Starting Voice Recognition

Shortly press the  key on the steering wheel remote controller. Say a command.

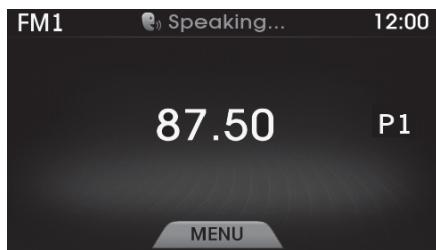

If prompt feedback is in [ON], then the system will say "Please say a command after the beep (BEEP)"

- If prompt feedback is in [OFF] mode, then the system will only say "(BEEP)"
- To change Prompt Feedback [On]/[Off], go to **SETUP** ▶ [System] ▶ [Prompt Feedback]

* NOTICE

For proper recognition, say the command after the voice instruction and beep tone.

Contact List Best Practices

- 1) Do not store single-name entries (e.g., "Bob", "Mom", "Kim", etc.). Instead, always use full names (including first and last names) for all contacts (e.g., use "Jacob Stevenson" instead of "Dad").
- 2) Do not use abbreviations (i.e., use "Lieutenant" instead of "Lt." or "Sergeant" instead of "Sgt.").
- 3) Do not use acronyms (i.e., use "County Finance Department" instead of "CFD").
- 4) Do not use special characters (e.g., "@", "hyphen -", "asterisk *", "ampersand &").

- 5) If a name is not recognized from the contact list, change it to a more descriptive name (e.g., use "Grandpa Joseph" instead of "Pa Joe").

Skiping Prompt Messages

While prompt message is being stated▶ Shortly press the  key on the steering remote controller

The prompt message is immediately ended and the beep tone will sound. After the "beep", say the voice command.

Re-starting Voice Recognition

While system waits for a command▶ Shortly press the  key on the steering remote controller

The command wait state is immediately ended and the beep ton will sound. After the "beep", say the voice command.

Ending Voice Recognition

While Voice Recognition is operating

- ▶ Press and hold the  key on the steering remote controller (over 0.8 seconds)

* NOTICE


- While using voice command, pressing any steering wheel remote control or a different key will end voice command.
- In a state where the system is waiting for a voice command, say “cancel” or “end” to end voice command.
- In a state where the system is waiting for a voice command, press and hold the  key on the steering remote controller to end voice command.

Features of your vehicle

* Illustration on using voice commands

• Starting voice command.


Shortly pressing the  key (under 0.8 seconds):

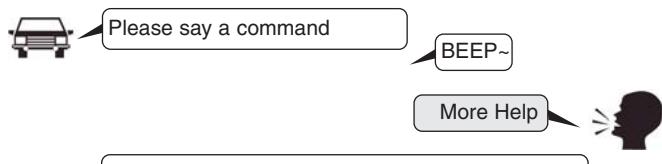

 You can say Radio, FM, AM, Media, CD, USB, Aux, My Music, iPod, Bluetooth Audio, Phone, Call History or Contacts. Please say a command.

• Skipping Prompts

Shortly pressing the  key (under 0.8 seconds):

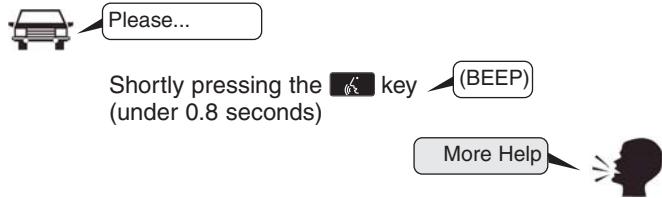

Shortly pressing the  key  (BEEP) (under 0.8 seconds)

 You can say Radio, FM, AM, Media, CD, USB, Aux, My Music, iPod, Bluetooth Audio, Phone, Call History or Contacts. Please say a command.

• End voice command.

Shortly pressing the  key (under 0.8 seconds):



 Contacts
Please say the name of the contacts you want to call.

 BEEP~

 Cancel

 Di-Ding~(Cancel Sound)

Voice Command List

- Common Commands: These commands can be used in all situations. (However, some commands may not be supported in special circumstances.)

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system.
Help	Provides guidance on commands that can be used within the current mode.
Call<Name>	Calls <Name> saved in Contacts Ex) Call "John Smith"
Phone	Provides guidance on Phone related commands. After saying this command, say "Favorites", "Dial Number", to execute corresponding functions.
Call History	Displays the Call History screen.
Phone book	Displays the Phone book screen. After saying this command, say the name of a Phone book saved in the Contacts to automatically connect the call.
Dial Number	Display the Dial number screen. After saying this command, you can say the number that you want to call.
Redial	Connects the most recently called number.
Radio	<ul style="list-style-type: none"> When listening to the radio, displays the next radio screen. (FM1→FM2→FMA→AM→AMA) When listening to a different mode, displays the most recently played Radio screen.

Command	Function
FM	<ul style="list-style-type: none"> When currently listening to the FM radio, maintains the current state. When listening to a different mode, displays the most recently played FM screen.
FM1(FM One)	Displays the FM1 screen.
FM2(FM Two)	Displays the FM2 screen.
FMA	Displays the FMA screen.
AM	Displays the AM screen.
AMA	Displays the AMA screen.
FM Preset 1~6	Plays the most recently played broadcast saved in FM Preset 1~6.
AM Preset 1~6	Plays the broadcast saved in AM Preset 1~6.
FM 87.5~107.9	Plays the FM broadcast of the corresponding frequency.
AM 530~1710	Plays the AM broadcast of the corresponding frequency.
TA on	Enable Traffic Announcement.
TA off	Disable Traffic Announcement.
News on	Enable RDS News feature.
News off	Disable RDS News feature.

Features of your vehicle

Command	Function
Media	Moves to the most recently played media screen.
Play Track 1~30	If a music CD has been inserted, plays the corresponding track.
CD	Plays the music saved in the CD.
Search CD	Moves to the CD track or file selection screen. <ul style="list-style-type: none"> For audio CDs, move to the screen and say the track number to play the corresponding track. Moves to MP3 CD file selection screen. After manually operate the device to select and play music.
USB	Plays USB music.
Search USB	Moves to USB file selection screen. After manually operate the device to select and play music.
iPod®	Plays iPod music.
Search iPod®	Moves to the iPod file selection screen. After, manually operate the device to select and play music.
My Music	Plays the music saved in My Music.
Search My Music	Moves to My Music file selection screen. After manually operate the device to select and play music.

Command	Function
AUX (Auxiliary)	Plays the connected external device.
Bluetooth® Audio	Plays the music saved in connected Bluetooth® Wireless Technology device.
Mute	Mutes the sound.
Pardon?	Repeats the most volume.
Cancel (Exit)	Ends voice command.

- FM/AM radio commands: available during FM, AM radio operation
- Audio CD Commands: Commands available during Audio CD operation

Command	Function
Preset 1~6	Plays the broadcast saved in Preset 1~6.
Auto Store	Automatically selects radio broadcast frequencies with superior reception and saves in Presets 1~6.
Preset Save 1~6	Saves the current broadcast frequency to Preset 1~6.
Seek up	Plays the next receivable broadcast.
Seek down	Plays the previous receivable broadcast.
Next Preset	Selects the preset number next to the most recently selected preset. (Example: When currently listening to preset no. 3, then preset no. 4 will be selected.)
Previous Preset	Selects the preset number previous to the most recently selected preset. (Example: When currently listening to preset no. 3, then preset no. 2 will be selected.)
Scan	Scans receivable frequencies from the current broadcast and plays for 10 seconds each.
Preset Scan	Moves to the next preset from the current present and plays for 10 seconds each.
AF on	Enable Alternative Frequency feature.
AF off	Disable Alternative Frequency feature.
Region	Enable Region feature.

Command	Function
Region off	Disable Region feature.
Random	Randomly plays the tracks within the CD.
Random Off	Cancels random play to play tracks in sequential order.
Repeat	Repeats the current track.
Repeat Off	Cancels repeat play to play tracks in sequential order.
Next Track	Plays the next track.
Previous Track	Plays the previous track.
Scan	Scans the tracks from the next files for 10 seconds each.
Track 1~30	Plays the desired track number.
Search Track	Moves to the track selection screen. After, say the track name to play the corresponding track.
Information	Displays the information screen of the current track.

Features of your vehicle

- MP3 CD / USB Commands: Commands available during USB and MP3 CD operation

Command	Function
Play	Plays the currently paused file.
Pause	Pauses the current file.
Random	Randomly plays the files within the current folder.
Random Off	Cancels random play to play files in sequential order.
Repeat	Repeats the current file.
Folder Repeat	Repeats all files in the current folder.
Repeat Off	Cancels repeat play to play files in sequential order.
Next File	Plays the next file.
Previous File	Plays the previous file.
Scan	Scans the files from the next files for 10 seconds each.
Search File	Moves to the file selection screen.
Search Folder	Moves to the folder selection screen.
Information	Displays the information screen of the current me.
Copy	Copies the current file into My Music.

- iPod® Commands: Commands available during iPod® operation

Command	Function
All Random	Randomly plays all saved songs
Random	Randomly plays the songs within the current category.
Random Off	Cancels random play to play songs in sequential order.
Repeat	Repeats the current song.
Repeat Off	Cancels repeat play to play songs in sequential order.
Next Song	Plays the next Song.
Previous Song	Plays the previous Song.
Search Song	Moves to the Song selection screen.
Information	Displays the information screen of the current Song.

- My Music Commands: Commands available during My Music operation.

Command	Function
Random	Randomly plays all saved files.
Random Off	Cancels random play to play files in sequential order.
Repeat	Repeats the current file.
Repeat Off	Cancels repeat play to play files in sequential order.
Next File	Plays the next file.
Previous File	Plays the previous file.
Scan	Scans the files from the next files for 10 seconds each.
Information	Displays the information screen of the current file.
Delete	Deletes the current file. You will bypass an additional confirmation process.
Delete All	Deletes all files saved in My Music. You will bypass an additional confirmation process.

- *Bluetooth®* Wireless Technology Audio Commands: Commands that can be used while playing Phone Music.


Command	Function
Play	Plays the currently paused file.
Pause	Pauses the current file.

Features of your vehicle

SETUP (For Europe Model)

Starting Mode

Press the  key to display the Setup screen.

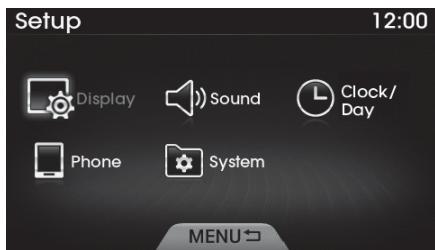

You can select and control options related to [Display], [Sound], [Clock / Day], [Phone] and [System].


* NOTICE

Once settings have been changed, press the  key to return to the previous menu.

Display Settings

Adjusting the Brightness

Press the  key▶Select [Display]▶Select [Brightness]

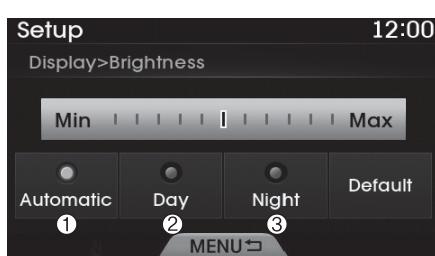


Use the  TUNE knob to adjust the screen brightness or set the Brightness on Automatic, Day or Night mode.

- (1) Automatic : Adjusts the brightness automatically
- (2) Day : Always maintains the brightness on high
- (3) Night : Always maintains the brightness on low

Pop-up Mode

Press the  key▶Select [Display]▶Select [Pop-up Mode]

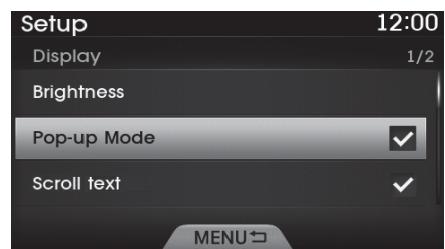

This feature is used to display the Pop-up Mode screen when entering radio and media modes.


When this feature is turned on, pressing the  or  key will display the Pop-up Mode screen.

* NOTICE

The media Pop-up Mode screen can be displayed only when two or more media modes have been connected.

Scroll Text

Press the  key ▶ Select [Display] ▶ Select [Scroll Text]

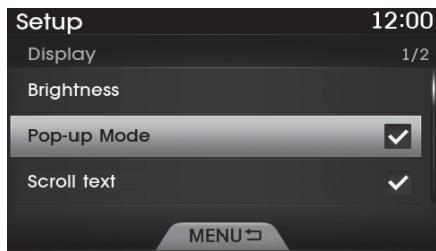


This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

Song Info

Press the  key ▶ Select [Display] ▶ Select [Song Info]

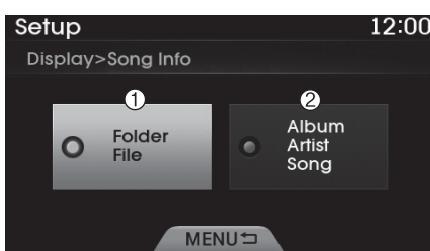



This feature is used to change the information displayed within USB and MP3 CD modes.

- (1) Folder File : Displays file name and folder name
- (2) Album Artist Song : Displays album name/artist name/song

Sound Settings

Audio Settings

Press the  key ▶ Select [Sound] ▶ Select [Audio Settings]

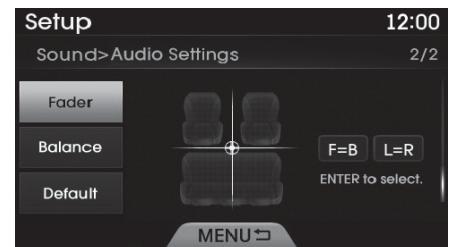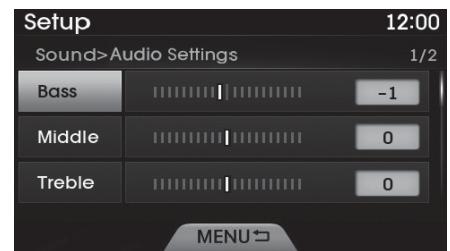

Use  TUNE knob to adjust the Bass/Middle/Treble and Fader/ Balance settings.


Features of your vehicle

After selecting the Bass/Middle/Treble, use the  TUNE knob to adjust the settings.

After selecting the Fader/Balance, use the  TUNE knob to move the cursor on the control screen to the desired position.

SDVC (Speed Dependent Volume Control)


Press the  key▶ Select [Sound]▶ Select [Speed Dependent Vol.]

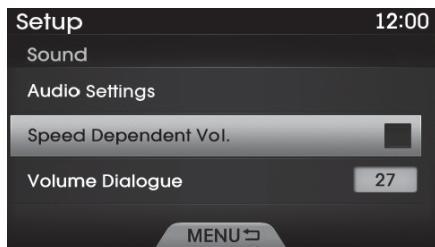

The volume level is controlled automatically according to the vehicle speed.
Use the  TUNE knob to select from On/Off.

Volume Dialogue (If equipped)

Press the  key▶ Select [Sound]▶ Select [Volume Dialogue]

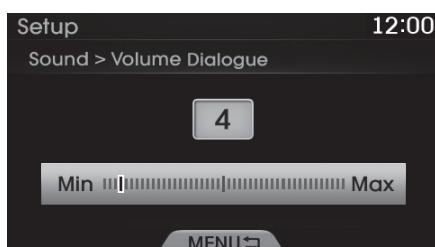


Use the  TUNE knob to adjust the Voice Recognition volume.

Clock/Day Settings

Clock Settings


Press the  key▶ Select [Clock/Day]▶ Select [Clock Settings]

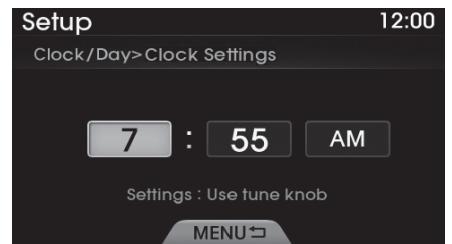

Use the  TUNE knob to select the Hour, Minutes and AM/PM setting and use  TUNE knob to change settings.

Day Settings


Press the  key▶Select [Clock/Day]▶Select [Day Settings]

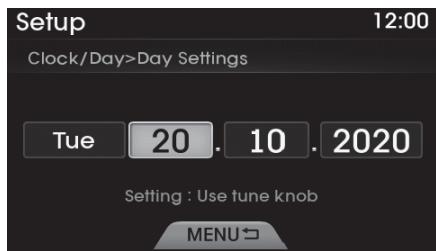

Use the  TUNE knob to select the Month, Day, and Year and use  TUNE knob to change settings.

Time Format


Press the  key▶Select [Clock/Day]▶Select [Time Format]

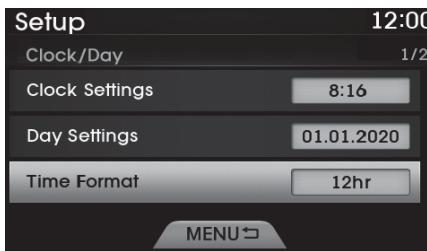

This feature is used to change the clock format between 12hr or 24hr.

Automatic RDS Time

Press the  key▶Select [Clock/Day]▶Select [Automatic RDS Time]

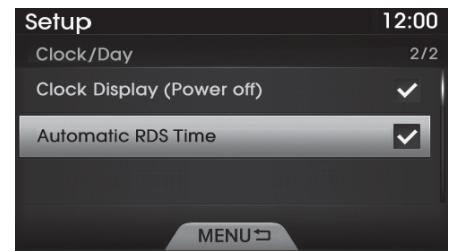

This feature is used to set time automatically by synchronizing with RDS.

Clock Display

Press the  key▶Select [Clock/Day]▶Select [Clock Display (Power off)]


This feature is used to display a clock on the screen when the audio system is turned off.

Features of your vehicle

Bluetooth® Wireless Technology Setting (If equipped)

Pairing a New Device

Press the  key▶Select [Phone]▶Select [Pair Phone]

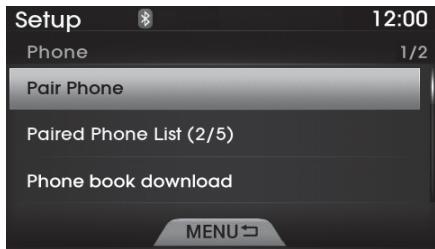

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within Bluetooth® Wireless Technology.

Viewing Paired Phone List

Press the  key▶Select [Phone]▶Select [Paired Phone List]



This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting Bluetooth® Wireless Technology Connection" section within Bluetooth® Wireless Technology.


- 1) Connect/Disconnect Phone : Connect/disconnects currently selected phone
- 2) Delete : Deletes the currently selected phone
- 3) Change Priority : Sets currently selected phone to highest connection priority

* NOTICE - BEFORE DOWNLOADING PHONE BOOK

- Only Phone book within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.
- To learn more about whether your mobile phone supports Phone book downloads, refer to your mobile phone user's manual.
- The Phone book for only the connected phone can be downloaded.

Downloading Phone book

Press the  key▶Select [Phone]▶Select [Phone book download]

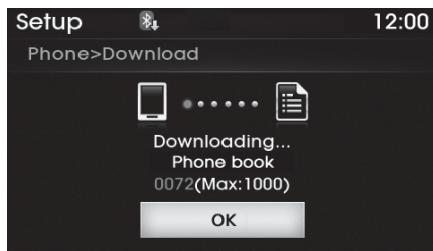

As the Phone book is downloaded from the mobile phone, downloading Phone book number is displayed.

*** NOTICE**

- Upon downloading Phone book, the previous corresponding data is deleted.
- This feature may not be supported in some mobile phones.
- Voice Recognition may not operate while Phone book are being downloaded.

Auto Download (Phone Book)

Press the  key▶Select [Phone]▶Select [Auto Download]



This feature is used to automatically download mobile Phone book entries once a *Bluetooth®* Wireless Technology phone is connected.

*** NOTICE**

- The Auto Download feature will download mobile Phone book entries every time the phone is connected. The download time may differ depending on the number of saved Phone book entries and the communication state.
- Before downloading Phone book, first check to see that your mobile phone supports the Phone book download feature.

Outgoing Volume

Press the  key▶Select [Phone]▶Select [Outgoing Volume]



Use  TUNE knob to adjust the outgoing volume level.

*** NOTICE**

While on a call, the volume can be changed by using the   key.


Features of your vehicle

Turning Bluetooth System Off

Press the  key ► Select [Phone] ►

Select [Bluetooth System Off]

Once *Bluetooth®* Wireless Technology is turned off, *Bluetooth®* Wireless Technology related features will not be supported within the audio system.

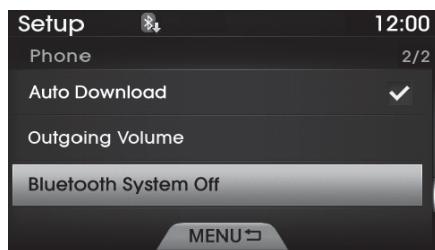

*** NOTICE**


To turn *Bluetooth®* Wireless Technology back on, go to  ► [Phone] and press "Yes".



System Setting

Memory Information

Press the  key ▶ Select [System] ▶ Select [Memory Information]

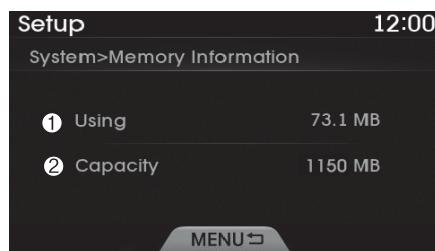


This feature displays information related to system memory.

(1) Using : Displays capacity currently in use

(2) Capacity : Displays total capacity

Voice Recognition System (If equipped)

Press the  key ▶ Select [System] ▶ Select [Voice Recognition System]

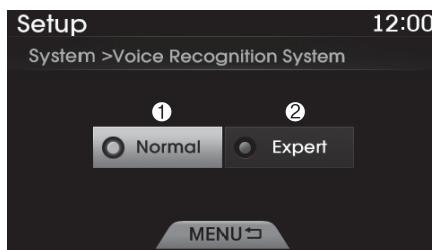


This feature is used to select the desired prompt feedback option from Normal and Expert.

(1) Normal : When using voice recognition, provides detailed guidance prompts

(2) Expert : When using voice recognition, omits some guidance prompts

Language

Press the  key ▶ Select [System] ▶ Select [Language]

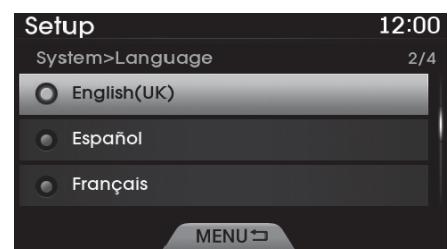

This feature is used to change the system and voice recognition language (If equipped).

If the language is changed, the system will restart and apply the selected language.


* NOTICE

Voice Recognition is depend on the Audio System.

SETUP (Except Europe Model)

Starting Mode

Press the **SETUP** key to display the Setup screen.

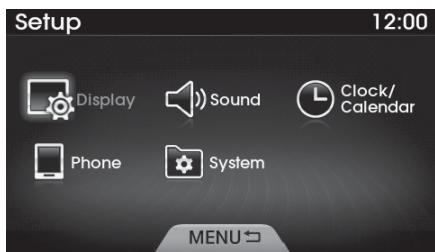

You can select and control options related to [Display], [Sound], [Clock/Calendar], [Phone] and [System].


* NOTICE

Once settings have been changed, press the **MENU** key to return to the previous menu.

Display Settings

Adjusting the Brightness

Press the **SETUP** key▶Select [Display]▶Select [Brightness]

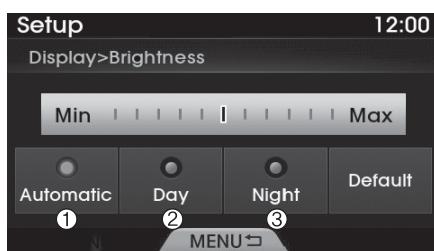


Use the **Ⓐ TUNE** knob to adjust the screen brightness or set the Brightness on Automatic, Day or Night mode.

- (1) Automatic : Adjusts the brightness automatically
- (2) Day : Always maintains the brightness on high
- (3) Night : Always maintains the brightness on low

Mode Pop up

Press the **SETUP** key▶Select [Display]▶Select [Mode Pop up]

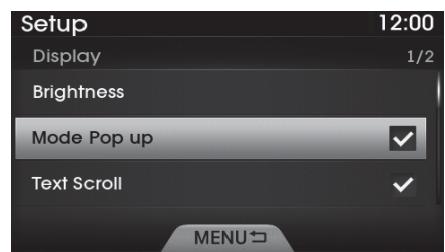

This feature is used to display the Mode Pop up screen when entering radio and media modes.


When this feature is turned on, pressing the **RADIO** or **MEDIA** key will display the Mode Pop up screen.

* NOTICE

The media Mode Pop up screen can be displayed only when two or more media modes have been connected.

Text Scroll

Press the **SETUP** key ▶ Select [Display] ▶ Select [Text Scroll]

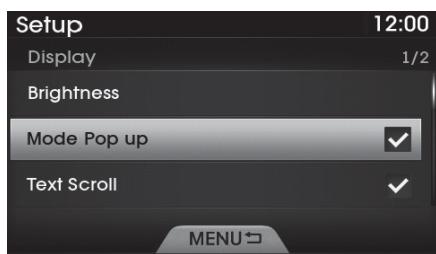


This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

Media Display

Press the **SETUP** key ▶ Select [Display] ▶ Select [Media Display]

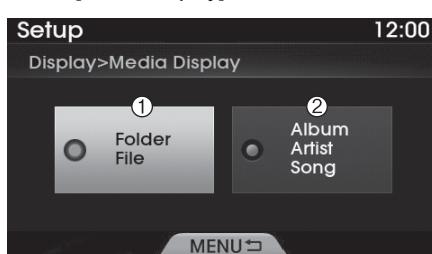



This feature is used to change the information displayed within USB and MP3 CD modes.

- (1) Folder File : Displays file name and folder name
- (2) Album Artist Song : Displays album name/artist name/song

Sound Settings

Sound Setting

Press the **SETUP** key ▶ Select [Sound] ▶ Select [Sound Setting]

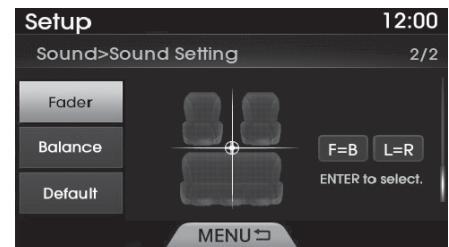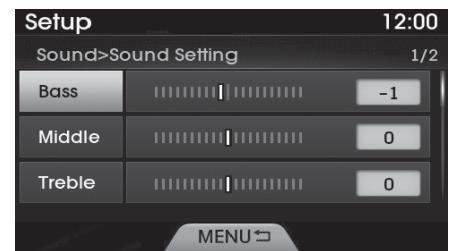

Use TUNE knob to adjust the Bass/Middle/Treble and Fader/Balance settings.


Features of your vehicle

After selecting the Bass / Middle / Treble, use the  TUNE knob to adjust the settings.

After selecting the Fader / Balance, use the  TUNE knob to move the cursor on the control screen to the desired position.

SDVC (Speed Dependent Volume Control)

Press the **SETUP** key▶Select [Sound]▶Select [Speed Dependent Vol.]

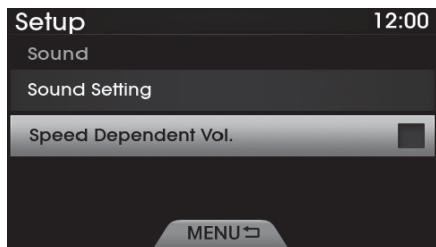


The volume level is controlled automatically according to the vehicle speed.
Use the  TUNE knob to select from On/Off.

Clock/Calendar Settings

Clock Settings


Press the **SETUP** key▶Select [Clock/Calendar]▶Select [Clock Settings]

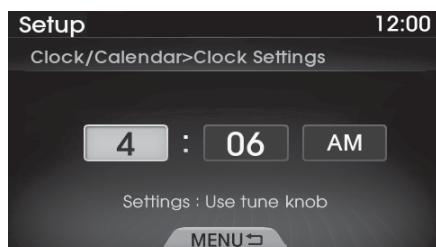

Use the  TUNE knob to select the Hour, Minutes and AM/PM setting and use  TUNE knob to change settings.

Calendar Settings

Press the **SETUP** key▶Select [Clock/Calendar]▶Select [Calendar Settings]

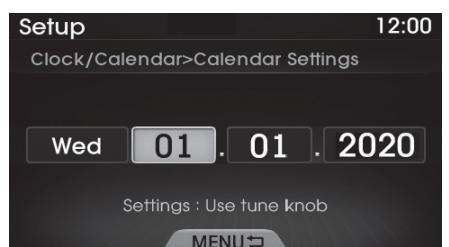

Use the  TUNE knob to select the Year, Month and Day and use  TUNE knob to change settings.

Clock Display


Press the **SETUP** key▶Select [Clock/Calendar]▶Select [Clock Display (Power off)]

This feature is used to display a clock on the screen when the audio system is turned off.

Bluetooth® Wireless Technology Setting (If equipped)

Pairing a New Device

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Pair Phone]

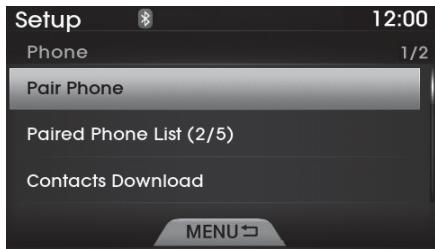

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within *Bluetooth® Wireless Technology*.

Viewing Paired Phone List

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Paired Phone List]



This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting *Bluetooth® Wireless Technology Connection*" section within *Bluetooth® Wireless Technology*.

- 1) Connect/Disconnect Phone : Connect/disconnects currently selected phone
- 2) Delete : Deletes the currently selected phone
- 3) Change Priority : Sets currently selected phone to highest connection priority


* NOTICE - BEFORE DOWNLOADING CONTACTS

- Only contacts within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.
- To learn more about whether your mobile phone supports contacts downloads, refer to your mobile phone user's manual.
- The contacts for only the connected phone can be downloaded.

Features of your vehicle

Downloading Contacts

Press the [SETUP] key▶Select [Phone]▶Select [Contacts Download]

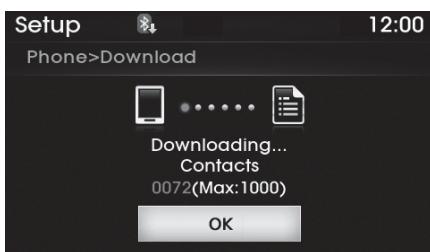

As the contacts are downloaded from the mobile phone, downloading contacts number is displayed.

* NOTICE

- Upon downloading phone contacts, the previous corresponding data is deleted.
- This feature may not be supported in some mobile phones.
- Voice Recognition may not operate while contacts are being downloaded.

Auto Download (Contacts)

Press the [SETUP] key▶Select [Phone]▶Select [Auto Download]




This feature is used to automatically download mobile contacts entries once a *Bluetooth®* Wireless Technology phone is connected.

* NOTICE

- The Auto Download feature will download mobile contacts entries every time the phone is connected. The download time may differ depending on the number of saved contacts entries and the communication state.
- Before downloading contacts, first check to see that your mobile phone supports the contacts download feature.

Outgoing Volume

Press the [SETUP] key▶Select [Phone]▶Select [Outgoing Volume]

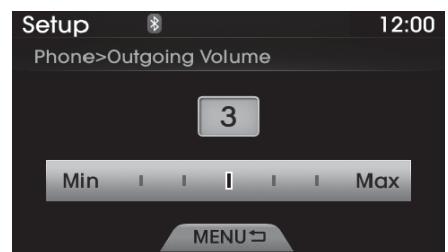


Use  TUNE knob to adjust the outgoing volume level.

* NOTICE

While on a call, the volume can be changed by using the  key.

Turning Bluetooth System Off

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Bluetooth System Off]. Once *Bluetooth*® Wireless Technology is turned off, *Bluetooth*® Wireless Technology related features will not be supported within the audio system.

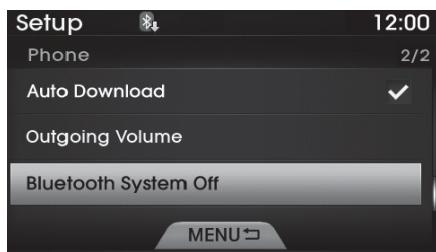

* NOTICE

To turn *Bluetooth*® Wireless Technology back on, go to **SETUP** ▶ [Phone] and press "Yes".

System Setting

Memory Information

Press the **SETUP** key ▶ Select [System] ▶ Select [Memory Information]



This feature displays information related to system memory.


(1) Using : Displays capacity currently in use

(2) Capacity : Displays total capacity

SETUP (For Colombia Model)

Starting Mode

Press the **SETUP** key to display the Setup screen.

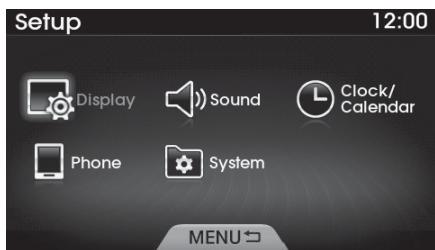

You can select and control options related to [Display], [Sound], [Clock / Calendar], [Phone] and [System].


* NOTICE

Once settings have been changed, press the **MENU** key to return to the previous menu.

Display Settings

Adjusting the Brightness

Press the **SETUP** key▶Select [Display] ▶Select [Brightness]

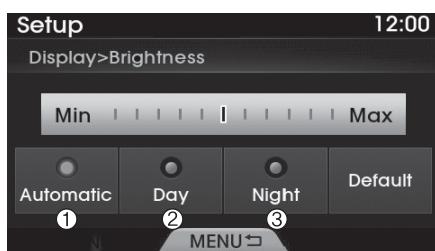


Use the **TUNE** knob to adjust the screen brightness or set the Brightness on Automatic, Day or Night mode.

- (1) Automatic : Adjusts the brightness automatically
- (2) Day : Always maintains the brightness on high
- (3) Night : Always maintains the brightness on low

Mode Pop up

Press the **SETUP** key▶Select [Display] ▶Select [Mode Pop up]

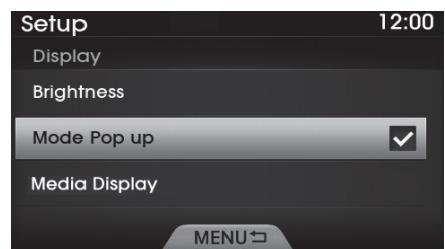

This feature is used to display the Mode Pop up screen when entering radio and media modes.


When this feature is turned on, pressing the **RADIO** or **MEDIA** key will display the Mode Pop up screen.

* NOTICE

The media Mode Pop-up screen can be displayed only when two or more media modes have been connected.

Media Display

Press the **SETUP** key▶Select [Display]▶Select [Media Display]

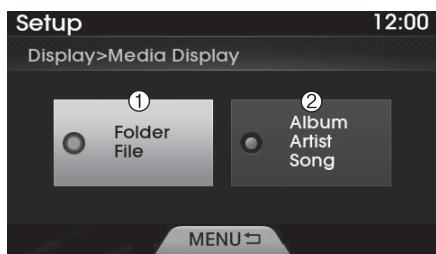


This feature is used to change the information displayed within USB and MP3 CD modes.

- (1) Folder File : Displays file name and folder name
- (2) Album Artist Song : Displays album name/artist name/song

Sound Settings

Press the **SETUP** key▶Select [Sound]

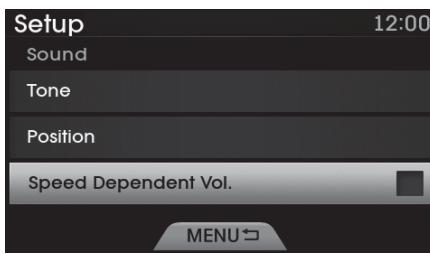


Tone

This menu allows you to set the Bass, Middle, Treble.

Select [Tone]▶Select menu through TUNE knob▶Turn TUNE knob left/right to set

- Bass, Middle, Treble : Selects the sound tone.
- Default : Restores default settings.
- Return : While adjusting values, pressing the TUNE knob will restore the parent menu.

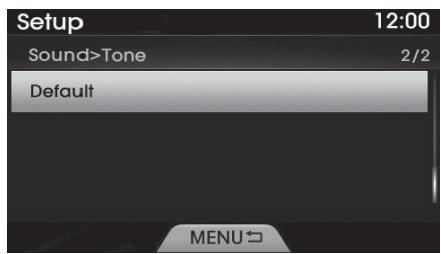

Features of your vehicle


Position

This menu allows you to set the Fader, Balance.

Select [Position] Select menu through TUNE knob Turn TUNE knob left/right to set


- Fader, Balance : Selects the sound fader and balance
- Default : Restores default settings.

※ Return : While adjusting values, pressing the TUNE knob will restore the parent menu.

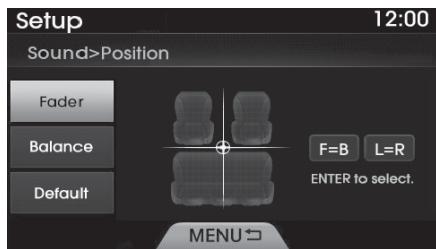

SDVC (Speed Dependent Volume Control)

Press the **SETUP** key▶ Select [Sound] ▶ Select [Speed Dependent Vol.]

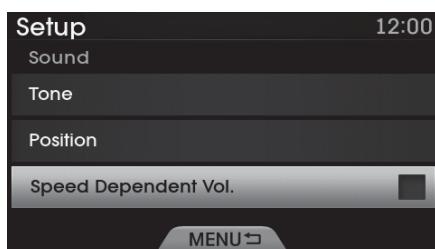


The volume level is controlled automatically according to the vehicle speed.
Use the  TUNE knob to select from On/Off.

Clock/Calendar Setting

Clock Settings


Press the **SETUP** key▶ Select [Clock/Calendar]▶ Select [Clock Settings]

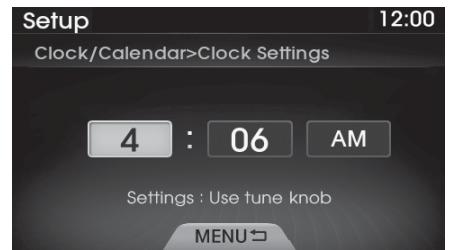

Use the  TUNE knob to select the Hour, Minutes and AM/PM setting and use  TUNE knob to change settings.

Calendar Settings


Press the **SETUP** key▶Select [Clock/Calendar]▶Select [Calendar Settings]

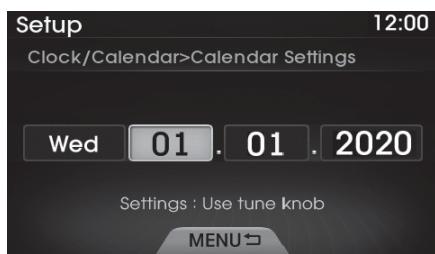

Use the **Ⓐ TUNE** knob to select the Year, Month and Day and use **Ⓑ TUNE** knob to change settings.

Time Format

Press the **SETUP** key▶Select [Clock/Calendar]▶Select [Time Format]

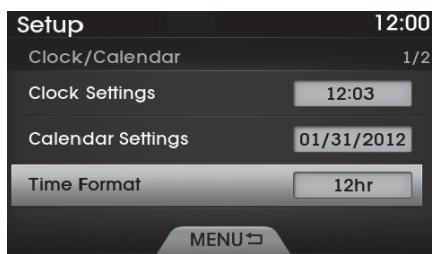

This feature is used to change the clock format between 12hr or 24hr.

Clock Display

Press the **SETUP** key▶Select [Clock/Calendar]▶Select [Clock Display (Power off)]


This feature is used to display a clock on the screen when the audio system is turned off.

Features of your vehicle

Bluetooth® Wireless Technology Setting (If equipped)

Pairing a New Device

Press the **SETUP** key▶Select [Phone]▶Select [Pair Phone]

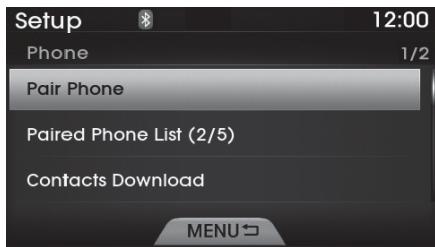

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within *Bluetooth® Wireless Technology*.

Viewing Paired Phone List

Press the **SETUP** key▶Select [Phone]▶Select [Paired Phone List]



This feature (If equipped) is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting *Bluetooth® Wireless Technology* Connection" section within *Bluetooth® Wireless Technology*.


- 1) Connect/Disconnect Phone : Connect/ disconnects currently selected phone
- 2) Delete : Deletes the currently selected phone
- 3) Change Priority : Sets currently selected phone to highest connection priority

* NOTICE - BEFORE DOWNLOADING CONTACTS

- Only contacts within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.
- To learn more about whether your mobile phone supports contacts downloads, refer to your mobile phone user's manual.
- The contacts for only the connected phone can be downloaded.

Downloading Contacts

Press the **SETUP** key▶Select [Phone]▶Select [Contacts Download]

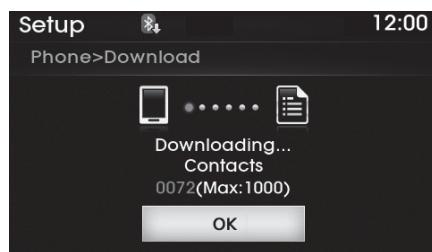


As the contacts are downloaded from the mobile phone, downloading contacts number is displayed.

* NOTICE

- Upon downloading phone contacts, the previous corresponding data is deleted.
- This feature may not be supported in some mobile phones.
- Voice Recognition may not operate while contacts are being downloaded.

Outgoing Volume

Press the **SETUP** key▶Select [Phone]▶Select [Outgoing Volume]

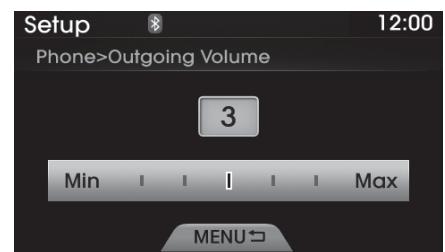

Use **◎ TUNE** knob to adjust the outgoing volume level.

* NOTICE

While on a call, the volume can be changed by using the **SEEK** key.

Features of your vehicle

Turning Bluetooth System Off

Press the **SETUP** key ▶ Select [Phone] ▶ Select [Bluetooth System Off]. Once Bluetooth® Wireless Technology is turned off, Bluetooth® Wireless Technology related features will not be supported within the audio system.



*** NOTICE**

To turn Bluetooth® Wireless Technology back on, go to **SETUP** ▶ [Phone] and press "Yes".



System Setting

Memory Information

Press the **SETUP** key▶Select [System] ▶Select [Memory Information]




This feature displays information related to system memory.

- (1) Using : Displays capacity currently in use
- (2) Capacity : Displays total capacity

Language

Press the **SETUP** key▶Select [System] ▶Select [Language]

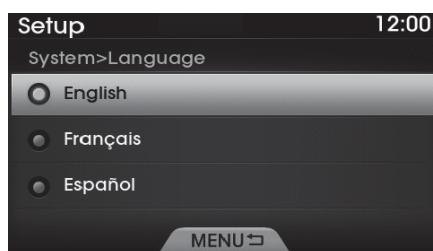

This feature is used to change the system and voice recognition language.

If the language is changed, the system will restart and apply the selected language.

REAR VIEW CAMERA (if equipped)

- The system has been equipped with a rear view camera for user safety by allowing a wider rear range of vision.
- The rear view camera will automatically operate when the ignition key is turned ON and the transmission lever is set to R.
- The rear view camera will automatically stop operating when set to a different lever.

CAUTION

The rear view camera has been equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. For safety, directly check the rear and left/right sides.

WARNING & SAFETY INFORMATION

Safety Symbols

Warning

- When encountering this symbol in the manual, you must follow these recommendations to avoid irreparable damage to your car, system or connected devices or to avoid accidents with injuries or death.

IC Information

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The antenna(s) used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

FCC notification to users

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by consulting with a dealer or an experienced technician for technical assistance.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.