

Bluetooth® Audio


Starting Mode

Press the **MEDIA** key ► Press

Bluetooth Audio.

Playing Bluetooth® Audio

- Press the **▶** button to play files saved within the Bluetooth® phone.
- Press the **||** button to pause the file.

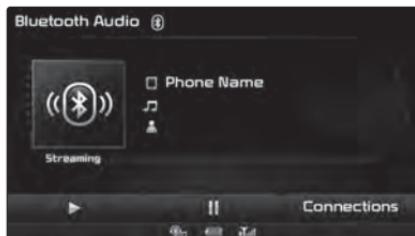

Selecting Bluetooth® Audio Files

While playing ► Press the **SEEK**, **TRACK^** key ► Selects the previous/next file.

Setting Connection


Press the **Connections** button to add a new Bluetooth® phone, connect/disconnect, delete, delete all, or view the Help section.



Starting Mode



Press the **MEDIA** key ► Press **My Music**.

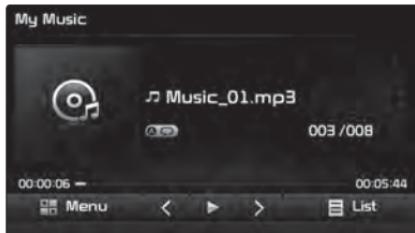

Playing My Music

- Press the **▶** button to play the file.
- Press the **||** button to pause the file.

Selecting My Music

While playing ► Press the **<**, **>** buttons or the **▼ SEEK**, **TRACK▲** key to play the previous/next file.

- Pressing and holding the **▼ SEEK**, **TRACK▲** key (over 0.8 seconds) will rewind or fast-forward the current file.
- While the **▼ SEEK**, **TRACK▲** key is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the Music will begin playing at normal speed.

My Music Mode

Using the Menu Buttons

Press the **■ Menu** button to set the Repeat, Shuffle, Scan, Info On (Info Off) menus.

Repeat

Press the **■ Menu** button ▶ Press **□ Repeat**.

The currently playing file is repeated.



Shuffle

Press the **■ Menu** button ▶ Press **□ Shuffle**.

When turned on, files are played in random order.

Scan

Press the **■ Menu** button ▶ Press **□ Scan**.

The beginning (approx 10 seconds) of all files are scanned.

Info On/Info Off

Press the **■ Menu** button ▶ Press **□ Info On**.


The screen display can be set differently depending on user selection.

When the title, artist, and album info are displayed, the button is changed to

□ Info Off.

Press **□ Info Off** to restore the previous information display setting.

Using Menus within the List Screen

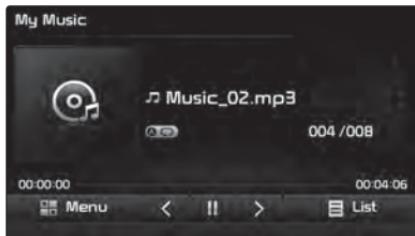


Moving between Lists

Press the **List** button ► Press

▲ , **▼** .


If six (6) or more files or folders exist in the same folder, the list will be displayed across two or more pages.

Press the **▲** , **▼** cursor buttons to quickly find the desired page.

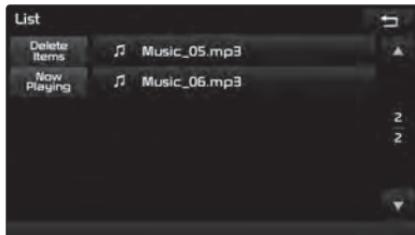

Retuning to Current Location

While searching files within other folders, press the **Now Playing** button to return to the currently playing file screen.

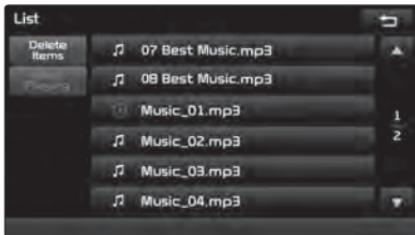


Deleting Files

Press the **List** button ►

Select the files to delete ► Press

Delete Items .

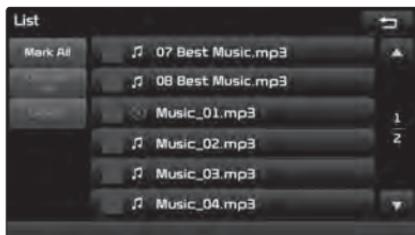

Navigation

Starting Navigation

Current Position

Press the **MAP VOICE** key or the  button displayed at the upper right side in some map conditions to display the map of the current position and the neighboring area.



Map Display Settings


Press the **MAP VOICE** key ► Press the .

Each press of this button changes the direction between Heading-up and North-up.



Changing Map Scale

Press the Scale  /  button to display a popup showing all scales. To adjust the scale, press the  /  button or push the desired scale on the scale pop-up window.

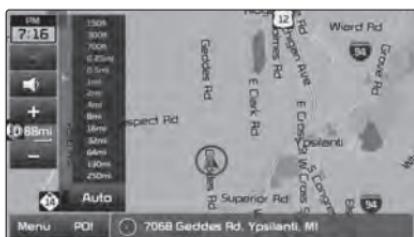

Map Menu

Press **Menu** button.

The Set as Destination, Add Waypoint, Add to Address Book, Navi Vol. features can be used.

Some buttons are disabled in states when they cannot be used.





Adjusting Navigation Volume

Press **Menu** ▶ **Navi Vol.** ▶ Adjust volume.

Press the button to turn the navi guidance volume on/off.

Press **Menu** ▶ **Navi Vol.** button to display a popup used to adjust volume and adjust the navi guidance volume to the desired loudness.

0~45 through the / button.


Press the **Mute** button to turn off the sound.



POI Display

Press **POI** .

When POI menus are displayed, pressing one of the 6 POI icon buttons will display the corresponding POI icons.

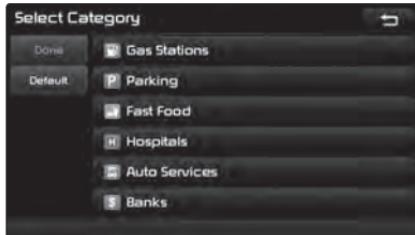

Editing POI Icons

Press **POI** ▶ Press the **Edit POI Icon** button ▶ Press **Done** .

Press the **Edit POI Icon** button to select the desired facility from the various facility types.

Up to six favorite facilities can be set.

Press the **Default** button to reset the displayed POI icons. Initially, Gas Station, Parking, Fast Food, Hospital, Auto Service, and Bank are set as default.

Navigation

Searching POIs

Press the **Search by local POI** button.

This feature is used to search nearby POIs.

Name	Description
1 Select Area	Use the Select Area feature to change the area.
2 Near Current Position	Within the 'Search by POI' menu, searches facilities based on the current vehicle position




Adding a My Place

Feature used to save the current position or scroll position.




Destination Search

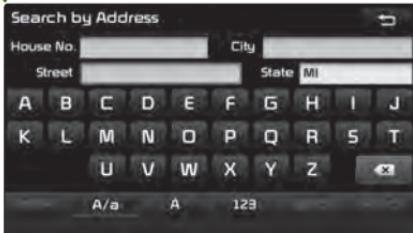

Address

Press the **DEST** key ► Press  **Address**.

Feature used to search destinations through addresses, including House No., Street name, City name, etc.

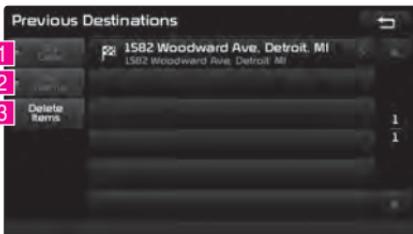

Previous Destinations

Press the **DEST** key ► Press  **Previous Destination**.

Name	Description
1 By Date	Sorts POIs and locations by added date
2 By Name	Sorts POIs and locations by name
3 Delete Items	From various entries, items can be selected and deleted all at once



Point of Interest (POI) Search

This feature is used to search facilities using POI categories. It is possible to search through previous search history.

Navigation

Gas Station

Press the **DEST** key ► Press  **Gas station**.

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.



Restaurants

Press the **DEST** key ► Press  **Restaurants**.

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.





Emergency

Press the **DEST** key ► Press **Emergency** .

This search feature is used to search for police stations, hospitals, and dealerships in emergency situations.



My Places

Press the **DEST** key ► Press **My Places** ► Press **Group** .

This search feature is used to search destinations by selecting previously saved My Places to set as destinations. My Places can be placed in groups, and group names can be edited within Setup.



Phone Number

Press the **DEST** key ► Press **Phone Number** .

This search feature is used to search the locations of POIs by entering the phone number of the desired POI destination.


- Area codes must be entered to complete the search.

Navigation

Intersection Search

Press the **DEST** key ► Press  **Intersection Search**.

This search feature is used to search destinations by street intersections throughout the map.

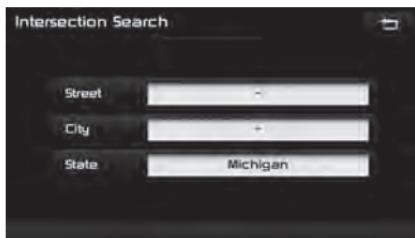


Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.

Exit/Entrance

Press the **DEST** key ► Press  **Exit/Entrance**.

This search feature is used to search destinations by entering the Exits and Entrances of corresponding expressways.

Enter the name of the Freeway corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.

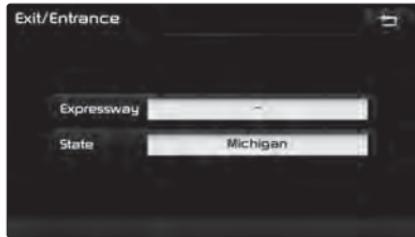



(Alternative Route)



(Route Overview)

Setting a Destination

Press the **DEST** key ► Search for the Destination ► Press **Set as Destination**.

- To conduct a destination search through the desired search method, select the desired destination from the list. (For more information on destination search methods, refer to the 'Destination Search' section.)
- After verifying the location of the searched destination, press the **Set as Destination** button to calculate the route. The Route Overview or Alternative Route screen will be displayed.
- Within the Route Overview or Alternative Route screen, press the **MAP VOICE** key or the **Start Guidance** button to start route guidance.

One Touch Scroll Setting

The destination can be set to the current map display.

- While in the map screen, touching a position on the map will move the map to the center of the selected position and display the scroll mark.
- Press the **Menu** button to set the selected position as a waypoint or destination.

Navigation

Route Calculation

- Once you have set a destination, calculate the route. The route overview and route option menus will be displayed.
 - After checking the Route Overview, press the **MAP VOICE** key or the **Start Guidance** button or just drive for over 3 mph or for approximately 5 seconds to start guidance.



Demo

After a route has been calculated, press the **Demo** button to begin simulated driving of the calculated route.

- Within the Route Overview screen, press the **Demo** button.
 - During Demo, press the **MAP VOICE** key to end the demo and display the current map position. If you start driving while viewing the route demo, demo will end and route guidance will start.



Add Waypoint

After searching for waypoints, press the **Add Waypoint** button to add the waypoint to the current route.






Route Recalculation

Once a route has been set, the

Recalculate button is displayed at the top of the menus.

Pressing the **Recalculate** button will display a pop-up that allows you to change route options. Once the settings are changed, the route is recalculated by reflecting the changes.

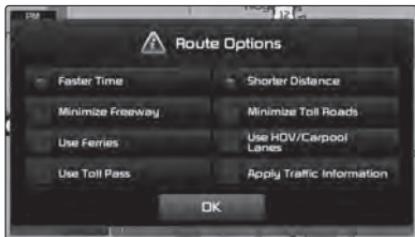

Cancel Route

In the Map menu screen, press the

Cancel Route button.

Route Guidance

Preliminary guidance, highway mode, turn list guidance, and other guidance screens are displayed according to the current road condition.

Within the guidance map screen, if the current position is on route, then intersection guidance will be provided once you are nearby an intersection.

Also, the intersection zoom screen is displayed when nearby an intersection.



Preliminary Guidance Mode

At the top right side of the screen, the next/ after next turn info, remaining distance, direction, and other information are displayed.



Intersection Zoom Mode

This mode provides detailed guidance nearby intersections before the next turn.

This mode is displayed starting from 0.5mi before the intersection.





Highway Mode

Upon entering a highway during route guidance, the highway mode will automatically be displayed. This mode is displayed when driving on a highway and mainly displays highway related POIs.

You can check information for various POIs by using the **View All** , **Summary** , and **Rest Area** buttons.

When scrolling through POIs by using the **▼** , **▲** buttons, pressing the **○** button will select the POI closest to the current position.

	Name	Description
1	View All	Guidance for all POIs on the highway
2	Summary	Shows list of turn points and other directional route guidance while driving within highway
3	Rest Area	Guidance for only the rest areas on the highway



Turn List Mode

Turn List Mode shows turn information on the current route.

Navigation

Route Menu

Press the **ROUTE** key to use, edit, or optimize various route options.

Cancel Route

Press the **ROUTE** key ► Press **Cancel Route**.



Route Overview

Press the **ROUTE** key ► Press **Route Overview**.

Within the Route Overview screen, press the **Alternative Route** button to display other potential routes to the set destination.

From the alternative route options, select the desired route.



Route Info

Press the **ROUTE** key ► Press **Route Info**.

The turn points and distance information by key roads within the set route are played. Press the **MAP** button next to each road name to display the map position for the corresponding location.






Route Option

Press the **ROUTE** key ► Press **Route Option** ► Set and press **Done**.


Route Options refer to conditions used to calculate the route to the destination. The route is automatically recalculated if the route options and detailed route settings are changed.

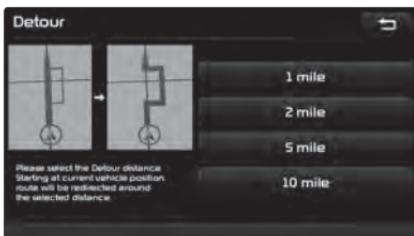

Detour

Press the **ROUTE** key ► Press **Detour**.

The Detour menu is used to redefine the route by setting a detour to a certain distance from the current position.

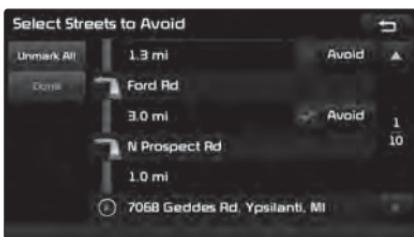

Avoid Streets

Press the **ROUTE** key ► Press **Avoid Streets** ► Select the streets you want to avoid and press **Done**.

This feature is used to select specific streets to avoid within the current route. Select **Avoid** to avoid the particular streets in the route overview that are desired to be avoided.



Edit Route

Press the **ROUTE** key ► Press **Edit Route** ► Set and press **Done**.

The Edit Route menu displays the start point, waypoints, and the destination in list format and is used to edit corresponding positions or the order of destinations within the route.

Navigation


Avoid Area

Press the **ROUTE** key ► Press **Avoid Area** ► Set and press **Done**.


This feature is used by creating a rectangle over the area to avoid.

An area set as an avoid area is excluded from the calculated route. If a route had been calculated prior to creating an avoid area, the route will automatically be recalculated.

The screen will prompt to select the first corner of the square of the avoid area, followed by the second corner.

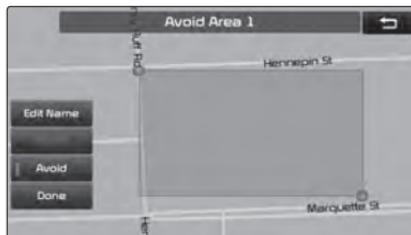

Using Bluetooth® Handsfree

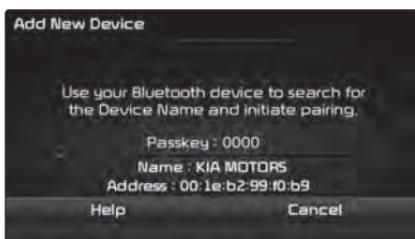

- Visit www.Kia.com/us/bluetooth for additional information on pairing your Bluetooth® enabled mobile phone, and to view a phone compatibility list.

Pairing from the Bluetooth® Device

Press the **PHONE** key on the steering wheel or press the **PHONE** ►

Press **Yes**.

In the Search from Device screen

► Search for the car name and pair the device ► Enter the Passkey ► Bluetooth® becomes connected.

- When searching from the Bluetooth® device, the car name is Kia Motors and the default passkey is '0000', then press Ok
- To learn more about searching from Bluetooth® devices and pairing, refer to the user's manual for your Bluetooth® device.
- The Bluetooth® Audio screen is displayed once audio streaming is available.

NOTICE

- This process may take a few minutes. Radio may play during the wait.
- Some phones (i.e., iPhone, Android and Blackberry phones) may offer an option to allow acceptance of all future Bluetooth® connection requests by default.
- Phonebook transfer will occur automatically at initial pairing. Wait until complete before placing a call.

Making/Answering Calls

Calling by Dialing a Number

Enter number on the dial pad ►

Press the  or the  key on the steering wheel.


If you press the  button without entering a number, the Call History screen is displayed. Press and hold the dial pad **0 +** (over 0.8 seconds) to enter a "+".




Name	Description
1 Send	Calls the entered phone number
2 End	Deletes all entered numbers

Answering a Call

Incoming call notice ► Press the  button or the  key on the steering wheel.

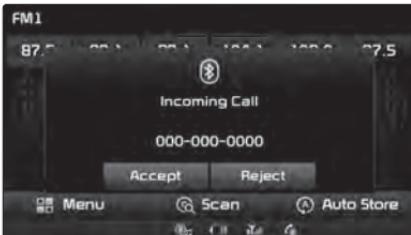


Operating Menus during a Call

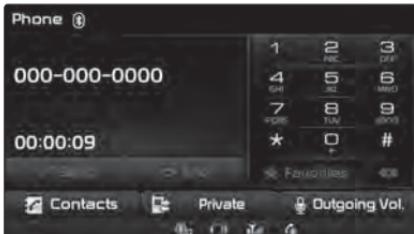

Switching Call to Bluetooth® Phone

During handsfree call ► Press the **Private** button or press and hold the **Call** key (over 0.8 seconds) on the steering wheel.


The call will be switched from the handsfree to the Bluetooth® mobile phone.

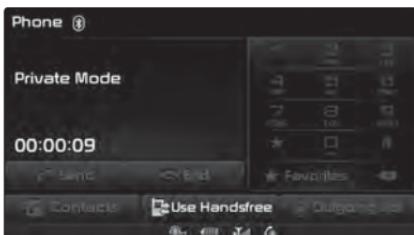

Switching Call to the Handsfree

During call on mobile phone ► Press the **Use Handsfree** button or press and hold the **Call** key (over 0.8 seconds) on the steering wheel.

The call will be switched from the Bluetooth® mobile phone to the handsfree.

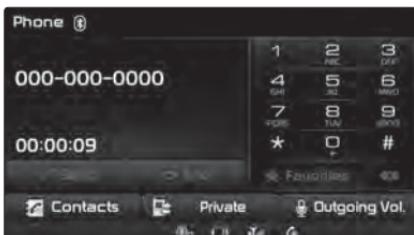

Ending a Call

While on a call ► Press the **End** button or the **Call** key on the steering wheel.

The Bluetooth® handsfree call will end.



Contacts

Downloading Mobile Phone Contacts


Press the **Contacts** button ►

Press the **Download** button ►

Press **Yes**.

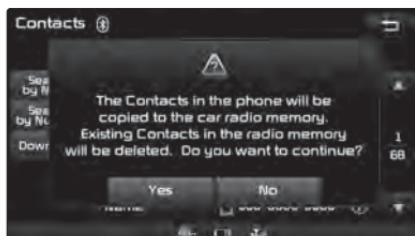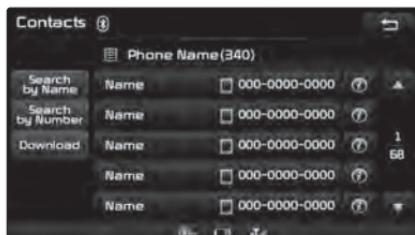



Favorites

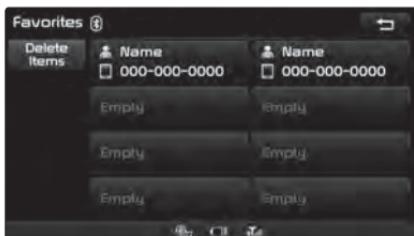

Calling Favorites

In Phone screen ► Press


★ Favorites ► Select the desired Favorite ► Call is connected.

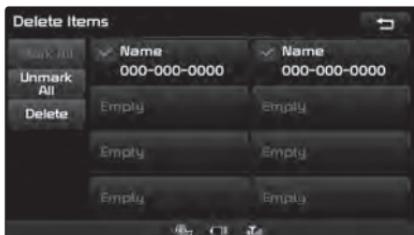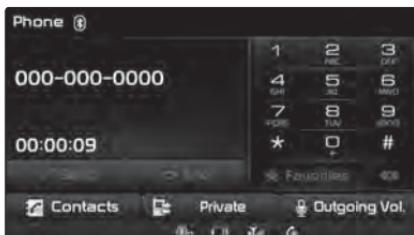


Selecting/Deleting Favorites

In Favorites screen ► Press

Delete Items ► Select items you want to delete and press Delete ► Press Yes .

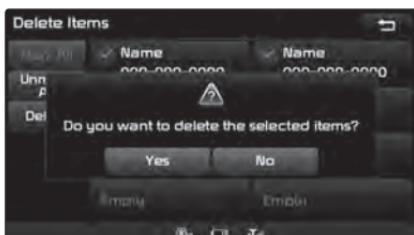

Searching Contacts

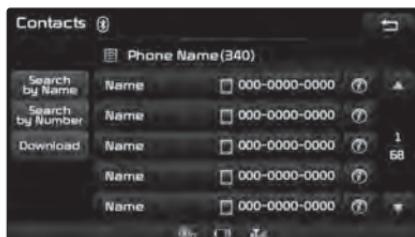

Search by Name

Press the **Search by Name** button
► Enter name and press **Search**.



Searching by Number



Press the **Search by Number** button
► Enter number and press
Search.



i Information

- When searching a number, it is possible to search by entering just a part of the entire number.
(ex : if you enter "1544", all numbers that include "1544" will be searched.)

Setting Bluetooth® Connection

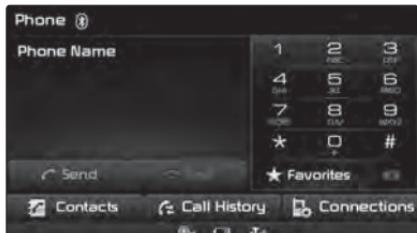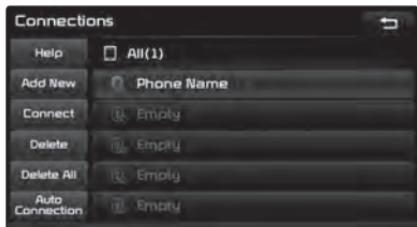

Connecting a Device

Press the **Connect** button on the Phone screen.


The Phone screen is displayed once Bluetooth® Handsfree is connected, and the Bluetooth® Audio screen is displayed once audio streaming is available.



Bluetooth® Handsfree

Disconnecting a Device

Select the device you wish to disconnect ► Press **Disconnect**

► Press **Yes** .

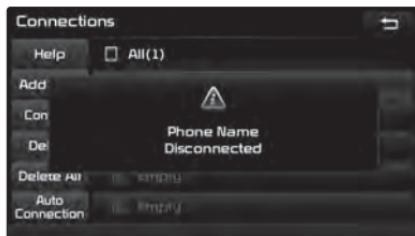

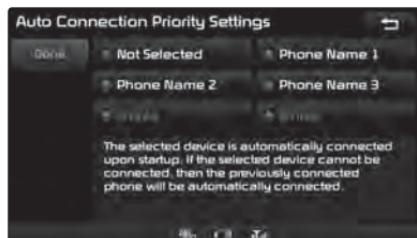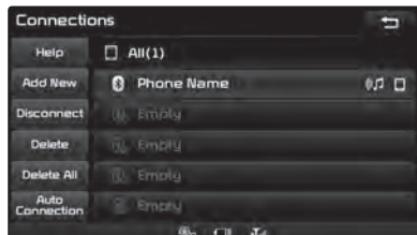

Setting Auto Connection

Press the **Auto Connection** button
► Select the desired phone ► Set and press **Done** .

The Bluetooth® device will automatically be connected according to the option set when the car ignition is turned on. When the user selected phone cannot be connected, the system automatically attempts to connect the most recently connected phone. When the most recently connected phone cannot be connected, the system attempts to connect all paired phones. If you do not want to connect automatically, turn off Bluetooth within your mobile phone.


Bluetooth® Handsfree

Device Information

Press the **INFO SETUP** key ►


Press **Phone** ► Press

Device Information

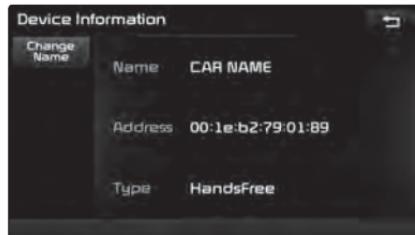

Adjusting the Ring/Call Volume

While on a call ► Use the **VOL** knob on the head unit or the **VOL+** , **VOL-** keys on the steering wheel to adjust the ring/call volume.

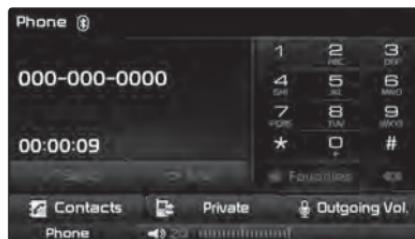



Setting Mic Volume

While on a call ► Press the **Outgoing Vol.** ► Set Outgoing Volume ► Press **OK**.

If you press the **Mute** button, the outgoing volume is muted and blocked to the other party.



Restore Factory Settings

Press the **INFO SETUP** key ► Press **Setup** ► Press **Phone** ► Press **Restore Factory Settings**



Voice Recognition

Starting Voice Recognition


Starting Voice Recognition

Shortly press the  key on the steering wheel (under 0.8 seconds)

- ▶ Say a command.

Once voice recognition starts, the voice command entry window and the six representative commands are displayed.

- If voice recognition is in [Normal Mode], then the system will say “Please say a command after the beep,” followed by a beep tone.
- If voice recognition is in [Expert Mode], then you will only hear a beep a “Beep~”.

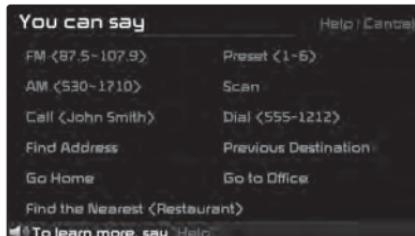

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation. To maximize the use of Voice Recognition, consider these guidelines when storing contacts:

- Do not store single-name entries (e.g., “Bob”, “Mom”, etc.). Instead, always use full names (including first and last names) for these contacts
- Do not use special characters (e.g., ‘@’, ‘_’, ‘*’, ‘&’, etc.)
- Do not use abbreviations (i.e., use “Lieutenant” instead of “Lt.”) or acronyms (i.e., use “County Finance Department” instead of “C. F. D.”; Be sure to say the name exactly as it is entered in the contacts list.

Skipping Prompt Messages

Skipping Prompt Messages While prompt message is being stated



- ▶ Briefly press the  key on the steering wheel. (under 0.8 seconds)

The prompt message is immediately ended and the beep tone will sound. After the “beep”, say the voice command.

Re-starting Voice Recognition

While system waits ▶ Briefly press the  key on the steering wheel. (under 0.8 seconds)

The command wait state will end and the beep tone will sound. After the “beep”, say the voice command.

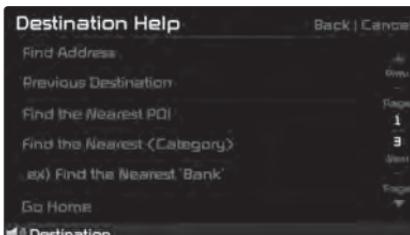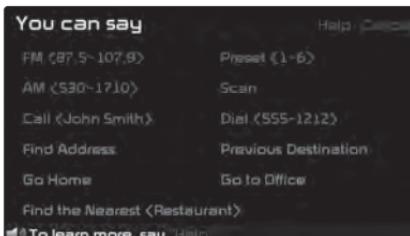

Ending Voice Recognition

While Voice Recognition is operating

► Press and hold the key on the steering wheel. (over 0.8 seconds)

While using voice recognition, pressing a steering wheel remote control or a different key will end voice recognition.

Illustration on Using Voice Recognition (Setting Home as the Destination)

Press the key. (under 0.8 seconds)

The system awaits for your command and display a list of accessible commands on the screen.



Voice Recognition

Voice Command List

Voice commands within this system are categorized into "Common Commands" and "Mode Commands."

- Common Commands (●) : commands that can be used in all situations.
- Mode Commands (○) : commands that can be used in specific multimedia/navigation/Bluetooth® mode states.

Command	Operation
● Help	Displays the main Help screen
● Destination Help	Displays the Destination related command list
● Map Help	Displays the Map related command list
● Radio Help	Displays the FM/AM radio related command list
● SIRIUS Help	Displays the SIRIUS radio related command list
● Disc Help	Displays the DISC mode related command list for the disc inserted in the CD Player
● iPod Help	Displays the iPod related command list
● USB Help	Displays the USB related command list
● Phone Help	Displays the Phone related command list

Audio System Command List

FM/AM Radio

Command	Operation
● Radio	Plays the most recent frequency for the most recently operated band
● AM	Plays the most recent frequency for the corresponding band
● FM	Plays the most recent frequency for the corresponding band. In the case of FM, The most recent frequency within the most recently played FM1 or FM2 band is played
● FM1/FM2	Plays the most recent frequency for the corresponding band
● AM <530~1710>	Plays the desired AM band frequency (e.g. AM "Five-Hundred Thirty")
● FM <87.5~107.9>	Plays the desired FM band frequency (e.g. FM "Eighty-Seven point Five")
● AM Preset <1~6>	Plays the desired AM band preset frequency
● FM1 Preset <1~6>	Plays the desired FM1 band preset frequency
● FM2 Preset <1~6>	Plays the desired FM2 band preset frequency
○ Preset <1~6>	Plays the desired preset frequency for the current band
○ Scan	Scans receivable frequencies from the current broadcast and plays for 10 seconds each
○ Preset Scan	Plays through all presets for 10 seconds each, beginning with the current preset

Voice Recognition

SIRIUS Radio

Command		Operation
●	SIRIUS	Plays the last channel within the last band from SIRIUS1, SIRIUS2, and SIRIUS3
●	SIRIUS1/ SIRIUS2/ SIRIUS3	Plays the most recent channel for the corresponding band
●	SIRIUS Channel <0~223>	Plays the desired SIRIUS band channel (e.g. SIRIUS channel "Eleven")
●	SIRIUS1 Preset <1~6>	Plays the desired preset channel for SIRIUS1 band
●	SIRIUS2 Preset <1~6>	Plays the desired preset channel for SIRIUS2 band
●	SIRIUS3 Preset <1~6>	Plays the desired preset channel for SIRIUS3 band
○	Channel <0~223>	Plays the desired channel of the current band
○	Preset <1~6>	Plays the desired preset channel of the current band
○	Scan	Scans receivable channels from the current broadcast and plays for 10 seconds each
○	Preset Scan	Plays through all presets for 10 seconds each, beginning with the current preset

CD(Audio Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current track
○	Repeat Off	Cancels repeat play to play tracks in sequential order
○	Shuffle	Randomly plays the tracks within the CD
○	Shuffle Off	Cancels random Play to play tracks in sequential order
○	Track <1~99>	Plays the desired track number

Voice Recognition

CD(MP3 Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the CD in random order
○	Shuffle Off	Cancels random play to play files in sequential order

USB Music

Command		Operation
●	USB	If the USB has been connected to the device, play the MP3 or image files on the USB
●	USB Music	If the USB has been connected to the device, plays the MP3 files within the USB
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the USB in random order
○	Shuffle Off	Cancels random play to play files in sequential order

Voice Recognition

iPod

Command		Operation
●	iPod	Plays the songs within the iPod if the iPod has been connected to the device
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the current category in random order
○	Shuffle Off	Cancels random play to play files in sequential order

My Music

Command		Operation
●	My Music	Plays the songs within the My Music
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the current category in random order
○	Shuffle Off	Cancels random play to play files in sequential order

Others

Command	Operation
● Bluetooth Audio	Plays Bluetooth® Audio
● Auxiliary	Plays the connected auxiliary device

Phone Command List

Name	Description
● Call	Displays list of saved contacts. Say the name to connect the call to the corresponding contact.
● Call <Name>	Call <Name> saved in Contacts (e.g. Call “John Smith”)
● Dial Number	Makes the call to the number
● Dial <Number>	Call can be made by dialing the spoken numbers (e.g. Dial “111 555 1234”)
● Call History	The user can select a number from the outgoing, incoming, and missed calls
● Redial	Connects the most recently called number

Voice Recognition

Navigation Command List

Destination

	Name	Description
●	Find Address	Sets the destination through address search for route guidance
●	Previous Destinations	Sets the previous destination as the current destination
●	Find Nearest POI	Sets a POI near the current position as the destination for route guidance through the POI category search
●	Find the Nearest <POI Category>	Sets a POI near the current position as the destination by directly inputting the POI name for route guidance (e.g. Find the Nearest "Restaurants"), For more information on <POI Category>, refer to Page 3-30.
●	Find Emergency Policestation	Searches for a police station near the current position and sets it as the destination for route guidance
●	Find Emergency Hospital	Searches for a hospital near the current position and sets it as the destination for route guidance
●	Find an Emergency Dealership	Searches for a dealership near the current position and sets it as the destination for route guidance
●	Go Home	Sets the previously registered home address as the destination for route guidance
●	Go to Office	Sets the previously registered office address as the destination for route guidance

Map

Name	Description
● Map Current Location	Displays the current position of the vehicle.
● Voice Guidance On	Turns the Voice Guidance On
● Voice Guidance Off	Turns the Voice Guidance Off
● Repeat Voice Guidance	Repeats the route guidance
● Cancel Route	Deletes the designated destination and terminates the route guidance
● Distance to Destination	Reports the remaining distance until destination by voice
● Time to Destination	Reports the remaining time until destination by voice
● Replan Faster Time Route	Recalculates the route with faster time route
● Replan Shorter Distance Route	Recalculates the route with shorter distance route
○ Zoom In / Zoom Out	Decreases/Increases the map zoom by one level
○ Zoom Maximum	Displays the map screen in the maximum zoom level
○ Zoom Minimum	Displays the map screen in the minimum zoom level
○ View Route	If the destination has been set, displays the entire route on the screen until the destination
○ Auto Zoom On	Turns the Auto Zoom feature on
○ Auto Zoom Off	Turns the Auto Zoom feature off
○ Auto Mode	Automatically converts the map display between daylight and night mode
○ Daylight Mode	Converts the map display into daylight mode
○ Night Mode	Converts the map display into night mode

Voice Recognition

POI Category List

Restaurants	Parking	Amusement Park	Services
African Restaurants	Rest Area	Cinema	Attorney
American Restaurants	Road Assistance	Golf Course	Cleaning & Laundry
Asian Restaurants	Travel	Museum	Communication Services
Chinese Restaurants	Airport	Recreation Area	Dentist
Coffee Shop	Bus Station	Ski Resort	Funeral Home
Continental Restaurants	Campground	Sports Activities	Hair & Beauty
Fast Food	City Center	Sports Complex	Hospital
French Restaurants	Ferry Terminal	Video & Game Rental	Medical Service
Italian Restaurants	Hotel	Winery	Mover Services
Japanese Restaurants	Local Transit	Other Recreation	Photography
Korean Restaurants	Rental Car Agency	Financial Services	Physician
Latin American Restaurants	Tourist Attraction	ATM	Social Service
Mexican Restaurants	Tourist Information	Bank	Tailor & Alteration
Seafood Restaurants	Train Station	Check Cashing Service	Tax Service
Vegetarian Restaurants	Travel Agent	Money Transfer	Physician
Other Restaurants	Shopping	Community	Social Service
Automotive	Bookstore	Business Facility	Tailor & Alteration
Auto Parts	Clothing Shop	City Hall	Tax Service
Auto Service	Convenience Store	Civic Center	
Kia Dealership	Department Store	Convention Center	
Car Wash	Electronics Store	Court House	
Gas Station	Gift Shop	Fire Department	
Hyundai Dealership	Grocery Store	Government Offices	
Motorcycle Dealership	Home Specialty Store	Library	
	Music Store	Police Station	
	Pharmacy	Post Office	
	Shoe Store	School	
	Shopping Center	Utilities	
	Sporting Goods Store	Waste & Sanitary	
	Recreation		

