

Who Cut The Cheese--Remote Control Whoopie Cushion

Instruction Sheet

- 1、 Use 4 AG13(LR44) button cell batteries for main unit.
- 2、 Use 2 AG3(LR41) button cell batteries for main unit.
- 3、 The installed batteries allow in-store demonstration of this product.

It is possible they may become weak or discharged prior to purchase and customer may need to replace them with fresh batteries to ensure proper operation.

4、 **Directions**

For first use, move “battery saver tabs” from remote unit and main unit. Move “ON-OFF” switch to “ON” position.

Turn switch to “OFF” when not in use, to save battery life.

5、 **Caution:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable(nickel-cadmium) batteries.
- Do not use rechargeable batteries.

Non-rechargeable batteries are not to be recharged.

Use only batteries of the same or equivalent.

Type as recommended.

Insert batteries so that polarity is correct.

Remove exhausted batteries from toy.

Dispose of batteries properly.

Do not bury or burn them.