 
 


Wireless Keyboard and Mouse Combo
User Manual

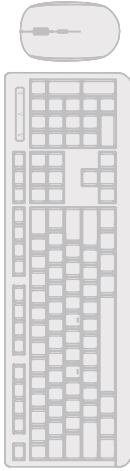 


Contact Us:
Whatever you need, we're here to help.
Just get in touch, and we'll try our best to respond within 24 hours.
After-sales email:
csforcustomer@gmail.com

Packing List

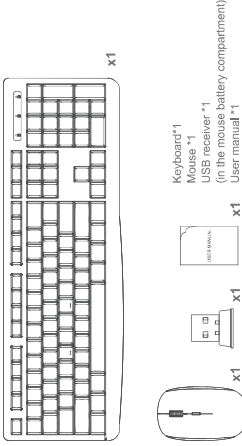

Operation Guides



Operation Guides

1. Fetch the wireless keyboard and mouse. Take out the USB receiver from the mouse battery compartment.
2. Insert the USB receiver into the keyboard according to the positive and negative sign.
3. Insert one 1.5 V AA battery into the mouse according to the positive and negative sign.
4. Plug the receiver into the USB port of your computer.
5. When the computer installs drivers automatically, they start to serve.

Functions of Combination Keys

FN+F1	audio on	FN+F5	previous track	FN+F9	homepage
FN+F2	volume down	FN+F6	next track	FN+F10	email
FN+F3	volume up	FN+F7	play / pause	FN+F11	my computer
FN+F4	mute	FN+F8	stop	FN+F12	favorites

Features

1. The mouse and keyboard share a common receiver. And the receiver is in the battery compartment at the bottom of the mouse.
2. Adjustable mouse DPI levels: 800-1200-1600-2400-4000(default setting is 1200).When switching process, the mouse LED light flashes different times: once at 800 DPI, twice at 1200 DPI, three times at 1600 DPI, four times at 2400 DPI, and five times at 4000 DPI.
3. It has automatic sleep mode and wake up mode. When the keyboard and mouse haven't been used for 15 minutes, it will enter sleep mode. Press any button to wake up.
4. Compatible with Windows XP / VISTA / 7 / 8 / 10/Mac (Functions of combination keys are not available)

Considerations

1. Use keyboard 1.5 V AAA battery and mouse 1.5V AA battery only. To prevent damage to internal elements, avoid using excessive-voltage batteries. If the product will be unused for a long time, take out the battery to prevent from corrosion.
2. The product adopts the 2.4 GHz wireless transmission with a 10-meter transmission distance. The distance may be shortened for big obstructions and low battery.
3. For the first use, the product may fail to work (connection error etc.) If it has been unused for a long time, try pairing again.

Solution to Connection Failures

Keyboard

1. Take out the battery from the keyboard and receiver from the computer.
2. Reinstall battery into the keyboard. And plug the receiver into the USB port of the computer.
3. At a distance of 20 centimeters from the receiver, press the keyboard ESC+Q keys for 10 seconds pairing.

Mouse

1. Take out the battery from the mouse and the receiver from the computer.
2. Reinstall battery into the mouse. And plug the receiver into the USB port of the computer.
3. Keep the distance between the mouse and the receiver at 20 centimeters, and press the left, middle, and right buttons at the same time. The red LED under the scroll wheel will stay on, and the pairing waiting time is about 20 seconds. After successful pairing, the red LED under the scroll wheel will turn off, and you can use it now.

Note: If the above solution doesn't help, repeat the above procedures to pair again. If it still can't work, contact our service team to work for you.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Granite is not responsible for any changes or modifications not expressly approved by the party responsible for compliance, such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

型号 PTX PC438A 7609+4094

名称 说明书

日期 2025-6-5

页码 1 OF 1

绘图 冯丽廷 审核

备注: 尺寸: L100*W100
材质: 80克书纸, 风琴折
印刷: 单黑印刷

文件编号

香敏琪 核准

版本 A.0