 
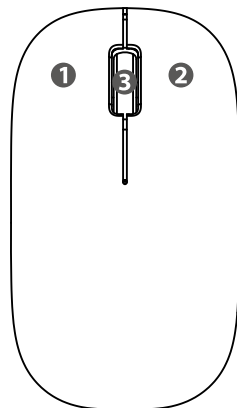 
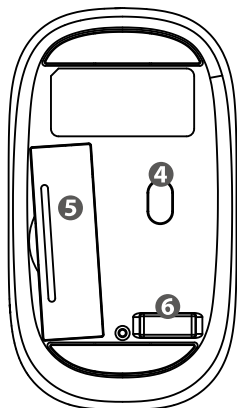 
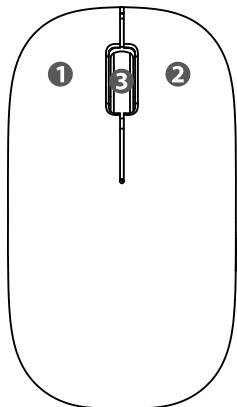 


封面

封底

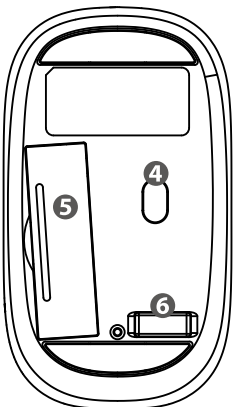

US UK Dear user Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules. 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. 1	Function Overview 1. Left button. 2. Right button. 3. Scroll wheel& Middle button. 4. Optical sensor. 5. Battery slot. 6. USB receiver storage slot.   2	Connection 2.4GHz wireless connection, install 1xAA battery into mouse battery slot, plug USB receiver into computer USB port, the computer will connect mouse automatically. Tip: If the computer didn't connect successfully, plug out USB receiver from computer USB port, take out batteries from mouse, repeat above operation to connect the computer. Product Features DPI switching: Press& hold [Left button] + [Middle button] for 3s to cycling switch DPI in 800/1200/1600/2400/4000 DPI, when switch DPI, LED indicator twinkle as below: <table><tr><th>DPI</th><th>LED twinkle times</th></tr><tr><td>800</td><td>1</td></tr><tr><td>1200</td><td>2</td></tr><tr><td>1600</td><td>3</td></tr><tr><td>2400</td><td>4</td></tr><tr><td>4000</td><td>5</td></tr></table> Polling Rate adjustment: Press mouse [middle button] and [right button] about 3s to switch polling rate, when switch to 125Hz polling rate, LED indicator will slowly flash 3 times, when switch to 250Hz polling rate, LED indicator will quickly flash 3 times. Power save mode: The mouse will enter power save mode when it is out of operation over 1 minute, move or click any button to wake it up, when the mouse is out of operation over8 minutes, the mouse will enter deep power save mode, click any button to wake it up. Low battery warning: when mouse battery is low, the LED indicator will twinkle, to remind change the battery. 3	DPI	LED twinkle times	800	1	1200	2	1600	3	2400	4	4000	5	FAQ 1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports. 2. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.  4	FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. 5
DPI	LED twinkle times															
800	1															
1200	2															
1600	3															
2400	4															
4000	5															
BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. 6	PT Prezado usuário, Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. 1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia. 7	Visão geral das funções 1. Botão esquerdo. 2. Botão direito. 3. Botão de rolagem e botão do meio. 4. Sensor óptico. 5. Compartimento de bateria. 6. Compartimento de armazenamento do receptor USB.   8	Conexão Conexão sem fio de 2,4 GHz. Instale 1 pilha AA no compartimento de pilhas do mouse, conecte o receptor USB na porta USB do computador e o computador conectará o mouse automaticamente. Dica: Se o computador não conectar, desconecte o receptor USB da porta USB do computador, retire as pilhas do mouse e repita a operação acima para conectar o computador. Características do produto Troca de DPI: pressione e segure [botão esquerdo] + [botão do meio] por 3 segundos para alternar entre as configurações de DPI de 800/1200/1600/2400/4000 DPI. Com a troca do DPI, o LED indicador piscará conforme descrito abaixo: <table><tr><th>DPI</th><th>LED twinkle times</th></tr><tr><td>800</td><td>1</td></tr><tr><td>1200</td><td>2</td></tr><tr><td>1600</td><td>3</td></tr><tr><td>2400</td><td>4</td></tr><tr><td>4000</td><td>5</td></tr></table> Ajuste da velocidade de leitura: pressione o [botão do meio] e o [botão direito] do mouse por cerca de 3 segundos para trocar a velocidade de leitura. Se passar para a velocidade de 125Hz, o LED indicador piscará lentamente 3 vezes. Se mudar para a velocidade de 250Hz, o LED indicador piscará rapidamente 3 vezes. 9	DPI	LED twinkle times	800	1	1200	2	1600	3	2400	4	4000	5	Modo de economia de energia: o mouse entrará no modo de economia de energia se ficar inativo por mais de 1 minuto. Mova ou clique em qualquer botão para ativá-lo. Se o mouse ficar inativo por mais de 8 minutos entrará no modo de economia de energia profunda. Clique em qualquer botão para ativá-lo. Aviso de bateria fraca: quando a bateria do mouse estiver baixa, o indicador LED piscará para lembrar de trocar a bateria. Dúvidas frequentes 1. Se o mouse não estiver respondendo, verifique se está conectado corretamente na porta USB correspondente no computador, ou experimente em outra porta USB. 2. Se o mouse estiver movendo lentamente, saltando ou apresentando atrasos, experimente utilizá-lo sobre outra superfície. Superfícies escuras, sujas, irregulares ou muito brilhantes podem afetar o desempenho do mouse. Recomendamos fortemente o uso de mouse pad.  10
DPI	LED twinkle times															
800	1															
1200	2															
1600	3															
2400	4															
4000	5															

型号	BM-2944 2944	备注：尺寸：L100*W100mm 材质：80g书写纸，风琴折页，正反印 印刷：单色	
名称	说明书(英+巴西)		
日期	2024-9-2		
页码	1 OF 1	文件编号	
绘图	吴九香	审核	
		核准	
		版本	A.0