


**US UK****Dear user**

Thank you for choosing **REDRAGON** product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.


1

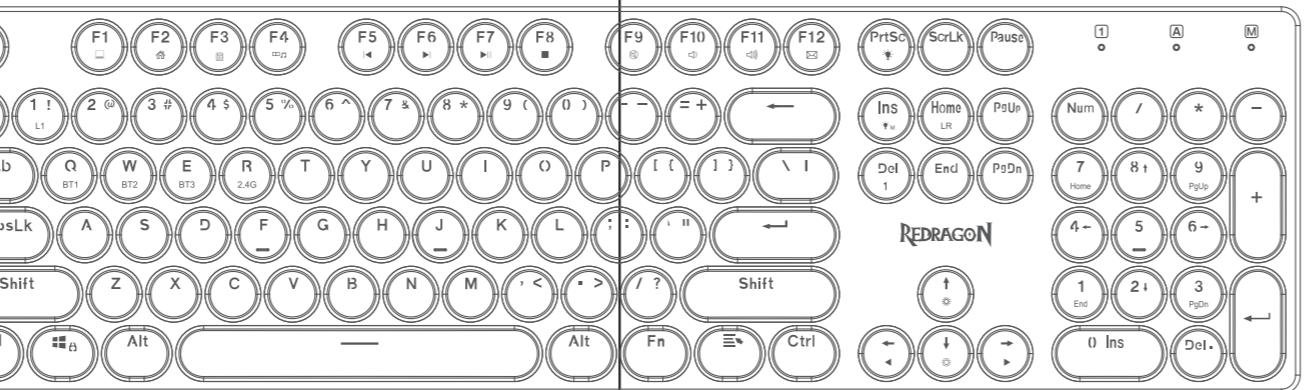

2

**OS Support**

Windows XP/Vista/Win 7/Win 8/Win 10/Win 11/Mac OS

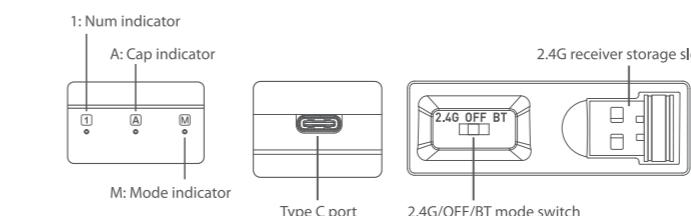**How to connect the keyboard with multi-ple devices****Wired Connection**

1. 2.4G/OFF/BT switch on "OFF".
2. Connect the keyboard to computer with USB cable.
3. The computer will recognize and configure the keyboard automatically.

**2.4G Wireless Connection**

2.4G/OFF/BT switch on "2.4G", the LED indicator flashes in Green, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically.

**Tip:** If auto-connection unsuccessfully, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[R] for 3 seconds, the LED indicator flashes in Green, plug the USB receiver into computer USB port, after paired the LED will turn to steady on.

4

**Bluetooth Connection**

1. 2.4G/OFF/BT switch on "BT".
2. Press and hold [FN]+[Q/W/E] for 3 seconds, LED indicator flashes in Blue[1] or Cyan[2] or Purple[3] quickly.
3. Turn on Bluetooth function and searching for available device, it will find "BT3.0 Keyboard and BT5.0 Keyboard" device names. Select a Bluetooth name to pair, after paired the LED will turn to steady on.
4. To switch the Bluetooth connections between BT1/BT2/BT3, press [FN]+[Q/W/E].

**Product Features**

**Backlight**

1. The default 16 backlight patterns switch by press [FN]+[INS] to cycling switch the light patterns. Press [FN]+[PRSc] to turn ON/OFF backlight.
2. Press [FN]+[←/→] to adjust light rotating speed, total 5 levels.
3. Press [FN]+[↑/↓] to adjust backlight brightness, total 5 levels.
4. Backlight color switching: [FN]+[DEL] to cycling switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB.
5. Preset Gaming backlight mode & Backlight DIY: Press [FN]+[1] to enter preset gaming mode, [ESC][A][S][W][D][↑][↓][←][→] lights on by default, in this mode, Press [FN]+[HOME] to start DIY, LED indicator will flashing till the recording completed, Continuously press the key to select the color you want to set, once key light color setting are completed, press [FN]+[HOME] to save.

**[WIN] lock**

Press [FN]+[WIN] to lock [WIN] key, repeat to unlock.

5

**Commands of key combinations with [FN] key**

FN+F1: My computer	FN+F7: Play/Pause
FN+F2: Internet browser homepage	FN+F8: Stop playing
FN+F3: Calculator	FN+F9: Mute
FN+F4: Media player	FN+F10: Volume -
FN+F5: Pre track	FN+F11: Volume +
FN+F6: Next track	FN+F12: E-mail

**Restore factory settings**

Press and hold [FN]+[ESC] for 5 seconds.

**Power save mode & How to recharge**

On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.

When battery is low, the backlight will turn off, the power LED will blink red slowly when pressed a key.

Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn to steady on Green.

Battery power indicator: Press and hold [FN]+[电量] to show the battery level, release to back to current backlight mode.

6



7

**FAQ**

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

**BATTERY SAFETY GUIDELINES**

DO NOT replace the battery with a different model.  
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.  
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.  
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.  
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.  
DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

**CAUTION:**

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

**This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.**

**Cet appareil contient des émetteurs / récepteurs exempts de licence** conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

8 9

**REDRAGON****FLARE PRO****REDRAGON WIRELESS TYPEWRITER****KEYBOARD WITH RGB BACKLIGHT**

User manual

封面

型号	K710-RGB/8728		备注：尺寸：100x100mm (折页)		
名称	说明书		材质：80g书写纸		
日期	2024-9-27		印刷：单黑色双面印刷		
页码	1 OF 1		文件编号		
绘图	雷国建	审核	香敏琪	核准	版本
					A.1