

SoftBank 942P

User Guide



SoftBank

Introduction

Thank you for purchasing SoftBank 942P.

- For proper handset use, read User Guide (this guide).
- Accessible services may vary by service area, subscription, etc.

SoftBank 942P is compatible with both 3G and GSM network technologies.

Note

- Unauthorized copying of any part of this guide is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (☎ P.19-34) about unclear or missing information.

Content Search


Function/Service Name Search	Index	P.19-27
	Contents	P.vi
Objective Search	Objective Search	P.ii
	Index	P.19-27
Function Search	Overview	P.iv
	Contents	P.vi
Using Your Handset	Function List	P.19-2
	Display	P.1-10
Guide Organization	Contents	P.vi
	Section Contents	Chapter Top Pages
Solving Problems	Troubleshooting	P.19-10
	Warranty & Service	P.19-33

Getting Started	1
Call	2
Text Entry	3
Phone Book	4
Digital TV	5
Camera	6
Mobile Widget	7
News/Entertainment	8
Music Player	9
Managing Files	10
Connectivity	11
Handset Security	12
Tools	13
Messaging	14
Internet	15
S! Appli	16
S! GPS Navi	17
Settings	18
Appendix	19

Confirming & Using My Number & My Mail Address

My Phone Number

Confirm your phone number on handset in Standby without navigating menus.

My Number:  P.1-34

My Mail Address


Customized address may reduce spam.

Customizing Handset Address:
 P.14-3

Customizing Handset Settings

Setting Ringtones

Set Chaku-Uta Full® files as ringtones.

Ringtones:  P.18-2

Downloading Tunes & Tones

Download music (Chaku-Uta Full®) files from mobile websites.

Downloading Music:  P.9-3

Mastering Basics



Learning Your Handset

Learn key assignments, and navigate menus to select & execute functions.

Handset Menus:  P.1-19
Parts & Functions:  P.1-4

Making Mobile Calls

Use voice telephony or enjoy video telephony with compatible mobiles.

Voice Calls:  P.2-2
Video Calls:  P.2-6

Fun Stuff

Watching One Seg Digital TV

Enjoy One Seg digital TV. Set channels in advance to view/record shows.

Digital TV:  P.5-1



Music Player

Download music files from websites via Music Player directly.

Music Player:  P.9-1



Sending Your Contact Info

Save mail address and other details; send to compatible devices wirelessly.

Account Details: P.4-12

Messaging Multiple Recipients

Enter multiple mail addresses/numbers to send a message to all at one time.

Sending Messages: P.14-4
Add/Edit/Delete Address: P.14-8

Sending Files Wirelessly

Send files or your own mail address saved in Account Details via Infrared/IC transmission to other compatible devices.

Infrared/IC Transmission: P.4-12

Customizing Standby Display

Add wallpaper, set clock size/position or set calendar to appear in Standby.

Wallpaper: P.10-6
Display: P.18-3, P.18-14

Customizing Menu

Save frequently used functions in Private Menu.

Private Menu: P.1-28

Using Shortcuts to Functions

Access shortcuts to frequently used functions in Standby.

Shortcuts: P.1-25

Mastering Text Entry Methods

Enter text for Messaging functions or to add/edit Phone Book entry items.

Text Entry: P.3-1

Using Messaging Services

Send short or long text messages. Attach image/sound files, etc. to S! Mail.

Messaging: P.14-1
Graphic Mail: P.14-5

Accessing the Mobile Internet

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

Yahoo! Keitai: P.15-2

Camera & Video Camera

Capture still images or record videos. Use Camera even when handset is closed.

Camera: P.6-1

Playing Games

Download and install S! Appli Games via Yahoo! Keitai.



S! Appli: P.16-1

Getting News (Japanese)

Set up S! Quick News to view a variety of information contents.

S! Quick News: P.8-4

942P Features

Horizontal Open Position

Enjoy Digital TV, Messaging, S! Appli, Camera, etc. in wide horizontal screen.

 P.1-7

Touchpad

Use Touchpad to select items, move cursor or scroll page.

 P.1-23

SoftBank Mobile Features

Yahoo! Keitai

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

 P.15-2

Graphic Mail


Create HTML messages; select font color/size, background; insert images.

 P.14-5

Useful Features


**Phone Book/
S! Addressbook Back-up**

Save Phone Book entries; back up handset entries on Server, etc.

 P.4-1, P.4-10

Camera/Video

Capture still images or record videos with approx. 8.1 mega pixel camera. Set Image stabilizer/Face detection for high-quality pictures and videos.

 P.6-6, P.6-7

PC-related Functions

PC Site Browser

View PC-based websites on handset.

 P.15-5

Data Back-up/Management

Transfer data between handset and PC for back-up and editing.

 P.11-16

Variety Photo Viewer

View still images in Horizontal Open Position. Slideshows are available with a variety of effects.

 P.10-24

Wi-Fi

Use wireless LAN (Wi-Fi) to connect to home/public access points. Enjoy high speed Internet access or stream media files.

 P.11-11

PC Mail

Send/receive messages via PC mail account.

 P.14-24

S! GPS Navi

Check your position on map, and navigate to a destination.

 P.17-1

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive update information. Set Weather Indicator to check weather forecast in Standby.

 P.8-2

Mobile Widget (Japanese)

Download and paste widgets to Standby for quick access to information and various tools.

 P.7-1

Calendar & Alarm

Add events by time/date and set Event Alarms to help manage your schedule.

 P.13-2, P.13-6

Music Player

Play handset/microSD Card music files.

 P.9-1

Digital TV

Enjoy One Seg digital TV programs and video in wide horizontal screen.

 P.5-1

BD/HDD Recorder

Save programs recorded on an HDD recorder to microSD and play back on handset.

 P.10-14

Bluetooth®

Connect wirelessly to a Bluetooth®-compatible speaker to enjoy TV in dynamic sound.

 P.11-6

Osaiфу-Keitai®

Use handset as an electronic cash card, reward card or membership card.

 P.13-9

Contents

Contents	vi
Package Contents	viii
Using This Guide	viii
Safety Precautions	xii
Handling Precautions	xviii
Copyrights and Others	xxii
Specific Absorption Rate (SAR)	xxvi

1. Getting Started

USIM Card	1-2
Parts & Functions	1-4
About Battery	1-13
Handset Power On/Off	1-17
Manner Mode	1-18
Handset Menus	1-19
Standby Options & Event Indicators ...	1-24
Customizing User Interface	1-26
Private Menu	1-28
Simple Menu	1-29
Using Videos/Music	1-31
Passwords	1-32
Multi Task	1-33
View Blind	1-34
My Number	1-34

2. Call

Making/Answering Voice Calls	2-2
Making/Answering Video Calls	2-6
International Calls	2-9

Engaged Call Functions	2-11
Call Log	2-13
Answer Phone/Call Data	2-15
Optional Services	2-17

3. Text Entry

Text Entry	3-2
Entering Text	3-3
Conversion Methods (Japanese)	3-7
Editing Text	3-10
User's Dictionary	3-11
Download Dictionary	3-11

4. Phone Book

Overview	4-2
Saving to Phone Book	4-3
Searching/Using Phone Book	4-6
Managing Phone Book	4-9
S! Addressbook Back-up	4-10
Account Details	4-12
Voice Dial	4-13

5. Digital TV

Basics	5-2
Initial Setup	5-4
Watching TV	5-5
TV Links (Japanese)	5-10
Recording/Playing Programs	5-11

6. Camera

Before Using Camera	6-2
---------------------------	-----

Pictures/Videos	6-6
Focus Functions	6-11
Viewing Saved Images	6-12

7. Mobile Widget

Mobile Widget (Japanese)	7-2
Using Widgets	7-2

8. News/Entertainment

S! Information Channel/Weather (Japanese)	8-2
S! Quick News (Japanese)	8-4
E-Books (Japanese)	8-6
Blogging	8-7

9. Music Player

Overview	9-2
Saving Music	9-2
Using Music Player	9-5

10. Managing Files

Data Folder	10-2
Opening Files	10-4
Using/Editing Still Images	10-11
Playing Videos	10-13
Managing Folders/Files	10-16
microSD Card	10-18
Variety Photo Viewer	10-24

11. Connectivity

Infrared	11-2
----------------	------

IC Transmission	11-4
Bluetooth®	11-6
Wi-Fi	11-11
SoftBank Utility Software (Japanese).....	11-16
USB (Japanese)	11-17
AV Output.....	11-18

12. Handset Security

Changing Phone Password	12-2
Security Functions	12-2
Restricting Calls/Messages.....	12-9
Reset.....	12-13

13. Tools

Calendar	13-2
Tasks	13-5
Alarms	13-6
Calculator	13-8
Notepad.....	13-8
Osaifu Keitai®	13-9
Dictionary (Japanese)	13-13
Sound Recorders.....	13-14
Bar Code Reader.....	13-15

14. Messaging

Basics.....	14-2
Sending S! Mail & SMS.....	14-4
Receiving & Viewing Messages	14-11
Organizing/Using Messages	14-16
PC Mail	14-24

15. Internet

Getting Started	15-2
Using Yahoo! Keitai	15-3
Using PC Site Browser	15-5
Basic Operations.....	15-6
Using Information	15-8
Option Menu Items.....	15-13

16. S! Appli

Before Using S! Appli	16-2
Using S! Appli.....	16-3

17. S! GPS Navi

About S! GPS Navi.....	17-2
Using S! GPS Navi.....	17-2

18. Settings

Sound & Vibration	18-2
Display.....	18-3
Touchpad	18-7
Manner Mode.....	18-7
Incoming Settings.....	18-8
Date & Time.....	18-9
Call Settings	18-9
Notification Light	18-10
Text Entry.....	18-11
Phone Book	18-12
Voice Dial.....	18-12
Video Call	18-13
Horizontal Open Position	18-14


Digital TV.....	18-15
Camera	18-16
Mobile Widget (Japanese)	18-19
S! Quick News (Japanese)	18-19
Bluetooth®	18-20
Messaging	18-21
Internet.....	18-24
S! Appli	18-26
Osaifu-Keitai®	18-26
S! GPS Navi Settings	18-27
Default Settings	18-28
Confirming Settings.....	18-29

19. Appendix


Function List	19-2
Troubleshooting.....	19-10
Software Update	19-12
Quick Open Menu	19-14
Key Assignments (5-touch Mode).....	19-15
(2-touch Mode).....	19-16
(NIKO-touch Mode).....	19-17
Symbol List	19-18
Character Code List	19-19
Weather Indicator List.....	19-24
Memory List	19-25
Specifications	19-26
Index.....	19-27
Warranty & Service.....	19-33
Customer Service.....	19-34

Package Contents


□ Handset (942P)

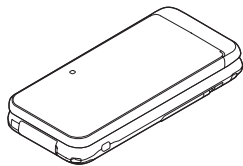


□ Desktop Holder (PMEAY1)

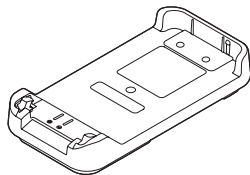

□ Battery (PMBAY1)

 

□ Touch Pen*

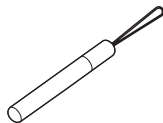

□ Quick Start Guide (Japanese)

□ Safety Precautions (Japanese)

* Provided as a free sample (not sold separately)

Note

- Use SoftBank specified AC Charger (sold separately) to charge battery.
- For more information about AC Charger and accessories, please contact SoftBank Mobile Customer Center, General Information (☎ P.19-34).
- Optional battery is available for separate purchase.
- 942P accepts microSD Card (not included). Purchase microSD Card to use related functions (☞ P.10-18).

Using This Guide


Before reading this guide, make a note of the following:

- In this guide, SoftBank 942P User Guide, SoftBank 942P is abbreviated as 942P.
- "microSD Card" and "microSDHC Card" are referred to as "microSD Card" in this guide.
- Handset operations and screenshots are based on defaults for handset color **White** (☞ P.18-28).
- Handset operations and screenshots are based on Normal Position.
- Sample screenshots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.
- Key icons use simplified labels.
- Most operation descriptions begin in Standby.
- Pressing a key for more than one second is described as "Press and hold."

Guide Symbols

Press the corresponding key to execute the function or operation indicated at the bottom of Display.

Example:

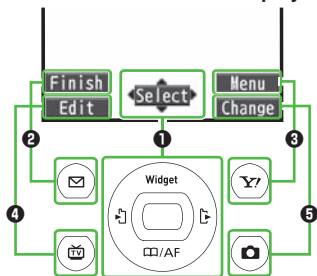


- Images shown above are for reference only.

Multi Selector Operations (1)

Operations	Softkey Label*
Press to scroll	
Press	Select

* Softkey labels vary by menu.

Use Multi Selector to select items, navigate menus, etc. In this guide, Multi Selector operations are indicated as shown below.

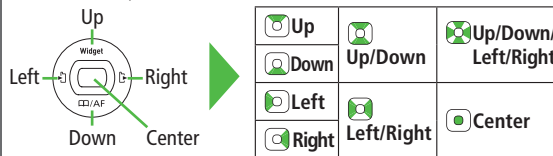

Softkeys (2345)

In this guide, Softkey operations are indicated as shown below.

Example 23: [Finish], [Menu]

- [Finish] and [Menu] are Softkey label examples;
Softkey labels vary by menu.

Japanese Functions & Services

When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.


Operation Descriptions

- The following examples are for reference only and may differ from actual operations.

Basic Operations

Operations are expressed as shown here.

Example 1:

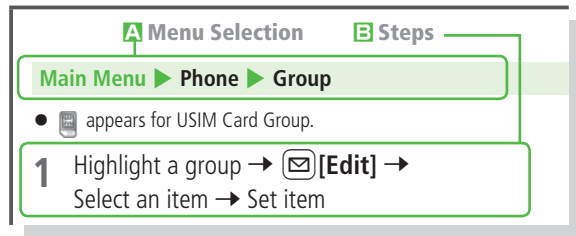


A Menu Selection

- 1 Press in Standby to open Main Menu.
- 2 Use to highlight **Phone**; then press [Select].
- 3 Use to highlight **Group**; then press [Select].

B Steps

- 1 Use to highlight a group; then press [Edit].
- 2 Use to highlight an item; then press [Select].
- 3 Set respective items.

Example 2:

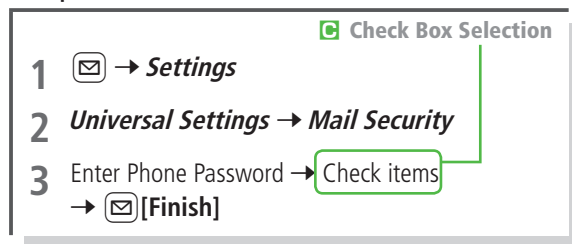

C Check Box Selection

- 1 Use to highlight an item; then press .
Check Box changes to .
 - 2 To deselect an item, use to highlight item; then press .
- Repeat to select multiple items.
- Check mark disappears.

Advanced Operations

For advanced features and settings, go to pages indicated under **Tip**.

Example:

Tip ● Operations Available during a Voice Call (☞ P.2-11)
● Making Calls from Call Log (☞ P.2-14)
● Saving Entered Numbers to Phone Book (☞ P.4-5)

Settings ● Set Handset Response when Closed during Call (☞ P.18-10)

Settings Refer to Chapter 18 "Settings."

Abbreviated Descriptions

For advanced settings (Chapter 18), initial operations may be abbreviated or omitted.

Example:

A **Abbreviated Steps**
Initial steps are abbreviated.

From ▶ **Main Menu** ▶ **Tools** ▶ **Calendar**

Functions Available in Calendar Window

> Highlight a date → ☞ [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry (☞ P.13-2, P.13-3)
Weekly display/ 1 Month	Toggle Monthly/Weekly view

B **Steps**
Follow these steps after **Abbreviated Steps**.

C Use Other Graphic Mail Settings




> In S! Mail text entry window, ☞ → Select an arrange item

D Omitted Steps

Initial steps are omitted. Start operations from specified window.







Safety Precautions

- Before use, read these safety precautions carefully and use your handset properly. Keep this guide in a safe place for future reference.
- These safety precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.
- SoftBank is not liable for any damages resulting from use of this product.
- These symbols indicate level of harm from failure to observe cautions or improper usage.
Make sure to understand these symbols and precautions before reading this guide.

	Danger	Great risk of death or serious injury from improper use
	Warning	Risk of death or serious injury from improper use
	Caution	Risk of injury or damage to property from improper use

■ Symbol Explanations

Make sure to understand these symbols and precautions before reading this guide.

	Prohibited Action		Avoid Moisture
	Disassembly Prohibited		Always Dry Hands First
	Compulsory Action		Disconnect Power Source

Handset, Battery, USIM Card, Desktop Holder, AC Charger (sold separately) & microSD Card (not included)



Danger



Do not use or leave handset, battery, Charger or Desktop Holder in locations subject to high temperature, such as near an open flame/heater, in sunlight or inside a car on an extremely hot day.

Battery may leak, overheat, explode, catch fire. Handset or related hardware may deform or malfunction. Part of the casing may also become hot and cause burns.



Do not use excessive force to attach battery or connect Charger or Desktop Holder to handset. Battery or connector may be the wrong way around.

Battery may leak, overheat, explode or catch fire.



Do not disassemble, modify or solder handset or related hardware.

May cause accidents such as fire, bodily injury, electric shock or equipment malfunction. Battery may leak, overheat, explode or catch fire. Modifying handset is a violation of Radio Law and subject to prosecution.



Do not get handset, battery, Charger or Desktop Holder wet.

If handset, battery, Charger or Desktop Holder is left wet or battery is charged after exposure to liquids such as water or pet urine, overheating, electric shock, fire, injury or malfunction may occur.

Be mindful of location when using handset, battery, Charger or Desktop Holder.
Handle with care.



Use specified battery, Charger (sold separately) and Desktop Holder.

Battery may leak, overheat, explode or catch fire, and Charger may overheat, catch fire or cause malfunction.



Warning



Do not place handset, battery, Charger or Desktop Holder inside cooking appliances, such as microwave ovens or high-pressure containers, or on IH cooking heaters.

Battery may leak, overheat, explode or catch fire. Handset, Charger or Desktop Holder may overheat, emit smoke, catch fire or cause malfunction.



Do not drop, throw or otherwise subject to strong force or impacts.

Battery may leak, overheat, explode, catch fire, or cause electric shock or damage to handset.



Do not allow liquids (water, pet urine, etc.) or conductive objects (pencil lead, metal pieces, necklaces, hair pins, etc.) to contact Charger terminals, external port terminals or microSD Card slot.

May cause fire or malfunction triggered by short-circuit.



Do not charge battery while handset is wet.

May cause electric shock or short circuit, resulting in fire, malfunction, etc.



Keep handset off and Charger disconnected near propane gas, in filling stations or places where flammable gas is generated.

Handset use in such areas may lead to fire. Be sure to turn off handset before using Osaifu-Keitai® in filling stations. (When IC Card Lock is set, turn off handset after unlocking setting.)



If handset, battery, Charger or Desktop Holder emits an unusual sound, smoke or odor, perform following steps:

1. Unplug Charger from outlet.
 2. Turn off handset.
 3. Remove battery. (Take care to avoid burns or injuries.)
- May cause fire or electric shock.



Caution



Do not place handset, battery, Charger or Desktop Holder on an unstable surface.

May fall, causing injury or malfunction. Take extra precautions while vibration alert is active or during charging.



Keep handset and related hardware out of the reach of young children.

May result in accidental ingestion or bodily injury.



If for use by child, guardian should teach proper handling and ensure handset and related hardware is used as directed.

May result in bodily injury.

Battery



Danger

See battery label to confirm battery type.

Label	Battery Type
Li-ion 00	Lithium-ion



Do not throw battery into fire.
Battery may leak, explode or catch fire.



Do not pierce battery with a nail or other sharp object, hit it with a hammer, step on it, or subject it to strong shocks.
Battery may leak, overheat, explode or catch fire.



Do not touch terminals with metallic objects or carry/store battery with conductive objects (pencil lead, metal pieces, necklaces, hair pins, etc.).
Battery may leak, overheat, explode or catch fire.



If battery fluid gets into eyes, do not rub; flush with clean water and see a doctor immediately.
Failure to do so may cause blindness.



Warning



If battery fluid comes into contact with your skin or clothing, stop handset use immediately and rinse fluid off with clean water.
Battery fluid is harmful to your skin.



If battery does not charge after specified time, stop charging.
Battery may leak, overheat, explode or catch fire.



If battery emits an unusual odor, overheats, discolors or deforms, immediately remove battery and move it away as far as possible from any flame or fire. Take care to avoid burns or injuries.
Battery may leak, overheat, explode or catch fire.



Caution



Do not dispose of battery with ordinary refuse.
Place tape over the terminals to insulate battery, and take it to a SoftBank retailer or institution that handles used batteries in your area. Comply with local waste disposal regulations for recycling.

Handset



Warning



Do not use handset while driving a vehicle.
Doing so may interfere with safe driving and cause an accident. Stop your vehicle to park in a safe place before using handset. Drivers using handsets while driving are subject to prosecution.



Do not aim the infrared port at eyes when using infrared communication.
Doing so may affect eyes.



Do not point Photo light directly at someone's eyes. Do not look directly at Photo light while light is on.
May damage eyesight or cause accidents due to momentary sight loss or surprise. Do not take pictures of infants at close range.



Turn off handset near high-precision electronic devices or devices using weak electronic signals.

Handset may cause these devices to malfunction.

*Electronic devices that may be affected: Hearing aids, implantable cardiac pacemakers, implantable cardioverter defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.



Turn off handset aboard aircraft.

Handset signal may interfere with aircraft operation.

When in-flight handset use is permitted, follow airline instructions for proper use.



If you have a weak heart, take extra precautions when setting functions such as Vibration or Ringer Volume for incoming transmissions.

May affect heart.



In a thunderstorm, immediately turn off handset and seek shelter.

There is a risk of being struck by lightning and suffering electric shock.



Caution



If handset affects car electronics, stop use.

Handset use may affect electronics in some models. In this case, stop use; could impede safe driving.



Do not place a magnetic card near or in handset.

The stored magnetic data in cash cards, credit cards, telephone cards and floppy disks, etc. may be erased.



Do not swing handset by its strap, etc.

Handset may strike you or others, or strap may be broken resulting in injury or damage to handset or other property.



Do not place your ear too close to the speaker while ringer sounds or sound files play.

May impair hearing.



If skin abnormality occurs, immediately stop use and seek medical treatment.

Handset contains metals. Handset use may cause itching, rashes, eczema or other symptoms depending on the user's physical condition.

Parts		Materials/Surface Finish
Outer case	Internal Display side	PC resin/ Acrylic UV cured coating
	External Display side, Battery side, Keypad side, Battery cover	ABS resin/ Acrylic UV cured coating
Internal Display panel, External Display panel		Acrylic resin/ Hard coating
Hinge on Display side		PA resin/ Acrylic UV cured coating
Ornamental parts on External Display side		PET resin
Camera panel		Acrylic resin/ Hard coating
Flash/Photo Light lens		PC resin
Side Keys		ABS resin/ Acrylic UV cured coating
MULTI Key, Keypad		PC resin/ Acrylic UV cured coating
Shutter Key		PC resin/Evaporated aluminium, Acrylic UV cured coating

Parts		Materials/Surface Finish
One-push Open Button		PC resin/Evaporated aluminium, Acrylic UV cured coating
Metal part of One-push Open Button		Aluminium/Alumite treatment
Hook for Horizontal Open Position		Stainless steel/ Chrome plating on nickel plating
Roller part for Horizontal Open Position		PC+ABS resin/ Acrylic UV cured coating
External Port cover		PC resin, Elastomer resin/ Acrylic UV cured coating
Charging Terminals		Phosphor bronze/ Gold plating on nickel plating
Stop pads, Screw caps on Keypad side, Stopper on Display side		Acrylic urethane resin
Hinge guide part on Display		Elastomer resin
TV Antenna	Upper part	ABS resin/ Acrylic UV cured coating
	Middle part	Stainless steel
	Lower part	NiTi alloy
	Base: Hinge (Upper part)	Stainless steel
	Base: Hinge (Lower part)	Brass/Tin-cobalt plating
	Base: Cap	PET resin
Screws (Battery compartment)		Aluminium killed steel/ Nickel plating
Battery compartment		PC resin
Battery terminals	Resin part	PPS resin
	Metal part	Beryllium copper/ Gold plating on nickel plating

Parts		Materials/Surface Finish
Battery	Battery	PC resin (Label: PET resin)
	Terminals	Glass fiber reinforced epoxy board/ Gold plating on nickel plating



Handset may become hot while used in a hot environment.

Avoid prolonged skin contact that may result in burns.



Make sure not to trap fingers or objects when opening/closing handset.

May result in injury or damage to display.



Watch TV with adequate lighting and distance from Display.

May damage eyesight.



Do not turn up the volume unnecessarily high when using earphones.

Using earphones with volume turned up for an extended period may impair hearing or injure ears.

Desktop Holder & AC Charger (sold separately)



Warning



Do not cover or wrap Charger or Desktop Holder during charging.

May cause overheating, fire or malfunction.



Always use the specified power supply/voltage.

Using incorrect voltage may cause fire or malfunction.
AC Charger: AC 100V-240V (household AC outlet only)
In-Car Charger: DC 12V, 24V (vehicles with a negative earth only)



Use In-Car Charger in vehicles with a negative (-) earth. Do not use In-Car Charger if vehicle has a positive (+) earth.

May cause fire.



Do not use Charger in thunderstorms.

There is a risk of suffering electric shock.



Do not expose Charger or Desktop Holder to liquids and high humidity (e.g., precipitation, bath/shower room, restroom, etc.).

May cause fire, electric shock or malfunction.



Do not handle Charger with wet hands.

May cause electric shock or malfunction.



If In-Car Charger fuse blows, always replace it with specified fuse.

Using the incorrect fuse may cause fire or malfunction. Refer to the respective manuals for information on the correct fuse specifications.



If dust accumulates on plug, unplug Charger and wipe with a dry cloth.

May cause fire.



When plugging Charger into outlet, keep conductive materials (pencil lead, metal parts, necklaces, hair pins, etc.) away from Desktop Holder terminals or Charger plug/terminals and plug Charger firmly into outlet.

May cause electric shock, short-circuit or fire.



Unplug Charger during periods of disuse.

May cause electric shock, fire or malfunction.



If liquid such as water or pet urine get into Charger, unplug it immediately.

May cause electric shock, smoke emission or fire.



Caution



Pull Charger (not cord) to unplug Charger.

Pulling on the cord may damage the cord and cause electric shock or fire.



Always unplug Charger before cleaning it.

May result in electric shock.

Near Electronic Medical Equipment



Warning

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



If you use an implantable cardiac pacemaker or cardioverter defibrillator, keep handset more than 22 cm away from the implant at all times.

Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.



Persons using electronic medical equipment outside medical facilities should consult the vendor about possible radio wave effects.

Handset radio waves may affect electronic medical equipment operations.



Observe the following in medical facilities. Handset radio waves may affect electronic medical equipment.

- Do not take handset into operating rooms, Intensive Care Units or Coronary Care Units.
- Turn off handset inside hospital wards.
- Turn off handset even outside hospital wards (in hospital lobbies, etc.); electronic medical equipment may be in use nearby.
- Where a medical facility has specific instructions prohibiting the carrying and use of mobile phones, observe those instructions strictly..



Turn off handset in crowded places such as rush hour trains; implantable cardiac pacemakers or cardioverter defibrillators may be in use nearby.

Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.

Handling Precautions

General Notes

- **SoftBank is not liable for damages from accidental loss/alteration/repair of handset/microSD Card information (Phone Book entries, image/sound files, etc.). Back-up important information.**
- **Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.**
- **Use handset without disturbing others.**
- **Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.**
- **Handset use near landlines, TVs or radios may cause interference.**
- **Read microSD Card manual beforehand for proper use.**
- **Beware of eavesdropping.**
Digital signals reduce interception, however transmissions may be overheard. Deliberate/accidental interception of communications constitutes eavesdropping.
"eavesdropping" means radio communication is received by another receiver deliberately or accidentally.
- **Be cautious of unsafe websites. Take extra precautions especially when posting personal information on websites.**

Electromagnetic Waves

- For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

FCC Notice

- **This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:**
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- **Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 0.582 W/kg, and when worn on the body in a holder or carry case, is 0.286 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on FCC ID UCE210030A. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.327 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.287 W/kg. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.

** Please see Electromagnetic Waves on page xix for important notes regarding body worn operation.

Declaration of Conformity

CE0168

We, Panasonic Mobile Communications Development of Europe Ltd., declare that SoftBank 942P conforms with the essential and other relevant requirements of the directive 1999/5/EC.

A declaration of conformity to this effect can be found at

- <http://panasonic.net/pmc/support/index.html>
- This product is only intended for sale in Japan.
- Compliance to the European RTTE directive applies to: SoftBank 942P handset, battery (PMBAY1) and AC Charger (SoftBank ZTDA01, marked MITSUMI).

Handset Care

- **942P is not completely waterproof. Be sure to observe the following:**
 - Use handset with External Port Cap, Inner Cover and Battery Cover tightly closed. Failing to do so may result in malfunction.
 - Malfunction caused by contact with liquids may not be covered by Warranty.
 - Do not install/remove battery or open/close External Port Cap or Battery Cover in rain or when handset is still wet.
 - Accessories and other optional items are not waterproof.
 - Air conditioned air may cause condensation, resulting in corrosion.
- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity 35% to 90% (limiting to temporary use in a bathroom within 36°C to 40°C). Avoid extreme temperatures/direct sunlight.

- Handset may become warm during use or charging. This is not malfunction.
- Battery may swell as service life nears end; this is not a problem.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Soiled terminals may cause poor connection. If the terminals are dirty, use a dry cloth or cotton swab to wipe them clean.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Avoid forceful rubbing or scratching handset displays.
- Do not subject handset to excessive force.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on a bag with handset inside.
- Do not remove nameplate from handset; doing so invalidates warranty.
- Always turn off handset before removing battery. If battery is removed while saving or sending mail, data may be altered or lost.
- LCD is manufactured with high precision technology, however, some pixels may appear darker/brighter.
- Connect only specified products to External Port.
- While walking, moderate earphone volume to make sounds around you audible and help avoid accidents.
- When holding handset in use, do not cover Speaker.

Function Usage Limits

These functions are disabled after handset replacement/upgrade or service cancellation: Camera; Digital TV; Music Player; S! Appli; Lifestyle-Appli; Wi-Fi.

After a period of disuse, these functions may become unusable.

Multitasking During Calls/Data Transmissions

- Transmission fees apply while other functions are used during a call/data transmission.

Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight. Concentrated sunlight through the lens may cause the handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.

Bluetooth®/Wi-Fi

- Bluetooth®/Wi-Fi connection is not guaranteed with all Bluetooth®/Wi-Fi devices.
- Handset complies with Bluetooth®/Wi-Fi security standards. However, this does not ensure 100% security.
- SoftBank is not liable for damages arising from accidental data/information leakage during Bluetooth®/Wi-Fi transmissions.
- Wi-Fi function is only intended for use in Japan. This handset's Wi-Fi function is certified as compliant with the radio standard in Japan. Wi-Fi function should be disabled when travelling outside Japan. Use in other countries may contravene local regulations.
- Bluetooth®/Wi-Fi shares the same frequency band with other industrial/scientific/medical equipment (microwave ovens, etc.), radio stations, amateur radio stations, etc. (hereinafter "other radio stations").
 - 1 Before using Bluetooth®/Wi-Fi function, visually check that there are no other radio stations sharing same frequency band nearby.
 - 2 Should interference occur between this handset and other radio stations, move to another place or stop Bluetooth®/Wi-Fi function (stop the transmission) immediately.
 - 3 For additional information and support, contact us at the following number.
SoftBank Mobile Customer Center;
From a SoftBank handset, call toll free at 157 for General Information.
From landlines, see ☎ P.19-34 "Customer Service".

 
Wireless Frequency Bands

- Bluetooth® frequency band information is as follows:



- This radio station uses 2.4 GHz band with FH-SS modulation, and its maximum communication distance is 10 m.
- This radio station uses 2400 – 2483.5 MHz band. Avoiding frequency band of mobile unit identification apparatus is not possible.

- Wi-Fi frequency band information is as follows:



- This radio station uses 2.4 GHz band with DS-SS/OFDM modulation, and its maximum communication distance is 40 m.
- This radio station uses 2400 – 2483.5 MHz band. Avoiding frequency band of mobile unit identification apparatus is possible.

Precautions for Wi-Fi Usage

- Do not use Wi-Fi function near magnetic devices or sources of magnetic waves.
 - Magnetic waves or electrostatic noise may cause noise/interference (especially when a microwave oven is in use).
 - Wi-Fi use near TVs or radios may affect TV/radio reception.
 - When multiple access points using the same channel are nearby, target access point may not be found.

Waterproofing Precautions

With External Port Cap, Inner Cover and Battery Cover tightly closed, 942P provides waterproof performance compliant with IPX5 (former JIS Ingress Protection Code grade 5)¹ and IPX7 (former JIS Ingress Protection Code grade 7)².

- ¹ IPX5 compliant: Protection against water projection from water jets (projecting water from a 6.3 mm diameter nozzle at a distance of approximately 3 meters for over 3 minutes at a rate of 12.5 L/min from different directions).
- ² IPX7 compliant: Protection against water leakage when submerged under water (still tap water at room temperature up to 1 meter deep for approximately 30 minutes).

Note: Waterproof performance of 942P is not guaranteed under all conditions. Read User Guide for proper handset use. Malfunctions due to improper handling caused by customer are not covered by Warranty.

942P is available for use in rain or a bathroom or at a poolside.

Rain

- Talk on handset in moderately heavy rain (rainfall of 20 mm or less per hour).
- Do not use handset in heavy rain (rainfall of 20 mm or more per hour).

Rinse Handset

- Rinse handset in fresh water/tap water (at room temperature), using gentle back and forth movement; or under gentle running water (approximately 10 cm from faucet/showerhead at 5°C to 35°C).
- Tightly close Battery Cover and hold down External Port Cap when rinsing handset.
- Do not use brushes, sponges, soaps or detergents.



Leisure

- Do not immerse or drop handset into a swimming pool/sea. Do not use handset underwater.
- If pool/sea water spatters on handset, immediately rinse with tap water at room temperature.



Bathroom

- Do not immerse or drop handset into a bathtub. Do not use handset underwater.
- Do not immerse handset into water containing soap, detergent or bath agents or hot spring water.
- Do not expose handset to strong water flow (strong enough to feel pain on skin).
- Avoid using handset in a bathroom for a prolonged period of time.
- Extreme temperature changes can cause condensation. Wait until handset reaches room temperature before bringing it to a bathroom.



Kitchen


- Do not splash handset with or immerse it in any liquids (soap water, detergent, spice, juice, etc.) other than fresh water or tap water.
- Do not splash handset with or immerse it in hot/cold water. 942P is not heat-resistant.
- Do not expose handset to strong water flow.

Notes on Usage

- Make sure that External Port Cap, Inner Cover and Battery Cover are tightly closed before use. If small particles (fine fiber, hair, sand, etc.) are caught between Battery Cover, Inner Cover and handset, water leakage may occur.
- If handset comes into contact with any liquids while External Port Cap, Inner Cover or Battery Cover is open, an electric shock or malfunction may occur. Turn off handset power and remove battery.
- Do not immerse handset in any liquids other than fresh water or tap water at room temperature.
- Regardless of handset performance, replacing handset parts every two years is recommended. Replace parts at your own expense. Contact SoftBank Mobile Customer Center, Customer Assistance (☎ P.19-34) in your subscription area.

 
Open External Port Cap

- 1 Use slot to lift cap off in the direction of ①, and rotate cap in the direction of ②.

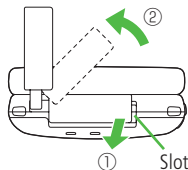


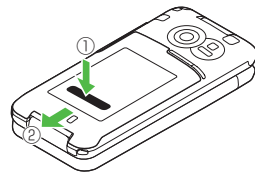
Close External Port Cap

- 1 Align cap with handset, and fit cap into port by holding cap base firmly.
- 2 Make sure cap is completely closed.




Remove Battery Cover

- 1 Press  on Battery Cover in the direction of ①, and slide cover in the direction of ② by 2 mm or more until lock is released.





- 2 Lift Inner Cover using tabs in the direction of arrow until it stops.

- Inner Cover is designed to close firmly for maintaining waterproof performance. Make sure not to force cover open; may injure nails or fingers.

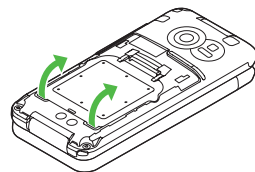


Attach Battery Cover

 
- 1 Fit raised edges of Inner Cover into slots.

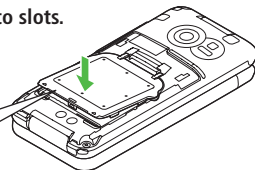

- 2 Press each ● mark on Inner Cover. Make sure cover is completely closed.

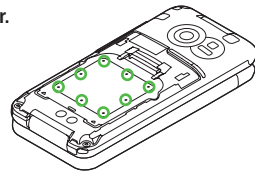

- 3 Align Battery Cover with handset slots with cover open by 2 mm. Press cover down and slide in the direction of arrow.

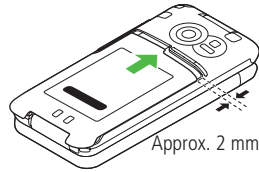

- 4 Make sure there is no gap between Battery Cover and handset.

Maintaining Waterproof Performance

■ Handset

- Do not leave handset wet.
 - Doing so may cause short circuit on External Port.
 - Water may leak into keypad or hinge. In cold climates, water drops turn into frost; this may cause malfunction.
- Do not wash handset in a washing machine.
- Handset is not heat resistant. Do not immerse handset in hot water, use it in a sauna or dry it with hot air using a dryer.
- Do not drop handset or subject it to excessive shock. Doing so may deteriorate waterproof performance.
- Handset does not float in water.
- Use handset within temperatures of 5°C to 35°C and humidity of 35% to 90% (limiting to temporary use in a bathroom within 36°C to 40°C). Do not use or store handset in extreme temperatures or areas under direct sunlight.
- Handset is not water-pressure resistant. Do not expose handset to strong water flow or immerse it in water.
- Do not place handset directly on beach.
 - Sand gets into holes of Microphone, Earpiece or Speaker, and volume may be decreased.
 - Sound may get distorted if water drops and sand are in handset.

- Water leakage may occur if sand enters External Port Cap, Inner Cover or Battery Cover.

■ External Port Cap/Inner Cover/Battery Cover

- Do not open/close External Port Cap, Inner Cover or Battery Cover with gloves on. Small particles may adhere to rubber packing.
- Make sure External Port Cap, Inner Cover or Battery Cover areas are free of fine fibers after wiping off liquids.
- Do not remove rubber packing. Do not insert sharp-edged objects into gaps around External Port Cap, Inner Cover or Battery Cover. Doing so may cause water leakage.
- If External Port Cap or Inner Cover rubber packing is damaged or deformed, replace it with a new one.

■ Microphone/Earpiece/Speaker

- Do not pick Microphone, Earpiece or Speaker holes with sharp-edged objects.
- Thoroughly wipe off water drops; may cause malfunction.

Draining Water from Handset


Using handset with water drops on may decrease Speaker/ Earpiece volume or deteriorate sound quality. If water seeps into keypad or hinge area, remove water as follows:

- 1 Wipe water off handset with clean dry cloth.




- 2 Hold handset firmly. Shake handset about 20 times until no water drops come out. Repeat on all sides.


<Drain from Earpiece>

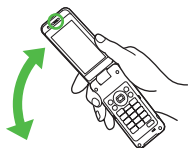

<Drain from Microphone>

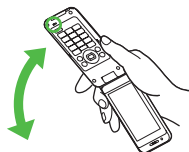


<Drain from Speaker>

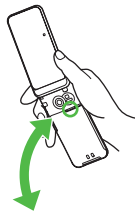


- 3 Pat handset against a clean dry cloth to remove remaining water from Microphone, Earpiece, Speaker, keypad, hinge, etc.

- Do not directly wipe remaining water off gaps using a cotton swab.

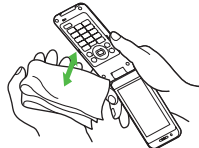

- 4 Remove Battery Cover, and wipe water drops off Inner Cover area and Battery Cover rear side. Replace Battery Cover.

- Never open Inner Cover.
- To remove Battery Cover: P.xliii

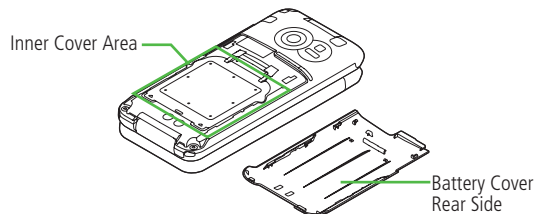

- Some water may remain on handset even after above steps are followed. Keep handset away from anything that should not get wet.
- Water may remain inside Touch Pen Cap when it is wet.

Charging Battery

Accessories and other optional items are not waterproof. Check following points when/after charging battery.

- Never charge battery when handset is wet. Doing so may cause an electric shock or malfunction/fire due to short circuit. Wipe water off handset with clean dry cloth before charging battery.
- Close External Port Cap tightly after charging battery. Use Desktop Holder to charge handset.

Copyrights and Others

Right of Portrait

Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with the handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

Copyrights

Sounds, images, computer programs, databases, other copyrighted materials, their respective works and copyright holders are protected by copyright laws. Duplicated materials are limited to private use only. If duplications (including conversion of data types), modifications, transfer of duplicates or distribution on networks are made without permission of copyright holders, this constitutes "Literary Piracy" and "Infringement of Copyright Holder Rights" and a criminal action for reparations and criminal punishment may be filed. If duplicates are made using handset, please observe the copyright laws. Materials captured with handset camera are also subject to the above.

This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or

(ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider licensed to provide MPEG-4/AVC/VC-1 video.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this products is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

Windows Media®, Microsoft®, Windows® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

The abbreviations used for respective operating systems (Japanese version) in this guide are as shown below: Windows Vista® is the abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, and Ultimate). Windows® XP is the abbreviation of Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.

Microsoft Windows operating system is abbreviated as "Windows" in this guide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Aplix, microJBlend and JBlend, and all Aplix- or JBlend-related trademarks and logos are trademarks or registered trademarks of Aplix Corporation in the U.S., Japan and other countries.

BookSurfing® is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



microSDHC Logo is a trademark.

Chaku-Uta® and Chaku-Uta Full® are registered trademarks of Sony Music Entertainment (Japan) Inc.

Machi-Uta® is a registered trademark of KDDI CORPORATION.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.

This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see the bundled "GPL/LGPL 等適用ソフトウェアのライセンスについて" leaflet.



Bluetooth®

Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Mobile Communications Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

This product is loaded with Bluetooth™ Stack for Embedded Systems Spec 2.0 by Toshiba Corp.

Powered by MascotCapsule®

MascotCapsule® is a registered trademark of HI CORPORATION © 2010 HI CORPORATION. All Rights Reserved.

The image stabilization technology utilized is PhotoSolid®, a product of Morpho, Inc.

The fast image rendering engine utilized is ImageSurf®, a product of Morpho, Inc.

PhotoSolid® and ImageSurf® are registered trademarks of Morpho, Inc.

FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark of Sony Corporation.

 is a registered trademark of FeliCa Networks, Inc.

"OsaiFu-Keitai" is a registered trademark of NTT DoCoMo, Inc. in Japan.

NetFront®
Mobile Client Suite

ACCESS™

This product contains NetFront Mobile Client Suite of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in the United States, Japan and other countries. ©2008 ACCESS CO., LTD. All rights reserved.

This software is based in part on the work of the Independent JPEG Group.

IrFront is a trademark or registered trademark of ACCESS CO., LTD. in Japan and other countries.

The IrDA Feature Trademark is owned by the Infrared Data Association and used under license therefrom.

**ADOBE®
FLASH®
ENABLED**

This product contains Adobe® Flash® Lite™ Player under license from Adobe Systems Incorporated.

Copyright© 1996-2008 Adobe Macromedia Software LLC. All rights reserved.

Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AirStation™ and AOSS™ are the trademarks of BUFFALO INC.

SOFTBANK, SOFTBANK's equivalent in Japanese and the SOFTBANK logo are registered trademarks or trademarks of SOFTBANK CORP. in Japan and other countries.

S! Mail, Navi Appli, MOBILE WIDGET, Graphic Mail and Keitai Wi-Fi are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Yahoo! and the "Yahoo!" or "Y!" logos are trademarks and/or registered trademarks of Yahoo! Inc. in the U.S.

This product is manufactured or sold under license from InterDigital Technology Corporation.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 942P is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

"One-push Open™" is a trademark of Panasonic Corporation.

Specific Absorption Rate (SAR)

942P meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the head, shall not exceed 2 W/kg*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law.

942P has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 0.360 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications
<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>
Association of Radio Industries and Businesses (ARIB)
<http://www.arib-emf.org/> (Japanese only)

* Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

Getting Started 1

USIM Card.....	1-2
About USIM Card	1-2
USIM Card Installation.....	1-3
USIM PINs.....	1-3
Parts & Functions.....	1-4
Handset	1-4
Display Positions.....	1-7
Key Operations in Standby	1-8
Display	1-10
About Battery.....	1-13
Before Charging	1-13
Battery Installation	1-15
Charging Battery	1-16
Handset Power On/Off.....	1-17
Manner Mode.....	1-18
Minding Mobile Manners.....	1-18
Manner-related Features	1-18
Activating Manner Mode	1-18
Activating Offline Mode.....	1-19
Activating Driving Mode	1-19
Handset Menus.....	1-19
Main Menu	1-19
Menu Numbers	1-21
Accessing Functions/Info from Standby	1-22
Touchpad	1-23

Standby Options & Event Indicators	1-24
Event Indicators.....	1-24
Mobile Widget (Japanese).....	1-25
S! Quick News (Japanese).....	1-25
Shortcuts.....	1-25
Customizing User Interface	1-26
Customized Screen	1-26
Changing Display Font.....	1-27
Private Menu	1-28
Opening Private Menu	1-28
Customizing Private Menu	1-28
Adding Shortcuts.....	1-28
Simple Menu.....	1-29
Activating Simple Menu	1-29
Simple Menu	1-30
Using Videos/Music.....	1-31
Passwords.....	1-32
Phone Password	1-32
Center Access Code	1-32
Security Code	1-32
Multi Task	1-33
Activating Another Function.....	1-33
Ending Current Functions.....	1-33
View Blind	1-34
My Number.....	1-34


About Handset

942P has two display positions: Normal Position and Viewer Position. Each position has its unique functions and operations.

Display Positions and Operations

Normal Position

Viewer Position

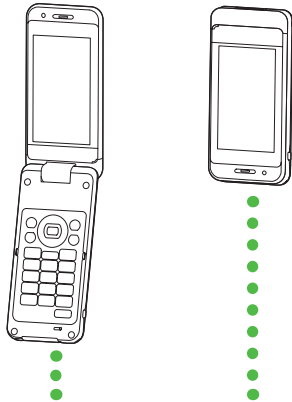


Calls	○	—
Key Operations	○	—
Touch Panel Operations	—	○

- Touch Panel Operations: P.1-xx

Viewer Position


Rotate Display part 180° clockwise and close.

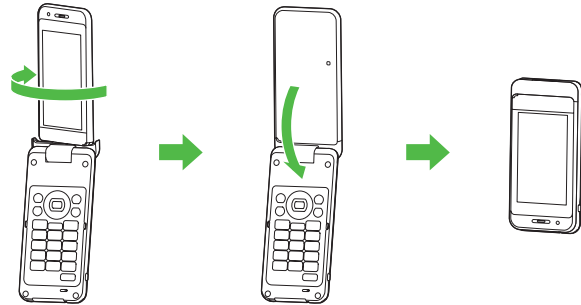

- To return to Normal Position, open Display part and rotate 180° counterclockwise.

Note

- Keep Display from striking Keypad or a table.
- Do not rotate to the other way.
- Do not rotate more than 180°.

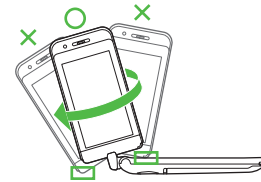


Motion Control

Change handset orientation to switch Portrait/Landscape View (90° counterclockwise).

■ Use Motion Control in These Windows (Viewer Position)

- Still images
- S! Appli
- Yahoo! Keitai (default setting: OFF)
- PC Site Browser/Direct Browser
- Mobile Widget/S! Information Channel
- etc.

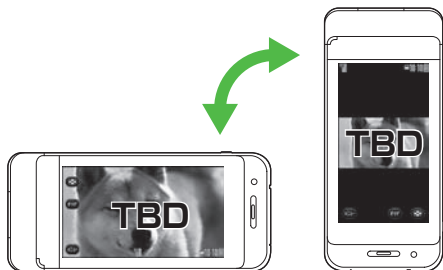

Note

- Motion Control is available during S! Appli in Normal Position.
- Motion Control may not function depending on handset orientation.
- For still images, Motion Control remains active even when handset is turned 90° clockwise or 180°.

Tip

Settings

 
● TBD

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use handset or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎ P.19-34).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

Note


- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

- Remove battery (☞ P.1-15) then follow steps below (Attach Battery Cover: ☞ P.xxx/Remove Battery: ☞ P.1-xx).


Inserting

- 1 With IC chip down, insert USIM Card

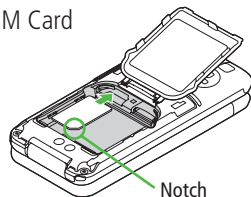

Removing

- 1 Slide out USIM Card gently

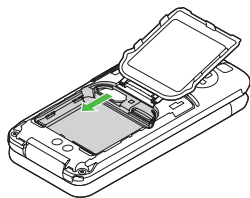

Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to **9999** by default.
- PIN/PIN2 can be changed (☞ P.12-3).

PIN	4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> ● When PIN Authentication is ON (☞ P.12-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call times/costs or set maximum cost (☞ P.18-9).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unlocking Key (PUK/PUK2) (☞ P.12-3).

- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞ P.19-34).


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞ P.19-34).

1 Parts & Functions

Getting Started

Handset

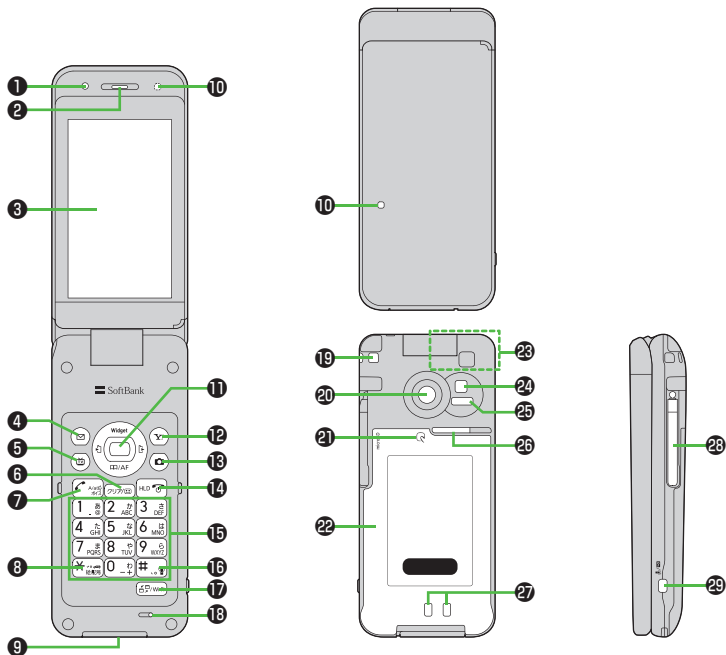


Using Earphone Microphone or Video Output Cable

Connect following accessories (A) and (B) to External Port.

- (A) Earphone Microphone or Video Output Cable
- (B) Stereo Earphone Conversion Cable

<Operation>

- ① Connect flat plug (A) to flat terminal (B)
- ② Connect plug (B) to External Port

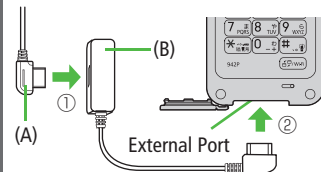

- Do not press answer button on Earphone Microphone when connecting. Doing so may cause Earphone Microphone to malfunction. In that case, pull out Earphone Microphone, and connect again.

1 Light Sensor

- Detects ambient light

2 Earpiece**3 Display/Touch Panel**

- Open Messaging menu
- Execute Upper Left Softkey function (☞ P.ix)

5 TV Key

- Activate TV
- Execute Lower Left Softkey function (☞ P.ix)

6 Clear/Memo Key

- Delete characters
- Cancel menus
- Use Answer Phone

7 Send Key

- Initiate or answer calls
- Toggle upper/lower case in text entry windows
- Use Voice Dial

8 */*/Driving Mode Key

- Enter " * "
 - Access pictographs/symbols/Smileys/URLs in text entry windows
 - Set/cancel Driving Mode

9 External Port

- Connect AC Charger (sold separately), Stereo Earphone Conversion Cable or other accessories here

10 Notification Light/Charging Indicator

- Flashes for incoming transmissions
- Lights in red for charging

11 Multi Selector

- Scroll up/down/left/right to navigate menus and text (☞ P.ix)
- Select indicators/icons/S! Quick News
- Open Phone Book
- Open Incoming Call Logs
- Open Redial logs

12 Yahoo! Keitai Key

- Open Yahoo! Keitai top menu
- Execute Upper Right Softkey function (☞ P.ix)

13 Camera Key

- Activate Camera/Video Camera
- Execute Lower Right Softkey function (☞ P.ix)

14 End/Escape & Power Key

- Power on/off (☞ P.1-17)
- End calls
- Return to Standby

15 Keypad

- Enter phone number/text

16 #/Symbol/Manner Key

- Enter " # "
 - Toggle Manner Mode

17 MULTI/Wi-Fi Switch Key

- Open TASK MENU
- Toggle Wi-Fi function on/off

18 Microphone**19 Strap Eyelet****20 Camera****21 Logo**

- Place Logo over a reader/writer when using Osaifu-Keitai® (☞ P.13-11)

22 Battery Cover

- Open Inner Cover and insert/remove USIM Card/Battery/microSD Card

23 Antenna**24 Photo light**

- Lights/flashes during Camera use
- Use when shooting in dark places

25 Infrared Port

- Transfer data via Infrared

26 Speaker**27 Charging Terminals****28 TV Antenna****29 Side Key**

- Activate Camera/capture images

[Handset Closed]




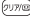






- Set/cancel Manner Mode
- Check missed calls/new messages




[In Viewer Position]

- End function
- Set/cancel Display Lock

 Key Operations in Standby

Press or press and hold (more than one second) a key in Standby to execute the following.


Key Operations		Functions
	Short Press	Initiate a call
	Long Press	Voice dial
	Short Press	—
	Long Press (2 + sec)	Turn off power
	Short Press	Open Main Menu
	Long Press	Activate/cancel Keypad
	Short Press	Play Answer Phone
	Long Press	Activate/cancel Answer Phone
	Short Press	Activate Camera
	Long Press	Activate Video Camera
	Short Press	Activate Digital TV
	Long Press	Activate/cancel IC Card Lock
	Short Press	Open Messaging Menu
	Long Press	Open S! Mail Composition window
	Short Press	Access Yahoo! Keitai
	Long Press	Open Yahoo! Keitai Menu
	Short Press	Open TASK MENU
	Long Press	Toggle Wi-Fi on/off
	Short Press	Select indicators/icons/ticker
	Long Press	Activate slideshow

Key Operations		Functions
	Short Press	Open Phone Book search window
	Long Press	Open Phone Book entry window
	Short Press	Open Incoming Call Logs
	Long Press	Open Received address logs
	Short Press	Open Redial logs
	Long Press	Open Sent address logs
①	Short Press	Enter "1"
	Long Press	Open Phone Book page "あ"
②	Short Press	Enter "2"
	Long Press	Open Phone Book page "か"
③	Short Press	Enter "3"
	Long Press	Open Phone Book page "さ"
④	Short Press	Enter "4"
	Long Press	Open Phone Book page "た"
⑤	Short Press	Enter "5"
	Long Press	Open Phone Book page "な"
⑥	Short Press	Enter "6"
	Long Press	Open Phone Book page "は"
⑦	Short Press	Enter "7"
	Long Press	Open Phone Book page "ま"
⑧	Short Press	Enter "8"
	Long Press	Open Phone Book page "や"
⑨	Short Press	Enter "9"
	Long Press	Open Phone Book page "ら"
⑩	Short Press	Enter "0"
	Long Press	Open Phone Book page "わ"

Key Operations	Functions
✳	Short Press Enter "✳"
	Long Press Activate/Cancel Driving Mode
#	Short Press Enter "#"
	Long Press Activate/Cancel Manner Mode
□ (Cam/📷)	Short Press Activate Camera
	Long Press Activate Camera

Display

Display Indicators

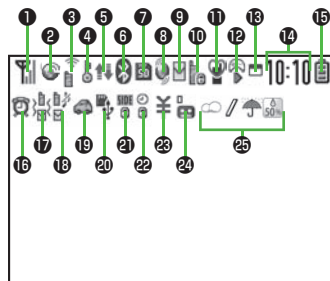

- 16 - 25 are Status Indicators. Access functions from respective indicators (☞ P.1-22).

1 Signal Strength

- 📶 Strong 📶 Moderate 📶 Weak 📶 Low
- 🔌 Emission OFF Mode Active
- 🌐 Out-of-Range

- 2 📶 Packet Transmission in Progress (PC)
- 📶 Dial-up Connection Established on PC
- 📶 3G/GSM Packet Transmitting
- 📶 Operator (set for Select Operator)
- Out-of-Range
- 📶 3G/GSM 3G/GSM Packet Transmission Available*
- 📶 3G/GSM 3G/GSM Packet Transmission Unavailable*
- * Appears only while abroad
- 3 📶 Wi-Fi On (Out-of-Range)
- 📶 Keitai Wi-Fi/Direct Access Available (In-Range/Transmitting)
- 📶 Direct Access Available (In-Range/Transmitting)
- 4 📶 Secure Content
- 📶 S! Addressbook Back-up Synchronizing
- 📶 Auto Sync Settings Active
- 5 📶 PC Site Browser Active
- 📶 Direct Browser Active
- 📶 Infrared Transmission
- 📶 IC Transmission
- 📶 USB Cable Connected
- 📶 Keyguard Active

- 6 📶 Software Update (Notification/Updating/Result)
- 📶 Voice Mail
- 📶 (Blue) Bluetooth® Device Connected
- 📶 (Black) Bluetooth® Power Save Mode
- 7 **microSD Card**
- 📶 Inserted
- 📶 Reading/Writing Data
- 📶 Write-protected
- 📶 Unsupported
- 📶 Unusable
- USB Cable (Not Included) Connected**
- 📶 microSD Mode
- 📶 MTP Mode
- During Call**
- 📶 During Video Call
- 📶 During Voice Call
- 6 📶 Positioning
- 📶 New S! Quick News Information
- 📶 New S! Information Channel info

- 9 Unsent Message
- Unread Message
- Incoming Mail Memory Full

10 Security

- Privacy Key Lock Active
- Personal Data Lock Active
- Key Pad Dial Lock Active
- IC Card Lock Active
- Secret Mode and Secret Data Only Active
- Key Pad Dial Lock, Secret Mode and Secret Data Only Active
- Key Pad Dial Lock and Personal Data Lock Active
- Secret Mode, Secret Data Only and IC Card Lock Active
- Privacy Key Lock and IC Card Lock Active
- Personal Data Lock and IC Card Lock Active
- Key Pad Dial Lock and IC Card Lock Active
- Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active
- Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 11 Manner Mode Active
- Manner Mode (set in User Mode)

12 **SI Appli**

- / Active/Paused
- Auto Start Request Received
- / Start Request Received while Active/ Paused
- 13 One Function Active
- Multiple Functions Active
- Digital TV Active
- During Timer Recording
- / Recording TV Program/Paused
- / Music Playback/Paused
- 14 Time
- 15 **Battery Level**
- (Red)
- 16 (Red) Alarm Set (Today)
- (Blue) Alarm Set (After Today)
- 17 Vibration Active (Incoming Call)
- Vibration Active (Incoming Message)
- Vibration Active (Incoming Call/Message)
- 18 Incoming Call Ringtone Disabled
- Incoming Message Ringtone Disabled
- Incoming Call/Message Ringtone Disabled

- 19 Driving Mode
- 20 Communication Mode set for USB Mode
- microSD Mode set for USB Mode
- MTP Mode set for USB Mode
- 21 Side Key Disabled when Handset Closed
- 22 Timer Lock at Close Active
- 23 Call Charge Reached Upper Limit
- Back Light OFF
- View Blind ON
- Back Light OFF; View Blind ON
- 24 Answer Phone Active (Number of Recorded Messages (Voice Calls))
- Answer Phone Active (Number of Recorded Messages (Video Calls))
- 25 Weather Indicator (P.8-3)

Note

- To show indicator description: **Main Menu**
 - ▶ **Settings** ▶ **Display Settings**
 - ▶ **Describe Icons** ▶ to highlight an indicator

About Battery

Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

- Charging Time & Operating Time Estimates:  P.19-26

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.

Charging



- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time

- Using handset in the following conditions may shorten battery time.
 - Extreme temperatures
 - Handset/battery/AC Charger terminals are dirty.
 - Weak signal/out-of-range
 - Handset is left mid-operation (not in Standby)
 - Playing Music Player, Wi-Fi is on, TV or S! Appli is active, etc.

- Extending battery time




Example:




- Turn Back Light Time **OFF** or set a shorter time for Power Saver mode ( P.18-5)
- Select **OFF** for Key Tone ( P.18-3)

When Battery Runs Out

- **Unless a Call is in Progress**

A message appears and warning tone sounds for 10 seconds.

Handset power turns off automatically after one minute; press any key except  ( / ) to cancel warning tone manually. Charge or replace battery.


- If Manner Mode is active, nothing sounds.
- To stop warning tone, press  ( / ) while handset is closed.

● During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞ P.1-10) or a message appears on Display.

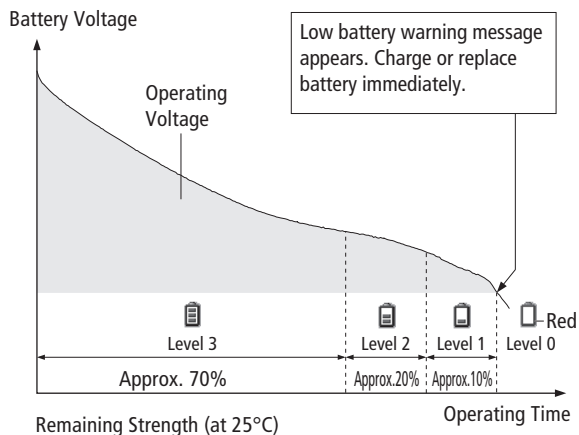

Note


- Alternatively, check battery level from **Main Menu ► Settings ► Phone Settings ► Battery ► Battery Level**

Battery Installation

- Always turn off handset power before removing Battery Cover and opening Inner Cover (☞ P.xx-xx).


Insert Battery

- 1 Align battery contacts with handset pins.

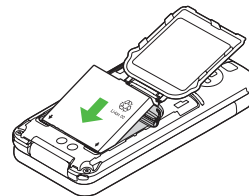

Remove Battery

- 1 Lift battery out as shown.

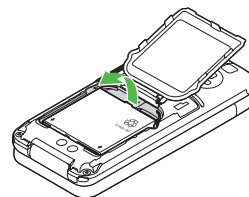

Note

- Lithium-ion batteries are valuable and recyclable resources.
 - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
 - To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery



Li-ion 00


1

Getting Started

Charging Battery

Use Desktop Holder and AC Charger (sold separately) to charge battery.

- Use only specified AC Charger.
- Charging time:  P.19-xx

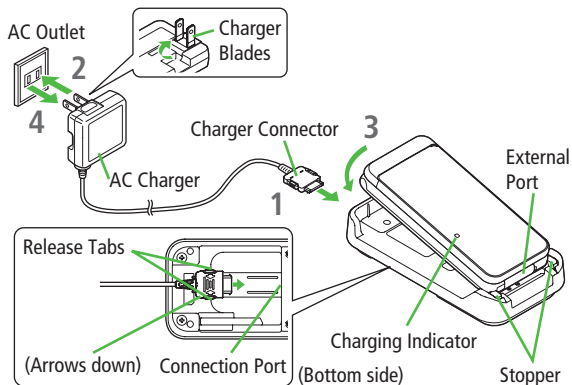

1 Connect AC Charger to Desktop Holder

Insert Charger Connector (arrows down) into Connection Port.

2 Extend Charger Blades, and plug AC Charger into AC Outlet

3 Align External Port with Stopper, and push handset in the direction of arrow until it clicks.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove handset from Desktop Holder and battery from handset then attach them again.
- Charge Sound is heard when charging starts/ends.
When handset is turned off or in Manner Mode, nothing sounds.

4 When charging is complete, remove handset from Desktop Holder and unplug AC Charger from AC Outlet


Fold back Charger Blades after unplugging AC Charger.

Squeeze Release Tabs and pull straight out to remove Charger Connector.

■ Desktop Holder Stand

Extend Stand to view videos in Viewer Position.


- Hold Desktop Holder when operating handset.

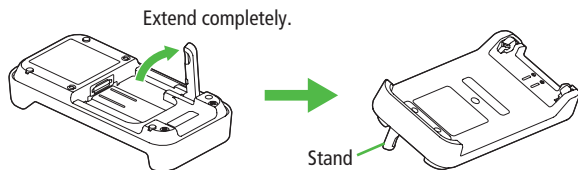

■ Charging with AC Charger Only

Insert Charger Connector (arrows up) into External Port. To remove, squeeze Release Tabs and pull straight out.

- Open/Close External Port Cap:
☞ P.xx-xx

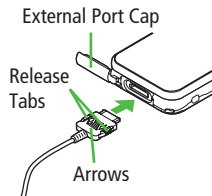

Note

- Make sure not to get strap caught between handset and Desktop Holder.
- For details, read AC Charger instructions.

Tip

- TBD

Handset Power On/Off

1 Press and hold

Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (☞ P.12-2).

2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

■ Initial Setup





The first time handset powers up and Initial setting window appears, select **YES** and set the following: (Each item can be set separately.)

Date & Time* (☞ P.18-9)	Set date and time
Phone Password (☞ P.12-2)	Enter 9999 , and enter new Phone Password (4-8 digits)
Key Tone (☞ P.18-3)	Select ON or OFF
Font Size (☞ P.18-6)	Set Display font size all at once

* May be automatically set

View Information Messages





At time of purchase, information message is provided for your convenience.

-  to highlight an Event Indicator ( P.1-24), then press 
-  → **Incoming Mail** → **Received** → Select a message
Widget appears in Standby after information message is viewed.

Note

- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- When handset is open, Display turns off after a period of inactivity.

Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval; press  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings** ► **Connectivity** ► **Retrieve NW Info** ► **YES**

Tip

- Settings** ● Change Wallpaper ● Add Calendar to Wallpaper
● Change Wallpaper Randomly ( P.18-3)
● Change Start-up Window ( P.18-4)







Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features

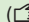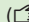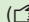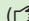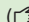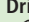Manner Mode  Right)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
Vibration Mode  P.18-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume  P.18-2)	Mute call/message tones.
Offline Mode  P.1-19)	Suspend all handset transmissions.
Answer Phone  P.2-15)	Use to handle incoming calls when inappropriate/unsafe to answer.
Driving Mode  P.1-19)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.)

Activating Manner Mode

Press one key to mute handset tones and activate vibration for incoming transmissions.

- Manner Mode settings can be changed (👉 P.18-7).
- When Manner Mode is active, 📵 appears.

- In Standby, press and hold (#)
 - To cancel: Press and hold (#) again
 - To activate/cancel while handset is closed: Press and hold 📵



Note

- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When activating Music Player or Digital TV in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (👉 P.13-7), Alarm sounds even if Manner Mode is active.

Tip

- Settings** ● Set Manner Mode Type (👉 P.18-7)

Activating Offline Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Offline Mode is active, 📵 appears.

Main Menu ▶ Settings ▶ Call Settings ▶ Offline Mode

- YES**
 - To cancel: Follow the same steps.

Note

- Offline Mode disables Bluetooth®/Wi-Fi/Infrared/IC transmissions. Bluetooth® handsfree devices cannot be used either.

Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and handset records voice/video messages.

- When Driving Mode is active, 📵 appears.


- In Standby, press and hold (*)
 - Press and hold (*) again to cancel.

Note

- When Answer Phone memory is full, incoming calls are rejected.
- Ringtone sounds through Earphone Microphone when connected.

Handset Menus

Main Menu

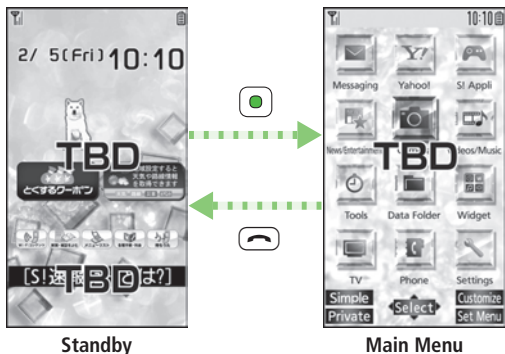

Standby

Main Menu

1 In Standby,

Main Menu appears.

- To change Main Menu theme:
 [Set Menu] → Select a theme

2 to highlight an icon →













Selected function menu appears.

- To return to Standby: 

Note

- Standby window returns after 15 seconds of inactivity in Main Menu.

Main Menu Icons

Messaging  Create new/view received messages	Yahoo! (Yahoo! Keitai)  Enjoy Mobile Net & PC Site browsing...	S! Appli  Download, set and use S! Appli
News/Entertainment  Use S! Quick News or E-books	Camera  Capture images or record videos	Videos/Music  Play music, videos, etc.
Tools  Set Alarm or save Calendar entries...	Data Folder  Open files saved on handset/microSD Card	Widget (Mobile Widget)  Use Mobile Widget
TV  View TV or record/timer-record programs	Phone  Access Phone Book, save contact information...	Settings  Adjust/customize handset settings

Tip

- Settings**
- Change Display Color Scheme ● Change Main Menu Icons
 - Change Main Menu Background (☞ P.18-4)

Menu Numbers


Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

Main Menu

(#) to select **Settings** from Main Menu

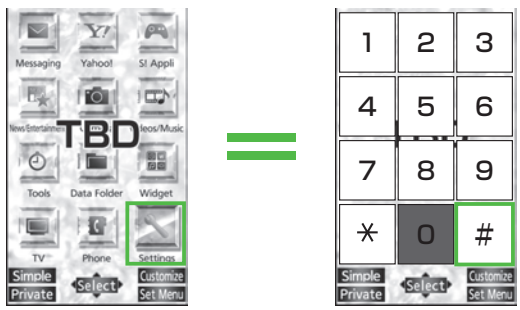


- Press (O) to show Account Details. To open Phone top menu, select **Phone** using ☒

When Menu Icons is Set to Basic or Customize

Menus cannot be selected from Main Menu by keypad.
Open menu items by entering specific number in Main Menu (Quick Open Menu: ☞ P.19-14).

Top Menu Opened from Main Menu

(2) to select **Display Settings**

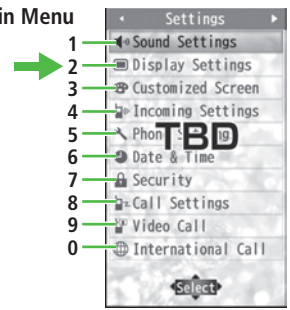


Example: Settings Top Menu

Numbered Menu Items

Press key corresponding to menu number to select a menu.

In Display Settings (from **Settings** Top Menu), (5) to select **Menu Icons**

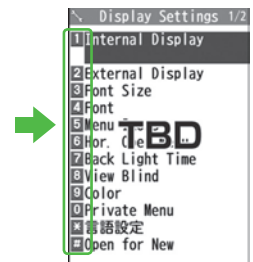

Accessing Functions/Info from Standby



Select indicators/ticker in Standby to access functions and information.

Available Items

- Event Indicator (☞ P.1-24)
- Mobile Widget (☞ P.7-2)
- S! Quick News (☞ P.8-4)
- S! Information Channel/Weather (☞ P.8-2)
- Shortcuts (☞ P.1-25)
- Status Indicators (☞ P.1-10)

1 In Standby,





Pointer () appears.

- Press  or  to return to Standby (Pointer disappears).

2 Use to move pointer () to an indicator, icon or ticker →

 [Select]

Indicator, icon or ticker is selected. Function name appears.




- Press and hold  to move pointer () continuously
- To cancel selection:  or 

3 [Select]

Function or information appears.



When Widgets Do Not Appear

Pointer () does not appear. After Step 1, use  to highlight an item →  [Select] to show function or information

- To show/hide widgets: 

Using Pointer ()

> In Standby,  →  [Menu] → Select an item (See below)

Item	Operation/Description
to widgets list	Open Widget List
Yahoo!JAPAN Login	Open Yahoo! JAPAN log in window
Stand-by Display	Change Standby wallpaper > Select a folder → Select an image

Standby Options & Event Indicators

Check various indicators and information in Standby.




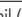
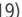


- To access functions/information from indicators:  P.1-22

Event Indicators








Event Indicators appear for missed calls, messages, etc.

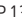

Events



Missed calls	Missed calls ( P.2-13)
New message	New messages ( P.14-11)
Have Answer Ph Msg	Recorded caller messages ( P.2-15)
Voice mail	New Voice Mail ( P.2-19)
Had incoming call(s)	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. ( P.2-19)
New S! Info Channel	S! Information Channel (received updates) ( P.8-2)
New Weather	Weather Indicator (received updates) ( P.8-3)

Other Information

- Missed alarm ( P.13-6)
- S! Appli startup notice ( P.16-3)
- USB Mode setting ( P.11-17)
- Missed location information request
- Auto location information notice ( P.17-3)
- Timer ( P.5-13)
- Content Key ( P.10-5)
- Software Update result ( P.19-13)

Mobile Widget (Japanese)



Paste various widgets to Standby to access information or tools from Standby.

- Mobile Widget:  P.7-2
- To show/hide widgets: 



S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Quick News:  P.8-4
- Show/hide S! Quick News:  P.18-19



Shortcuts

Access frequently used functions from Standby.

- Following shortcuts are set by default:
 Wi-Fi コンテンツ (Wi-Fi Contents)*
 新聞・雑誌をよむ (News/Magazines)*
 メニューリスト (Menu List)*
 各種手続き・料金 (Manage Account/Fees)*
 待ちうた (Machi-Uta®)*

* Requires network connection. Available in Japanese only.



Shortcuts

Adding Shortcuts

- Some functions are not available for shortcuts.

- 1 Open a function, [Menu] →
Add shortcut icon → YES

Scroll Shortcuts

Five shortcuts appear at a time. To scroll more shortcuts, first press to hide widgets, then press and use to scroll shortcuts.

Editing/Deleting Shortcuts

- 1 In Standby, → to move pointer → Highlight a shortcut
- 2 [Menu] → Select an item (See below)

Item	Operation/Description
Edit title	> Edit title
Sort	> Select an item → Select a target → [Finish] → YES
Delete this	> YES
Delete all	> YES

Customizing User Interface

Customized Screen

Download and set Customized Screen to personalize user interface, ringtone, etc., to a selected theme.


Downloading Customized Screen

Main Menu ► Data Folder ► Customized Screen



1 Customized Screen → YES



List of websites appears.

Select a website and follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:
 P.10-10

Setting Customized Screen

1 In Standby,  →  [Customize] → *Customized Screen*

2 Highlight a theme →  [Set]
 ● To toggle thumbnail and list:  [Change]

3 YES

■ Cancel Customized Screen

> In Standby,  →  → *Release Settings*

Note

- Customized Screen cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Alternatively, **Main Menu ► Settings ► Customized Screen**
- When Simple menu is active, Customized Screen settings are not reflected. To reflect settings, cancel Simple menu.
- When Customized Screen cannot be canceled, enter **6368##** in Standby → *Release Settings* → YES

Changing Display Font

Change Display font. Fonts can also be downloaded.

Downloading Fonts

Main Menu ► Settings ► Display Settings ► Font

1 Download Font → YES

Follow onscreen instructions.

- For details on Font folder (Data Folder): P.10-10

Note

- While Personal Data Lock is set, fonts cannot be downloaded.

Changing Font

Main Menu ► Settings ► Display Settings ► Font

1 Select a folder → Highlight a font → [Set]

Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.

Opening Private Menu

1 In Standby, [Home] → [Private]

Private Menu appears.

- To return to Main Menu: [Home] [Normal]

2 Select a menu



Private Menu Window

Change Private Menu Background

> After Step 1, [Set] → [Menu] → Change BG image → Select a folder → Select an image

Customizing Private Menu

- 1 In Standby, → [Private] → [Set]
- 2 Highlight a target → [Menu] → *Add to menu*
- 3 Select an item

Cancel Functions

> In Step 2, (highlight a function →) [Menu] → *Release this* or *Release all* → YES

Reset Private Menu

> In Step 2, [Menu] → *Reset menu* → YES



Private Menu Setting Window

Adding Shortcuts

- 1 In Standby, → [Private] → [Set]
- 2 [Menu] → *Add shortcut icon* → YES

Note

- Alternatively, open Private Menu setting window from **Main Menu** ► **Settings** ► **Display Settings** ► **Private Menu**


Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (P.1-30).



Normal Mode Window

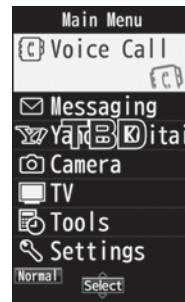

Simple Menu Window

Activating Simple Menu

1 In Standby,  →  [Simple] → **YES**

2 **YES** or **NO**

- Select **YES** to set all items in Font Size ( P.18-6) to **Large**.
- To open Simple menu:  in Standby.

Cancel Simple Menu

> In Standby,  →  [Normal] → **YES**

Note

- Turning off the power does not cancel Simple menu.
- Widgets and S! Quick News do not appear in Standby while Simple menu is active. Customized Screen setting is canceled.

Simple Menu

Simple Menu	Page
Voice Call	
Outgoing Log	2-13
Incoming Log	2-13
Phone Book	4-6
Create New Phone Book	4-3
Answer Phone	2-15
Account Details	1-34
Messaging	
Incoming Mail	14-16
Create New	14-4
Retrieve New	14-15
Drafts	14-16
Sent Messages	14-16
Create New SMS	14-7
Yahoo! Keitai	
Yahoo! Keitai	15-2
Bookmarks	15-8
Saved Pages	15-8
Enter URL	15-4

Simple Menu	Page
Camera	
Take Pictures	6-6
Shoot Videos	6-7
See Pictures	6-12
Watch Videos	6-12
TV	
Watch TV	5-5
Timer Recording	5-13
Channel Setting	5-4
Tools	
Data Folder	10-2
Alarms	13-6
Calendar	13-2
Calculator	13-8
Notepad	13-8
Receive via Infrared	11-2

Simple Menu	Page
Settings	
Ringtones/Volume	1-18 18-2
Screen/Fonts	18-3 to 18-6
Call Time & Cost	18-9
Date & Time	18-9
Security	12-2 13-12 19-12
Call Settings	2-17 to 2-21

1

Using Videos/Music


Download videos, music, newspapers or magazines from websites. Play back downloaded files from Videos/Music menu.

- Subscription to Keitai Wi-Fi service may be required for some content.
- Make sure to check information before using sites.

Main Menu ▶ Videos/Music

1 Select an item

Follow onscreen instructions.

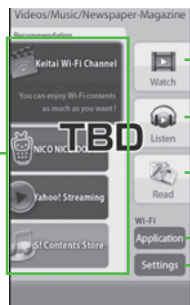

Connect to respective sites

- Open Videos folder (☞ P.10-13)
- Activate Music Player (☞ P.9-6)
- Activate Digital Media Viewer (☞ P.8-6)
- Access My SoftBank for Keitai Wi-Fi subscription
- Open Wi-Fi setting window (☞ P.11-11)

Menu Item Update

Confirmation may appear when Videos/Music menu opens. Select **YES** to update. If **NO** is selected, confirmation keeps appearing.

Note

- Alternatively, **Main Menu ▶ Settings ▶ Phone Settings ▶ Videos/Music Updates**

Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

Phone Password

<Default> 9999

4 to 8-digit number required to use/change some handset functions.

- Enter number within 15 seconds.
- _ appears for each digit entered.
- Phone Password can be changed on handset (☞ P.12-2).

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞ P.19-34).

Security Code

4-digit number specified at initial subscription, required to restrict handset services (☞ P.2-20).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞ P.19-34) for details.
- Security Code can be changed on handset (☞ P.2-21).

Note


- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞ P.19-34).

Multi Task

Activate up to three functions from four different groups at the same time.

Group	Function
① Messaging Group	Messaging
② Yahoo! Keitai/S! Appli Group	Yahoo! Keitai/S! Appli/News/Entertainment
③ Tools Group	Camera/Tools/Data Folder/TV/Phone/Mobile Widget
④ Settings Group	Settings

- [▼] appears above the icons of an active group.
- [] appears for single function in use; [] for multiple functions in use.

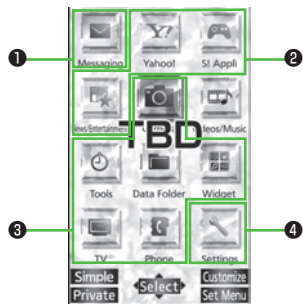

Note

- Transmission fees apply for calls/packet transmissions while multitasking.

Tip

- Other Functions while Watching TV (☞ P.5-8)
- Background Music (☞ P.9-7)

Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

- 1 [] (MULTI) → *Open Menu* →
Select a function



Note

- If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

Ending Current Functions

- 1 [] (MULTI)

End All Active Functions

- > [] (MULTI) → [END] → **YES**

View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind

1 *ON*

2 Select a level

- Set level 1-3 (Level 3 is the highest level).

Note

- Alternatively, press and hold **(S)** to activate/cancel. Previously selected level takes priority.
- View Blind is not activated/deactivated when: In Standby (Normal Position only); S! Appli is active; Privacy key Lock is active; All Reset is active; phone number is being entered.

My Number

Confirm handset phone number in Account Details (☞ P.4-12). Also confirm data saved in Account Details: name, mail address, etc.

- 1 In Standby, **(S)** → **(0)**
Account Details appears.



1 Getting Started

Making/Answering Voice Calls 2-2

Making Voice Calls	2-2
Outgoing Call Functions	2-3
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls	2-5
Incoming Call Functions	2-5
Making Voice Clear (Shikkari Talk)	2-5

Making/Answering Video Calls..... 2-6

Note	2-6
Video Call Window	2-6
Making Video Calls	2-7
Answering Video Calls	2-8

International Calls 2-9

Calling Abroad from Japan	2-9
Calling while Abroad	2-9
Global Roaming Settings	2-10

Engaged Call Functions 2-11

Operations Available during a Voice Call	2-11
Operations Available during a Video Call	2-12

Call Log..... 2-13

Viewing Call Logs	2-13
Making Calls from Call Log	2-14
Functions Available from Call Log	2-14

Answer Phone/Call Data 2-15

Answer Phone	2-15
Call Data	2-16
Answer Phone/Call Data Functions	2-16

Optional Services 2-17

Overview	2-17
Call Forwarding	2-17
Voice Mail	2-18
Call Waiting.....	2-20
Call Barring.....	2-20
Caller ID	2-21

Making/Answering Voice Calls

Making Voice Calls

Before Calling

- Confirm signal strength (☞ P.1-10)
- If any of these indicators appear:



→ Calls cannot be made (☞ P.1-10, P.1-11, P.19-12)

1 Enter a phone number

- Include area code for all numbers.

08TBA.XXX

2 Confirm the number, then

- To adjust volume:  or 

3 to end call

Call Time appears.

Correcting Misentries

Use  to place cursor at digit to delete, then .

Press and hold  to delete the digit and all digits to the right of cursor.

Note

- Do not cover antenna area (☞ P.1-6) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.
- Calls cannot be made in Horizontal Open Position except when Earphone Microphone is connected.

Tip

- Operations Available during a Voice Call (☞ P.2-11)
 - Making Calls from Call Log (☞ P.2-14)
 - Saving Entered Numbers to Phone Book (☞ P.4-5)
 - Making Calls from Phone Book (☞ P.4-6)
- Settings**
- Call Time & Call Cost (☞ P.18-9)
 - Set Handset Response when Closed during Call (☞ P.18-10)

Outgoing Call Functions

Showing/Hiding Caller ID

- > Enter number → [Menu] → *Notify caller ID* → *OFF* or *ON*
- To cancel setting: [Menu] → *Notify caller ID* → *Cancel prefix*
- Setting Caller ID on/off (Caller ID: P.2-21)

Adding Prefix to Phone Number

■ Save Prefix

- > **Main Menu** ▶ **Settings** ▶ **Call Settings** ▶ **Prefix**
 - ▶ Highlight **<Not Recorded>** ▶ [Edit] ▶ Enter a name
 - ▶ Enter a prefix number
- Up to seven entries can be saved.
- To check entries: Select a saved prefix.
- To delete entries: Highlight a prefix → [Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

■ Make Calls Using Prefix

- > Enter a number → [Menu] → *Prefix numbers* → Select an entry
 - Voice Calls: / Video Calls: [V. Call]
- Alternatively, in detail window of Phone Book, Redial, Outgoing Call Logs or Incoming Call Logs, [Menu] → *Prefix numbers* → Select an entry
 - Voice Calls: / Video Calls: [V. Call]

Example: Save "186" and "184" as prefixes, and add them to phone numbers to show/hide your caller ID when making calls.

Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal. Use P (pause) to separate numbers when saving.

■ Save Pause Dial

- > **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Pause Dial**
 - ▶ [Edit] → Enter a number string
- To enter a pause (p): Press and hold
- To delete: In Pause Dial window, [Menu] → *Delete* → *YES*

■ Send Pause Dial

- > **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Pause Dial**
 - ▶ [Send] ▶ Enter a phone number ▶ ▶ Once line is connected, press [Send]
- Number string is sent each time [Send] is pressed.
- To send all number strings at one time: Once line is connected, press and hold → *Send at one time*

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Calls Cannot be Made in Following Cases:

- When **Set Max Cost Limit** is **ON** and charge limit is reached
- In PIN/PIN2, PUK/PUK2 entry window

Emergency Positioning Request


When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 119 or 118, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.

Answering Voice Calls

When a Call Arrives...

Handset rings; Notification Light flashes.

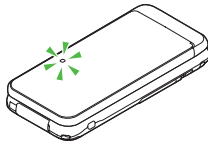

If Caller ID is sent, number appears in Internal Display and External Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number.

1 to talk



- To adjust volume:  or 

2 to end call

Call Time appears.

Adjust Ringer Volume



> While handset is ringing, 

- Volume adjustment is disabled in following cases:
 - During Manner Mode ( P.1-18)
 - While **Ringer Volume** is set to **Escalating Tone** ( P.18-2)

Note

- When Caller ID is not sent, **Withheld** appears.
- Calls cannot be received in Horizontal Open Position except when Earphone Microphone is connected.








Tip

- Operations Available during a Voice Call ( P.2-11)
- Rejecting Unknown Callers ● Rejecting Calls without Caller ID ( P.12-13)

Settings ● Change Answer Setting ● Answer Calls by Opening Handset ( P.18-8)

Incoming Call Functions

Following operations are available for incoming calls.

Place Calls on Hold	> 
Answer Phone	>  / 
Call Rejection	>  [Menu] → Call Rejection <ul style="list-style-type: none"> • Rejecting Unknown Callers/Rejecting Calls without Caller ID ( P.12-13)
Call Forwarding	>  [Menu] → Call Forwarding <ul style="list-style-type: none"> • Activate Call Forwarding ( P.2-17) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.

Making Voice Clear (Shikkari Talk)

<Default> ON

Make other party's voice clear according to surrounding noise.

Main Menu ▶ Settings ▶ Call Settings ▶ Shikkari Talk

1 ON or OFF

Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.


- Send Alternative Picture (still image) or video Image via Camera.

Note

- Only available within 3G network coverage.
- 942P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use earphone.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.
- While charging battery or recording TV programs, Outgoing Image cannot be switched from Alternative Image to Video Image.

Video Call Window

Example: Outgoing Video Call by Default

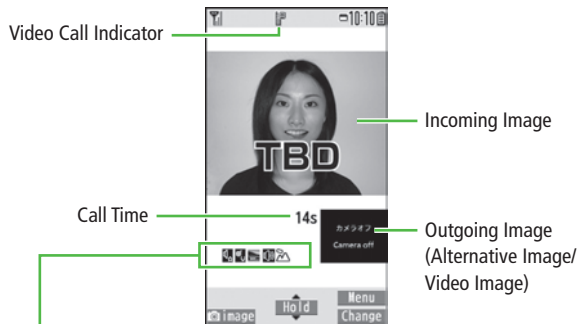

Indicators

- | | |
|------------------------------------|------------------------------------|
| : Incoming/Outgoing Sound OK | : Alternative Image ON |
| (Gray): Incoming/Outgoing Sound NG | : Speaker ON |
| : Incoming/Outgoing Image OK | : AV output |
| (Gray): Incoming/Outgoing Image NG | : During Bluetooth® handsfree call |
| : Video ON | : Close-up |
| | : Landscape |
| | : Night mode |

- Image display changes depending on settings.

Making Video Calls

Before Calling

- Confirm signal strength (☞ P.1-10)
- If any of these indicators appear:



→ Video Calls cannot be made (☞ P.1-10, P.1-11, P.19-12)

1 Enter a phone number

0877BDA.XXX

2 Confirm the number, then [V. Call]

When answered, outgoing and incoming images appear; other party's voice sounds via Speaker.

- To adjust volume:  or 

3 to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (☞ P.2-12).

Tip

- Outgoing Call Functions (☞ P.2-3)
- Operations Available during a Video Call (☞ P.2-12)
- Making Calls from Call Log (☞ P.2-14)
- Other Ways to Add New Entries (☞ P.4-5)
- Making Calls from Phone Book (☞ P.4-6)

Settings


- Change Outgoing Image
- Switch to Voice Call when Video Call Fails (☞ P.18-13)

Answering Video Calls

When a Video Call Arrives...

Handset rings; Notification Light flashes.

If Caller ID is sent, number appears in Internal Display and External Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number.



1



Alternative Image is sent.

● To send Video Image:

 [image]




2





to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker ( P.2-12).

Tip


- Adjust Ringer Volume ● Incoming Call Functions ( P.2-5)
- Operations Available during a Video Call ( P.2-12).

International Calls

Calling Abroad from Japan

- Application not required. For details, go to:
http://mb.softbank.jp/en/global_services/call/

1 Enter a phone number

2  [Menu] → *Int'l dial assist*
Country/region code list appears.

3 Select a country/region





4 **Voice Calls**



Voice Calls



■ Enter Country/Region Code Directly

- >  → Press and hold  to display + (IDD Prefix) → Enter a country/region code → Enter a number (omit first 0)
→ Voice Calls:  / Video Calls:  [V. Call]
- Do not omit leading 0 to call Italy (country code: 39).


Calling while Abroad

- May require application to Global Roaming Service. For details, go to:
http://mb.softbank.jp/en/global_services/global_roaming/

Example: When Roaming Dial Assistant is ON

- **Roaming Dial Assistant** (☎ P.2-10) is set to **ON** and **Japan** by default.

1 **Voice Calls**

Enter a phone number → 

Video Calls

Enter a phone number →  [V. Call]

2 Select an item (See below)

Item	Operation/Description
Call to Japan*	Call Japan
Call to set code*	Call a country/region set for Roaming Dial Assistant
As is Call	Manually enter number to call Select when calling within the country/region.

* First 0 is replaced by IDD Prefix and country/region code (e.g. +81). (When calling Italy, +39 is added before first 0.)

- Confirmation window appears for the first time. Select **NO** to set **Roaming Dial Assistant** to **OFF**.

Note

- IDD Prefix and country/region code can be manually entered in Step 1. Alternatively, save IDD Prefix and country/region code in Phone Book entries.

Global Roaming Settings

From ► Main Menu ► Settings ► International Call

International Call Settings

> *Int'l Dial Assist* → Select an item (See below)

Item	Operation/Description
Roaming Dial Assistant	Replace IDD Prefix with + > ON or OFF (→ For ON , select a country/region)
Country/Area Code	Save up to 27 country/region codes > Highlight < Not Recorded > → [Edit] → Enter a country/region name → Enter a country/region code ● To view an entry: Select a saved country/region name ● To delete: Highlight a country/region name → [Menu] → Delete this or Delete all (→ For Delete all , enter Phone Password) → YES
IDD Prefix	Edit IDD Prefix. IDD Prefix is set to 0046010 by default > [Menu] → Edit → Edit IDD Prefix

Network Mode

<Default> Automatically

> *Select Network* → Select an item (See below)

Item	Operation/Description
Automatically	Handset automatically selects 3G network in Japan, and available network (3G or GSM) when abroad.
Manually	> Select an item <ul style="list-style-type: none"> ● 3G/GSM: 3G/GSM service area in Japan or abroad. Handset selects an available network automatically. ● 3G: 3G service area in Japan or abroad ● GSM: GSM service area abroad. Unavailable in Japan

● **Automatically** is recommended.

Select Operator

<Default> Auto

> *Select Operator* → Select an item (See below)

Item	Operation/Description
Auto	Select an operator automatically
Manual	Select an operator manually > Select an operator <ul style="list-style-type: none"> ● Operators with X are not available. ● To show operator list: [Update]
Network Re-search	Search available networks <ul style="list-style-type: none"> ● When Auto is set, handset selects an available operator automatically. When Manual is set, operator list appears.

Operator Priority for Automatic Search

> **PLMN Setting** → [Menu] → Select an item (See below)

Item	Operation/Description
Add your network	Save currently connected operator > [Finish] → YES
Add from list	> Select an operator → [Set] → Select a network type → [Finish] → YES ● To search operators by country/region: [Search] → Select a country/region (To search again in country/region list: [Search] → Enter a country/region name)
Direct input	Save unlisted operators by entering country/region code and operator code > Enter country/region code (3 digits) and operator code (2 to 3 digits) → Select a network type → [Finish] → YES
Change priority	> Select a priority → [Finish] → YES
Delete this/ Delete all	> YES → [Finish] → YES

View Operator Name in Standby

<Default> OFF

> **Operator Name** → **ON** or **OFF**

- When **ON** is set, Clock Position is set to **Pattern 1** (P.18-5).

Engaged Call Functions

Operations Available during a Voice Call

Adjust Volume	> / ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	> [Hold] ● To resume call: ²
Speaker ON/OFF¹	Toggle Speaker or Earpiece ●
Record Conversation	Record for about three minutes per call > Press and hold or [Rec] ● To end recording: [Stop], or press and hold ● To play back recorded data: P.2-16
Toggle Manner Mode	> Press and hold [#]
Toggle Handset/ Bluetooth®	Toggle handset or Bluetooth® device > Press and hold ²

¹ Normal Position only

² Operation may be disabled or call may be put on hold in Horizontal Open Position.

Operations Available during a Video Call

Adjust Volume	<p>> / </p> <ul style="list-style-type: none"> ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	<p>> [Hold]</p> <ul style="list-style-type: none"> ● To resume call: ²
Speaker ON/OFF¹	<p>Toggle Speaker or Earpiece</p> <ul style="list-style-type: none"> ●
Record Conversation	<p>Record up to five calls for about 20 seconds each</p> <p>> Press and hold </p> <ul style="list-style-type: none"> ● To end recording: [Stop] or press and hold ● To play back recorded data: P.2-16
Video/ Alternative Image	<p>Toggle Video Image and Alternative Image</p> <p>> [image/Subst.]</p>
Toggle Image Sizes	<p>> [Change]</p>
Zoom	<p>Adjust zoom level for Video Image to be sent</p> <p>> (zoom in) or (zoom out)</p>
Toggle Manner Mode	<p>> Press and hold (#)</p>
Toggle Handset/ Bluetooth[®]	<p>Toggle handset or Bluetooth[®] device</p> <p>> [Menu] → <i>Talk on BT/Phone</i> → <i>Bluetooth</i> or <i>Phone</i></p>
Backlight Setting	<p>> [Menu] → <i>Back light</i> → <i>Constant light</i> or <i>15 seconds light</i></p>

Video Call Setting	> [Menu] → <i>V. Call settings</i> → Follow the steps for selected item (P.18-13)
LCD AI	Activate/deactivate auto image compensation > [Menu] → <i>LCD AI</i> → <i>ON</i> or <i>OFF</i>
Account Details	> [Menu] → <i>Account details</i>
Key Guide	> [Menu] → <i>Key guide</i>

¹ Normal Position only
















² Operation may be disabled or call may be put on hold in Horizontal Open Position.

Call Log

Incoming and outgoing call records appear here. Use these records to call back.

Redial	Up to 30 outgoing call records (Voice and Video) are saved. Older records of same number are deleted.
Outgoing Call Logs	Up to 30 outgoing call records (Voice and Video) and up to 30 outgoing transmission records (64K data and packet transmission) are saved. Older records of same number are also retained.
Incoming Call Logs	Up to 30 incoming call records (Voice and Video) and up to 30 incoming transmission records (64K data transmission) are saved. Older records of same number are also retained.

Indicators for Redial/Outgoing Call Logs/Incoming Call Logs

 Dialed/received Voice Calls	 Dialed calls of 64K data transmission
 * Missed Voice Calls	 Received calls of 64K data transmission
 Dialed/received Video Calls	 * Missed calls of 64K data transmission
 * Missed Video Calls	 Dialed calls of packet transmission
 New messages recorded on Answer Phone	 Received calls of 64K data/packet transmission when no external device is connected
 Dialed/received international Voice Calls	
 * Missed international Voice Calls	
 Dialed/received international Video Calls	
 * Missed international Video Calls	
 * Calls received while handset is off, out-of-range, engaged, etc. (P.2-19)	


* Unchecked calls are highlighted.

Viewing Call Logs

1 Redial



Outgoing Call Logs

 → **Phone** → **Call Log** → **Outgoing Call Logs**


Incoming Call Logs



Records appear.

- To show Received/Sent address logs:

 [Change]

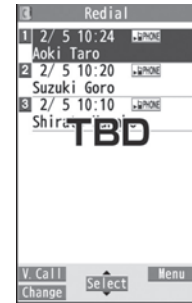

Redial

View Missed Calls

> **Main Menu** ► **Phone** ► **Call Log** ► **Incoming Call Logs**

► **Missed Calls**

- **Unknown Calls** appears in Call Log for unchecked calls.

Note

- Newest record appears at top of list. Names appear if saved in Phone Book.
- Call Log records remain even if handset is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Alternatively, view Incoming Call Logs from **Main Menu** ► **Phone** ► **Call Log** ► **Incoming Call Logs** ► **All Calls**

Making Calls from Call Log

- 1 Open Call Logs (☞ P.2-13)
- 2 **Voice Calls**
Highlight a phone number or name → ☞
- Video Calls**
Highlight a phone number or name → ☞ [V. Call]
- International Calls**
Select a phone number or name → ☞ [Menu] → **Int'l dial assist** → Select a country/region →
Voice Calls: ☞ / Video Calls: ☞ [V. Call]

Functions Available from Call Log

Highlight a call record and press ☞ [Menu].

- Available functions vary by selected log/record.

Item	Operation/Description
Notify caller ID	Notify or withhold your Caller ID (☞ P.2-3)
Prefix numbers	Add a prefix to phone number before dialing > Select an entry → ☞
Int'l dial assist	Add international dialing prefix > Select a country/region → ☞
Character size	Toggle font sizes
Add to Phone Book	Save number to Phone Book (☞ P.4-5)
Ring time¹	Show ring time (missed calls)
Add shortcut icon	Create a shortcut (☞ P.1-25)
Compose message	Create a message (☞ From Step 4 on P.14-4)
Compose SMS²	Create SMS (☞ From Step 4 on P.14-7)
Received address/Sent address	Show Received/Sent address log
Delete this/ Delete selected/ Delete all	> Delete record(s) in selected list

¹ Available only for Incoming Call Logs

² Message can be sent to SoftBank handsets only

Answer Phone/Call Data


Answer Phone

Record up to five voice messages or up to two video messages (up to 20 seconds per message) on handset.

- When Answer Phone is active, - (Voice Call) or - (Video Call) appears in Standby.
- Unavailable when: handset is off or in Offline Mode; appears. Use Voice Mail (P.2-18).

Activating/Canceling Answer Phone

- 1 Press and hold
 - To toggle settings, repeat operation.

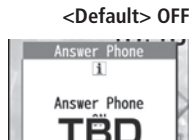

Redirect a Call to Answer Phone

- > [Ans. Ph] or

Note

- Alternatively, activate/cancel from **Main Menu** ▶ **Tools** ▶ **Sound Recorders** ▶ **Answer Phone Setting** ▶ **ON** or **OFF**
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.
- While Manner Mode (set for User Mode) is active, Answer Phone setting for User Mode (P.18-7) is prioritized.

Playing Messages

When a new message is recorded, Event Indicator appears (P.1-24) in Standby.



- 1 Select indicator
- 2 Select a message
Playback starts.
After playback ends, indicator disappears.


Note

- Alternatively, press in Standby (for Voice Call messages) or **Main Menu** ▶ **Tools** ▶ **Sound Recorders** ▶ **Voice Call Data** or **Video Call Data** ▶ Select a recording



Call Data

- Record one Voice Call (up to three minutes).
- Record up to five Video Calls (up to 20 seconds per message).

Recording Calls

- 1 During a call, press and hold  Recording starts.
- 2 To end recording,  [Stop] or press and hold 

Note

- Alternatively, record a Voice Call by following the steps:  [Rec] to start and  to end

Checking Call Data

Main Menu ► Tools ► Sound Recorders

- 1 **Voice Calls**
Voice Call Data → *Call Data*
- 2 **Video Calls**
Video Call Data → Select a recording
Playback starts.

Answer Phone/Call Data Functions


From ► Main Menu ► Tools ► Sound Recorders

Select Answer Message/Set Ring Time

> *Answer Phone Setting* → *ON* → Select an outgoing message → Enter ring time

- When Answer Phone and an Optional Service (Voice Mail or Call Forwarding) are both active, function with shorter ring time takes priority. For example, if Answer Phone ring time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first (Priority may change due to signal conditions.).
- Regardless of priority setting, Call Forwarding or Voice Mail takes priority when Answer Phone has reached maximum number of messages.

Delete Recorded Call Data

> *Voice Call Data* or *Video Call Data* → (Highlight an item) →  [Menu] → *Erase this, Erase rec. msg., Erase Call Data** or *Erase all* → *YES*

* *Video Call Data* only

Optional Services

Overview

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Call Forwarding (☞ P.2-17)	Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.
Voice Mail (☞ P.2-18)	Unanswered calls are forwarded to Voice Mail Center as set or when handset is off, out-of-range, engaged, etc. <ul style="list-style-type: none"> Missed Call Notification (☞ P.2-19)
Call Waiting* (☞ P.2-20)	Place the current call on hold and answer a second, or alternate between calls.
Call Barring (☞ P.2-20)	Restrict incoming/outgoing Voice Calls/Video Calls and SMS messages.
Caller ID (☞ P.2-21)	Show or hide your number when calling.

* Separate subscription required.

Call Forwarding

- Call Forwarding and Voice Mail cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ► **Settings** ► **Call Settings**
► **Voice Mail/Call Fwding** ► **Call Forwarding ON**

- Select a type
- Enter a destination phone number
 - ☑ to select number from Phone Book.
- Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



Check Call Forwarding Status

> **Main Menu** ► **Settings** ► **Call Settings** ► **Voice Mail/Call Fwding**
► **Get Status**

■ Cancel Call Forwarding

> **Main Menu** ► **Settings** ► **Call Settings** ► **Voice Mail/Call Fwding**
 ► **Deactivate All** ► **YES**

Note

- Toll free numbers and international call numbers cannot be saved as a destination number.
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When **Ringer ON** is set, following operations are available while handset is ringing (within ring time):
 - To answer call: 
 - To forward call:  [Menu] → **Call Forwarding**

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function; Call Forwarding and Voice Mail cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

Main Menu ► **Settings** ► **Call Settings**
 ► **Voice Mail/Call Fwding** ► **Voice Mail ON**

1 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



■ Check Voice Mail Status

> **Main Menu** ► **Settings** ► **Call Settings** ► **Voice Mail/Call Fwding**
 ► **Get Status**



■ Cancel Voice Mail

> **Main Menu** ► **Settings** ► **Call Settings** ► **Voice Mail/Call Fwding**
 ► **Deactivate All** ► **YES**


Note

- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When **Ringer ON** is set, following operations are available while handset is ringing (within ring time):
 - To answer call: 
 - To forward call: [Menu] → *Call Forwarding*

Checking Voice Mail Messages

Event Indicator ( P.1-24) and  appear in Standby when new messages are recorded.

1  → Select indicator → **YES**

- Follow voice guidance.
- Indicator and  disappear after messages are checked.



■ View Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate Missed Call Notification beforehand ( Right).
-  → **Voice Mail Notif.** →   

■ Delete Indicator

> **Main Menu** ▶ **Settings** ▶ **Call Settings** ▶ **Voice Mail/Call Fwding**
▶ **Delete Voice Mail Icon** ▶ **YES**

Note

- Alternatively, follow these steps to check Voice Mail:
Main Menu ▶ **Settings** ▶ **Call Settings**
▶ **Voice Mail/Call Fwding** ▶ **Listen to Voice Mail** ▶ **YES**

Missed Call Notification

When Missed Call Notification function is active, Event Indicator appears for calls missed while handset was off, out-of range, engaged etc.

- Available only when Voice Mail is active.

Main Menu ▶ **Settings** ▶ **Call Settings** ▶ **Missed Call Notifi.**


1 **YES**

Handset connects to the Network.

- Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Event Indicator appears for missed calls when handset is turned on or comes into range. Select indicator to view Missed Calls.

- **Voice mail** indicator appears when Voice Mail messages are recorded ( Left).



Call Waiting

Activating/Canceling Call Waiting

Main Menu ► Settings ► Call Settings ► Call Waiting

1 **Activate** or **Deactivate** → YES




Current status appears.

■ Check Call Waiting Status

> Main Menu ► Settings ► Call Settings ► Call Waiting
► Get Status

Answering Second Call

1 When tone sounds,

- Press  to alternate between calls.
- Press  to disconnect active call.
- When the party hangs up, active call ends.
- Press  to re-engage the party on hold.
- When a second call comes in while first call is on hold, hold status is canceled and first call resumes.


■ Reject Second Call

> When tone sounds,  [Menu] → Call Rejection

Note

- When Voice Mail or Call Forwarding is set to **Ringer ON** while Call Waiting is active, unanswered calls are transferred to Voice Mail Center or the forwarding number.
- When Voice Mail or Call Forwarding is set to **Ringer OFF**, Call Waiting is disabled.

Call Barring

- **Bar All Outgoing** and **Bar All Incoming** are not available when Call Forwarding or Voice Mail is active (Call Forwarding or Voice Mail takes priority).
- Security Code is required ( P.1-32).

Activating/Deactivating Call Barring

Main Menu ► Settings ► Call Settings ► Call Barring

1 Select an item (See below)

Item	Operation/Description
Bar All Outgoing	Restrict all non-emergency calls
Bar All Int'l	Allow only domestic calls
Bar Int'l	Restrict all international calls except to Japan
Bar All Incoming	Reject all calls
Bar All Roaming	Reject calls when outside Japan

2 *Activate or Deactivate* → YES

3 Enter Security Code

■ Check Call Barring Status

> After Step 1, *Get Status*

■ Cancel All Call Barring

> In Step 1, *Cancel All Barring* → Enter Security Code

■ Change Security Code

> In Step 1, *Set Security Code* → Enter current Security Code → Enter new Security Code → Reenter Security Code

Note

- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set

Main Menu ► Settings ► Call Settings

► Show My Number ► Activate

1 *ON, OFF* or *Network Set*

- *Network Set* Caller ID setting varies by subscription.

■ Check Caller ID Status

> Main Menu ► Settings ► Call Settings ► Show My Number

► Check Setting

Note

- Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: (1) (8) (6) or (*) (3) (1) (#)

Hide: (1) (8) (4) or (#) (3) (1) (#)

2

Call

2-22

Text Entry

- Text Entry..... 3-2**
- Entering Text..... 3-3**
 - Entering Characters3-3
 - Pictographs & Symbols3-4
 - Smileys.....3-5
 - Templates.....3-6
 - Additional Features.....3-6
- Conversion Methods (Japanese)..... 3-7**
 - Predictive Conversion3-7
 - Converting Hiragana to Katakana/Alphanumerics.....3-9
 - Narrowing Down Predictive Candidates by Number of Characters...3-9
- Editing Text..... 3-10**
 - Deleting & Replacing3-10
 - Copy/Cut/Paste.....3-10
- User's Dictionary 3-11**
 - Saving User's Dictionary Entries3-11
- Download Dictionary..... 3-11**
 - Activating Downloaded Dictionaries.....3-11

Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

- Three types of character input methods are available: Mode 1 (5-touch), Mode 2 (2-touch), Mode 3 (NIKO-touch)
- In this guide, examples are described in Mode 1 (5-touch).

Mode 2 (2-touch)/Mode 3 (NIKO-touch)


Press two numeric keys to enter a character.

- List of Key Assignments (☞ P.19-15 to 17)

Help

Help describes text entry operations.

☞ In text entry window, [Menu] → **Help** → Select an item

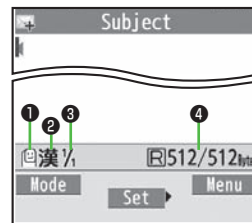

① Character Input Methods	Operations
2 : Mode 2 (2-touch) 3 : Mode 3 (NIKO-touch) <ul style="list-style-type: none"> • No icon appears for Mode 1 (5-touch). 	Press and hold [Mode]
② Input Modes*	Operations
abc : Alphanumerics 123 : Numbers 漢 : Kanji (hiragana) か : Katakana	[Mode]
③ Double-byte/Single-byte*	Operations
1/1 : Double-byte 1/2 : Single-byte	[Menu] → <i>2bytes character</i> <i>(1byte character)</i>
④ Remaining/Maximum Bytes in Message	

* Operations in Mode 3 (NIKO-touch): ☞ P.19-17

Entering Text

Entering Characters

Example: Enter 鈴木

1 In alphanumeric mode, twice to switch to kanji (hiragana) mode

す: three times

ず: * → three times → *

き: twice

* When the next character is on the same key, press first to move cursor.



2 to enter Predictive Candidates List

- To change word before converting, press .

- There are four types of word suggestion lists: **Predictive Candidates**, **Conversion Candidates**, **Context Forecast** and **abc/123/Kana Candidates** (P.3-7)



3 to select 鈴木

Other Input Functions

Enter katakana/ alphanumerics	[Mode] to cycle input modes → Enter characters
Enter small kana (つ, っ, etc.)	Enter a character → to convert to small character ● Alternatively, press a key repeatedly to enter an assigned small kana.
Enter upper case characters	Enter a character → ● Alternatively, press a key repeatedly to enter an assigned upper case character.
Add ° or °	Enter a character to add ° or ° → for ° or twice for ° ● In single-byte katakana mode, ° and ° are entered as a single-byte character.
Insert line break	[Line FD] to insert line breaks in text
Insert space at end of text	
Insert space within text	repeatedly until single-byte space appears*, or [Menu] → <i>Pictograms/ symbols</i> → <i>Space</i> to enter a space (Double-byte (single-byte) space is entered in 2 bytes (1 byte) input mode.)
Toggle characters in reverse order	[Rev] Example: From c, press to toggle as follows: c → b → a → 2...
Move cursor to beginning/ end of sentence	[Menu] → <i>Jump</i> → <i>To beginning</i> or <i>To end</i>
Undo	[Undo]

* Space cannot be entered within text in number mode by following the steps above. Use symbol list.

Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
- Symbol List: P.19-18

1 Open Pictograph List

In text entry window,


Open Symbol List

In text entry window, press and hold


in pictograph list

List Log may appear first.

Pictograph List Number

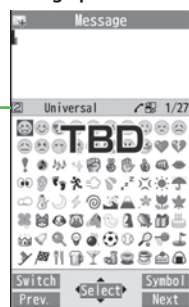

Symbol List Number

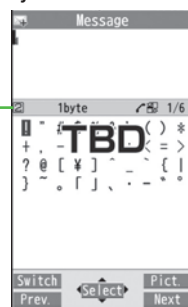

- Functions Available in Pictograph/Symbol List (P.3-5)


2 to select a pictograph or symbol

Pictograph/Symbol List Log







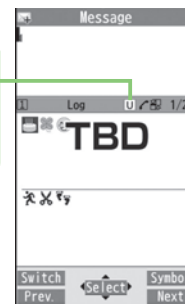



- In Symbol Log, single-byte symbols appear in upper half of window; double-byte symbols in lower half.
- In List Log, pictographs appear in upper half of window; My Pictograms in lower half (only in S! Mail text entry window).

Pictograph Indicators

- Universal (cross-carrier) pictographs
- All pictographs
- My Pictograms

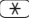

■ Functions Available in Pictograph/Symbol List

Toggle pictograph lists	In pictograph list,  [Switch] <ul style="list-style-type: none"> ● Toggle lists: (Log →) Universal pictographs¹ → Full pictographs → My Pictograms² ● Alternatively, press key corresponding to Pictograph List number (1-9, 0) for direct access³.
Toggle symbol lists	In symbol list,  [Switch] <ul style="list-style-type: none"> ● Toggle lists: (Log →) Single-byte symbols → Double-byte symbols ● Alternatively, press key corresponding to Symbol List number (1-3) for direct access³.
Jump to next page	In pictograph/symbol list,  [Next]
Jump to previous page	In pictograph/symbol list,  [Prev.]
Toggle pictograph/symbol list	In pictograph,  /  [Symbol] In symbol list,  /  [Pict.]
Toggle full screen/standard screen	
Close list	

¹ In messages only




² In S! Mail Text field only

³ Log (List Number 1) does not appear if any symbols/pictographs are not entered.

Note

- In number mode, open pictograph list by  [Menu] → *Pictograms/symbols* → *Pictograms*

Smileys

- 1 In text entry window,  [Menu] → *Pictograms/symbols* → *Smiley*
- 2 Select a smiley
 - To show next/previous page:  [Next]/ [Prev.]

Templates

Insert templates (greetings, URLs, emoticons) or edit preinstalled templates.

Inserting Templates

- 1 In text entry window, press and hold
 - Not available in number mode.
- 2 Select a category → Select a template

Note

- Alternatively, in a text entry window, [Menu] → *Input assistance* → *Templates* to enter a template

Editing Templates

Main Menu ► Tools ► Templates/Users Dic. ► Templates

- 1 Select a category
- 2 Highlight a template → [Edit] → Edit template

■ Reset Edited Templates

> After Step 1, (highlight a template →) [Menu] → *Reset this* or *Reset all* (→ For *Reset all*, enter Phone Password) → *YES*

■ Manage Template Folders

- > In Step 1, highlight a category → [Menu] → *Edit folder name* → Edit folder name
- To reset folder name, [Menu] → *Reset name* → *YES*

Additional Features

- 1 In text entry window, [Menu] → *Input assistance*
- 2 Select an item (See below)

Item	Operation/Description
Kuten code	Enter a character code (P.19-19) > Enter a character code (4 digits)
Input date/time	Select a style to enter date/time > Select a display style → Enter date/time
Quote phone book	Quote Phone Book entry detail > Select an entry → Check item(s) to quote → [Finish]
Quote acct detls	Quote Account Details > Enter Phone Password → Check item(s) to quote → [Finish]
Bar code reader	Activate Bar Code Reader to insert scanned result (P.13-15)

Conversion Methods (Japanese)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

Before Entering Text*	Predictive Candidates (Pre-text Predict)	Suggests salutations/opening words Example: こんにちは, お疲れさま, etc.
While Entering Text	Predictive Candidates	Lists likely conversions and matching conversions. Likely Conversions: わ → 私, わたし, etc. Matching Conversions: わ → 和, 輪, etc.
	Conversion Candidates	Suggests only matching conversions Example: わ → 和, 輪, etc.
	abc/123/Kana Candidates	Lists alphanumeric/katakana assigned to key (👉 P.3-9)
After a Word is Fixed	Context Forecast	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.

* Available when you open Message Text window or cursor is at top of Text window. Note that handset Language must be set to **日本語**.

- Predictions change with each letter entered.
- Press [📧][Pred.]/[Conv.] to toggle Predictive Candidates List and Conversion Candidates List.

Predictive Candidates

- Time Season Predict function suggests words appropriate for current season and time.
- Set word suggestions for formal or informal words (👉 P.18-12).

Note









- 942P learns entered characters and suggests them for future conversions (👉 P.18-11).



Tip

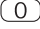

Settings


- Disable Learning for Secret Mode/Secret Data Only
- Reset Learned Words ● View Learned Words ● Hide Predictive Candidates and Context Forecast Lists ● Hide Context Forecast List
- Fix Entered Characters Automatically (👉 P.18-11)
- Deactivate Pre-text Predict ● Deactivate Time Season Predict
- Activate Text Expression (👉 P.18-12)

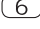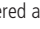
Example: Enter 私の鼻

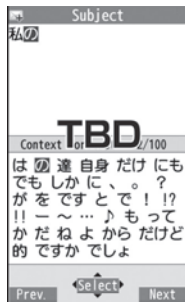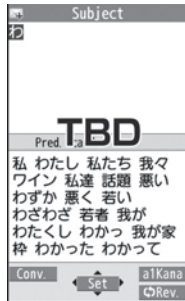- 1 In kanji (hiragana) mode,  わ is entered and Predictive Candidates List appears.
- 2  to move to Predictive Candidates List →  to select 私
私 is entered and Context Forecast List appears.
- 3  to move to Context Forecast List →  to select の
の is entered and Context Forecast List appears.
- 4  →  はな is entered and Predictive Candidates List appears.
- 5  [Conv.]
Conversion Candidates List appears.



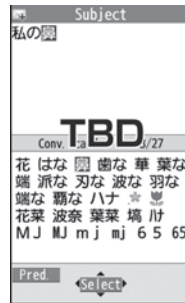

- 6  to move to Conversion Candidates List →  to select 鼻

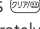**If the Word is Not Listed**

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to ら, then convert はる to 春 → 
- ② Convert か to 香 → 





Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Converting Hiragana to Katakana/ Alphanumerics







Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	 (3 times)	 (twice)	 [a1Kana]	
Display	ふ	ふに	abc/123/Kana Candidates	OK

- Highlight OK and press .

Example 2: Enter 10/30, 10:30 or 10月30日


Step	1	2	3
Key	   	 [a1Kana]	
Display	あわさわ	abc/123/Kana Candidates	10/30 10:30 or 10月30日

- Highlight a suggestion and press .

Narrowing Down Predictive Candidates by Number of Characters



In kanji (hiragana) mode, narrow down Predictive Candidates by specifying minimum number of characters.


Example: Suggest words with a minimum of seven characters, starting with かさ.

1 Enter かさ → 

2  (five times)

Word suggestions of seven or more characters appear.


- Press  to change number of characters
- To show word suggestions of only seven characters:  [Change]

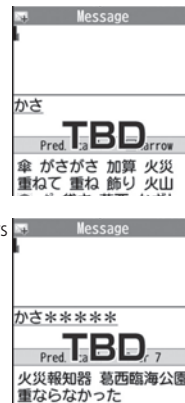

Editing Text

Deleting & Replacing

1 Delete Characters within Lines

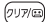Place cursor before a character → 

A character after cursor is deleted.

- Press and hold  to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text → 

A character before cursor is deleted.

- Press and hold  to delete all characters before cursor.

2 Enter another character

Copy/Cut/Paste

1 In text entry window,  [Menu] → *Copy* or *Cut*

2 Select Text to Copy/Cut


Place cursor before (or after) text to select →

 [Start] → Place cursor after (or before) text →

 [End]

Select All


 [All] →  [End]

3 Place cursor at target location →  [Menu] → *Paste*


User's Dictionary

Save frequently used words/phrases (up to 100 entries).
Saved words/phrases appear among word suggestions.


Saving User's Dictionary Entries

- 1 In text entry window,  [Menu] → *Text entry setting* → *User's Dictionary*
- 2 <New>
- 3 Enter a word → Enter reading

■ Edit User's Dictionary Entries

> After Step 1, highlight a word →  [Edit] → Edit word → Edit reading

■ Delete User's Dictionary Entries

> After Step 1,  [Menu] → *Delete* → *Delete this* or *Delete all*
(→ For *Delete all*, enter Phone Password) → *YES*

Note

- Alternatively, **Main Menu** ► **Tools** ► **Templates/Users Dic.** ► **User's Dictionary**

Download Dictionary


Download dictionaries from P-egg, a download site for 942P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).


- P-egg (as of December 2009)
Main Menu ► **Yahoo!** ► **Bookmarks** ► **Panasonic Site (P-egg)**


Activating Downloaded Dictionaries

Main Menu ► **Tools** ► **Templates/Users Dic.** ► **Download Dictionary**

- 1 Select a dictionary
 - ★ appears for active dictionary.
 - To cancel: follow the same step
- **Change Title**

> In Step 1, highlight a dictionary →  [Menu] → *Edit title* → Edit
- **View Details**

> In Step 1, highlight a dictionary →  [Menu] → *Dictionary info*
- **Delete Dictionaries**

> In Step 1, (highlight a dictionary) →  [Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

3

Text Entry


Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items.....	4-3
Create New Entry	4-3
Other Ways to Add New Entries	4-5
Setting Groups	4-6
Searching/Using Phone Book.....	4-6
Making Calls from Phone Book.....	4-6
Using Phone Book.....	4-7
Managing Phone Book	4-9
Editing Phone Book Entries.....	4-9
Deleting Phone Book Entries.....	4-9
Copying/Deleting Phone Book Data	4-9
Phone Book Memory Status.....	4-9
S! Addressbook Back-up.....	4-10
Manual Synchronization	4-11
Auto Synchronization.....	4-11
Viewing Sync Log	4-11
Account Details	4-12
Editing Account Details.....	4-12
Account Details Functions.....	4-12
Voice Dial.....	4-13
Adding Entries to Voice Dial.....	4-13
Searching Entries by Voice Dial.....	4-13

Overview

Save frequently used phone numbers and mail addresses to Phone Book.


Supplement phone numbers and mail addresses with birthday, street address, an image or notes.

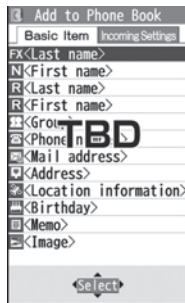

Set tones/image for each entry.



Sort entries into Groups.

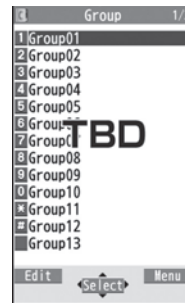

Note

● Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Tip

● Backing up to microSD Card (☞ P.10-21)

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in handset Phone Book; 50 entries to USIM Card Phone Book.

- Available entry items are as follows.

	Phone Book Entry Items	Handset	USIM Card
Basic Item	Name (Reading)	○	○
	Group	19	10
	Phone number	5	2
	Mail address	5	1
	Address	○	—
	Location information	○	—
	Birthday	○	—
	Memo	○	—
	Image	100	—
	Memory number	000 - 999	—
Incoming Settings	Ringtone	○	—
	Vibrator		
	Notification Light		
	Screen		
	Msg Ringtone		
	Msg Vibrator		
	Msg Notif. Light		
Answer message			

○: Can be saved —: Cannot be saved

- Phone Book entries in USIM Card can also be used in another SoftBank handset.

Create New Entry

Save new entries to handset or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set **Save Settings** to **USIM** or **Ask Every Time** beforehand (☞P.18-12).

- Press and hold
- Enter Last name →
Enter First name
 - For handset Phone Book, to switch Basic item and Incoming Settings tabs.



Handset Phone Book

- Select an item (See below)

Item	Operation/Description
Last name	Save last name. For USIM Card, enter both first name and last name together > Enter last name
First name	Save first name > Enter first name
Reading (Last/First)	Automatically entered when last/first name is entered. For USIM Card, both readings are entered together. > To change reading, edit

Item	Operation/Description
Group	Categorize/search entries by group > Select a group ● Change group names or set ringtones for individual groups (☞P.4-6).
Phone number	> Enter phone number (→ For handset, select an icon)
Mail address	> Enter mail address (→ For handset, select an icon) ● Save only phone number if mail address is "phone number@softbank.ne.jp".
Address	Save zip code, country/region, prefecture, city, number/street and additional information > Select an item → Enter each information → Home or Office → For entering other information, ☞[Return]
Location information	Identify handset location and save information. Also, save location record selected from location logs > Select an item · By position loc. → YES → Check information → ●[Set] (To show information while positioning: When [Use] appears at lower right of display, press ☞[OK]. To retry positioning: ☞[Retry]) · From loc. history → Select a location record to save
Birthday	> Enter birthday
Memo	> Enter memo






Item	Operation/Description
Image	Save a still image to appear for incoming calls > Select an item · Select image → Select a folder → Select a file · Shoot image → Frame subject → ●[Record]/○/○(☞) → ●[Save]/○/○(☞) ● Saved still image appears for an incoming call only when Phone Book Image (☞P.18-8) is ON . If there is an image saved for Screen (☞Below), the image preferentially appears.
Memory number	> Enter memory number
Ring tone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Vibrator	> Select vibrator → Select a pattern
Notification Light	> Select illumination → Select a pattern
Screen*	> SEL picture → Select a screen type → Select a folder → Select an image ● Saved still image appears for an incoming call whether Phone Book Image is ON or OFF . Phone Book Image setting applies only when still image is saved for Image .
Msg Ringtone	> Ring Tones → Select a type → Select a folder → Select a ringtone
Msg Vibrator	> Select vibrator → Select a pattern
Msg Notif. Light	> Select illumination → Select a pattern
Answer message	> Select answer message → Select a message

* To cancel: Select **RLS picture**


4  [Finish]**Other Ways to Add New Entries**

Save currently displayed phone numbers, mail addresses, still images or location information to Phone Book.

Example: Saving Numbers from Incoming Call Logs

- 1  → Highlight a record →  [Menu] → **Add to Phone Book**
- 2 **New Entry**
New → Enter details ( Step 3 on P.4-3)
Add to Existing Entry
Add → Select entry → Enter other details ( Step 3 on P.4-3)
 - When saving to USIM Card, **Overwrite** appears instead of **Add**.
- 3 When complete,  [Finish] (→ **YES**)


Note

- Press  [Menu] from a function. If **Add to Phone Book** appears, the information is savable to Phone Book. From a message window, select **Add Address** to save entries; from still image list/still image, select **Set display → Phone Book** to save entries.
- When saving new entries in Secret Mode or Secret Data Only, entries are saved to handset regardless of Save Settings.

Setting Groups

Sort entries by Group. Custom set ringtones/vibrators/notifications per group.

Main Menu ► Phone ► Group

-  appears for USIM Card Group.

- 1 Highlight a group →  [Edit] → Select an item → Set item
 - Enter group name for " Group name."
 - For other item operations:  P.4-3

- 2 When complete,  [Finish]

■ Check Settings

- > Select a group entry, or  [Menu] → *Check setting*
- Settings cannot be checked in USIM Card Group Phone Book.

■ Reset Group Setting

- > Highlight a group →  [Menu] → *Reset group* → YES



Note




- Custom settings unavailable for USIM Card Groups.
- Individually set ringtones are prioritized over those set for groups.

Searching/Using Phone Book

Making Calls from Phone Book

<Default> A-KA-SA-TA-NA/Reading

- 1 
- 2 Search Phone Book (See below)
 - To change search method:  → Select a search method (See below)

Search Method	Operation/Description
A-KA-SA-TA-NA/Reading	Search entries by katakana syllabary. Names saved in Roman characters are saved under the 英 tab. > Highlight a reading page ● Alternatively, enter partial reading
Group	> Select a group
Memory Number*	Enter memory (entry) number to search for an entry > Enter a memory number
Name	> Enter partial name → 
Phone Number	> Enter partial phone number → 
Mail Address	> Enter partial mail address → 
2-touch Dial*	Show entries with memory (entry) numbers 000 - 009

* Handset Phone Book only

- 3 Select an entry
- 4 

5 Voice Calls

Highlight a phone number →

Video Calls

Highlight a phone number → [V. Call]

Note

- To scroll through entries, enter nothing and press (not available in **Group** or **2-touch Dial**).
- If no matches are found in **A-KA-SA-TA-NA/Reading** or **Memory Number** method, entries closest to condition appear.
- Once a method is selected, same method retains.

Additional Search/Dialing Methods

Open Tab Assigned to Key from Standby	Press and hold – Open search window assigned to key.
Enter Partial Number from Standby or during Call	Enter partial number →
By Memory Number	→ → Enter a memory number
By Single-digit Memory Number (2-touch Dial)	Enter last digit (–) of memory number 000-009 → Voice Call: /Video Call: [V. Call]

Using Phone Book

Use Phone Book Entries

> → Highlight an entry → [Menu] → Select an item
(See below)


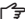

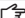

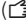

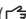
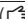
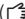
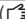
Item	Operation/Description
New	Add a new entry (From Step 2 on P.4-3)
Sort¹	Change display order > Select an order
Send Ir data²	(P.11-3)
IC transmission²	(P.11-5)
Send to Bluetooth²	(P.11-9)
Copy to microSD²	Copy an entry to microSD Card > YES ● To view copied data: P.10-20
S! AB BkUp	(P.4-10)
Delete phone book	> Select an item → Follow steps for selected option (P.4-9)
Character size	Switch character size to large/standard
Set secret mode/Release secret²	Set/cancel Secret Mode for selected entry ● Entries saved as secret data appear only when Secret Mode or Secret Data Only is active (P.12-10).


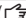
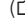
¹ Available only when search method (P.4-6) is set to **Name**, **Phone Number** or **Mail Address**

² Not available in USIM Card Phone Book

■ Use Entry Details


>  → Select an entry →  [Menu] → Select an item (See below)

Item	Operation/Description
Notify caller ID	Show/hide caller ID ( P.2-3)
Prefix numbers	Make a call using a prefix number ( P.2-3)
Int'l dial assist	Make an international call using Int'l Dial Assist > Select a country/region code → 
Restrictions*	Activate restrictions on specified entry ( P.12-12)
Edit Phone Book	Edit entry ( From Step 3 on P.4-3)
Delete phone book	> Phone number or Delete this → YES ● Item names vary by selected item: Mail address/Address/Location info/Birthday/Memo/Image
Add shortcut icon	Create a shortcut ( P.1-25)
Compose message	Create a message to mail address of selected entry ( From Step 4 on P.14-4)
Compose SMS	Create an SMS message to phone number of selected entry ( From Step 4 on P.14-7) ● Message can be sent to SoftBank handsets only.
Send Ir data*	 P.11-3)
IC transmission*	 P.11-5)
Send to Bluetooth*	 P.11-9)

Item	Operation/Description
Copy to microSD*	Copy an entry to microSD Card > YES ● To display copied data:  P.10-20
S! AB BkUp	( P.4-10)
Copy names	Copy a name
Copy phone numbers	Copy an item ● Item names vary by selected item. Copy mail add./Copy address/Copy location info/Copy birthday/Copy memo
Character size	Switch character size to large/standard
Set secret mode/Release secret*	Set/cancel Secret Mode for selected entry ● Entries saved as secret data appear only when Secret Mode or Secret Data Only is active ( P.12-10).
Copy to USIM/ Copy from USIM	Copy an entry to USIM Card > YES



 
* Not available in USIM Card Phone Book

Note


- Insert entry details to a message ( P.3-6).

Managing Phone Book


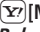
Editing Phone Book Entries

- 1  → Select an entry →  [Edit]
- 2 Edit ( From Step 3 on P.4-3) → **YES**

Deleting Phone Book Entries

- 1  → Highlight an entry →  [Menu] → **Delete phone book**

- 2 Select an item (See below)

Item	Operation/Description
Delete this	> YES
Delete select	> Check entries to delete →  [Finish] → YES <ul style="list-style-type: none"> •  [Menu] → Select all in tab*, Select all, Release all in tab* or Release all to check/uncheck all entries at a time
Delete all in tab*	> YES
Delete all	Delete all entries (handset/USIM Card Phone Book) including Secret Mode entries > Enter Phone Password → YES → YES

* Available in **A-KA-SA-TA-NA/Reading, Group** and **Memory Number** search methods ( P.4-6)

Copying/Deleting Phone Book Data

Main Menu ► Phone ► Memory Manager

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Copy	Copy data between handset/USIM Card Phone Book > Copy to USIM or Copy from USIM
Delete	Delete data in handset/USIM Card Phone Book > Phone or USIM

- 3 **Phone Book** → Select an entry*
 * To clear, repeat operation.

- 4  [Finish] → **YES**

Phone Book Memory Status

Main Menu ► Phone ► Memory Status

View handset/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize handset Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

- Separate subscription is required for this service.

Notes

- Fully charge battery beforehand (🔋 appears).
- Transmission fees apply to synchronization, backup and restoration.
- **Restore** cancels these Phone Book settings:
Ringtone, Vibrator, Notification Light, Picture, Answer message.
- Subscription to the service activates Auto Sync Settings during network information retrieval to back up edited Phone Book entries. Note that initiating network information retrieval activates Auto Sync Settings even when Auto Sync Settings are **OFF**. When contract is terminated, check if Auto Sync Settings are **OFF** (☞ P.4-11).
- **S! Addressbook is deleted upon contract termination.**
- **Addresses saved in Address field on handset Phone Book are saved to building name field in S! Addressbook.**
- **When number of characters saved in S! Addressbook exceeds maximum number of characters savable on handset Phone Book, excess characters do not appear on handset Phone Book.**

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no handset Phone Book entries exist, executing regular update or selecting **Sync from Client** or **Backup** deletes S! Addressbook.
- When no S! Addressbook entries exist, executing regular update or selecting **Sync from Server** or **Restore** deletes all handset Phone Book entries.

Capacity Disparities

- When the number of savable items varies between handset Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Regular Update

Update S! Addressbook and handset Phone Book after adding/editing entries.

Main Menu ► Phone ► S! Addressbook BkUp

1 Start Sync

Selecting Sync Type

Main Menu ► Phone ► S! Addressbook BkUp ► Details
► Backup/Restore

1 Select an item (See below)

Item	Operation/Description
Sync from Client	Send data changed in handset Phone Book to S! Addressbook
Backup	Delete all S! Addressbook entries and save handset Phone Book to S! Addressbook
Sync from Server	Send data changed in S! Addressbook to handset Phone Book
Restore	Delete all handset Phone Book entries and save S! Addressbook to handset Phone Book

2 YES

Auto Synchronization

Main Menu ► Phone ► S! Addressbook BkUp ► Details
► Auto Sync Settings

1 ON

- To cancel, select **OFF**

2 Select an item (See below)

Item	Operation/Description
Every month	Synchronize monthly at specified time of the date > Enter a date → Set start time
Every week	Synchronize weekly at specified time of the day > Select a day → Enter start time
After Editing PB	Synchronize ten minutes after editing

3 Select a Sync Type → YES

■ View Auto Sync Settings

> In Step 1, **Confirm Settings**

Viewing Sync Log

Main Menu ► Phone ► S! Addressbook BkUp ► Details
► Sync Log

1 Select a log

■ Delete Sync Log

> In Step 1, (highlight a log →) [Y] [Menu] → **Delete this** or **Delete all**
(→ For **Delete all**, enter Phone Password) → YES

Account Details

Save phone number, mail address, street address, etc. in Account Details.

Editing Account Details

- 1 →
- 2 [Edit]
- 3 Enter Phone Password → Edit → [Finish]
 - Your subscribing phone number cannot be edited or deleted.

Account Details Functions

In Account Details, press [Menu] for following operations.

Item	Operation/Description
Edit*	Edit Account Details (From Step 3 above)
Character size	Switch character size to large/standard
Display all data*	View all saved items such as phone numbers and mail addresses
Copy names	Copy a name
Copy phone numbers	Copy an item <ul style="list-style-type: none"> ● Item names vary by selected item. <i>Copy mail add./Copy address/Copy birthday/ Copy notepad</i>

Item	Operation/Description
Send Ir data	Send details via Infrared (P.11-3) <ul style="list-style-type: none"> ● Alternatively, while Account Details is open, press [Ir].
IC transmission	Send details via IC transmission (P.11-5) <ul style="list-style-type: none"> ● Alternatively, while Account Details is open, press [ICtrans].
Copy to microSD	Copy details to microSD Card <ul style="list-style-type: none"> > YES ● To display copied data: P.10-20 ● Account Details is saved as a Phone Book entry.
Erase phone number*	> Select an item → YES <ul style="list-style-type: none"> ● Delete items saved in Account Details ● Item names vary by selected item. <i>Erase mail add./Erase address/Erase birthday/ Erase memorandums/Delete image</i>
Reset*	Reset Account Details (handset number remains) <ul style="list-style-type: none"> > YES

* Enter Phone Password if required.

Note

- Insert Account Details information to a message (P.3-6).

Voice Dial

Make a call by saying a voice dial name.

Note

- Keep microphone about 10 cm away from your mouth, and pronounce a Voice Dial name clearly. If microphone is too distant, your voice may not be recognized.
- Avoid making sounds unrelated to Voice Dial names (clearing your throat, clicking your tongue, heavy breathing, etc.).
- Say Voice Dial names in quiet places.
- Avoid pressing or brushing keys, or covering microphone with fingers when pronouncing a Voice Dial name.

Adding Entries to Voice Dial

Main Menu ▶ Phone ▶ Settings ▶ Voice Dial

1 <New> → Select a Phone Book entry
Entries with ★ are already saved in Voice Dial list.

2 Enter a Voice Dial name
● Only katakana entry is available for Voice Dial names.

Edit Voice Dial Names

➤ In Step 1, highlight a Voice Dial name → [Edit] → Edit name → YES

Delete Voice Dial Entries

➤ In Step 1, (highlight a Voice Dial name →) [Menu] → Delete this or Delete all → YES

Searching Entries by Voice Dial

1 Press and hold [Voice Dial] → Say a Voice Dial name
Say the name within four seconds after voice recognition tone sounds. Once Voice Dial is recognized, result appears.

2 [Detail] → [Phone Number] to show phone number

3 Voice Calls
Highlight phone number → [Voice Call]

Video Calls

Highlight phone number → [V. Call]

Tip

Settings

● Activate Voice Dial Automatically ● Activate Voice Dial via Earphone or Bluetooth® Device (P.18-12)

4

Phone Book

Digital TV

- Basics..... 5-2**
- Initial Setup 5-4**
 - Channel Settings5-4
- Watching TV 5-5**
 - Indicators 5-6
 - Program List (Japanese) 5-7
 - Data Broadcast (Japanese).....5-7
 - Functions while Viewing TV..... 5-7
- TV Links (Japanese) 5-10**
 - Saving TV Links 5-10
 - Opening TV Links..... 5-10
 - Functions Available in TV Link List 5-10
- Recording/Playing Programs 5-11**
 - Recording Current Program..... 5-11
 - Capturing Screenshots..... 5-11
 - Playing Recorded Programs..... 5-12
 - Viewing Captured Screenshots..... 5-13
 - Timer..... 5-13

Basics

942P supports One Seg terrestrial digital TV broadcasting.

One Seg

One Seg is a digital TV broadcasting service for mobile phones. For more information, visit The Association for Promotion of Digital Broadcasting Website:

[PC] <http://www.dpa.or.jp/>

[Handset] <http://www.dpa.or.jp/1seg/k/>

(Japanese only)

Features

Watch TV Programs (☞ P.5-5)	Watch One Seg Digital TV on handset.
View Data Broadcast (☞ P.5-7)	Access a variety of program-related information.
Record TV Programs (☞ P.5-11)	Record program/capture still image while watching the program.
Set Timer (☞ P.5-13)	Use Timer to view/record programs. You can easily set Timer by using Program List (☞ P.5-7).

Mobile W-Speed

Frame rate of Digital TV images are automatically enhanced. Enjoy smooth image flow (☞ P.18-15).

- Mobile W-Speed is set to **ON** by default.
- When this function is set to **ON**, full effect of **Image Quality** may not be achieved.
- Depending on broadcasting condition, full effect of this function may not be achieved.
- Disabled during ECO Mode (☞ P.18-15) or AV output (☞ P.11-18).
- Disabled for playing back videos recorded with Mobile W-Speed set to **ON**.

Tip

- Use Other Functions while Viewing TV (☞ P.5-8)

Precautions

- Digital TV is available only in Japan.
- Incoming calls/messages may affect TV image or audio quality while TV is activated.
- Digital TV may be disabled if USIM Card is not installed or SoftBank subscription is terminated.
- SoftBank is not liable for damages from accidental loss/alteration of handset/microSD Card information.
Data saved to handset (TV Links, Channel List, etc.) cannot be restored after repairs or handset replacement. Back up important information.

Signal Reception Areas

TV signal reception may be poor in the following conditions:

- Too far from or close to broadcasting stations.
- Mountain areas or near tall buildings.
- In moving vehicles, underground, in tunnels, etc.
- Near high-voltage wires, neon lights, wireless base stations, railroad tracks or highways.
- Areas with numerous signal obstructions or areas where signal reception is blocked.

When Battery is Running Out

- Warning tone sounds and warning message appears if Digital TV is activated with low battery.
- When battery runs low while programs are on or being recorded, handset operates as follows:

- While Viewing
Warning tone sounds, and confirmation appears.
- While Recording

Response differs depending on **Rec. When Low Battery** (P.18-15) setting.

Continue Recording ... Warning tone does not sound and confirmation does not appear.

Stop Recording ... Warning tone sounds and confirmation appears.

- Watching TV while charging may shorten battery life.
- If recording ends due to low battery, recorded portion is automatically saved.

Incoming Transmissions

TV pauses for incoming calls. Resume TV after call ends.

- Incoming calls do not interfere with recording.

Incoming Messages

Notification Light flashes for incoming messages while TV is active or recording is in progress. Ticker also appears in Display.


While ticker appears, press [Message] to view messages. TV sound plays in background while viewing messages. Press [Back] to return to previous window.

- Show or hide ticker (Mail Ticker Display: P.18-15).
- When ticker is set to Off, TV pauses, incoming message window appears and ringtone sounds. Set Receiving Display (P.18-22) to **Operation Preferred** to notify of incoming messages only with [Message].


TV Antenna

Extend TV Antenna for optimal viewing.

- Adjust TV Antenna direction to optimize signal reception.
- Retract TV Antenna after viewing Digital TV.

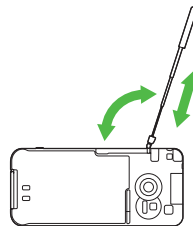

Pull out completely

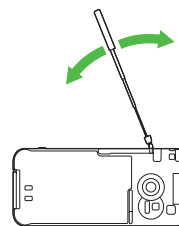

Rotate without force

Initial Setup

Set channels for your area.

- Up to ten Channel Lists can be saved.
- Set channels after extending TV Antenna.

Main Menu ▶ TV ▶ Channel Setting ▶ Select Area

- 1 Select a region → Select a prefecture
- 2 **YES**

Note

- If manual setup fails, try automatic channel setup (👉 Below).
- Handset detects a change in reception area after moving to a different area. Set Channel List for that area.

Channel Settings

Automatic Channel Setup

Main Menu ▶ TV ▶ Channel Setting ▶ Automatic

- 1 **YES**
- 2 After channel search, **YES** → Enter title
 - If title is not entered, date (year/month/day/hour/minute) is automatically saved as title.


Using Channel List

From ▶ Main Menu ▶ TV ▶ Channel List

■ Set Channels

- > Select a Channel List
- Channel List is set, and available channels appear.
- Select a channel to access the station.


■ Delete Channel List

- > Highlight a Channel List →  [Menu] → *Delete* → **YES**
- Selected Channel List cannot be deleted.




■ Delete Channels from Channel List

- > Highlight a Channel List →  [Detail] → Highlight a channel →  [Menu] → *Delete* → **YES**
- Channels in selected Channel List cannot be deleted.

■ Edit Title

- > Highlight a Channel List →  [Menu] → *Edit title* → Edit

■ Reassign a Remote Control Number (Keypad) to a Channel

- > Highlight a Channel List →  [Detail] →  [Menu] → *Remote control #* → Select a channel → Select a new remote control number →  [Finish] → **YES**

Watching TV

- Set channels beforehand (☞ P.5-4).
- Switch Normal Position/Horizontal Open Position for portrait/landscape view while viewing TV.





1 

Viewer appears.



Viewer

2 Select a channel

Direct Channel Access	(1) - (9) (*)(Channel 10) (0)(Channel 11) #(Channel 12)
Previous/Next Channel	
Channel Search	Press and hold  ● To stop:  [Cancel] / 

3 To end TV,  → **End TV**

- To play TV sound in the background:  → **Change to BGM**

Switch Landscape/Portrait View in Normal Position



- Press to toggle views.

Note

- Alternatively, **Main Menu** ► **TV** ► **Watch TV**
- Set Digital TV to activate upon opening handset to Horizontal Open Position (Horizontal View: ☞ P.18-14)

Tip



- Use Bluetooth® Device for Listening to Music (☞ P.11-10)
- View handset TV images on a TV set (☞ P.11-18)

Indicators

- Screenshots are provided for reference only.
Actual handset windows differ in appearance.

5

Digital TV

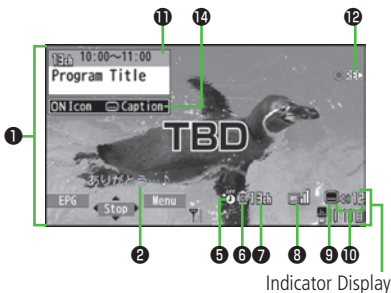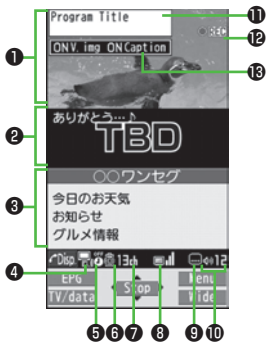

Indicator Display

Item	Description	Operation
① Image	—	—
② Captions	—	—
③ Data Broadcast	(☞ P.5-7)	—
④ Data Broadcast Mode	Data Broadcast Mode off Data Broadcast Mode on	[TV/data] ²
⑤ Off timer	(☞ P.5-9)	—
⑥ ECO Mode	(☞ P.18-15)	—
⑦ Channel	(☞ P.5-4) • When multiple programs are available in the same broadcasting station, "service number/total numbers" appears.	—
⑧ Signal Strength Level	Strong ← → Weak Out of range	—
⑨ Receiving Captions	—	—
⑩ Volume	—	• Adjust volume: ¹ / • Mute/Resume: ¹
⑪ Program Title	—	/ ³
⑫ Recorder Status ¹	Recording Timer Set	(☞ P.5-11, P.5-13)
⑬ Display/Caption ²	Display: ON/OFF/Large Caption: ON/OFF	 • Each key press toggles settings.
⑭ Indicator/Caption ³	Indicators: ON/OFF Caption: Upper position/Lower position/OFF	 • Each key press toggles settings.

¹ Available only when Data Broadcast Mode is off ² Available only in Portrait View

³ Available only in Landscape View

Program List (Japanese)

Check program schedules and set timer to view/record TV programs.



Main Menu ► TV ► Program List

- Confirmation appears when using Program List for first time. Follow onscreen instructions.
- See Program List Help menu for usage information.

View Program List while TV is Active

>  [EPG]

Show Program Information while TV is Active

> Press and hold  [EPG] → To return to Viewer, 

Data Broadcast (Japanese)

Access a variety of program-related information such as still images and videos.

- Data Broadcast is not available in Landscape View (Wide Screen).

1 Activate TV (Data Broadcast Mode off) →

 [TV/data]

 appears.


-  to select information
- To deactivate Data Broadcast Mode:  [TV/data]

Note

- Viewing Data Broadcast information requires no fees; however, accessing websites will incur connection fees.

Functions while Viewing TV

Sound Settings

> While TV is active,  [Menu] → *Settings* → *Sound* → *Sound Effect*
→ Select an item (See below)

Item	Operation/Description
Auto Volume	Automatically increase to optimum volume > <i>ON</i> or <i>OFF</i>
Remaster	Adjust sound quality to reproduce original sound > <i>ON</i> or <i>OFF</i>
Listening	Adjust to natural sound when using earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · <i>Surround</i>: Reproduce natural and stereophonic sound · <i>Natur 1</i> or <i>Natur 2</i>: Complement sound specific to earphone to reproduce natural sound · <i>OFF</i>: Turn off Listening setting
Equalizer	Change sound quality when using earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · <i>Normal</i>: Reproduce normal sound · <i>H. BASS1</i>: Enhance low-pitched sound · <i>H. BASS2</i>: Enhance low-pitched sound even more · <i>Voice</i>: Make voice clear · <i>Train</i>: Minimize sound leakage

Other Functions

> While TV is active, follow the steps below.

Item	Operation/Description
Access Internet via Yahoo! Keitai	<p>> Press and hold [W]</p> <ul style="list-style-type: none"> To return to viewer: While Yahoo! Keitai is active, press and hold [W]
Access Internet via PC Site Browser	<p>> [](MULTI) → Open Menu → Yahoo! → PC Site Browser</p> <ul style="list-style-type: none"> Follow onscreen instructions
Make a Voice Call/Video Call	<p>> [](MULTI) → Stand-by display → Enter a number → [] (For Video Call, [][V. Call])</p> <ul style="list-style-type: none"> Interrupt TV during call. After call, TV resumes. Recording will not be interrupted.
Use Messaging	<p>> [](MULTI) → Stand-by display → []</p>

Functions Available while Viewing TV

> While TV is active, **[]**[Menu] → Select an item (See below)

Item	Operation/Description
Program info	View current program information
Program list	View Program List
Disp.Ch./operation	<p>> Select an item</p> <ul style="list-style-type: none"> Channel info: View channel details. Select a channel to watch that Station Channel List: View Channel List ([]P.5-4) Channel Setting: Set channels for your area ([]P.5-4) Add to ch. list: Add current station to Channel List. Assign current station to lowest available number key. Tune service: Select a program when multiple programs are available from the same broadcasting company

Item	Operation/Description
Data Broadcasting ¹	<ul style="list-style-type: none"> > Select an item <ul style="list-style-type: none"> · Back to data BC: End Data Broadcast site and return to Data Broadcast window · Reload contents: Reload page (Data Broadcast link) · Certificate: View owner, author, validity period and serial number of certificate used in SSL communication · Images²: Show/hide images on Data Broadcast sites · Sound Effect²: Turn on/off sounds from Data Broadcast/sites · Reset Settings²: Show confirmation on Data Broadcast
TV link list ¹	Show TV Link details
Compose message	Compose a message while audio continues (☞ From Step 2 on P.14-4)
Settings	<ul style="list-style-type: none"> > Select an item <ul style="list-style-type: none"> · Display/operation → Switch display¹: Switch view (switch image size/image off) · Display/operation → Switch TV/data BC¹: Toggle Data Broadcast Mode on/off (☞ P.5-7) · Display/operation → Icons²: Set Indicator Display in Landscape View · Display/operation → AV output: View a Digital TV image on a TV set or other devices (☞ P.11-18) · Display/operation → Work When Folded²: Continue or end TV when handset is closed

Item	Operation/Description
Settings	<ul style="list-style-type: none"> · Video → Brightness: Set Back Light brightness · Video → Mobile W-Speed²: Enhance frame rate of TV images automatically · Video → Image Quality²: Select an image quality · Video → LCD AI: Activate image compensation according to Back Light · Sound → Sound Effect² (☞ P.5-7) · Sound → Main/sub sound: Set main/sub sound · Sound → Switch audio data: Available only when multiple audio data are supported · ECO Mode²: Set power saving mode (☞ P.18-15) · Off timer: When set time passes, confirmation appears asking whether to end viewing/recording TV
Key guide	View key operation guide while watching TV

¹ Available only in Portrait View

² Available from User Settings even while TV is not active (☞ P.18-15).

TV Links (Japanese)

Saving TV Links

- Following function is not available in Landscape View (Wide Screen).

- 1 Switch Data Broadcast Mode on → Select a link
- 2 **YES**
Follow onscreen instructions to save link.

Opening TV Links


Main Menu ► TV ► TV Link

- 1 Select a TV Link
 - Confirmation appears when Internet access is required. Select **YES** to proceed.
 - If TV Link is expired, confirmation appears asking whether to delete link.

Functions Available in TV Link List

Main Menu ► TV ► TV Link

- 1  [Menu] → Select an item (See below)

Item	Operation/Description
Display detail	Show TV Link title, URL, summary, content type, expiration date
No. of TVlink	Show number of saved TV Links
Delete	> Select an item <ul style="list-style-type: none"> • Delete this → YES • Delete selected → Check TV link(s) to delete →  [Finish] → YES • Delete all → Enter Phone Password → YES

Recording/Playing Programs

Recording Current Program

Save programs as videos or still images.
Recordings are saved to microSD Card.

- microSD Card: P.10-18
- Save up to 2GB of data at a time.

Recording Time (total)*	Approx. 640 minutes
Savable Files	99 files

* Average recordable time per 2GB microSD

- Recording is unavailable when signal strength drops to .

1 Activate TV → **[Record]**

appears, and recording starts.

2 **[Stop]** to stop recording

Program is saved to microSD Card.

Note

- In the following cases, recording ends and recorded portion is automatically saved:
 - File size is over 2GB
 - microSD Card memory is full
- Recorded files are not saved to handset.
- Do not remove microSD Card while recording.
- Recording continues even if signal strength level is ; however, images and audio are not saved.
- Recording is disabled during AV output.

Capturing Screenshots

Captured screenshots are saved to handset.

- This feature is unavailable when signal strength is or Data Broadcast Mode is on.

1 Activate TV (Data Broadcast Mode off) → press and hold

Note

- Captions cannot be captured.
- Capturing is disabled during AV output.


Playing Recorded Programs

Main Menu ► Data Folder ► TV ► Video

1 Select a video

Playback starts.

- When a playback position is recorded to video, playback starts from the position. Press [FromTop] to play back from beginning.
- When a video contains divided files, file list opens. Select the file to play back.

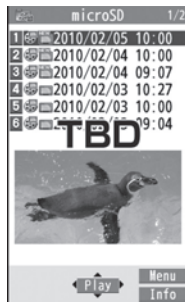

Example: Video Folder

2 to stop playback

Playback Operations

Volume	
Mute/Cancel Mute	
Fast-forward	(Press once: 10x; Press twice: 30x)
Fast-rewind	(Press once: 10x; Press twice: 30x)
Pause/Resume	
Play Frame by Frame	Pause playback → [Frame] ● Play back frame by frame.
Skip Rewind ¹	Press and hold /
Skip Forward ²	Press and hold /

Toggle Playback Speed	[/ / /] (Summary View) ● Summary View adjusts playback speed according to audio.
View Title	 ● Time bar also appears. ● Title also appears when views are switched.
Toggle Data View	Display title → ● In Landscape View, each key press toggles indicators (icons) and captions on/off. (Each key press also switches time bar position regardless of whether caption is shown.)
Toggle Display View ³ /Data View	 ● When Data Broadcast Mode is off, each key press toggles views. ● When Data Broadcast Mode is on, each key press toggles Data View.
Data Broadcast Mode On/Off	 ● In Landscape View, turn program title on.

¹ Unavailable if file is under 10 seconds long

² Unavailable if file is under 30 seconds long

³ Unavailable in Horizontal Open Position

Viewing Captured Screenshots

Main Menu ► Data Folder ► TV ► Image

1 Select an image


Timer



- Set up to 100 timer entries to watch or record programs.

Main Menu ► TV

1 **Timer Watching** or **Timer Recording**

2  [New] → Select an item (See below)

Item	Operation/Description
Channel	> Select a channel
Title	> Enter a program name
Start date	Set date and time to start and end viewing/recording a program
End date ¹	> Select an item <ul style="list-style-type: none"> · Enter date → Enter a date and time · Choose date → Select a date → Enter date and time
Repeat	> Select a repeat type → For Select day , select a day (days) →  [Finish]
Alarm ²	> ON or ON/Set time → For ON/Set time , select an alarm time

Item	Operation/Description
Tone ²	> Select an alarm type → Select a folder → Select an alarm
Alarm ¹	> ON or OFF
Alarm vol./ Volume	>  to adjust volume <ul style="list-style-type: none"> ● For Timer Recording, Escalating Tone cannot be set.
Act. TV w/ alarm ²	> ON or OFF <ul style="list-style-type: none"> ● When ON is set, Digital TV activates from alarm notification window.
Priority ¹	Set handset response when Timer Recording starts <ul style="list-style-type: none"> > Recording or Operation <ul style="list-style-type: none"> ● When Recording is set, active function suspends/ends, and recording starts. ● When Operation is set, confirmation appears. To suspend/end active function, select YES and  to start recording.

¹ Timer Recording only

² Timer Watching only

3  [Finish] → For **Timer Recording**, select **YES** or **YES (confirm once)**

Note

- Select timer entries to check details; [Edit] to edit details.
- Timer Recording does not start if Internet and two other functions are active simultaneously.
- Alarm does not sound for Timer Watching/Timer Recording in following functions. For Timer Recording, complete followings (in parentheses) one minute before timer starts; otherwise, recording does not start.
 - While handset is off (Turn on handset)
 - While Privacy Key Lock is active (Cancel lock)
 - While Personal Data Lock is active (Cancel/change lock)
 - During data transfer (Complete transfer)
 - During Infrared transmission, IC transmission or Bluetooth® transmission (Complete transmission)
 - During software update (Complete update)

Other Timer Operations

Main Menu ► TV

- 1 **Timer Watching** or **Timer Recording**
- 2 [Menu] → Select an item (See below)

Item	Operation/Description
New	Set a timer entry to watch/record a program (P.5-13)
Edit	Edit entry details (P.5-13)
Sort	Sort timer entries > Select an order
Delete this	> YES
Delete past	Timer entries with start/end time set prior to current date/time are deleted > YES
Delete selected	> Check timer entries to delete → [Finish] → YES
Delete all	> Enter Phone Password → YES
Memory Status*	Show memory status

* Timer Recording only

Checking Timer Recording Results

Main Menu ► TV

- 1 **Recording Result** → Select a result
 - Details appear.