

## 5.1CH ACTIVE SURROUND SPEAKER

AR5701WT



USER'S MANUAL

## SAFETY INSTRUCTIONS

### CAUTION

To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## IMPORTANT SAFEGUARDS

- 1-READ INSTRUCTIONS --- All the safety and operating instructions should be read before the appliance is operated.
- 2-RETAIN INSTRUCTIONS --- The operating instructions should be retained for future reference.
- 3- HEED WARNING --- All warnings on the appliance and in the operating instructions should be adhered to.
- 4- FOLLOW INSTRUCTIONS --- All operating and use instructions should be followed.
- 5- WATER AND MOISTURE --- The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
- 6- OUTDOOR USE --- Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- 7- LOCATION: The appliance should be installed in a stable location.
- 8- VENTILATION --- The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 9- HEAT --- The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 10- POWER SOURCES --- The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

- 11- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 12 - POWER CORD PROTECTION --- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- 13 - Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 14 - GROUNDING OR POLARIZATION --- The precautions that should be taken so that the grounding or polarization means of an appliance is not defeated.
- 15 - CLEANING --- The appliance should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.
- 16 - NON-USE PERIODS --- The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 17 - LIGHTNING STORMS --- Unplug the appliance during lightning storms.
- 18 - OBJECT AND LIQUID ENTRY--- Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 19 - ACCESSORIES---Only use attachments / accessories specified by the manufacturer.
- 20 - DAMAGE REQUIRING SERVICE---The appliance should be serviced by qualified service personnel when:
- The power-supply cord or the plug has been damaged.
  - Objects have fallen, or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
  - The appliance has been dropped or the enclosure damaged.
- 21 - SERVICING --- The user should not attempt to service the appliance. Servicing should be referred to qualified service personnel or returned to the dealer or call the dealer service line for assistance.
- 22 - SAFETY CHECK --- Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.
- 23- **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**



## IMPORTANT SAFETY INSTRUCTIONS

### 1- Save the user's manual

The user's manual should be saved and kept on hand as a convenient reference.

## 2- Cleaning the unit

- Disconnect the mains plug from the outlet before attempting to clean the unit.
- Don not use harsh abrasives or chemicals to clean it, as it will damage the surface finish.
- Use only a soft and damp cloth.

## 3- Accessories

Please use the accessories enclosed in the unit. Damage caused by using non-recommended or non-provided accessories would not be warranted.

## 4 - Placement:

 
- Do not use this unit near water.
- Do not allow anything to drop into the subwoofer case through its ventilator, as it could result in fatal electric shock or fire.  
Place the unit far enough from other equipments from good heat dissipation.
- Place the unit on a stable surface and out of reach of children to avoid damage to the unit or the risk of injury to people.

## 5- Maintenance


To avoid shock hazard or damage to the unit, do not attempt to remove the cover or the real panel. All servicing should be referred to qualified service personnel.

## PACKING LIST

1-User's Manual	1 pcs	6- Surround Speaker	2 pcs
2-Remote Control	1 pcs	7- CABLE RCA	3 pcs
3-Subwoofer Speaker	1 pcs	8-FM ANT	1 pcs
4-Center Speaker	1 pcs	9-AM ANT	1 pcs
5- Front Speaker	2 pcs		

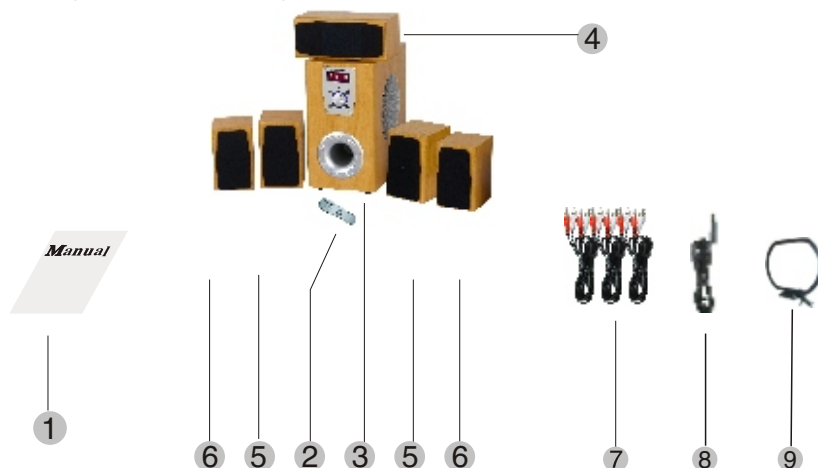



## PLACEMENT OF THE SPEAKERS

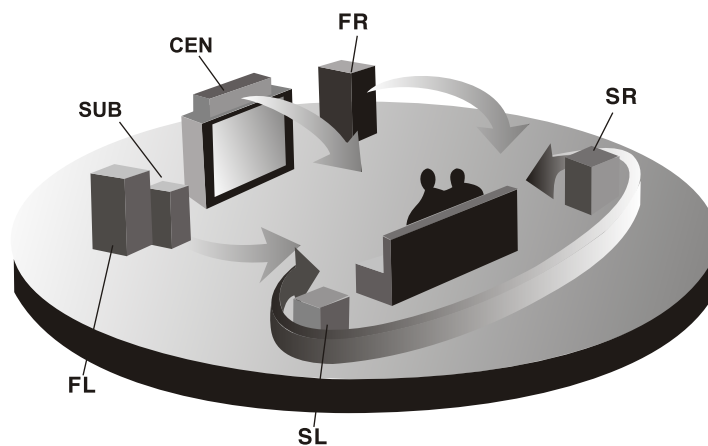 

## DESCRIPTION OF THE FRONT PANEL OF SUBWOOFER AND REMOTE CONTROL

- 1- LED
- 2- IR:Wireless accept
- 3- MUTE: Controls the stand by of the system
- 4- VOL + / VOL-: To increase / decrease the master volume of the speaker system
- 5- SUB + / SUB -: To increase / decrease the volume of the subwoofer
- 6- STANDBY:Controls the standby or play state of the system
- 7- INPUT SELECT:To switch the input mode DVD,AUX,FM,AM of the speak System
- 8- SCAN<sup>+</sup>:To scan the tuner by manually or automatically
- 9- RESET:To set the volume of all channels into initialization

  - 10- PRESET+/PRESET-:Read out the saved datas of tuner
- 11- ST/MO:To switch the output mode of tuner between FM stereo and single track
- 12- SAVE/CLEAR:To save/clear the datas of the tuner

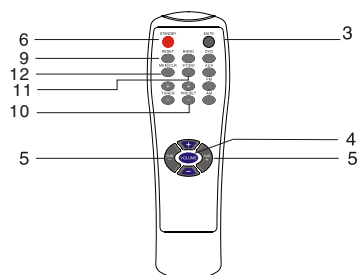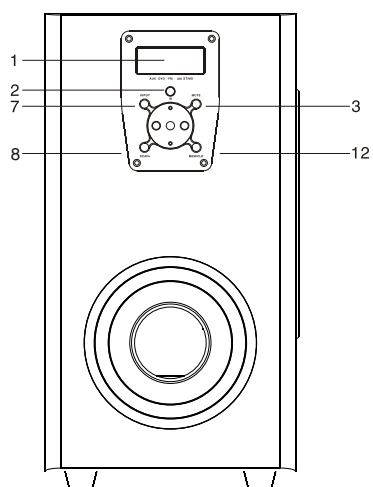

## DESCRIPTION OF THE REAL PANEL OF THE SUBWOOFER

### 1-AUS (L / R)

To receive the signal from PC, CD,MP3, Tape Player, etc.

### 2-INPUT (5.1CH)

(1)FL / FR: Front Left / Right channel input connectors of the system.

(2)CEN: Center channel input connector.

(3)SUB: Subwoofer Channel input connector.

(4)SL / SR: Surround Left / Right channel input connectors of the system.

### 3-OUTPUT (5.1CH)

(1)FL / FR: Front Left / Right channel output connectors of the system

 
(2)CEN: Center channel output connectors.

### 4-POWER ON/OFF

Switch for turn on/off the power

### 5-AC IN: AC power cord.


### 6-THE WIRELESS INPUT OF FM/AM

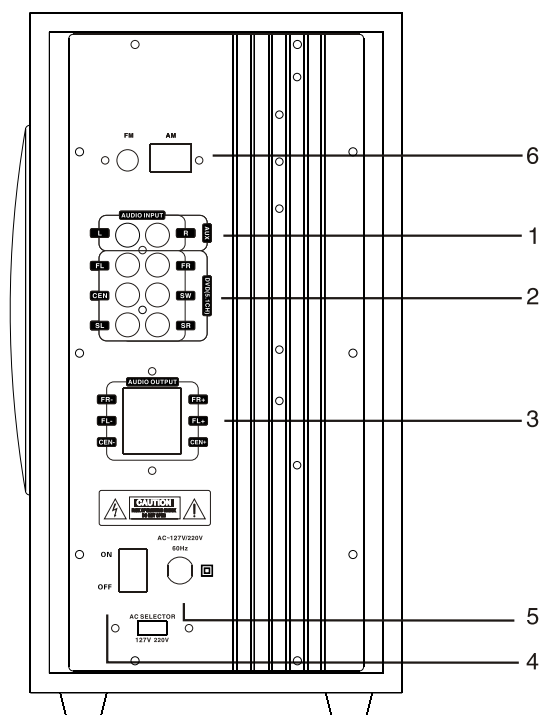

## CONNECTIONS ILLUSTRATION:

To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.
 
< Connections of the Subwoofer, the Center, the Front Speakers >

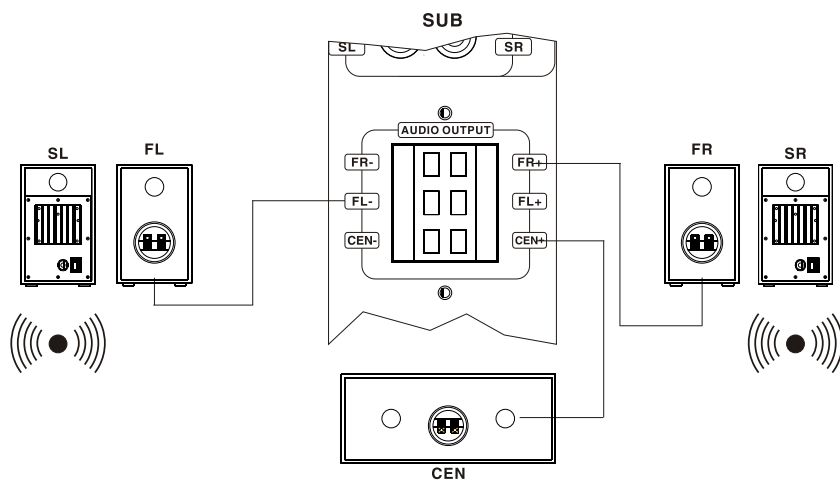


< Connections of the subwoofer and the audio source >

1. To PC, CD, MP3, Tape Player or any audio device offering a LINE-OUT audio connection.
2. To DVD

To PC, CD, MP3, Tape Player, etc.

 To DVD(5.1CH)

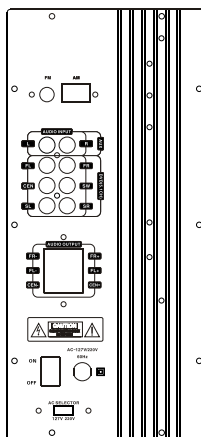




## OPERATION

- 1-Press down the tip of the POWER rocker switch with a white "I" on the back of the subwoofer to turn on the system. The system is then turned on and the indicator light on the Digital Volume Display of the front panel will turn red.
  - 2-Press the MUTE button on the remote control or the front panel of the subwoofer once, and the system will be switched to MUTE mode.
  - 3-Press the following buttons on the front panel of the subwoofer or remote control to a suitable listening level.
    - (1) MAST + (VOL +) / MAST- (VOL -): to adjust the volume level of the system
    - (2) Press the SUB+ and VOL+ to adjust or SUB- and VOL- to increase or decrease the volume level of the subwoofer.
  - 4-Press the MUTE button on the remote control once to turn off the volume of the system, and the mute indicator light on the front panel of the subwoofer will turn off. Press the MUTE button again and the mute indicator light will turn on.
- \* It is recommended that the POWER rocker switch on the back of the subwoofer be turned off and that the AC power cord be unplugged from the supply when the system is left unused for a long period of time.
 
## BATTERY INSTALLATION:

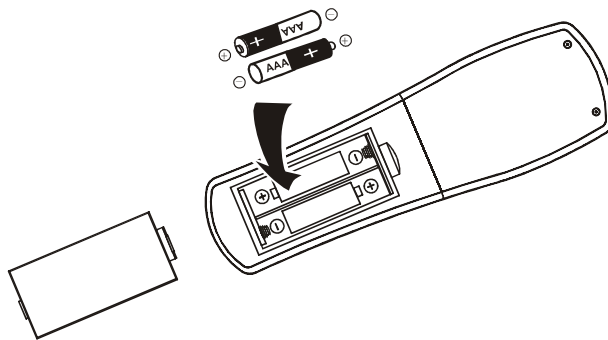

Remember: The spring touches the "⊖" side of each battery.

## IMPORTANT NOTES

### < AC POWER >

- \* Make sure that the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from, and outlet.
- \* Ensure that the main power switch is in the OFF position before connecting the AC power cord to the power supply to avoid damage to the system.
- \* A damaged power cord can easily cause an electric shock or fire hazard. Never use a power cord after it has been damaged.

## SPECIFICATIONS

POWER INPUT ..... AC 127/220V 60Hz

TOTAL SYSTEM POWER .....200 Watts ( 50W + 30Wx5 )

FREQUENCY RESPONSE ...35 Hz~20 KHz

S / N RATIO .....>= 70dB

DISTORTION ..... 0.1% @ 1W

DRIVER UNIT .....SUB: 6.5" 8 Ohms; SAT 3" 4 Ohms

SEPARATION .....>= 40dB (1KHz)

FUNCTION .....MUTE, MODE, SUB+/-, VOL+/-, REMOTE CONTROL

&WIRELESS & AM/FM TUNER

DIMENSION (MM) .....SUB: 175W x332H x 330D CEN:300W x128H x110D

SAT: 105W x 173H x 147D REAR: 120W x 198H x 110D

Note:Subject specifications to modifications without previous warning.

# CONTENTS

SAFETY INSTRUCTIONS .....	1
IMPORTANT SAFEGUARDS .....	1
IMPORTANT SAFETY INSTRUCTIONS .....	2
PACKING LIST .....	3
PLACEMENT OF THE SPEAKERS .....	4
DESCRIPTION OF THE FRONT PANEL OF SUBWOOFER & REMOTE CONTROL .....	4
DESCRIPTION OF THE REAL PANEL OF THE SUBWOOFER .....	6
CONNECTIONS ILLUSTRATION .....	7
OPERATION .....	8
BATTERY INSTALLATION .....	8
IMPORTANT NOTES .....	9
SPECIFICATIONS .....	9