 




## | Microphone

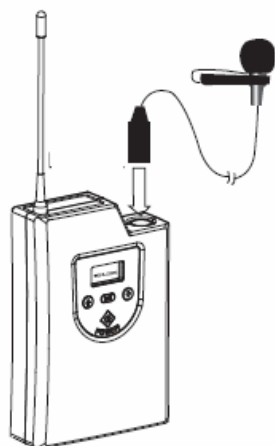

 
**CT-70**

INSTRUCTION MANUAL

[www.bbsprosound.com](http://www.bbsprosound.com)

## Body-Pack Transmitter


- ❶ Mic. input
- ❷ Power On/Off switch
- ❸ Antenna
- ❹ LCD display
- ❺ Set button
- ❻ Up button
- ❼ Down button
- ❽ AF level control
- ❾ Belt clip
- ❿ Battery tray

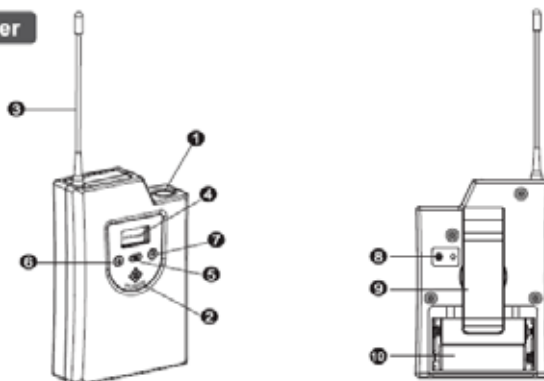

## Body-pack Transmitter


(1.) Inserting and changing the battery

 1. The battery tray is located on the back of the transmitter.
2. Hold on to both belt clip buttons to release it.
3. Insert 2 pieces of UM-3 1.5V batteries. Remember to match correct polarity.
4. Directly slide the belt clip back.

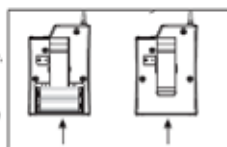

## Lavalier Microphone

 
Attach to clothing, tie, lapel, where is the suitable place of sound pick-up. Plug the mini XLR on the microphone cable into the "MIC.IN" on the body-pack transmitter. (Figure 8)

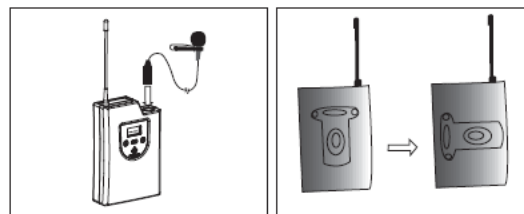

## Headset Microphone

(2) With headset microphone

 
Put the neck-frame behind your neck meanwhile fix the temples on your ears. Adjust the gooseneck to aim the microphone toward the suitable sound source, which is about 1.5-2 inches distance from your mouth. Plug the mini XLR on the microphone cable into the "MIC.IN" on the body-pack transmitter. (Figure 9)

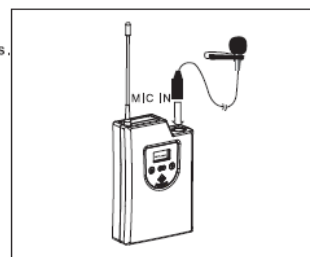

Basic operation

1. Frequency adjusting
    - Hold SET button for 3 seconds to activate frequency.
    - Once you see "MHZ" blanking, you are ready to select your desired frequency by using UP and DOWN buttons.
    - Press the SET button again to store your changes.
  2. Sensitivity adjusting
    - The sensitivity control (AF level control) is in the up-left of the transmitter's back. Please use the adjusting sticker to adjust the proper level.
  3. To activate "Lock mode"
    - Hold on to UP button for 3 seconds to activate "Lock mode", press again to unlock.
- (Prevent accidental programming or switching off)

 Figure 6

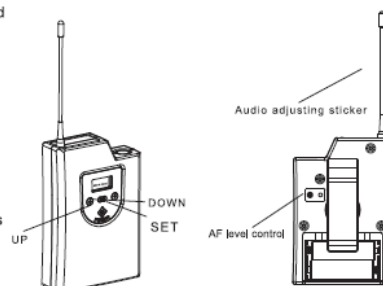

**FCC INFORMATION**

Warning: Modifying, tampering and/or adjusting this or replacement of any transmitter component (crystal, semiconductor, etc.) in this unit could result in a violation of the rules. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC NOTICE**

This wireless microphone system complies with Part 74 of FCC Rules. There are four frequencies available for the system. You must get a license for each frequency you plan to use before you use the system (one license can include four frequencies).

Visit <http://wireless.fcc.gov/uls/> to access the license online or phone the nearest FCC offices and contact them to get the necessary application. Licensing depends on how you will use the system

**RF EXPOSURE**

This wireless microphone contains a low power transmitter. When the power is on, it sends out radio frequency (RF) signals. In August 1966, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for wireless devices.

IMPORTANT NOTE: To adhere to the FCC RF exposure compliance requirements, no change to the antenna or the unit is permitted. Any change to the antenna or the unit could result in the system exceeding the RF exposure requirements.