

The following contents are described in Owners Manual of the vehicle.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Compliance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines as this equipment has very low levels of RF energy.

1. Remote Parking Functions

The remote parking function (RPC) allows (1) Engine operation function and (2) Remote Parking operation function when both Remocon Key and Hand Unit are within the operating area.

1) Engine operation function

- Start the engine without key operation.
- Stop the engine without key operation.

(1) Operating area

- The engine operation can be controlled when Remocon Key and Hand Unit are within an area of more than fifty(50) centimeters and less than two(2) meters around the vehicle.

(2) Engine start/stop operation

- When Remocon Key and Hand Unit are held within the operating area and the power button on Remocon Key is pressed for more than one(1) second, the LED on Remocon Key will turn on and the engine will start.
- If the power button on Remocon Key is pressed for more than one(1) second while the engine is running, the engine will stop.

2) Remote Parking operation function

- The vehicle can be parked by operating the operation permission button and the forward button or reverse button on Remocon Key.

(1) Operating area

- The remote parking operation can be controlled when Remocon Key and Hand Unit are within an area of more than fifty(50) centimeters and less than two(2) meters around the vehicle.

(2) Vehicle movement operation

- After starting the engine with Remocon Key, by simultaneously pressing and holding down the operation permission button and either the forward button or reverse button on Remocon Key within the operating area, the vehicle will start moving and can be parked in a specific space.
- This operation requires that Remocon Key operator is within the operating area of the moving vehicle, and the vehicle will stop moving if it is operator is outside the operating area.
- While operating the buttons on Remocon Key, if you release your hand from any of the operation permission buttons, forward button or reverse button, the vehicle will stop.
- The engine will stop once parking is complete.
- The engine will stop if more than five(5) minutes have passed since engine start-up began.