



TALKIN' T-rex

remote control dinosaur who says what you say!

Get Started

1. Remove the battery door on the remote control. Disconnect and discard the cable between the remote and the Talkin' T. rex.
2. Insert a new 9-volt battery into the remote control and four new AA batteries into T. rex. (Please see instructions for inserting batteries on the back of this sheet.)
3. First, slide the power switch on your remote control to I (ON).
4. Then slide the power switch on your T. rex to I (ON).
5. Use the remote to control your T. rex:



Press and hold this button, then talk into the remote control. Your T. rex will say what you say! Watch his mouth move and his eyes light up!

TALK

Press this button to make your T. rex move forward.


FWD

Press this button to make your T. rex spin.

SPIN

Press this button to make your T. rex ROAR!

ROAR

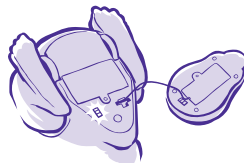

Please note:

- Your Talkin' T. rex works best on smooth surfaces indoors—avoid taking it onto thick carpet or outdoors.
- First turn off your T. rex and then turn off the remote control by sliding each switch to O (OFF).
- When you let go of the Talk button, you'll hear a beep. This means you're not talking through T. rex anymore.

6. You can pose T. rex's head and tail for a new look.
7. Now go and make someone giggle. Have fun!

For even more fun, visit cranium.com!

TROUBLESHOOTING

Are you having trouble with your Talkin' T. rex?

If your T. rex...	Try this!
Won't turn on, light up, move its mouth, or play sounds...	Install four new AA batteries in T. rex. Install one new 9-volt battery in the remote control.
Sounds garbled...	Stand within 30 ft (9m) of your T. rex. Speak directly into the microphone. Press only one button at a time.
Has static...	Move your T. rex away from microwaves, cell phones, cordless phones, etc. Always turn on the remote control first before turning on your T. rex. Slide the power switch on T. rex to O (OFF), and then follow step 3 of the instructions.

If you've tried these steps and you're still having trouble, go to cranium.com/support or call 1-877-CRANIUM.

CHANGING THE BATTERIES

If your remote control needs a new battery, ask an adult to get one new 9-volt battery and follow these instructions.

1. Turn your remote over and remove the battery cover.
2. Insert the battery as indicated.
3. Replace the battery cover and tighten the screw.

If your T. rex needs new batteries, ask an adult to get four new AA batteries and follow the above instructions, but remove the battery box.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Model no. 304022600. Canada 310. Carrier frequency: 27.145 MHz, field strength: 50.4 dBuV/m at 3m. This radiocommunication device complies with all the requirements of Industry Canada Standard RSS-310. Ce dispositif de radiocommunication rencontre toutes les exigences de la norme CNR-310 d'Industrie Canada. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Category II radiocommunication device complies with Industry Canada Standard RSS-310. Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

© 2007 CRANIUM, INC. ALL RIGHTS RESERVED. THE FOLLOWING ARE TRADEMARKS OR REGISTERED TRADEMARKS OF CRANIUM, INC. IN THE U.S. AND/OR OTHER JURISDICTIONS: CRANIUM, CREATIVE CAT, DATA HEAD, EVERYONE SHINES, STAR PERFORMER, WORD WORM, THE CRANIUM LOGO, AND THE BRAIN LOGO. WE PACK EVERY CRANIUM TOY WITH A VARIETY OF OUTRAGEOUS ACTIVITIES. IT'S UP TO YOU TO USE CAUTION, PLAY IT SMART, AND HAVE FUN.

BATTERY SAFETY

- Do not put the batteries in backwards. Positive (+) and negative (-) ends must be inserted in the correct directions following the polarity (+/-) diagram in the battery compartment.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Rechargeable batteries must be removed before recharging.
- Rechargeable batteries must be recharged by an adult only.
- Batteries must be installed and removed by an adult only.
- Remove exhausted batteries and dispose of them properly.
- Do not try to recharge non-rechargeable batteries.
- The supply terminals are not to be short-circuited.



WARNING: TO AVOID BATTERY LEAKAGE

Please follow these battery usage instructions. Failure to follow these instructions can result in battery acid leakage that may cause burns, personal injury, and property damage.



WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

For even more fun, visit cranium.com!