

USER MANUAL

General Information

Thank you for selecting our mobile phone. This user guide will provide you with the general information and operation instructions.

Note:

- Use only accessories approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.
- If the contents and displays described in this user guide do not match the actual operation of the phone set, please use the display of the actual phone set.
- **We reserved the rights to change the mechanisms of the phone & content of this manual without prior notice.**
- **This user guide is subject to change without notice.**

Note: User's Manual is just to guide the user about the functionality of the phone. Some functions may vary due to modifications and up gradations of software or due to print mistake. We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice

Contents

Keys functions	4
<u>Turning the phone on</u>	
<u>Charging the Battery.....</u>	
<u>Important Password</u>	
<u>Keypad Lock and Unlock</u>	
Text Entry	7
<u>Input Method</u>	
<u>Key Input</u>	
<u>Other Language Input Methods</u>	
<i>Menu options</i>	8
Call	8
Call logs	9
Contacts	9
Multimedia.....	9
Message	11
Tools.....	11

Games	12
File Manager	12
Settings	12
Services	13
SAFETY PRECAUTIONS.....	14
Precautions	14

Keys functions

Keys	Functions
Right soft key	Press this key to enter phonebook list under standby mode; Press this key to go back to previous menu; Press this key to reject a call.
Call key	Press this key to SIM1 or SIM 2 call out; Press to pick up phone when there is an incoming call; Press to enter call logs under standby mode
End key	Power Off: Long press to power off under standby mode; Power On: Long press to power on if the phone is power off; Press this key to go back to standby screen.

Navigation keys	Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate. Under standby mode, press a direction key to enter the specified function page. You can also customize direction keys to match the desired functions. In conversation status, press up or down direction key to tune the sound volume.
OK key	Press OK key to confirm and enter main menu.
Number keys	Dial numbers under standby mode and enter numbers and characters in editing mode.
* key	Under standby mode, press * key twice to display "+" to call international numbers; Under players and FM mode, press * key to decrease volume.
# key	Under standby mode, press and hold this key to switch between current profile and silent profile. Under players and FM mode, press # key to increase volume.
0 key	Torch On: Long press to get the torch on; Torch Off: Long press to get the torch off;

Turning the phone on

Press and hold  key to turn on/off the Mobile Phone.

And if you have set PIN or Mobile Phone code, input it correctly.

Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

 **Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.**

The socket-outlet shall be installed near the equipment and shall be easily accessible

Warning: Provides charging temperature range -20 °C to 55 °C, over this range, please do not use the charging equipment. And be sure to use the charger provided by the supplier. Use of an unapproved charger may be dangerous and breach of warranty of the equipment approval and terms.

Important Password

Default Phone lock password is 1122.

Keypad Lock and Unlock

Press the Left Soft Key then * key to unlock the keypad.

Text Entry

Input Method

Your cellular phone supports several input methods, which include:

ABC/Abc/abc/H1

Numeric(123)

1. Changing the input modes

During text editing, you can press the # key to switch input modes.

2. Entering Symbols

In any input mode, press the * key to open the symbols input screen. Use the Navigation key to choose the desired symbol and press the Ok key to select it.

Key Input

Letters and symbols represented by each key are as follows:

Key Function

Key	Function
All related keys	Press to input letters
0 Key	Press to input space
# Key	Switch between input modes
* Key	Press to enter symbol screen

Example: How to enter the word "Happy2012!"

Press the # Key to activate the “ABC” mode, press the 4 Key to enter “H”.

Press the # Key to activate the “abc” mode, press the a, p, p, y key to enter “appy”.

Press the # Key to activate “123” mode, press the 2, 0, 1, 2 Key to enter “2012”.

Press the * Key to enter symbol “!” .

Other Language Input Methods

Your phone supports Hindi input language. You can press the # key to switch to “Hindi” mode when editing text.

Menu options

Call

Under standby interface, input a phone number and press Call key to make a call by SIM1/SIM2. To end or reject a receiving call, press the End key.

Call logs

In this menu, you can view dialed calls/missed calls/received calls/Rejected calls/delete all/Call Timers and call settings to view Due to dual SIM cards phone design, user can set SIM card by 'Dual SIM settings'/Network selection/ /call divert /call waiting /call barring/Line switching/Flight mode/ Auto call record and advanced settings. You can also press call key to enter call logs.

Contacts

In contacts, you can save contacts in phone memory, while SIM cards contact capacity depends on the network operator, please consult the local operator.

Multimedia

Camera: Camera supports photography functions. You can take pictures with the embedded camera and adjust the camera settings. The camera lens is in the

rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format.

Image : With this function, you can select any picture and press options to perform the following operations: Send, Slide play, Delete, Set image as wallpaper, Rename, Mark, Details, Slide settings.

Video Recording: Press OK key to start video recording. The recording time depends on the time limit and the capacity of the memory card. Enter options to perform the following settings: Video settings and Storage.

Video Player: Enter Video player. Press left soft key to enter options: Play list, Full screen Play, File attribute.

FM Radio: To use the FM Radio, please insert the earphone first and then listen to it. You can perform the followings operations as your need: Channel list,

Manual input, Auto search, Record and File list.

Sound Recorder: Enter Sound recorder. Enter Sound Recorder, press left soft key and you can do: New record, Play, Delete, Send, Record file List.

Audio Player: Enter Audio player. Press left soft key to enter options: Music list, Music mark, Add, Set as ringtone, Play mode, Settings and Exit..

Message

Enter this menu, you can view: Write message, Inbox, Drafts, Outbox, Sent messages. The capacity of messages is due to maximum storage capacity built in mobile phone and external SIM cards. And you can check the memory status of the SIM cards or mobile phone.

Tools

This function provides different kinds of services

including Torch, Alarm, Bluetooth, Calendar, Calculator and World clock. It is convenient and good for you to arrange your life orderly every day and make your life become lively and beautiful.

Bluetooth: You can use the Bluetooth to send images, video clips, music, sound clips and notes, and transfer files from your compatible pc

Games

This phone provides exciting games for your fun. Play the trial version and purchase the full version for more excitement.

File Manager

File Manager explores the files in phone and external memory card. In this menu, you can manage the pictures, MP3 files and other folders in this menu.

Settings

Phone settings: In this menu, you can perform:

Time and date; Select Language; Shortcut Settings; Auto power on/off; Mobile phone supports two system languages: English and Hindi. The default language is English.

Display settings: Wallpaper settings/idle display settings/contrast/Backlight/keypad backlight time
Security Settings: To protect personal privacy, you can set the SIM1/SIM2 security; Privacy, Auto keypad lock ,lock screen by end key, power on password ,Mobile tracker.

To reset to factory setting, please input the password '1122'.

Services

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way. You can store a website of home page in each way. The home page will be first viewed when using WAP explore. And you can add, edit, delete or send bookmarks. The websites you've visited are usually stored in Histories. Moreover, you are able to set some paramount of WAP settings as

needed.

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

SAFETY PRECAUTIONS

Precautions



Please carefully read and observe the terms below:

Safe power on

Do not use your mobile phone in areas that prohibit their usage. It may cause disturbance or harm.



Safe transportation first

Please observe all related local laws and regulations.

Do not use your mobile phone while driving.

Safe transportation should be considered first when driving.



Turn off when in the hospital

Please follow related limitations.

Please switch your cellular phone off when near a medical instrument.



Turn off on an airplane

Please follow related limitations.

Do not use your cellular phone on an airplane.



Turn off when at a gasoline station

Do not use your cellular phone at a filling station or around fuels or chemicals.



Turn off around exposure Area

Please observe related limitations and do not use your cellular phone near an area where explosions can occur.



Proper use

As described in this manual, your cellular phone can be used only in the correct location.

If possible, please do not touch the antenna area of your phone.



Use qualified after sales service

Only a qualified technician can install or repair your cellular phone. Please contact a K-Touch authorized service center in case of phone failure.



Accessories and batteries

Only use the authorized accessories and batteries and



do not connect to incompatible manufacturers or products.

Waterproof

Your cellular phone is not waterproof. Please keep it away from water.



Backup

Remember to backup or keep a written record of all important information saved in your cellular phone.



Connect to other devices

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.



SOS emergency calls

Make sure your cellular phone is switched on and in a service area. In standby mode, input the SOS number, then press the Dial Key. Advise where you are and do not hang up without permission.

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Specific Absorption Rate (SAR) information
- SAR tests are conducted using standard operating

positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

- Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.
- For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 0.5 cm from the body.
- Non-compliance with the above restrictions may result in violation of RF exposure guidelines.