

# **Instruction Manual**

## **for**

# **Digital Photo Frame**

### **Minimum System Requirements:**

**Hardware:**

PC with Intel Pentium 4  
128 MB RAM  
50 MB Hard Drive Space  
CD-ROM Drive

**Software:**

Microsoft Windows XP with internet connection  
Digital Photo Frame – PC Link (included in the supplied CD)

## **IMPORTANT INFORMATION**

**DO NOT CONNECT YOUR DIGIT PHOTO FRAME TO YOUR COMPUTER UNLESS YOU HAVE READ THOROUGH THIS INSTRCUTION MANUAL. FAIL TO DO SO MAY RESULT IN PRODUCT DAMAGE.**

**THIS IS NOT A USB STORAGE DEVICE. YOU CANNOT STORE OR ACCESS ANY FILE IN THIS DEVICE DIRECTLY.**

 
**IMAGES FILES IN THIS DEVICE CAN NOT BE BROWSED OR VIEWED BY PROGRAMS OTHER THAN THE ONE PROVIDED.**

**NEVER ATTEMPT TO FORMAT THIS DEVICE. IT MAY DAMGE THE DEVICE PERMANENTLY.**

## 1 Main Features:

- Digital Photo Frame
- Clock with calendar
- Daily Alarm
- Auto power off
- 1.5V AAA battery x 2

## 2 Keypad Layout

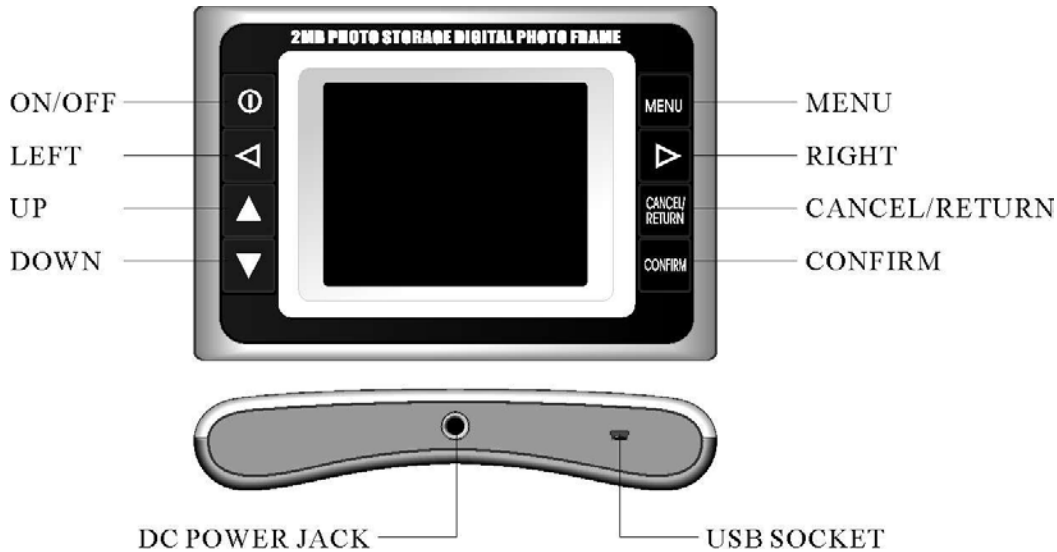

<b>UP</b>	Item switch Value increase while inputting
<b>DOWN</b>	Item switch Value decrease while inputting
<b>LEFT</b>	Press to show previous photo in Gallery mode
<b>RIGHT</b>	Press to show next photo in Gallery mode
<b>MENU</b>	Press to switch among Clock, Alarm, Gallery and Setup mode
	Press and hold to enter SETTING screen
<b>ON/OFF</b>	Press and hold to turn on or off
<b>CONFIRM</b>	Press to confirm the selection
<b>CANCEL/RETURN</b>	Press to cancel or return previous menu

### 2.1 Using the Photo Frame for the First time

Remove the battery door from the back of the unit and insert new AAA batteries into the battery compartment. LCD is turned on and then it will enter Clock mode. Default date is 2007 Jan 1, 12:00 AM

### 2.2 Power ON

 
To turn on the device when it is power off, press and hold **ON/OFF** key. Press and hold **ON/OFF** to turn off the unit again.  
(Option: If DC power is used, auto power off function will be disabled.)


### 2.3 Mode

There are 4 modes: Clock, Alarm, Gallery and Setup.  
Press **MENU** key to switch between each mode

Clock -> Alarm -> Gallery -> Setup

### 2.4 Clock

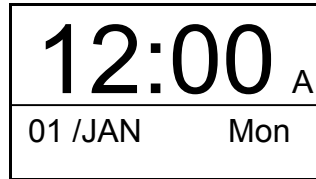

- Time, date and week will be shown on clock mode
- In case if the Alarm is turned on, a  icon is appeared on the top right corner.

#### 2.4.1 Setting Date and Time

- In CLOCK mode, press and hold the **CONFIRM** key for 2 seconds to edit
- Year digits flashing.



 
- Press **UP** or **DOWN** key to select year (2000~2099)
- Press **CONFIRM** key to confirm year. Then start set day



- Press **UP** or **DOWN** key to select day.
- Press **CONFIRM** key to confirm day. Then start set month




- Press **UP** or **DOWN** key to select month.
- Press **CONFIRM** key to confirm month. Then start set hour

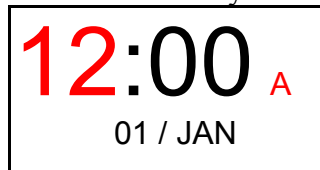

- Press **UP** or **DOWN** key to select hour.
- Press **CONFIRM** key to confirm hour. Then start set minute




 - Press **UP** or **DOWN** key to select minute.
- Press **CONFIRM** key to confirm minute. Then go back to clock mode.

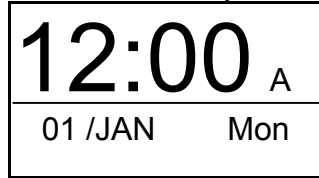


## 2.5 Alarm

 - In **CLOCK** mode, press **MENU** key one time to enter **ALARM** mode.

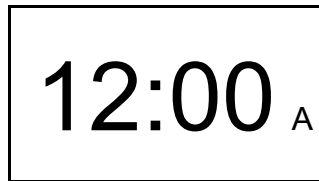


### 2.5.1 Setting Alarm

 
- Press and hold **CONFIRM** key for 2 seconds to edit the alarm time.

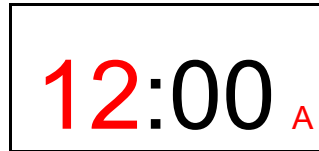

 - Hour digits will flash together with the AM/PM mark.
- Press **UP** or **DOWN** key to select hour.
- Press **CONFIRM** key to confirm hour. Then start set minute

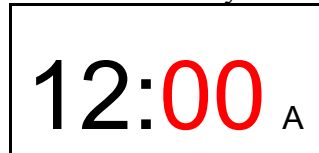

 - Minute digits will flash.
- Press **UP** or **DOWN** key to select minute.
- Press **CONFIRM** key to confirm and back to Alarm mode.

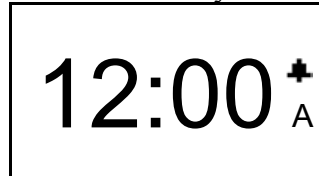


### 2.5.2 Enable/disable alarm

- Press **RIGHT** key to turn on Alarm. **+** icon will be shown on the top right corner to represent the Alarm function is turned on.
- Press **LEFT** key to turn off Alarm **+** icon will be turned off

### 2.5.3 Alarm tone

 
- When Alarm in enabled and alarm time reach, Alarm tone will come out for 1 minute. ( Beep...Beep...Beep....)
- **+** icon will be flashing

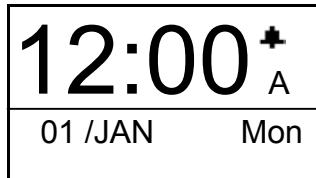

- Press any key to stop the alarm tone. + stop flash.

## 2.6 Gallery

 
- In Alarm mode, press **MENU** key one time to go to Gallery.
- When no photo is stored inside the device, “No photo!” will display.

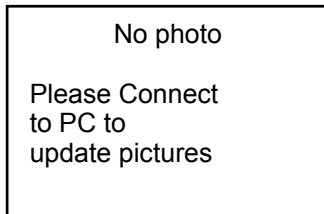

- If auto scroll is selected, then each photo will display for 10 seconds and then change to another photo.
- If manual scroll is selected, press **LEFT** or **RIGHT** to view another photo.


## 2.7 Low Battery Detect

 - If the battery is low, the screen will shown a low battery icon at the right bottom corner.

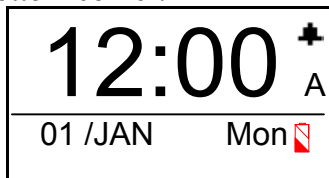


## 2.8 Setup

 In Setup, user can set the Photo scrolling mode and Autosleep time.

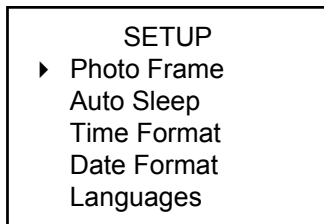

- Press **UP** or **DOWN** key to select.
- Press **CONFIRM** to process setup.
- Press **MENU** once to exit.


### 2.8.1 Photo Frame setup

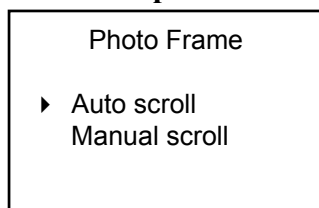 

- Press **UP** or **DOWN** key to select between auto scroll and manual scroll.
- Press **CONFIRM** to confirm.
- Press **CANCEL/RETURN** to ignore save and exit to previous screen.

### 2.8.2 Auto Sleep

 - If there is no any button pressed for a certain time, the unit will enter sleep mode – LCD turned off to save power.
- When the unit is in auto-sleep mode, press and hold **ON/OFF** key to wake up.
- The unit will resume Clock mode after wake up.

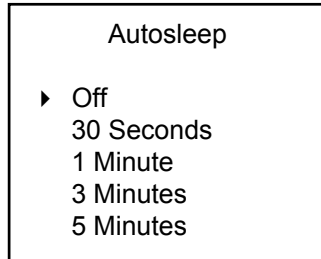

- Press **UP** or **DOWN** key to select OFF, 30 second, 1 minute, 3 minute, 5 minutes.
- System default is 1 minute.
- Press **CONFIRM** to confirm.
- Press **CANCEL/RETURN** to ignore save and exit to previous screen.

Note: Turn off auto-sleep without using DC Adaptor is not recommended because batteries will run down after a few hours of continuous operation.

### 2.8.3 Time Format

- Press **UP** or **DOWN** key to select “12-HOUR, 24-HOUR”.
- System default is 12-HOUR.
- Press **CONFIRM** to confirm.
- Press **CANCEL/RETURN** to ignore save and exit to previous screen.

### 2.8.4 Date Format

- Press **UP** or **DOWN** key to select “DD/MM, MM/DD”.
- System default is DD/MM.
- Press **CONFIRM** to confirm.
- Press **CANCEL/RETURN** to ignore save and exit to previous screen.

### 2.8.5 Languages

- Press **UP** or **DOWN** key to select “English, French, German, Italy, Spanish”.
- System default is English.
- Press **CONFIRM** to confirm.
- Press **CANCEL/RETURN** to ignore save and exit to previous screen.

## WARNING:

1. **DON'T DIRECTLY READ/WRITE TO THIS DEVICE USING OTHER PROGRAM. ONLY USE THE PC PROGRAM PROVIDED TO DOWNLOAD PICTURE TO THE PHOTO FRAME.**
2. **DON'T FORMAT THIS DEVICE; OTHERWISE THE UNIT WILL BE DAMAGE!!!**

### 2.9 USB MODE

 
- Once the USB cable is plugged, it will enter USB mode and show the below screen.



- Press **UP** or **DOWN** key to select USB Power or USB Update.
- Press **CONFIRM** to confirm.


#### 2.9.1 USB POWER

- If USB Power is selected, the unit will use the USB power as the unit power supply.
- The unit then return to clock mode and show a icon at the bottom.

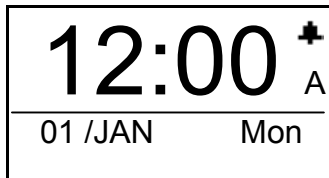

#### 2.9.2 USB Update

 - If USB Update is selected, the unit will show the following.

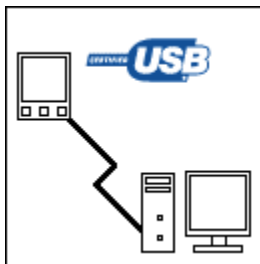

- Open the PC software to add / delete the photos in the memory
- If no photo is store in the memory, the right panel will be blank.

### 3 Running the PC Program

#### 3.1 Installation

- Insert the CD to the CD drive. Installation software will start automatically.
- If your CD does not have autorun, go to the setup directory and double click “Setup.exe” to start.
- The setup program will guide you through the installation procedure.
- Shortcut will be created on Desktop and Start Menu.

 
#### 3.2 Uninstall

- You can uninstall the program by clicking on the “Uninstall Photo Viewer” shortcut.

The SOFTWARE is provided "as is" without warranty of any kind, either express or implied, including but not limited to the fitness for a particular machine.


#### 3.3 USB Update

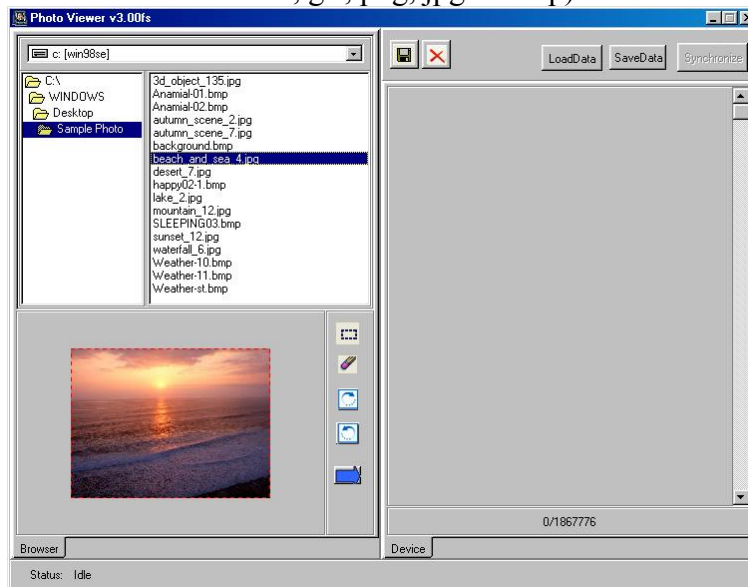


- The PC program only supports the image file format – TIFF, GIF, PNG, JPEG and BITMAP (i.e. file with extension tif, gif, png, jpg or bmp).



 - Browse the photo that is to be downloaded.

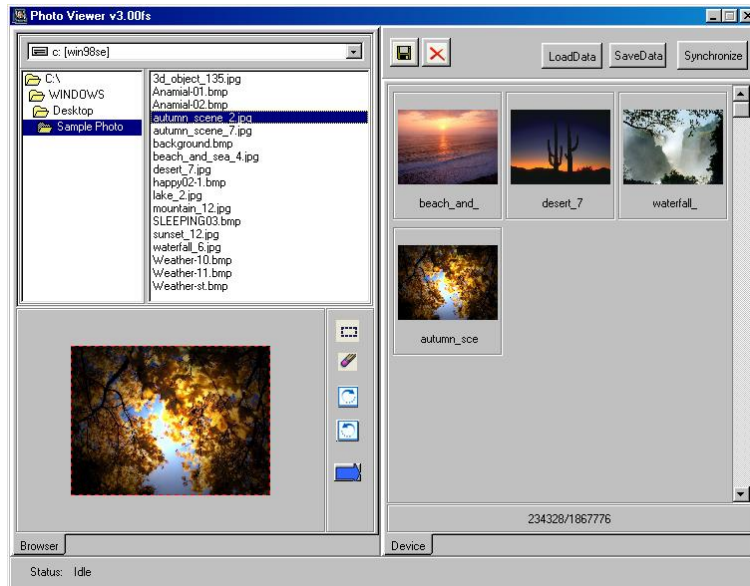



- Click  to clear default selection area.
- Select any portion of the photo by click and drag with the mouse
- Click  to add the selected photo to the right panel. (but still not physically downloaded to the device yet)
- Click “Synchronize” to process and download all photos in the right panel to your photo frame device.
- “Photo Viewer data synchronize complete” will be prompted to indicate the download has been completed.
- Unplug the USB cable to resume normal function.
- You can delete the images on the right panel and click  to delete the corresponding photo on the device physically.

## 4 BATTERY REPLACEMENT

This device operates on two AAA batteries.

Be sure to read the following precautions before replacing batteries.

- 1) Turn off the unit before replacing batteries.
- 2) Remove the battery cover. Remove the old batteries and insert new batteries into the empty compartment with correct polarity.  
**Important: Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.**
- 3) To prolong service time, we recommend the use of good quality batteries.
- 4) To avoid damage caused by battery leakage, replace battery every year regardless of how long of the unit has been operated.
- 5) Remove the batteries if the unit is not to be used for a long period of time.
- 6) Button Cell Battery can cause choking hazard if swallowed by children. Keep out of the reach of children.
- 7) Take care to fit the batteries correctly observing the positive (+) side of each battery is facing in the correct directions.
- 8) Never leave dead battery in the battery compartment.
- 9) Batteries should be replaced by an adult.

- 10) This supply terminal is not to be short-circuited.
- 11) Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the unit.
- 12) Do not expose battery to direct heat, let them become shorted, or try to take them apart.
- 13) Only batteries of the same or equivalent type are to be used. Do not mix alkaline, standard (zinc carbon), or re-chargeable (nickel cadmium) batteries.
- 14) Replace whole set of batteries at one time, do not mix old and new batteries.
- 15) Make sure battery compartment is secure.
- 16) Never try to recharge the battery that comes with the unit.
- 17) Should a battery leak, clean out the battery compartment of the unit immediately, taking care to avoid letting battery fluid come into direct contact with your skin.

***Keep batteries out of reach of small children. If swallowed, consult with physician immediately.***

## **5 RESET THE UNIT**

- Reset the unit if it fails to respond.
- Insert the pointed end of a paper clip into the small round hole located directly below the word **RESET** on the rear cabinet. Push gently.

### **In Case of difficulty**

- Check the battery to ensure that it is fresh and properly installed.
- This product may need manual reset under a strong electrostatic discharge environment. Just follow the instruction described in this manual to set the function again for normal operation.

## **6 CARE AND MAINTENANCE**

- 1) Clean the unit with a soft damp cloth. Then wipe completely dry. Never clean with cleaning agent.
- 2) Do not drop your device or subject it to strong impacts.
- 3) Protect your device from rain and extreme temperatures
- 4) To avoid damage caused by leakage of the battery fluid, replace batteries once every year regardless of how much the unit has been used during that time.

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.