

W150W FUNCTION INSTRUCTION

1. Select “4” to set communication with WW160W, CPU will process data and pass on data to IC.24C08 to store relevant information. Then CPU will enter into standby mode.
2. When W150W receive data from WW160W input module, W150W will transfer and repeat data to WW160W output module.
3. When W150W receive data from WW160W output module, W150W will transfer and repeat data to WW160W input module.