



1. External Photograph of EUT

Brand Name: Zebra; Model Name: TC15BK





Brand Name: Zebra; Model Name: TC15BK





**Brand Name: Zebra; Model Name: TC15BK**





**Brand Name: Zebra; Model Name: TC15BK**





**Brand Name: Zebra; Model Name: TC15BK**





Brand Name: Zebra; Model Name: TC15BK





## 2. Photograph of Accessory

Brand Name: Zebra; Model Name: TC15BK

### List of Accessory:

Specification of Accessory				
AC Adapter	Brand Name	Zebra	Part Number	PWR-WUA5V12W0US
Battery 1	Brand Name	Zebra	Model Number	BT-000454
			Part Number	BT-000454-20
Battery 2	Brand Name	Zebra	Model Number	BT-000454
			Part Number	BT-000454-70
Earphone	Brand Name	Zebra	Part Number	HDST-35MM-PTVP-01
USB Cable (Type C to Type A)	Brand Name	Zebra	Part Number	CBL-TC5X-USBC2A-01
Type C-Audio Cable (Type C to 3.5mm)	Brand Name	Zebra	Part Number	ADP-USBC-35MM1-01

Remark: For accessories equipped with this EUT, please refer to the following photos.

Brand Name: Zebra; Model Name: TC15BK






Brand Name: Zebra; Model Name: TC15BK

AC Adapter







Brand Name: Zebra; Model Name: TC15BK

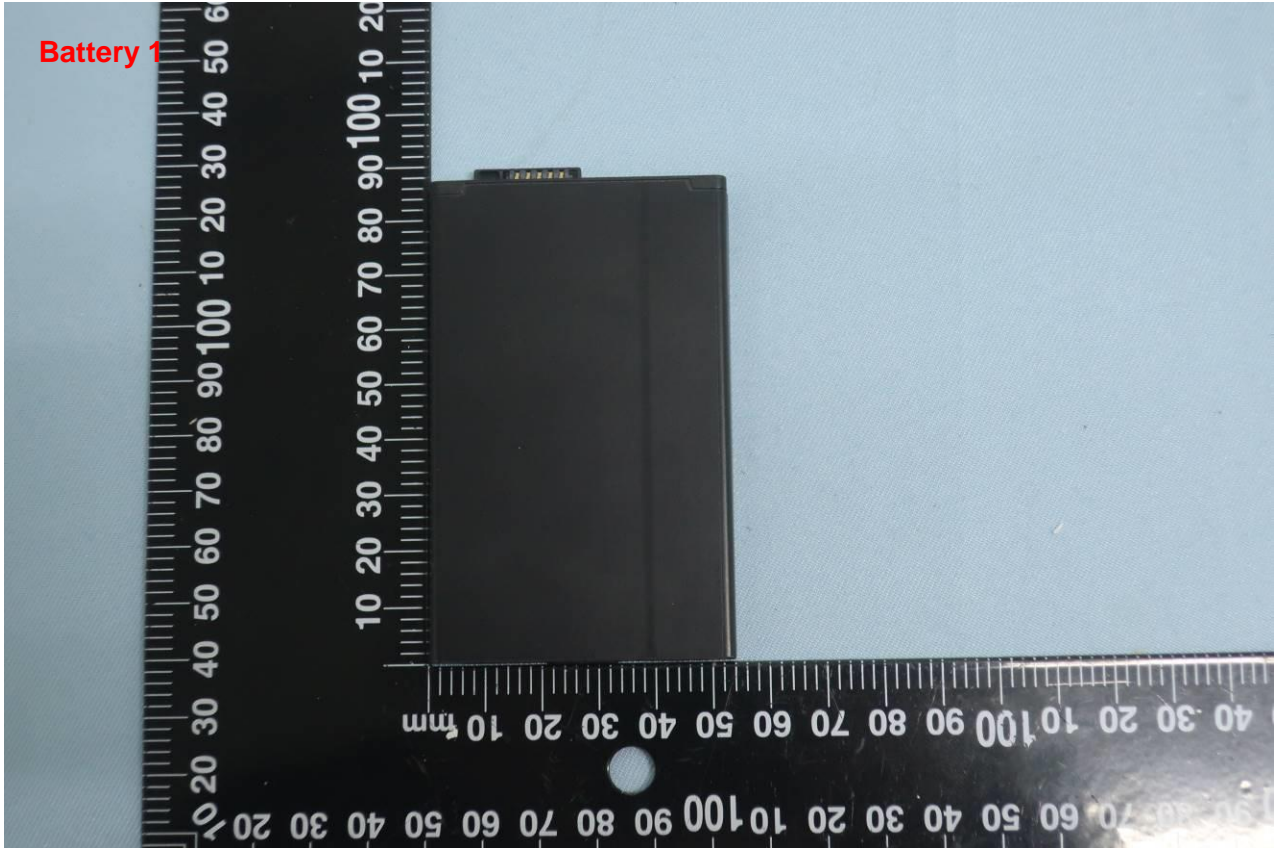

Brand Name: Zebra; Model Name: TC15BK

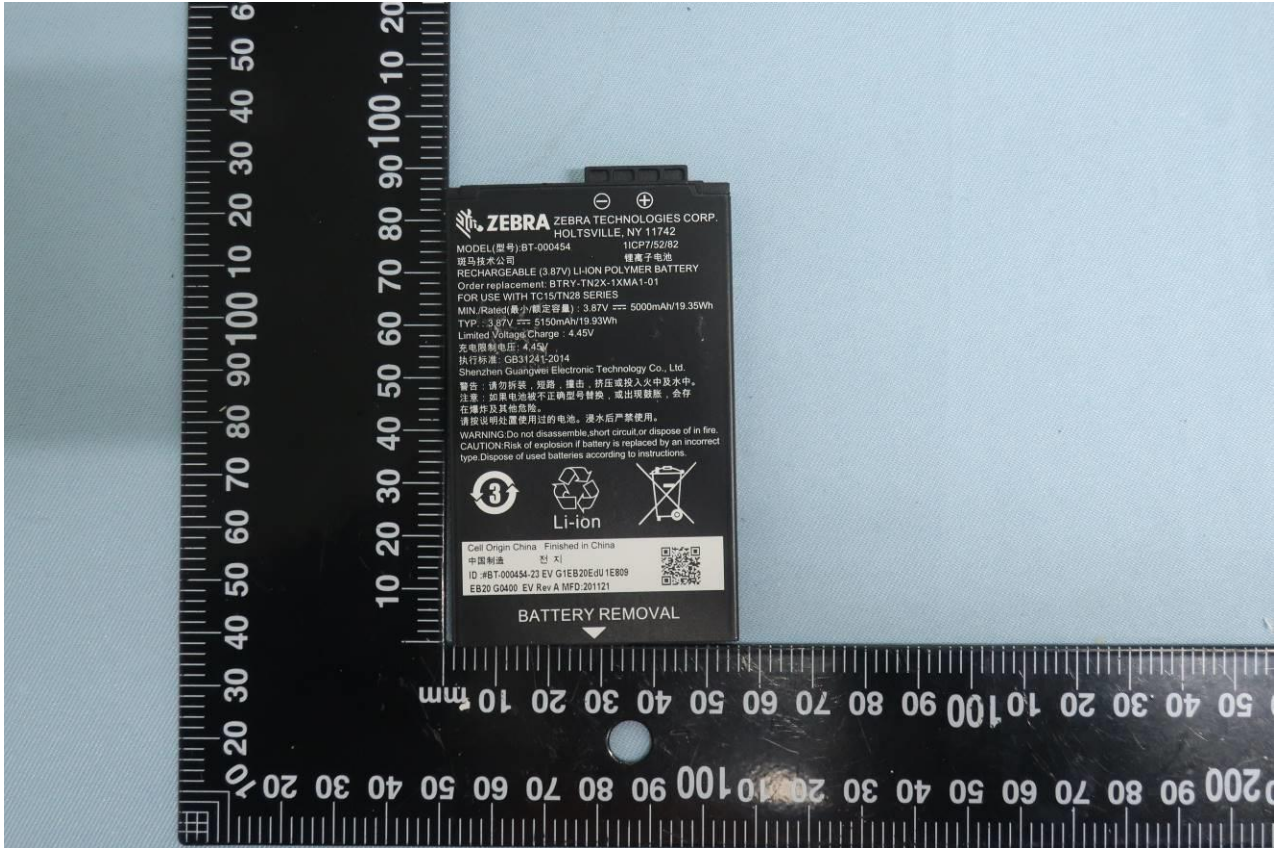


Brand Name: Zebra; Model Name: TC15BK

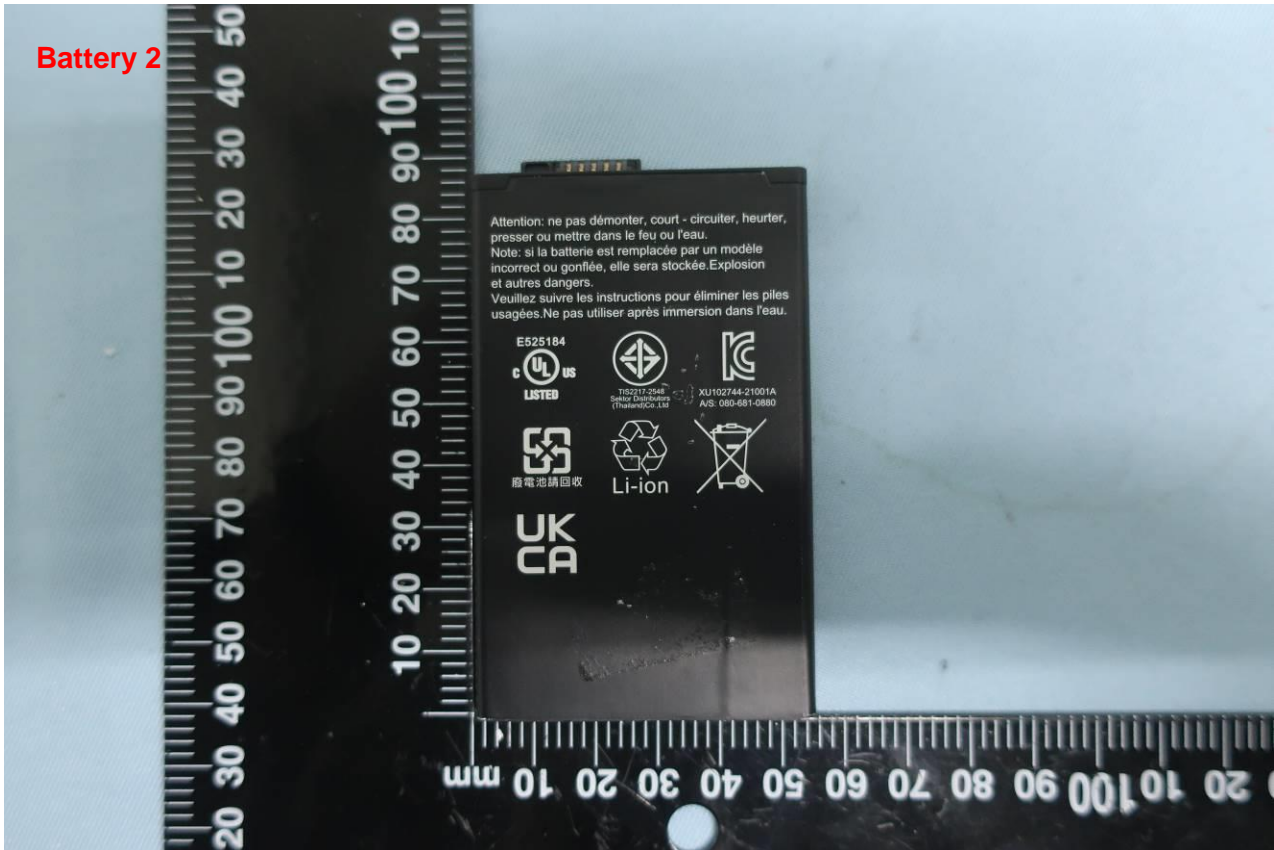



Brand Name: Zebra; Model Name: TC15BK

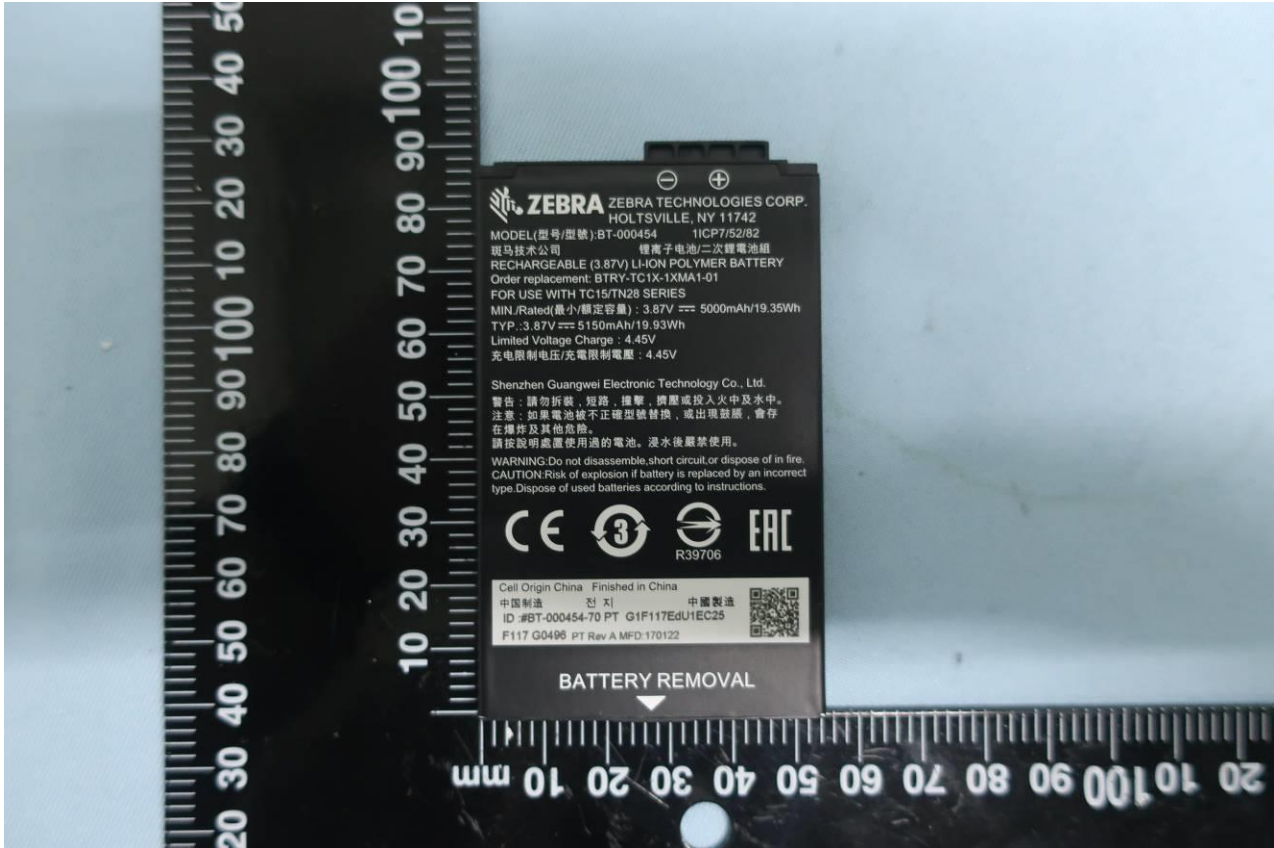



Brand Name: Zebra; Model Name: TC15BK



Brand Name: Zebra; Model Name: TC15BK



Brand Name: Zebra; Model Name: TC15BK

