

# smart<sup>e</sup>bear<sup>TM</sup>

## and friends

We made smart-e-bear smart, but you make him special with our easy Click, Connect, Cuddle system:

### I. CONNECT


1. Lift your smart-e-bear's shirt to expose the hook and loop fastener in the back, and open the hidden pouch.
2. Partially remove the smart-e-bear module to expose the mini USB port and connect the smaller plug of your included USB cable to your smart-e-bear and the larger end at the other end of the cable to your computer's USB port.

3. *(first time only)* smart-e-bear should now launch a self-installing application that will set you up with the latest version of our smart-e software.

(NOTE: you may receive warnings from your computer that a new program is installing or attempting to access the Internet; this is normal and perfectly safe. If for any reason the self installation program does not work, you can download the latest version at [www.smartebear.com](http://www.smartebear.com)

### II. CLICK

1. Double click the smart-e-bear icon on your computer's desktop to launch the smart-e software.
2. Follow the easy on-screen instructions to change the stories, songs and games on your smart-e-bear.
3. For tutorial walk-through videos and helpful tips, please visit [www.smartebear.com/tutorials](http://www.smartebear.com/tutorials)

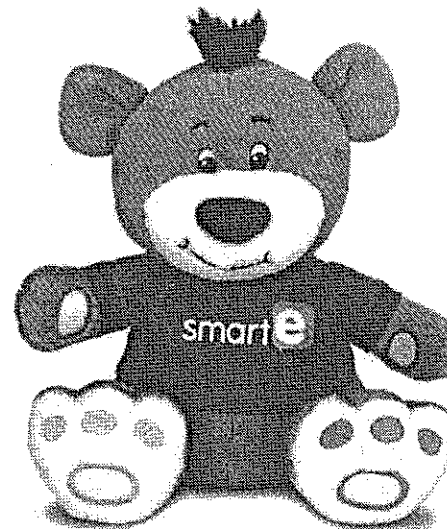

### III. CUDDLE

1. When you have made your final selections, hit the red "Sync" button.
2. Do not disconnect smart-e-bear while the "Please wait" prompt is displayed; you may disconnect when the prompt reads "Done". This may take several minutes depending on the updates you are making to your toy.
3. Disconnect the USB cable and and store it in a safe place out of reach of children.
4. Replace the smart-e-bear module into it's pouch, power the toy on, and re-seal the fastener.
5. Your customized smart-e-bear is now ready to play!!!

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and the receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class FCC limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- (1) the device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2008 Kids Preferred, LLC and Intellitoys  
East Windsor, NJ USA  
All rights reserved.  
[www.kidspreferred.com](http://www.kidspreferred.com)  
[www.intellitoys.com](http://www.intellitoys.com)

#### 90 DAY WARRANTY

We offer a full product replacement within 90 days of purchase with the original receipt. Call 866-SOFT TOY (763-8869) for more information.

For questions or technical support please visit **[www.smartebear.com](http://www.smartebear.com)**

or call **1-888-I LEARN**  
(453-2762)

#### BATTERY INSTALLATION:

Open the hook and loop fastener on the back of the body.


Pull the plastic battery case out of the pocket. Unscrew and lift cover away. (Phillips screwdriver required)

Replace batteries as shown.

Batteries included are for demonstration purposes only.

For longer life use only alkaline batteries.

Requires 2 "AA" (LR6) batteries.

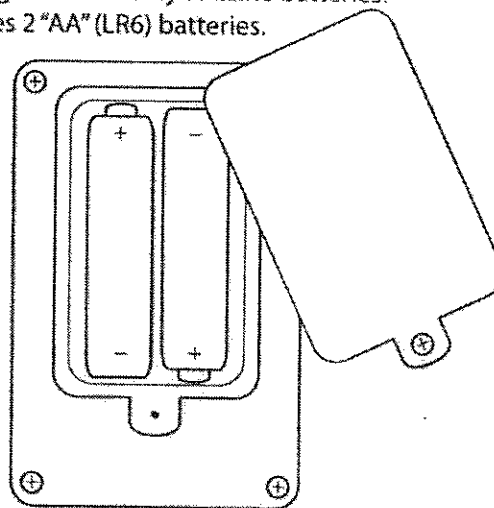

#### BATTERY SAFETY INFORMATION:

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- \* Use only AA sized carbon-zinc or alkaline batteries.
- \* Non-rechargeable batteries are not to be recharged.
- \* Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- \* Do not mix old and new batteries.
- \* Batteries are to be inserted with the correct polarity.
- \* Exhausted batteries should be removed from the toy.

#### CARE INSTRUCTIONS: Surface wash only.

Surface clean by using a cloth or sponge immersed in cold water and mild soap or detergent. Air dry. Do not immerse toy in water, dry clean or tumble dry.

KIDS Preferred™

intellitoys

**smart e bear™**  
and friends

#### INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

Before programming your smart-e-bear™ or one of his friends, remove the plastic battery case and USB cord from the small cardboard box inside the main package.

After programming, insert the case back into the fabric pocket on the back making sure the power and volume buttons are facing out.

