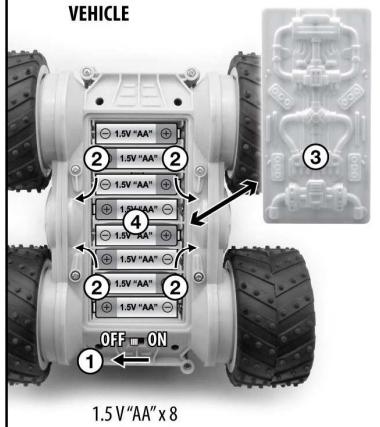
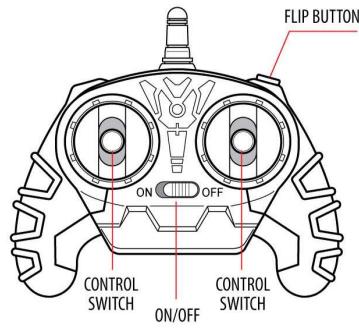


VEHICLE**BATTERY REPLACEMENT:****VEHICLE**

1. TURN THE POWER SWITCH TO THE "OFF" POSITION.
2. UNLOCK THE COMPARTMENT DOOR AS SHOWN.
3. OPEN THE BATTERY COMPARTMENT DOOR.
4. REMOVE OLD BATTERIES AND REPLACE WITH 8 NEW 1.5V "AA" BATTERIES.
5. CLOSE AND LOCK THE BATTERY COMPARTMENT DOOR.

TRANSMITTER

1. TURN THE POWER SWITCH TO THE "OFF" POSITION.
2. USE A PHILLIPS SCREWDRIVER TO LOOSEN AND REMOVE THE SCREW OF THE BATTERY COMPARTMENT DOOR AS SHOWN.
3. OPEN THE BATTERY COMPARTMENT DOOR.
4. REMOVE OLD BATTERY AND REPLACE WITH 1 NEW 9V "006P" BATTERY.
5. CLOSE THE BATTERY COMPARTMENT DOOR AND TIGHTEN THE SCREW.

TRANSMITTER**BATTERY CAUTION:**

1. Rechargeable batteries are not recommended.
2. Alkaline batteries are recommended.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Do not mix old and new batteries.
8. Only batteries of the same or equivalent types as recommended are to be used.
9. Batteries are to be inserted with the correct polarity.
10. The supply terminals are not to be short-circuited.
11. If batteries are loose, bend out the contacts for a tight fit.
12. Exhausted batteries must be removed from the toy and be disposed of immediately. Do not put the batteries in a fire.
13. Remove batteries from the toy when not in use.
14. Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PERFORMING STUNTS:


PUSH BOTH JOYSTICKS FORWARD: FORWARD

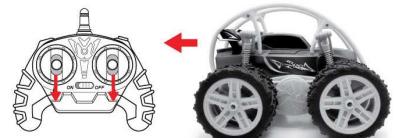

PULL BOTH JOYSTICKS BACKWARD: REVERSE



PUSH BOTH JOYSTICKS FORWARD AND SIMULTANEOUSLY PUSH THE FLIP BUTTON: FORWARD 360° FLIP

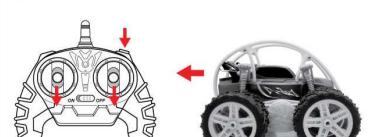

PULL BOTH JOYSTICKS BACKWARD AND PUSH THE FLIP BUTTON: BACKWARD 360° FLIP



DIRECT BOTH JOYSTICKS IN OPPOSITE DIRECTIONS: SPIN (CLOCKWISE/ANTICLOCKWISE)



ALKALINE BATTERIES ARE RECOMMENDED



DON'T PUT IN TRASH.
RECYCLE OR DISPOSE AS
HAZARDOUS WASTE.



PLEASE KEEP THIS PACKAGING FOR FUTURE REFERENCE. COLORS, DESIGNS & CONTENTS MAY VARY.
ALL RUBBER BANDS, PLASTIC AND WIRE TIES, AS WELL AS TAGS, ARE NOT PART OF THIS TOY AND SHOULD BE DISCARDED FOR YOUR CHILD'S SAFETY. REMOVE WIRE TIES BEFORE GIVING THIS TOY TO YOUR CHILD.

NO.96169
MADE IN CHINA

