


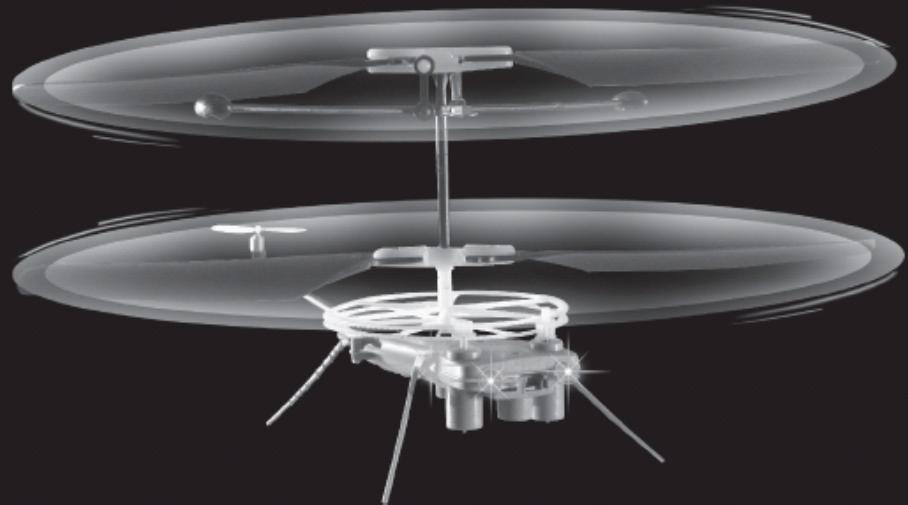

SUPER POWER
Mosquito
Helicopter



 **WARNING:**

Not suitable for children under 3 years due to small part



操作説明書
NO.608

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

1. R/C helicopter introduction 遙控直升機說明書

Thank you for your purchase of our product. In order to fly your helicopter more easily and conveniently, we kindly recommend you to read carefully the whole User handbook and keep it in a safe way as a reference book for maintenance and adjustment in the future.

謝謝您購買我們的產品。為了讓你更加容易、便利的飛行您的直升機，我們建議您仔細完整地閱讀本使用手冊，并保存管理好本手冊以備以後參考使用。


1. The double propellers airplane of the 608 helicopter series is coaxial and reversing structure effectively offers stable flight and easy operation.
1. 直升機系列608雙槳飛機采用同軸正反轉結構，使飛機更穩定并容易操作。
2. The high-volume 3.7V210mAh Li-Polymer battery pack is equipped with charging protection function. A full charged cycle will offer the helicopter with 8 to 10 minute flight, the transmitter use 9V battery.
2. 裝備高容量3.7V210mAh 鋰電電池組和充電保護功能，在完全充電情況下此直升機可飛行8到10分鐘，發射器使用9V電池供電。

2. Safely precautions 安全注意事項


- Please according to the manual's order to proceeding operation.
- 請按說明書的順序進行操作。
- Please read through the manual before using.
- 組裝前請務必閱讀此說明書。
- Please store small parts only in places out of the reach of children, to avoid danger.
- 請保存好細小物品，避免對幼兒造成傷害。
- Never leave the battery unattended during charging, to avoid the battery overheat and result in serious danger.
- 充電時請勿離開，避免電池過熱造成危險。
- Never throw Li-polymer batteries in a fire, to avoid unexpected danger.
- 鋰電池絕對不要投入火中，否則會引起爆炸。

- Operating must be caution each parts from the body, never close to the rotary propeller.
- 操作過程中，注意身體不要靠近旋轉的螺旋槳。
- Never try to personally refit the circuitry, in order to avoid accidents.
- 不要私自改裝電路，以免發生危險。

3. Parts 產品清單

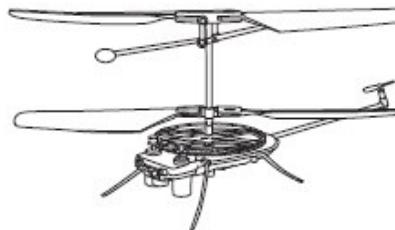

Helicopter 直昇機

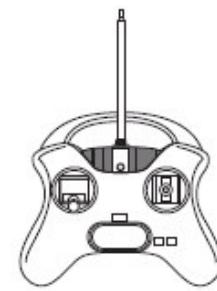

Transmitter 遙控器



Charger 充電器



9V Battery 9V電池

4. Install transmitter 遙控器安裝說明

1. As shown in diagram 1, insert the antenna into the jack on the transmitter, press slightly and turn clockwise until the antenna is connected to antenna jack.
1. 如圖1.將天線從遙控器上的小孔插入，輕輕按住并順時針旋轉，直到天線與天線座連接好為止。
2. As shown in diagram 2, install one 9V battery to the transmitter with the correct polarity, then replace the battery cover.
2. 如圖2.以正確的方向給遙控器裝上1粒9V電池，然後蓋上電池蓋。



Note: Batteries are to be inserted with the correct polarity.
注意：電池極性不能裝反。

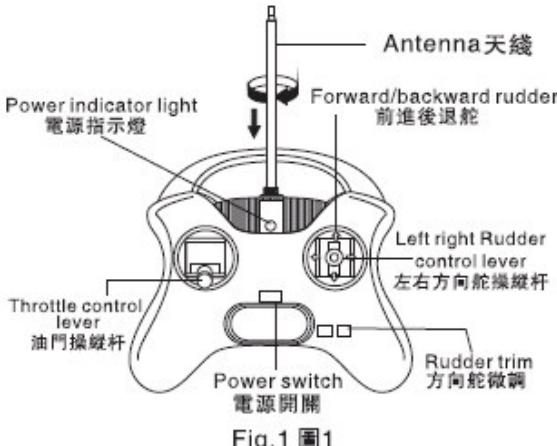


Fig.1 圖1

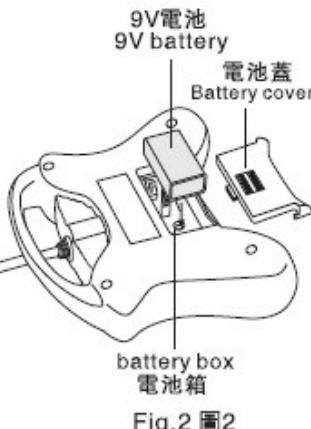


Fig.2 圖2

5. Using instructions of charging power batteries 動力電池充電使用說明

Always turn off the helicopter power, connect the charge plug of the charger to the charge slot on the helicopter, then insert the charger into the power jack. When charging the LED is off, and charge is finished the LED is on. Do not charge over the 30–50 minutes. (Fig.3)

先關閉直升機電源開關，把充電器上的充電插頭連接到直升機上的充電槽，然後將充電器插入電源座中。當充電時，LED燈會熄滅。當充電完成時，LED燈亮起。充電時間為30–50分鐘。（圖3）

- Helicopter is equipped with a Li-Poly battery, please also pay attention to the following cautions for safety use.
- Do not use or leave the battery near a heat source such as fire or heater. Otherwise it can cause damage or explode.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- When recharging, only use the battery charger specifically for that purpose.
- Do not disassemble the battery.
- Never leave the battery unattended during charging.

- 此產品配備內置鋰電池，使用要注意以下安全事項。
- 切勿把帶電電池放在高溫受熱的地方，如明火或電熱裝置，否則會發生損壞或爆炸。
- 切勿用電池撞擊或敲打硬質物體表面。
- 切勿把電池侵入水中，電池應存放在幹爽的地方。
- 只能用產品附帶的充電器為產品充電。
- 切勿分解電池。
- 充電時人員切勿離開。

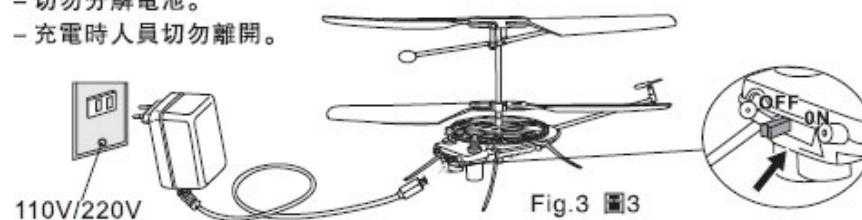


Fig.3 圖3

Make sure that the switch of the helicopter is in the position of "OFF" before charge.

充電時開關打至OFF



NOTES: Be sure the adapter fit your local electrical Power supply.
注意：充電時充電器電壓必須符合當地電壓。

6. Environment for flight: 飛行前環境

1. Please choose fly in an indoor roomily place, and be sure that without obstacles, animal and people around.
1. 請選擇在室內寬敞處飛行，並請確認附近有無障礙物、寵物及人。

Note:

- ① Please make sure the ambiences before fly.
- ② Do not make the helicopter fly out of sight when flying.
- ③ Child playing must be guided by adult.
- ④ Be sure that there is nobody using the same frequency, as you do at the same time in the room.
- ⑤ The fanner and air-condition are cannot blowing to airplane.

注意：

- ① 飛行前請務必確認周圍的環境。
- ② 飛機飛行時請勿讓飛機飛離視線。
- ③ 不能單獨讓兒童飛行，請成人陪同一起飛行。
- ④ 室內請確認無其他使用相同頻率的人在操縱玩耍。
- ⑤ 電風扇或空調器不能對飛機吹風。