


# JJC WR-100 WIRELESS CONTROLLER

Thank you for purchasing **JJC WR-100** series wireless controller. For the best performance, please read this instruction carefully before use.

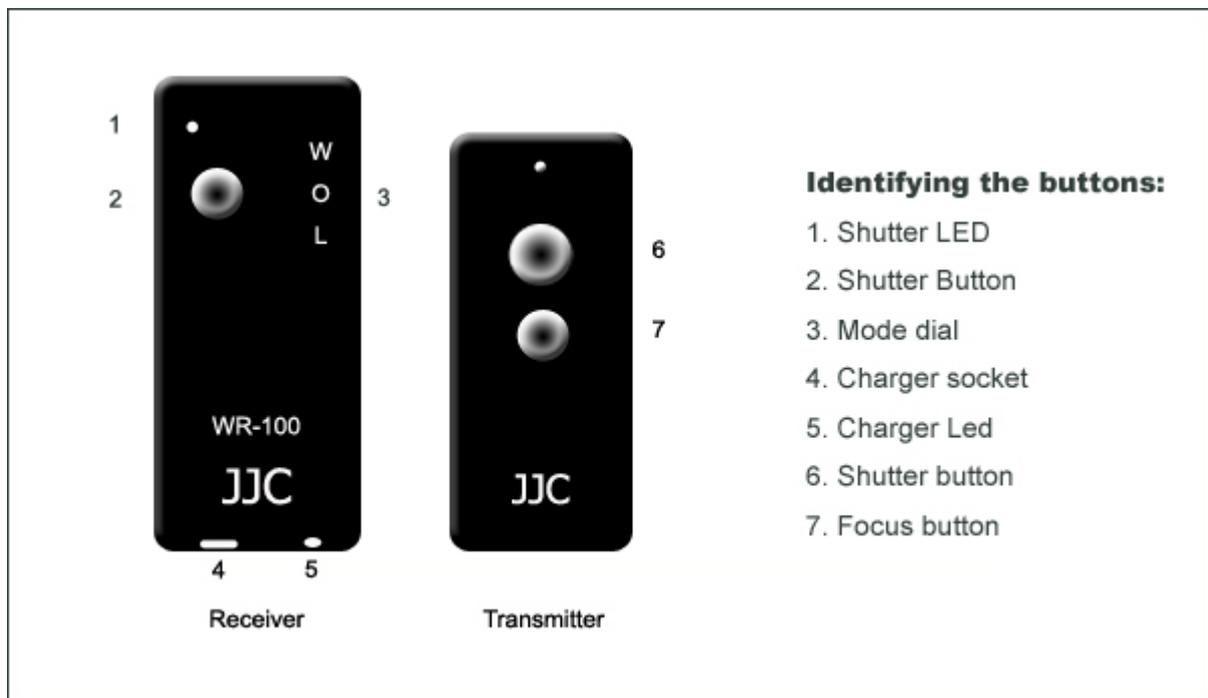

## SETUP

Remove the remote control socket cap of the camera.

Take out the JJC WR-100 wireless controller receiver and plug it into the remote control socket of the camera.

## W MODE

Slide the function button in the W Mode. The receiver is active. Under this condition, the receiver can receive the signal from the transmitter; the receiver consumes the power of the battery. User can use the Shutter button of the transmitter and Focus button to control the Camera's shutter and Focus. Press the transmitter's shutter button to take a photo. Press the transmitter's focus button to focus.

## O MODE

Slide the function button in the O Mode. The receiver is turned off. Under this condition, the transmitter can not activate the receiver to control the camera. The receiver will not consume any power of the battery. User can use the shutter button of the receiver to take photos. Press the shutter button halfway to focus. Press it fully to take a photo.

## L MODE

Slide the function button in the L Mode and turn on the camera to BULB mode. Under this condition, the transmitter opens the lens; Slide the function button in the O Mode, the transmitter closes the lens.

When the camera is under no-Bulb mode and taking the photo, the transmitter will lock the shutter button, and the camera will implement continues shooting. Under L mode, the transmitter can not control the receiver.

**Operating range**

Maximum operating range 100m. (The operating range may be obstructions or interference with other electronic equipment to reduce the distance)

**Charging**

The WR-100 inbuilt High Capacity Li-ion battery. Take out the power adapter, plug it into the power socket of the transmitter and then plug the power adapter to the power outlet. When the transmitter is under charging, the light of transmitter is on. There are 5 lights, each light represent 20% of battery power. When all of the lights are on, which mean the battery is full, please take off the power adapter.

**WR-100A compatible with Canon**

EOS 5D	EOS 1D	EOS 1Ds	EOS 1D Mark II	EOS 1Ds Mark II
EOS 1Ds Mark II Digital	EOS 1D Mark II N Digital	EOS 1D Mark III	EOS 1DS Mark III	EOS 400D Digital
EOS 30D	EOS 20D	EOS 10D	EOS D60	EOS D30
EOS 40D	EOS 1V	EOS 3	EOS D2000	

**WR-100B compatible with Nikon/ Kodak/ Fuji**

Nikon	D2H	D1x	D1h	D1
	D2x	D100*	D200	F5
	D2Xs	D300	D3	
	F6	F100	F90	F90x
Kodak	DCS-14n			
Fuji	Finepix S3pro	Finepix S5pro		

\*MB-D100 Vertical Grip/Battery Holder Needed

**WR-100C compatible with Canon/ Pentax/ Contax/ Samsung**

PENTAX	K100D	K110D	K10D	*ist DS2
	K100D Super			
	*ist D	*ist Ds	*ist	*ist DL
	MZ-6	ZX-L	MZ-L	*ist DL2
CONTAX	645	N	N1	NX
	N Digital			

Samsung	GX-1L,	GX-1S	GX-10	
---------	--------	-------	-------	--

CANON	EOS 30	EOS 33	EOS 50E	EOS 300
	EOS 300V	EOS 300D	EOS 350D	EOS 3000
	EOS 50	EOS 500	EOS 55	EOS 500N
	EOS 300X	EOS Kiss	EOS New Kiss	EOS Kiss 7
	EOS Kiss III	EOS 7	EOS 7s	EOS400D
	EOS Digital Rebel		EOS Digital Rebel XT	
	EOS Digital Rebel XTi		Kiss Digital	Kiss Digital N
	ELAN 7N	ELAN II	ELAN DATE	ELAN 7
	ELAN 7NE	ELAN 7N	ELAN IIE	Rebel 2000
	Rebel G	Rebel T2	Rebel Ti	Rebel X
	Rebel XS			

**WR-100D compatible with Panasonic**

Panasonic	DMC-FZ20	DMC-FZ20k	DMC-FZ20S	DMC-FZ30
	DMC-FZ30K	DMC-FZ30S	DMC-FZ50K	DMC-FZ50S
	DMC-FZ50	LC-1	L1	DIGILUX 2
	DIGILUX 3			

**WR-100E compatible with Olympus**

Olympus	E1	E10	E20	E20N
	E300 *	E100RS	C8080 *	C7070 *
	C5060 *	C2500L		

\*via the Power Battery Holder

**WR-100F compatible with Sony/ KonicaMinolta**

Sony	DSLR-A100		DSLR-A100K	
KonicaMinolta	Maxxum 7D	Maxxum 5D	Dynax 7D	Dynax 5D
	Maxxum 9	Maxxum 7	Maxxum 4	Maxxum 3
	Dynax 9	Dynax 7	Dynax 4	Dynax 3
	Maxxum 807si	Maxxum 700si	Maxxum 600si	Maxxum 505si
	Maxxum 500si	Dynax 505si	Dynax 500si	Dynax Sweets
	Maxxum 9000	Maxxum 7000	Maxxum 5000	Dynax 9000
	Maxxum 800si	Dynax 807si	Dynax 800si	Dynax 600si
	Dynax 7000	Dynax 5000	DiMAGE 7Hi	Dynax 700si
	DiMAGE 7	DiMAGE 5	Maxxum Sweets	Maxxum Sweets
		DiMAGE 7i	Dynax Sweet	

**WR-100G compatible with Nikon**

Nikon	D70S	D80
-------	------	-----

**WR-100H compatible with Sigma**


Sigma	SD-9	SD-10
-------	------	-------

**WR-100I compatible with Sigma**

Sigma	SD14
-------	------

**WR-100J compatible with Olympus**

Olympus	SP-510 UZ	SP-550 UZ	E400	E410
	E510			

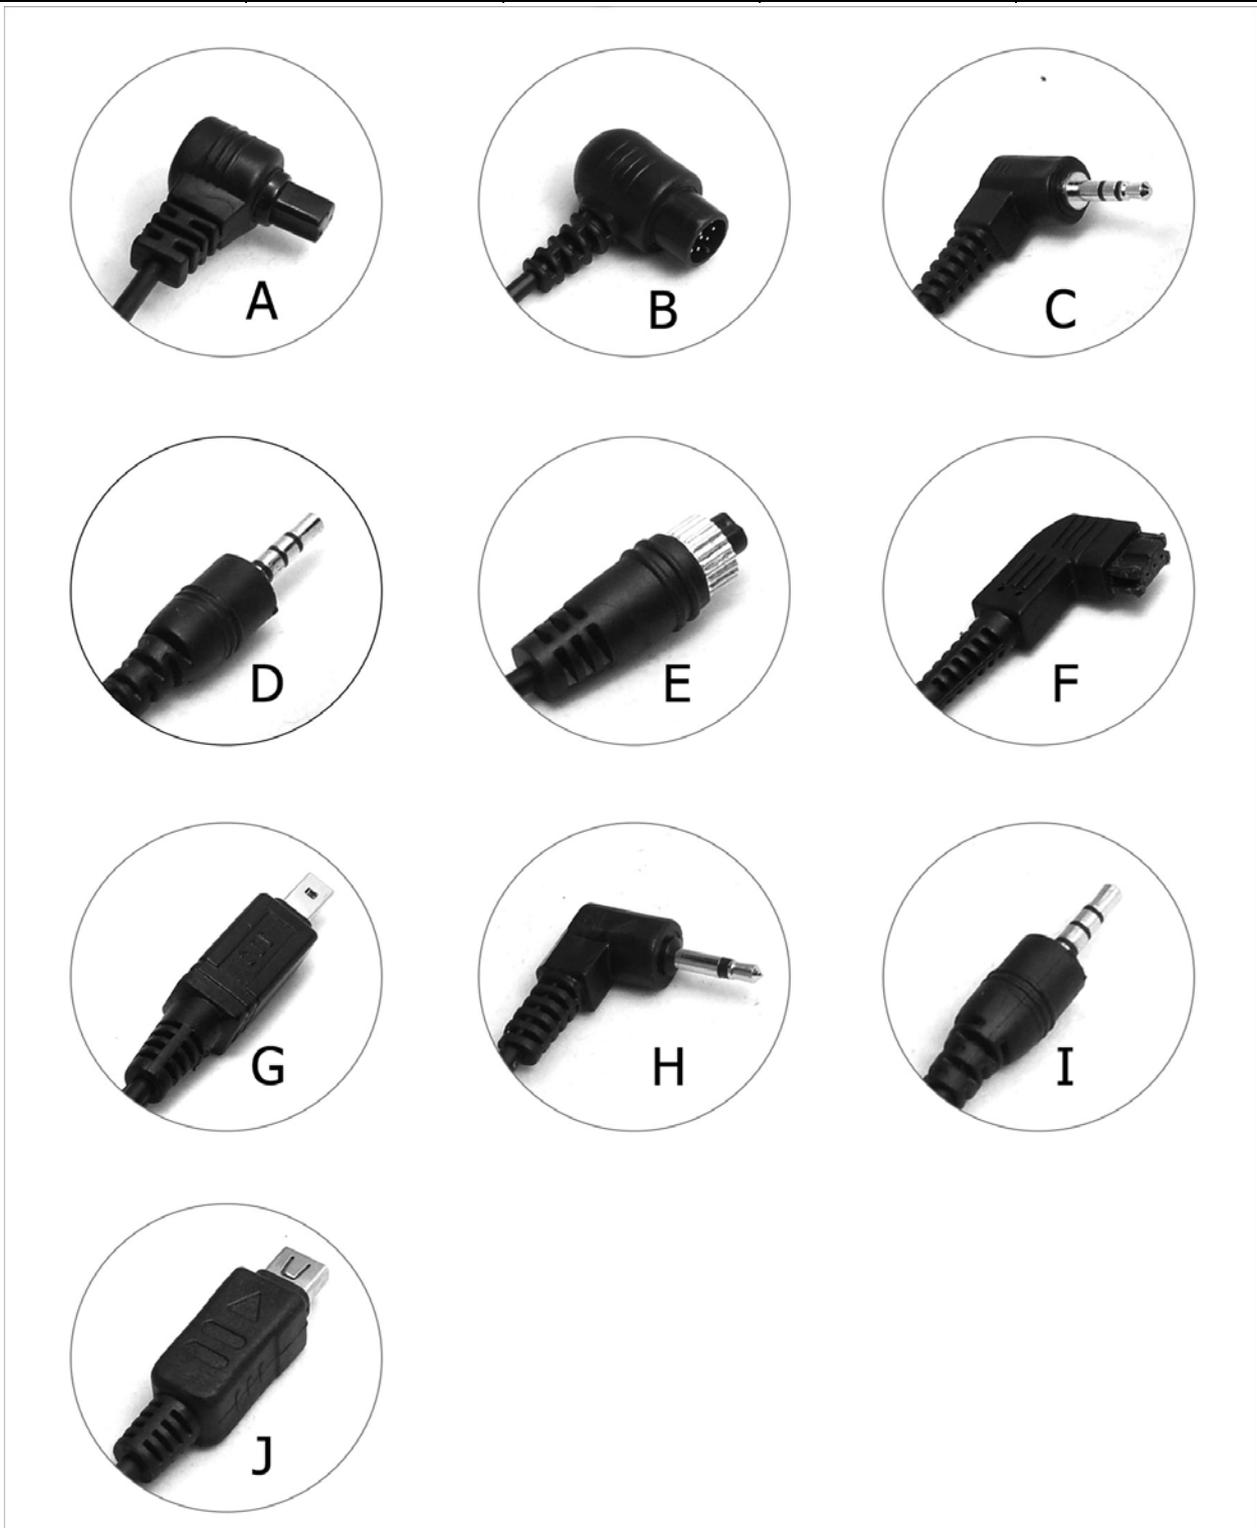

**FCC Caution:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Notes:**

The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.