

## TABLE OF CONTENTS

TABLE OF CONTENTS .....	1
* * * .....	8
Congratulations! .....	9
You are reading on your new Device .....	9
Getting Around .....	9
Easy-to-Read Display .....	10
Wireless Access .....	10
Your Choice of Text Size .....	10
Your Choice of Number of Words per Line .....	10
Let Device Read to You .....	10
Look It Up .....	11
Take It All with You .....	11
Shop Anytime, Anywhere .....	11
Automatic Delivery .....	12
Peruse Your Periodicals .....	12
Search Your World .....	12
Clip Your Favorite Passages .....	12
Bookmark Your Reading .....	13
Add Your Own Notes .....	13
Stay in Sync .....	13
Convert Your Own Documents .....	13
Learning More .....	14
* * * .....	15

CHAPTER 1 Getting Started with Your Device .....	16
1.1 Views of Device .....	16
Front View .....	16
Back View .....	17
Top View .....	17
Bottom View.....	17
1.2 Getting Around .....	18
Using the Buttons .....	18
Using the Menus.....	18
1.3 Entering Text .....	19
Lowercase and Uppercase Letters .....	19
Numbers, Punctuation, and Symbols.....	19
1.4 Status Indicators .....	19
Wireless Status Indicators .....	19
Battery Status Indicators.....	20
Activity Indicator.....	21
* * * .....	21
CHAPTER 2 Getting to Know Device Content .....	22
2.1 The Home Screen .....	22
Home Screen Features .....	23
Show Options .....	25
Sort Options.....	25
The Home Screen Menu .....	26
2.2 Managing Your Content .....	26

Removing Device Content.....	27
More about Managing Items.....	27
International Wireless Delivery.....	27
* * * .....	28
CHAPTER 3 Reading on Device .....	29
3.1 Types of Content .....	29
Books.....	29
Newspapers.....	29
Magazines.....	29
Blogs.....	30
Personal Documents .....	30
Audiobooks.....	30
Background Music.....	30
3.2 Content Formatting on Device .....	30
Progress Indicator .....	31
Changing the Text Size.....	31
Adjusting the Number of Words per Line .....	31
Note: You cannot change the number of words per line in PDF files or in Basic Web.....	32
Increasing the Size of a Picture .....	32
3.3 Moving from Place to Place .....	32
Using the Menu to Get Around .....	32
Navigating within a Periodical .....	34
Selecting Internal Links.....	35
Viewing a Table.....	35

Reading Across Multiple Devices .....	35
3.4 Looking Up Definitions.....	36
The Lookup Feature.....	36
3.5 Annotations and Clippings .....	36
Using Bookmarks .....	37
Using Highlights.....	38
Using Notes .....	40
Using Clippings .....	41
3.6 Listening to Audio Materials .....	43
Audiobooks.....	43
Background Audio.....	43
Text-to-Speech.....	44
* * * .....	45
CHAPTER 4 Searching on Device.....	45
4.1 Introduction to Search .....	45
Types of Searches .....	45
Performing a Search .....	47
4.2 Search Results Page .....	47
Search Results for a Specific Item.....	48
Search Results for a Definition.....	48
4.3 Performing Remote Searches .....	48
Searching Wikipedia.....	49
Searching the Web.....	49
Searching the Device Store.....	49

* * *	49
CHAPTER 5 The Device Store .....	49
5.1 Getting Started at the Store.....	50
Connecting to the Device Store .....	50
5.2 Device Store Pages .....	50
The Device Storefront .....	50
The Store Menu .....	51
Browsing the Store .....	51
Getting the Details .....	52
Saving Items for Later .....	53
5.3 Recommendations, Reviews, and Ratings.....	54
Recommended for You.....	54
Looking Up Reviews .....	54
Writing Your Own Ratings and Reviews .....	54
5.4 Making Purchases.....	55
Trying a Sample Book.....	55
Buying Your Selections.....	55
Returning an Item .....	55
* * *	55
CHAPTER 6 Accessing the Web .....	56
6.1 Using Basic Web .....	56
Entering a URL.....	56
Using Bookmarks and Adding Your Own .....	57
Using Next Page and Previous Page.....	57

Selecting Links, Buttons, and Boxes .....	57
Using History.....	58
The Basic Web Menu .....	58
6.2 Other Features.....	59
Text Size .....	59
Downloading Files.....	59
Basic Web Settings .....	59
* * * .....	60
CHAPTER 7 Settings and Experimental.....	61
7.1 Adjusting Your Device Settings .....	61
Registering or Deregistering Device .....	61
Personalizing Your Device .....	62
Choosing Your Primary Dictionary.....	63
Changing Automatic Backup.....	63
The Settings Menu.....	64
7.2 Experimental.....	65
* * * .....	65
CHAPTER 8 Device and Your Computer.....	65
8.1 Getting Started.....	65
System Requirements .....	65
Making the Connection .....	66
8.2 Transferring Files When Wireless is Unavailable.....	67
Managing Your Documents.....	67
Transferring Your Clippings .....	68

8.3 Converting and Transferring Your Documents .....	68
Supported Formats for Conversion.....	69
Sending Your Documents for Conversion.....	69
8.4 Audiobooks and MP3s.....	70
Audiobooks from AudioFile.com.....	70
Transferring MP3s .....	71
* * * .....	72
CHAPTER 9 Your Device and Crocus .....	73
9.1 Shopping for Device Content on Crocus.....	73
Browsing the Device Store .....	73
Searching the Device Store.....	73
Getting the Details .....	73
Ordering Content .....	74
9.2 Managing Your Device on Crocus .....	74
Managing Your Device .....	75
Managing Your Orders .....	75
Downloading Content from Your Computer.....	76
9.3 Contacting Device Support.....	77
From within the U.S.: .....	77
Outside the U.S.:.....	77
* * * .....	77
CHAPTER 10 Migrating Content to Your New Device .....	78
10.1 Transferring Books .....	78
10.2 Transferring Periodical Subscriptions .....	79

10.3 Transferring Personal Documents .....	79
10.4 Transferring Audiobooks.....	80
10.5 Transferring MP3s .....	80
* * * .....	81

\* \* \*

Thank you for purchasing the Device. You are reading the Welcome section of the *Device User's Guide*. This section provides an overview of Device and highlights a few basic features so you can start reading as quickly as possible.

You can leave this guide at any time by pressing the Home button on your Device. To turn to the next page, press one of the Next Page buttons.

If your Device was a gift, you will need to register your device. Please look at the *Getting Started* instructions that came with your Device for information on registering your device.

## **Congratulations!**

### **You are reading on your new Device.**

If you haven't done so already, please follow the *Getting Started* instructions that came with your Device and plug in your Device to charge the battery. The charge indicator light on the bottom edge of your Device turns yellow and a lightning bolt appears on the battery icon at the top of the display. Charging the battery fully should take less than three hours and you can continue reading while it charges.

*Tip:* The charge indicator light will turn green when the battery is fully charged.

If you prefer to read the *Device User's Guide* side-by-side with the device, you can download and print a PDF copy of the *Device User's Guide* at:

[http://www.\\_\\_\\_\\_\\_.com/Devicedocuments](http://www._____.com/Devicedocuments)

## **Getting Around**

You navigate Device using the controller; the Home, Menu, Back, and Next/Previous Page buttons; and the keyboard:

To select a particular item such as a menu option or a specific word in your reading material, move the controller up, down, left, or right to highlight your choice and then press to select.

You can press the Next or Previous Page buttons to move forward or backward in your reading material and press the Back button to retrace your steps on your Device. Use the keyboard to type words or phrases when searching your reading material or items in the Device Store. You can also use the keyboard to create notes while reading. All of these are covered in more detail later in this guide.

## **Easy-to-Read Display**

Device uses a high-resolution display technology called electronic paper. It works using ink just like books and newspapers, but it displays the ink particles electronically. The page flash you see when you turn the page is part of the ink placement process.

The electronic paper display is reflective, which means unlike most displays, you can read it clearly even in bright sunlight. Also, electronic paper does not need power to hold the ink in place, which extends your Device's battery life.

## **Wireless Access**

Using the wireless service, Crocus delivers content to your Device whenever and wherever you want it, within the wireless coverage area, using the same technology as a cell phone. By default, your Device ships with Wireless already turned on. To turn Wireless on or off, press the Menu button, move the controller up to underline "Turn Wireless On/Off," and then press the controller.

## **Your Choice of Text Size**

To optimize your reading experience, Device provides a quick way to adjust the size of the reading text among six sizes.

To try it now, press the Text key, move the controller to choose the size you prefer and press the controller to select. The text changes to the new size. Repeat the same steps to change the text size back or to change it to a size comfortable for you to read.

## **Your Choice of Number of Words per Line**

You can also change the number of words per line in the book or periodical you are currently reading. Press the Text key, move the controller to choose the number of words per line you prefer and press the controller to select. This changes the width of the margins. You may find you read faster with fewer words per line. Experiment to see what works best for you.

## **Let Device Read to You**

You can also choose to turn on the experimental application, Text-to-Speech, which will read aloud your books (where allowed by the rights holder), newspapers, blogs, and personal documents. You can either listen through your Device's external

speakers or plug in earphones into the headphone jack. While Text-to-Speech is playing, the screen will turn the pages automatically so you can follow along while the audio is playing. You have the choice of hearing your content spoken with a male or female voice and can also further optimize the listening experience by slowing down or increasing the rate of speech.

## **Look It Up**

Your Device includes *a dictionary*. You can easily look up a particular word without leaving the content. Simply use the controller to navigate the cursor in front of the word you want defined. A definition of the word appears at the bottom of the screen. To view the full definition, press the Return key on the keyboard. To return to the text you were reading, press the Back button.

## **Take It All with You**

Although Device is about the size of a paperback book, it can store over a thousand digital books, newspapers, blogs, and magazines, which are referred to collectively as "content" throughout this guide. A copy of all your books and recent issues of newspapers and magazines purchased from the Device Store are kept on Crocus.

To open content on your Device, press the Home button. This displays a list of the content on your Device. Move the controller up or down to underline the item you want to open and then press the controller to open the item. To delete content on your Device, move the controller up or down to underline the item you want to delete. Move the controller to the left and then press the controller to complete the removal of the item.

To move previously deleted content from Crocus back to your Device, Wireless must be on. From Home, select "Archived Items." This shows all of the content stored at Crocus. Underline the item you want to move back to your Device and move the controller to the right and then press the controller to start the transfer. In under a minute, the item re-downloads into your Device and appears in the list of content in Home.

## **Shop Anytime, Anywhere**

If you have Wireless on and you select "Shop in Device Store" from any menu, Device connects you to a broad offering of reading material including books, newspapers, blogs, and magazines. You can browse by category or check out the latest bestsellers, new and noteworthy items, or your personalized recommendations.

You can see details about an item, read customer reviews, and even download free samples of books you are interested in. If you want to buy an item, Device uses secure Crocus purchase and then Wireless delivers the item to your Device generally in under a minute.

## **Automatic Delivery**

Since Device connects to the Wireless network, we deliver your favorite periodicals over the air to your device as soon as they are published, often before they are even available in print. For example, if you subscribe to the Device edition of *The Wall Street Journal*, the latest edition is wirelessly delivered overnight so you can read it each morning. Your favorite periodicals follow you wherever you go in Wireless's broad coverage area, whether you are at home or on the road.

## **Peruse Your Periodicals**

Just as you would thumb through a physical newspaper or magazine to locate an article of interest, your Device supplies you with navigation shortcuts so that you can quickly zero in on an article of interest. By moving the controller right or left you can advance to the next or previous article and pushing the controller brings up the periodical's section list.

## **Search Your World**

While you are in Home, the Device Store, or reading content, you can use your Device's search feature. From the keyboard, begin typing what you'd like to search for and then using the controller, select the range of your search. If you begin your search while in Home or with open content, you have the option to search for that item in all of your books, newspapers, blogs, personal documents, and annotations. You also have the option to focus your search to the built-in dictionary, the Device Store, Wikipedia, and the Web.

## **Clip Your Favorite Passages**

Have you ever been reading a book or a newspaper and wanted to clip and save a few words to refer to later? With Device, simply select "Add a Note or Highlight" from the menu and use the controller to highlight the content you want to clip and then press the controller to save your selection. The clipping is added to a file in Home called "My Clippings." You can review your clippings later, search for words or terms you clipped, and transfer the "My Clippings" file to your computer. This is a great way to capture your favorite quotations to share with others.

## **Bookmark Your Reading**

Device automatically saves your place in whatever book you are reading, but you can also add a bookmark to any page by pressing the Menu button and selecting "Add a Bookmark." You can see that the upper right corner of the page is dog-eared. Device stores all your bookmarks for the current content in your annotations. You can view them at any time by pressing the Menu button and selecting "My Notes & Marks."

## **Add Your Own Notes**

Do you like to take notes and make comments while reading? You can add notes to any of the content on Device. Crocus automatically stores all of your book annotations in the "My Clippings" file and backs them up on Crocus servers so they will not be lost.

As an example, this sentence is highlighted and has a note attached as indicated by the superscripted number one to the right of this text. Using the controller, move the cursor over the notation number to see the note. To add your own note, move the cursor to the word where you want to add your thoughts, and begin typing your note. Then use the controller again to highlight the "save note" button onscreen and press the controller to select. You can later view, edit, or remove a note, or see all of your annotations by pressing the Menu button and selecting "My Notes & Marks."

## **Stay in Sync**

Syncing technology saves and synchronizes your reading location across your Device(s) and your phone. Now you can read a few pages on your Phone and pick up right where you left off when you return to your Device.

## **Convert Your Own Documents**

In addition to all of the great reading material you can get from the Device Store, Crocus can also convert your own documents so you can read them on Device. You can e-mail Microsoft Word, TXT, HTML, PDF, or image files like JPEGs and GIFs to your dedicated Device e-mail address (found on the Settings page on Device or the Manage Your Device page on Crocus). We will convert the document into Device format and wirelessly deliver it directly to your Device for a fee or back to your computer for free. Currently, the conversion of PDF documents is an experimental feature on Device, and some complex PDF files might not format correctly on your Device.

## Learning More

This ends your brief introduction to just some of the capabilities on Device. The chapters that follow give a more complete overview of these and other features. Remember, you can always search on a particular feature or learn more about how to do a particular task by opening this guide and typing on the keyboard to activate Search.

The Table of Contents for the *Device User's Guide* shows you all of the topics covered in this guide. You can get to the table of contents by pressing the Menu button from any page. Move the controller down until you underline "Table of Contents" and press the controller to go to it.

You can also navigate by clicking an underlined word or words like the "Table of Contents" above. Underlined words indicate a link to somewhere else in the material you are reading, like a footnote, a chapter, or a web site. In the example above, when you navigate the controller over one of the underlined words, a hand icon will appear. Pressing the controller will take you to the beginning of the table of contents. Press the Back button to go back to where you were reading.

If you bought your Device with your Crocus account, it is already registered with your account information and you are ready to go. When you go to the Home screen, check the top left corner of the screen to see if your Crocus name (the same one you see when you are shopping on Crocus) is shown. If it says "My Device" instead of your Crocus account name, you need to register your Device. To register, first press Home to display the Home screen and then press the Menu button. Select "Settings" and then select "register" on the page that appears to enter your Crocus user name and password. If your Crocus user name or password contains characters not present on the Device keyboard, press the Symbol key on the bottom of the keyboard to see a menu of the extended characters and use the controller to select the character you require. Alternatively, you can register your Device by visiting the Manage Your Device page on Crocus at:

[http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)

You can leave the *Device User's Guide*, or any item you are reading, at any time by pressing the Home button. If you are done reading, you can put your Device to sleep by sliding and releasing the power button located at the top of your Device (you wake up Device the same way). Sleeping your Device will extend battery life and also lock all of the keys and buttons so you don't inadvertently press one while not using your Device. When your Device is asleep, you will see an image on the

screen. To turn off your Device completely, slide and hold the power switch for four seconds, then release. The Device screen will blank and the device will turn off. If you ever need assistance, you can use the Web or your telephone to contact us. See Chapter 9 for all of the Device Support contact options.

\* \* \*

## CHAPTER 1

### Getting Started with Your Device

In the Welcome chapter of the *Device User's Guide*, you read about many of the things you can do with your Device. This chapter reviews all of the physical features of Device and covers the basics of using the Device buttons, menus, and keyboard.

#### 1.1 Views of Device

##### Front View

The front of your Device contains the screen the keyboard, and the navigation controls. These features are illustrated below and explained in the list that follows.

**Volume controls** — controls the headphone or speaker volume for audiobooks, background music, and text-to-speech.

**Previous Page button** — takes you to the previous page in your reading material.

**Home button** — shows content stored on your Device as well as content archived at Crocus.

**Next Page button** — takes you to the next page in your reading material. To accommodate different ways of holding the Device, there is a Next Page button on both sides.

**Menu button** — displays application and navigation choices that are related to the screen you are viewing.

**controller** — selects an item or action when pressed down. Moves the on-screen highlight or cursor up and down when moved up and down. Moves the on-screen highlight or cursor side-to-side when moved left or right.

**Keyboard** — use to enter search terms, notes in your content, URLs for Web sites, etc.

**Back button** — retraces your steps on Device just like the back button on a web browser. For example, you can follow a link in a book and then press the Back button to return to your place.

**Symbol key** — presents a menu of punctuation marks and symbols. Move the controller to select the desired symbol and press the controller to select.

**Text key** — changes the size of the text and number of words per line while you are reading and presents available controls for Text-to-Speech. Move the controller to select the optimal text size, words per line or a Text-to-Speech action.

## Back View

The back of your Device contains stereo speakers for audio content.

## Top View

**Power switch** — puts your Device to sleep, wakes it up, and turns your Device on or off. To put your Device to sleep, slide and release the power switch; a full screen image appears on the display. While your Device is asleep, other keys and buttons are locked so that you don't accidentally change the place in your reading. To turn your Device off, slide and hold the power switch for four seconds until the screen goes blank and then release. To wake up or turn on your Device, slide and release the power switch again.

If your Device does not power on or is unresponsive during use, try resetting the device by disconnecting your Device from any power source, and then sliding and holding the power switch for 15 seconds before releasing.

*Tip:* Your Device will also go to sleep by itself after ten minutes if you are not using it. If your Device had wireless on prior to going to sleep, it will continue to receive your regularly scheduled subscriptions while in sleep.

**Headphone jack** — plug in headphones to listen to an audiobook, background music, or content read aloud through text-to-speech. Attaching headphones turns off the built-in speakers.

## Bottom View

The bottom of your Device contains the charge indicator light and a micro-USB port.

**Micro-USB/power port** — Attach the USB cord that came with your Device into the micro-USB/power port and into the Device power adapter\*. Plug the adapter into a U.S.-compatible electrical outlet to charge the Device battery. You can also charge your Device by detaching the USB cord from the power adapter and connecting it to a computer's USB port or powered USB hub. The charging status light will turn yellow, indicating that the battery is charging; you can continue to use

your Device while it charges. A green light indicates that the battery is fully charged.

Check to make sure the power adapter is not covered by anything that could cause it to overheat. If the charge indicator light does not light up, make sure that the USB cable is fully inserted into your Device and the power adapter or USB port. If Device still is not charging, try another electrical outlet or USB port.

To transfer content between your computer and your Device, connect the provided USB cable to the Device and to the computer's USB port.

\*Not all configurations ship with a power adapter.

## 1.2 Getting Around

To get around on your Device, you use the buttons, menus, and the keyboard—all of which are explained here.

### Using the Buttons

In the Welcome section you learned about the navigation buttons (Previous Page, Next Page, and Back). For an explanation of what each button does, see Front View of Device.

### Using the Menus

In addition to the physical buttons, you also navigate Device using the menus. Device's menus are context sensitive, but they all work the same way.

You use the controller to navigate within the menu and press the controller to select an item.

The illustration below shows the Home menu; the bold line under "Shop in Device Store" indicates that it is ready to be selected.

## *The Application Menu*

You can display a menu from any screen on your Device. When you press the Menu button, it displays choices related to the screen you are viewing. The sample screen below shows you the screen you would typically see when you press the Menu button from within a book.

### **1.3 Entering Text**

To use the Device keyboard, most people find it easiest to hold the device in both hands, and use the tips of their thumbs to press the keys.

#### **Lowercase and Uppercase Letters**

To enter lowercase letters, press the appropriate letter key. To enter uppercase letters, hold down the Shift key and then press the desired letter key like you do on your computer keyboard. Alternatively, you can press and release the Shift key and then press the desired letter. Only the next letter will be capitalized.

#### **Numbers, Punctuation, and Symbols**

The number keys are located at the top of the keyboard. If you need a punctuation mark or a symbol that is not shown, press the Symbol key on the bottom row of the keyboard. You will see a menu of punctuation marks and symbols.

Use the controller to choose the character you want and it will appear in your text entry box.

### **1.4 Status Indicators**

At the top of every screen, you also see Wireless and battery life status indicators to keep you in the know.

#### **Wireless Status Indicators**

The Wireless status indicator shows you whether the wireless radio is turned on or off, the signal strength of your Wireless service, and the connection speed. Here are the possible indicators and their meanings.



The Wireless service is active and your Device has a strong signal. The more bars that are filled in with black, the stronger the wireless signal.



None of the bars are filled in. This means the wireless signal strength is too low to connect. You will not be able to connect to the Device Store, Basic Web, register your device, retrieve content from Archived Items, receive your subscriptions, or sync to furthest page read.



The bars are outlined in grey. This means Wireless is checking for signal strength. This usually lasts less than 30 seconds.



The Wireless service is turned off. You can turn on the wireless by pressing the Menu button, and using the controller to navigate to "Turn Wireless On."



When you activate a menu, icons indicating the speed of your Wireless service appear to the left side of the signal bars. EDGE and GPRS wireless networks are slower than the 3G Wireless service. Device will automatically switch back to the faster 3G network when available.

## Battery Status Indicators



You have your Device plugged into power and the battery is charging. The charge indicator light on the bottom of your Device also lights up. Note that if your Device is plugged into a low powered USB port such as those found on some keyboards or older computers, you will only derive enough charge to avoid depleting the battery but not enough to recharge it.



The images above show the various states of the battery as it discharges. As you deplete the battery, less of the battery indicator will be filled in.



The battery is too low to power the Wireless service. You must charge your Device battery to restore wireless service.

## **Activity Indicator**



Your Device is busy downloading new content, checking for new items, searching for an item, or loading a web page.

\* \* \*

## CHAPTER 2

### Getting to Know Device Content

The Device Home screen gives you an overall picture of what you currently have on your Device. It shows you what has arrived recently, what you are reading, and where you are in your reading. It also allows you to remove content from your Device and to move content from Crocus to your Device. Read below for more details.

#### 2.1 The Home Screen

Your Home screen displays a list of all of your Device reading materials — books, newspapers, magazines, blogs, personal documents, as well as audiobooks. It serves as a personal bookshelf for all of your reading material, as well as a starting point to access other Device features.

To display the Home screen, press the Home button on the right edge of your Device. By default, the Home screen lists all of the items that you have on your Device beginning with the most recently viewed (or acquired) items. Each type of content has a slightly different description and label. You can read more about the types of content available in Chapter 3.

#### *Device Books*

Books are shown by title and author. Below the book title are a series of dots which give you an approximation of how long the book is. Bold dots within the series indicate how far along you are in the book based on the last page you viewed.

#### *Periodicals*

Periodicals include newspapers and magazines that can be purchased as a single issue or as a subscription delivered on a regular basis. Your Home screen lists the most recent issue of each periodical you have on your Device. Older issues appear inside a grouping called Periodicals: Back Issues. Selecting the grouping takes you to a screen that displays the back issues of all the periodicals you have on your Device. Note that Device automatically deletes issues that are more than seven issues old to free up space for new content. An exclamation point next to an issue indicates that it will be deleted within 24 hours.

## **Blogs**

Blogs are subscription-based and appear on the Home screen as a single entry like books. As additional blog content arrives, it is added to the item and older entries are rolled off, much like a blog works on a computer.

## **Audiobooks**

Audiobooks look similar to books, but they will be labeled in the Home screen as audio content. Like regular books, they have a progress indicator that shows where you are in the audiobook.

## **Home Screen Features**

What you see on your Home screen varies depending on what reading materials you have purchased, and how you choose to show and sort this list. The screen sample and list below explain the features that you may find on your Home screen.

**Device name** — the name of your Device. You can edit this name on the Settings screen.

**Show options** — choose which types of content you want displayed in Home.

**Sort options** — choose the order you want content displayed in Home.

**Title** — the title of the item.

**Author or Date** — for books, the author of the item is listed. For periodicals and blogs, the date is listed.

**Unread title** — the "new" label indicates the item has never been opened and is less than 24 hours old. Once you open a new document or more than 24 hours has passed since the item arrived on your Device, the "new" label is removed.

**Archived Items** — items stored at Crocus that you can re-download to your device.

**Sample title** — the "sample" label indicates the book is a sample. If you like it, you can purchase the full book from within the sample.

**Progress indicator** — the series of dots below the item shows how long the book is and bold dots show how far you have read in a particular item.

**Audiobook title** — the "audio" label indicates the book is an audiobook.

**Pages** — indicates the total number of pages in Home. Use the Next Page or Previous Page button to navigate the pages.

**Periodicals: Back Issues** — stores older issues of newspapers and magazines.

## Show Options

The following screen sample shows the location of the Show options and the list below explains each of the options. Moving the controller to the left lets you select what items to show in Home.

**Personal Docs** — shows only the Personal Documents you have stored on your Device.

**Subscriptions** — shows only the periodicals and blogs you have stored on your Device.

**Books** — shows only the books and audiobooks you have stored on your Device.

**All My Items** — shows all of the content you have stored on your Device.

## *Changing What Your Home Screen Shows*

By default, the Home screen shows all of your content. To change the type of content displayed, follow these steps:

1. If you are not already on the Home screen, press the Home button.
2. Move the controller up until the Show and Sort options are underlined.
3. Move the controller to the left to see the Show options.
4. Move the controller to underline the type of content you want to display.
5. Press the controller to select it. The new display option changes immediately.

## Sort Options

The following screen shows the location of the Sort options and the list below explains each of the options. Moving the controller to the right lets you change how to sort these items.

**Most Recent First** — sorts your content by the most recently added or recently opened items first.

**Title** — sorts your content alphabetically by title of the item.

**Author** — sorts your content alphabetically by the author's last name or publisher's name. If you choose this option, periodicals will be sorted by their dates.

## ***Changing How the Home Screen Is Sorted***

By default, your content is sorted by most recent first, meaning all of the new items and the content you are currently reading are at the top. To change this option, follow these steps:

1. If you are not already on the Home screen, press the Home button.
2. Move the controller up until the Show and Sort Options are underlined.
3. Move the controller to the right to see the Sort options.
4. Move the controller to underline how you want the items sorted.
5. Press the controller to select it. The sort order on the Home screen changes immediately.

## **The Home Screen Menu**

The Home screen menu allows you to navigate to other places in Device or to perform specialized tasks. To display the Home screen menu, press the Menu button when your Home screen is displayed. The list below explains the menu.

**Turn Wireless Off/On** — turns the Wireless service off or on.

**Shop in Device Store** — takes you to the Device Storefront.

**View Archived Items** — takes you to Archived Items where you can view and wirelessly re-download content you are storing at Crocus.

**Search** — brings up the Search text entry page for submitting a word or phrase to search for.

**Settings** — takes you to the Settings screen.

**Experimental** — takes you to the Experimental page where you can see and use some of the experimental prototypes we are working on.

**Sync & Check for Items** — connects to Crocus to download any newly available items and sync the furthest page read and bookmarks for all the books on your device.

## **2.2 Managing Your Content**

All books you purchase are automatically backed up on Crocus. When you remove a book that you have purchased, it appears in your Archived Items. You access your

Archived Items from your Home screen. To move content between Archived Items and Home, Wireless needs to be on.

## **Removing Device Content**

To remove content, follow these steps:

1. If you are not already on the Home screen, press the Home button.
2. In the list of the content already on your device, move the controller to underline the item you want to remove.
3. Move the controller to the left to remove the item.
4. When you see "delete," press the controller to confirm the deletion. To change your mind, move the controller up or down to cancel. Note that Device books are backed up for you at Crocus even if removed from the device.

## **More about Managing Items**

Crocus also stores the seven most recent issues of your newspapers and magazines. If you'd like to keep a copy of an issue indefinitely, open the issue, press the Menu button, and select "Keep this Issue"; you will then see the word "keep" to the left of the issue title in Home.

You can download items stored at Crocus any time you are within Wireless coverage. If you are not within coverage, Device will automatically download the item when you re-enter Wireless wireless service.

Personal documents sent to your Device are not backed up at Crocus.

When you remove a Device book you bought from Crocus, we automatically save all of your annotations for the book in case you ever want to download it again. However, if you remove a subscription issue that is older than seven days, a blog of any age, or an item you did not get from Crocus, any annotations you created on Device for those items do not get saved. Your "My Clippings" file will still remain as a separate file containing all the clippings you added regardless of whether the content is a book, subscription, or blog or was purchased from Crocus or not. See Chapter 3 for more information.

## **International Wireless Delivery**

If you wirelessly receive or download content to your Device while outside the U.S., additional fees may apply. For further information go to  
[http://www.\\_\\_\\_\\_\\_com/DeviceWirelessroaming](http://www._____com/DeviceWirelessroaming)

\* \* \*

## CHAPTER 3

### Reading on Device

Device retains the best qualities of printed books, but adds many features that are available only through digital technologies such as word look up, changeable text size, and clippings. This chapter explains more about Device's reading features.

#### 3.1 Types of Content

There are many types of reading material available for your Device such as books, newspapers, magazines, and blogs. If you want to begin purchasing and downloading reading material, you can learn more in Chapter 5. You can also purchase audiobooks from AudioFile.com and even have Crocus convert and deliver personal documents to your Device. The different types of supported content are described below.

##### Books

Thousands of books - both popular and hard-to-find - are available in the Device Store. Once you buy a book, it usually arrives wirelessly in under a minute. Because you can't always judge a book by its cover, you can download and read a sample of most Device books for free. If you like it, simply buy it from within the sample and continue reading. You can learn more about this feature in Chapter 5.

##### Newspapers

The Device Store offers a selection of U.S. and international newspapers. Subscriptions are delivered wirelessly to your Device overnight so that the latest edition can arrive on your device every morning, and every newspaper subscription starts with a free trial. If you subscribe, your favorite periodicals are delivered wirelessly wherever you go, whether you are at home or on the road. If you are traveling outside of the US, you can still retrieve your newspapers from the Manage Your Device page at Crocus. You can learn more about this feature in Chapter 9.

##### Magazines

The Device Store offers an expanding selection of magazines to meet every interest. As with newspapers, all periodical subscriptions are delivered wirelessly and start with a free trial.

## **Blogs**

The Device Store offers over five thousand Device blogs, including up-to-the-minute news feeds and topical blogs. Blog categories include business, technology, sports, politics, culture, entertainment, humor, and science. Device blogs are sent to you wirelessly throughout the day, allowing you to keep current. Unlike traditional feeds, which often only provide headlines, Device downloads the complete feed onto the device so you can read them even when you are not wirelessly connected.

## **Personal Documents**

In addition to purchased content, you can read your personal documents on Device. If you have files formatted as text, Microsoft Word, HTML, PDF, or image files like GIF or JPEG, you can e-mail the files as attachments to your Device e-mail address. Crocus will convert the files if necessary and send them back to your computer for free or wirelessly to your Device for a fee, whichever you prefer. Currently, the conversion of PDF documents is an experimental feature. Some complex PDF files might not format correctly on your Device. For more information on transferring, converting, and e-mailing your personal documents, see Chapter 8.

## **Audiobooks**

You can download and enjoy thousands of audiobooks from AudioFile.com. Due to their large file size, audiobooks must be downloaded to your PC or Mac over your existing Internet connection and then transferred to Device over USB. Listen to audiobooks through Device's speakers or plug in your headphones for private listening. For more information on transferring and listening to audiobooks, see Chapter 8.

## **Background Music**

If you like to listen to music while you use your Device, use your computer to transfer MP3 files to the "music" folder on your Device. When you select "Play MP3" from the Experimental page, each of the songs will play in the order they were added to your Device.

## **3.2 Content Formatting on Device**

When you read a book on Device, you will find that the formatting generally follows the printed version of the book. If the book has a table of contents, it will appear in Device. If the book has chapters, a preface, an illustrated cover, and so forth, these will be displayed.

While you are reading, each page displays a header showing the content title and/or issue date. The top of the page shows the battery and Wireless status indicators.

## **Progress Indicator**

At the bottom of every page of your reading material, you can see where you are by glancing at the progress indicator. As you progress further into the content, you will see a solid bar growing longer. The progress indicator also shows structural marks within content such as chapters, articles, or bookmarks.

In books, the progress indicator also shows you the overall percentage of the book you have read and a numeric location of where you are reading, so you can easily find a particular passage or reference it to your friends. Locations are the digital answer to page numbers. Changing the text size on Device also changes the page numbering, but with locations, you return to the same place every time regardless of the text size.

## **Changing the Text Size**

You can adjust the size of the text to suit your preference. You have a choice of six sizes for reading content on Device. (You cannot change the text size on menus or on Device screens, such as the Home screen or the Device Store.)

To pick the text size that you want to use while reading, follow these steps:

1. Press the Text key located on the bottom of row the keyboard. The text size choices are displayed as well as controls for Text-to-Speech.
2. Move the controller left or right to the new text size that you want to use (you see the new text size immediately).
3. Press the controller or the Text key to confirm your choice.

## **Adjusting the Number of Words per Line**

You can change the number of words per line in the book or periodical you are currently reading to suit your reading preference. Adjusting the number of words increases or decreases the size of the margins. You may find you read faster with fewer words per line. Experiment to find what works best for you.

To pick the number of words per line you prefer, follow these steps:

1. Press the Text key located on the bottom row of the keyboard. The Words per Line choices are displayed below the text size choices.
2. Move the controller down to underline the Words per Line option.
3. Move the controller left or right to choose the option you want to use (you see the change immediately).
4. Press the controller or the Text key to confirm your choice.

Note: You cannot change the number of words per line in PDF files or in Basic Web.

## **Increasing the Size of a Picture**

If you'd like to see a larger size of a picture or image you encounter in your reading material, simply follow these steps to zoom temporarily on the image.

1. Use the controller to position the cursor over the picture.
2. An image of a magnifying glass with a plus sign will appear on top of the picture.
3. Press the controller to zoom the image. You will see a expanded view of the picture that rotates if necessary to maximize the use of the display.
4. Press the controller (or any key or button, except the Home button) to return to your content.

## **3.3 Moving from Place to Place**

There are several ways for you to get from place to place once you have opened your reading material. Most often you will turn pages using the Next Page and Previous Page buttons (described in Chapter 1). You can also get around inside your book or periodical by selecting locations from the item's Menu, clicking on links in the content, or by moving the controller left or right to advance to another article or chapter.

### **Using the Menu to Get Around**

To go to the menu, press the Menu button when reading a book or periodical. You will have slightly different options depending on the content you are reading. Examples of the menu options are described below.

If you are reading a Device book, the menu shows the following options:

**Turn Wireless Off** — turns off Wireless. When Wireless is off, this option will change to "Turn Wireless On."

**Shop in Device Store** — takes you to the Device Storefront.

**Buy This Book Now** — connects to the Device Store, purchases, and downloads the full book to your Device. Only appears if you are reading a sample from the Device Store.

**Cover** — takes you to the cover page of the item you are reading. This is usually the cover of the book.

**Table of Contents** — takes you to the Table of Contents for the item you are reading.

**Go to Beginning** — takes you to the place in the book the publisher considers to be the beginning. This is usually the first chapter, but may be a foreword, the table of contents, or other point the publisher chooses.

**Go to Location...** — displays at the bottom of the screen, a text entry box that allows you to specify a location to jump to in the content.

**Sync to Furthest Page Read** — connects to Crocus and compares your current reading location with the one saved at Crocus. If you are further along in your book using another device, Device gives you the choice to go to the furthest page read.

**Book Description** — connects to the Device Store and displays the detail page for the full book.

**Search This Book** — displays the Search line at the bottom of the screen. Additional details on how to conduct a search are provided in Chapter 4.

**Add a Bookmark** — bookmarks the page you are currently on. After selecting this option, the upper right corner of the book will be dog-eared and this menu option will change to "Delete Bookmark."

**Add a Note or Highlight** — puts you into annotation mode. Additional details on how to create a note or highlight are provided later in this chapter.

**My Notes & Marks** — displays a page containing all of your current item's notes, highlights, bookmarks, and clippings.

If you are reading a periodical or blog, you will see the following different options:

**Clip This Article** — makes a copy of the entire article and adds it to your "My Clippings" file.

**Keep This Issue** — designates the newspaper or magazine issue as one to be stored in your Device until you remove it.

## **Navigating within a Periodical**

At the bottom of a newspaper or magazine you will see options for quickly navigating within an issue. When viewing a blog, you will see similar options for navigation.

**Previous Article** — takes you to the previous article when you move the controller to the left.

**View Sections List** — takes you to the sections list of a newspaper or magazine when you press the controller.

**View Articles List** — takes you to the articles list of a blog when you press the controller.

**Next Article** — advances you to the next article when you move the controller to the right.

By default, "View Sections List" for newspapers and magazines is highlighted and when you press the controller, a list of the sections will appear. If you are viewing a blog, "View Articles List" is highlighted and pressing the controller shows a list of the blog's articles.

To navigate to a particular section, use the controller to underline the section title and then press the controller to select. To dismiss this view and return to where you were last reading in the magazine or newspaper, select "Close Sections List" located at the bottom of the screen. Selecting the number to the right of the section title will take you to a list of articles found within that section.

To navigate to a particular article within a section or blog, simply move the controller to underline the article title and press to select. To dismiss this view, select "Close Articles List" located at the bottom of the screen.

## Selecting Internal Links

Your reading material may also contain links to other places in the document. For example, in many books, the table of contents is set up to link to the content pages. Links are easy to spot because they are underlined.

To select a link:

1. Move the controller over the link.
2. The cursor changes to look like this:
3. Press the controller to select the link.
4. Device takes you to the linked location.
5. Press the Back button to go back to where you were.

Your reading material may also contain external links that take you to locations on the Web (if you have Wireless turned on and are in range).

## Viewing a Table

Your reading material may contain a large table that is not entirely contained within the screen. To see the rest of the table, move the controller up or down to bring up the cursor and then place the cursor to the left of the table. Move the controller to the right to scroll through the rest of the table.

## Reading Across Multiple Devices

If you read the same Device Store book across multiple Devices (including Device for Phone), you'll find Syncing makes it easy for you to switch back and forth. Syncing synchronizes the bookmarks and furthest page read among devices registered to the same account.

Syncing is on by default to ensure a seamless reading experience for a book read across multiple Devices. If you would like to turn Syncing off, follow these steps:

1. Go to [http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)
2. At the bottom of the page, look for "Manage synchronization between devices. Learn more." Select "Learn more."
3. Select "Turn Synchronization off."

Once you turn synchronization off, your books will still open to the last page read on that device, but Syncing will no longer sync bookmarks or the furthest page read

with other devices. If you would like to sync the book manually, press the Menu button and select “Sync to Furthest Page Read.”

### 3.4 Looking Up Definitions

While reading a book or periodical, you can see a brief definition of a word using the Lookup feature. The Lookup feature uses *A dictionary* by default, but you can also purchase other dictionaries and make them your default dictionary using the Settings page. See Chapter 7 for details on how to change your default dictionary.

#### The Lookup Feature

To see the definition of a particular word in your reading content, follow these steps:

1. Move the controller up or down to display the cursor.
2. Move the controller in front of the word you want to look up.
3. If the word is found in the dictionary, a definition extract appears at the bottom of the screen.
4. To see the complete definition, press the Return key. You will now be placed in the dictionary and can use Previous Page and Next Page to view other word definitions.
5. Press the Back button to return to your reading.

*Tip:* If you want to expand your search beyond the dictionary on your device, you can use the Search feature to look for the word on Wikipedia or the Web. See Chapter 4 for more information.

### 3.5 Annotations and Clippings

You can add annotations to all of your books and periodicals. Annotations can include notes you have written, highlights you've marked, and bookmarks you've created. Annotations are specific to the content you are reading, so each book or periodical has its own annotations. When you view the annotations, you see only those for the content you are currently reading.

Device also gathers the annotations you've made across all your various books, magazines, newspapers, blogs, and personal documents and places them in the "My Clippings" file in your Home screen. See Using Clippings for more information on My Clippings.

The list below explains the types of annotations:

**Bookmarks** — mark an entire page for later reference.

**Highlights** — mark a passage on a page for later reference.

**Notes** — add your thoughts about a passage.

The sections below explain how to add annotations.

*Tip:* All of your annotations on a Device book are backed up on Crocus servers in case you transfer your Device to another person or lose or break the device. When you download a previously annotated book from Crocus, your annotations and last location read will come down with it. When you open the book, you will be right where you were the last time you read the book and all of your annotations will be included. Note that your "My Clippings" file is not listed as a separate downloadable item.

## Using Bookmarks

Although Device automatically saves your place whenever you stop reading, you may also want to add additional bookmarks. You can place a bookmark at any location, and you can have multiple bookmarks in whatever you are reading. When you add a bookmark, it is associated with the first location on the page. If you change text size, the bookmark will still be associated with that location. You can return to a bookmarked location at any time.

Device stores all your bookmarks for the current content in your annotations. You can view them at any time by pressing the Menu button and selecting "My Notes & Marks."

### *Placing a Bookmark*

To place a bookmark:

1. Go to the page that you want to bookmark.
2. Press the Menu button.
3. Move the controller down until "Add a Bookmark" is underlined. Press the controller to select.
4. A dog-ear icon in the upper right corner of the page will appear, indicating that the page is bookmarked.

*Tip:* You can quickly create a bookmark by either holding down the Alt key and pressing the B key, or by moving the controller up or down to go into cursor mode and then pressing the controller twice.

## ***Viewing Your Bookmarks***

To view your bookmarks, press the Menu button and select "My Notes & Marks." Bookmarks are listed in the order they occur in the content. Each bookmark entry shows a location number and the first line of the bookmarked location.

To go to a bookmark location, navigate to the bookmark and press the controller.

There is no limit to the number of bookmarks that you can set.

## ***Removing a Bookmark***

To remove a bookmark:

1. Go to the bookmarked page.
2. Press the Menu button.
3. Move the controller down until "Delete Bookmark" is underlined. Press the controller to select. The bookmark is removed.

*Tip:* You can also remove a bookmark by holding down the Alt key and pressing the B key.

To remove several bookmarks at one time:

1. Press the Menu button.
2. Move the controller down until "My Notes & Marks" is underlined. Press the controller to select it.
3. Using the controller, navigate to the bookmark you want to remove.
4. Press the Delete key
5. Repeat steps 3 and 4 until you have removed all unwanted bookmarks.
6. Move the controller down until the "Close Notes & Marks" button is highlighted and press the controller to exit. You can also exit this view by pressing the Back button.

## **Using Highlights**

You can highlight text in Device like you would use a highlighter pen on paper. Device stores all your highlights for the current content in your annotations. You can

view them at any time by pressing the Menu button and selecting "My Notes & Marks." See [Viewing Your Annotations](#) for more information.

Device also stores everything you highlight in your "My Clippings" file.

### ***Highlighting a Passage***

To highlight one or more lines, follow these steps:

1. Use the controller to position the cursor where you want to start highlighting.
2. Press the controller.
3. Move the controller right (or left) to where you want your highlight to end.  
You can turn pages if you want to highlight text across multiple pages.
4. Press the controller at the place where you want the highlight to end.
5. Notice that the text you highlighted appears with a gray underline.

## ***Deleting a Highlight***

To remove a highlight, follow these steps:

1. Navigate the cursor over the highlight you want to remove.
2. Press the Delete key

Or,

1. Press the Menu button.
2. Move the controller down until "My Notes & Marks" is underlined. Press the controller to select it.
3. Using the controller, navigate to the highlight you want to remove.
4. Press the Delete key
5. Move the controller down until the "Close Notes & Marks" button is highlighted and press the controller to exit. You can also exit this view by pressing the Back button.

## **Using Notes**

To add a note, follow these steps:

1. Using the controller, move the cursor to the left of the word where you want to add your thoughts.
2. Type your note.
3. Using the controller navigate the cursor over "save note" and press the controller.

Notice the superscripted number where you inserted your note. Notes are numbered in the order they appear in the content, so if you later create another note on an earlier page, the numbering of the previously created notes will change.

To edit a note, follow these steps:

1. Use the controller to move the cursor over the note's number.
2. The note appears at the bottom of the screen.
3. Press the Return key to edit the note.
4. Use the keyboard to make your changes.
5. Navigate the controller over "save note" and press the controller.

To delete a note, follow these steps:

1. Use the controller to move the cursor over the note's number.
2. The note appears at the bottom of the screen.
3. Press the Delete key to delete the note.

*Tip:* You can also view the notes and highlights you've created for each of your Device books at <http://Device.crocus>.

### ***Viewing Your Annotations***

To view your bookmarks, highlights, and notes, press the Menu button and select "My Notes & Marks."

Each entry has a location number followed by the bookmark, highlighted passage, or note. Your annotations are listed in the order that they occur in the content. There is no limit to the number of annotations you can have. Use the Next Page and Previous Page buttons to turn the pages just as you would in a book.

To go to a location, move the controller up or down to select the bookmark, highlighted passage, or note and press the controller to go there.

Your annotations are also stored in your "My Clippings" file for later reference. See below for more information.

### **Using Clippings**

In addition to annotations, you can "clip" an entire periodical article to the "My Clippings" file. The "My Clippings" file contains all of the bookmarks, highlights, notes, and clippings you have made across all your content. Later, you can view the file or copy it to your computer; it will download to your computer as TXT file. Once on your computer, you can edit it or send your clippings to someone else. Clipping and highlighting are a great way to capture your favorite quotes and share with others.

To clip an article:

1. Go to the article you want to clip.
2. Press the Menu button.
3. Move the controller down until "Clip this Article" is underlined. Press the controller to select.

Device adds your clipping to the "My Clippings" file. You can review your clippings later, search for words or terms you clipped, and transfer the "My Clippings" file to your computer.

To view your clippings, press the Home button to display the Home screen. Move the controller down until "My Clippings" is underlined. Press the controller to open it. While viewing the file, you cannot navigate through to the materials referenced in the file.

### ***More about My Clippings***

You cannot edit the "My Clippings" file from within Device, but you can edit the file on your computer.

To edit the "My Clippings" file:

1. Connect your Device to your computer using the USB cable.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled Documents. Transfer the "My Clippings" file out of this folder.
4. Open the "My Clippings" file on your computer using an application that can read or import a .txt file.
5. Make the changes and save the edited file.
6. Transfer the "My Clippings" file back to the "Documents" folder on your Device.
7. Unmount your Device from your computer before removing the USB cable.

Changing your "My Clippings" file does not affect any notes, bookmarks, or highlights you've made in the actual content. The next time you read the content, you can still use them for navigation and reference.

To remove the "My Clippings" file from your Device:

1. Press the Home button and move the controller down until "My Clippings" is underlined.
2. Move the controller to the left.
3. Press the controller to remove "My Clippings" from your Device.

Device adds a new "My Clippings" file the next time you add a clipping or annotation to any content.

The amount of text you can add to the “My Clippings” file from each item may be limited. The “My Clippings” file will include a note informing you if a clipping limit has been reached for a given item.

### 3.6 Listening to Audio Materials

There are three types of audio materials that you can listen to on your Device. You can purchase, transfer, and listen to audiobooks from AudioFile.com, transfer MP3 files from your computer to play as background music while you read, or turn on Text-to-Speech in any of your reading material. (For information about transferring audiobooks or MP3 files to your Device, see Chapter 8.)

#### Audiobooks

On your Home screen, your audiobooks list the title and author, but they also have the word "audio" next to the title to indicate that they are audiobooks.

To listen to one of your audiobooks, select it from your Home screen. You will see a page similar to the one shown below. Device provides a standard set of controls that are explained below.

**Progress Indicator** — indicates how far you have come in the audiobook, the elapsed time, and the section you are in.

**Pause/Play** — pauses or plays the audiobook (there is no Stop control).

**Forward 30 Seconds** — moves ahead thirty seconds from the current location.

**Beginning** — takes you back to the beginning of the audiobook.

**Previous Section** — moves backwards in the audiobook to the previous section.

**Back 30 Seconds** — moves backwards thirty seconds from the current location.

**Next Section** — moves ahead to the next section in the audiobook, which is usually the next chapter.

#### Background Audio

To play background audio (MP3 files) that you have transferred to your Device, follow the steps below:

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button.
3. Move the controller down until "Experimental" is underlined and press the controller to select it.
4. Move the controller down until "Play MP3" is underlined and press down to select it.

The songs are played in order, by the date you added them to your Device. You can adjust the volume of the music using the volume controls on the right side of your Device. You can continue to listen to the audio while reading content; the background audio continues to play unless you open an audio book, turn on text-to-speech, all of the files have been played, or if you stop the playback as indicated below.

To turn off background audio:

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button.
3. Move the controller down until "Experimental" is underlined. Press the controller to select.
4. Move the controller down until "Play MP3" is underlined. Press the controller to select.

*Tip:* You can also play or stop background audio by holding down the ALT key and pressing the space bar. You can forward to the next track by holding down the ALT key and pressing the F key.

## **Text-to-Speech**

Your Device can read aloud your books (where allowed by the rights holder), newspapers, blogs, and personal documents with the Device Experimental application, Text-to-Speech.

To turn on Text-to-Speech, follow these steps:

1. Press the Text key
2. Move the controller down so that "turn on" is underlined. Press the controller to select. In a few moments, you will hear your content spoken aloud. You can either listen to it through the Device's external speakers or plug in earphones into the headphone jack.

3. By default, content is spoken with a male voice, but using the controller, you can select a female speaking voice. You can also slow down or increase the rate of speech as well as pause or turn off Text-to-Speech.
4. While Text-to-Speech is playing, the screen will update to the corresponding page of text.

Note that if a rights holder of a book does not allow Text-to-Speech to read aloud their content, then Text-to-Speech will be grayed out and you will not be able to select it.

By default, Text-to-Speech starts reading at the beginning of the page currently displayed. To start reading at a particular spot, move the cursor where you'd like the reading to begin before starting Text-to-Speech.

*Tip:* You can also play or stop Text-to-Speech by holding down the Shift key and pressing the Symbol key. You can pause and resume Text-to-Speech by pressing the Spacebar.

\* \* \*

## CHAPTER 4

### Searching on Device

Device allows you to take advantage of powerful search capabilities. You can search locally on Device or remotely at the Device Store, Wikipedia, or the Web.

#### 4.1 Introduction to Search

This section describes the types of searches that you can perform using Device and how to use search.

##### Types of Searches

Device supports several types of search as summarized below.

##### *Searching What You Are Currently Reading*

You can limit a search to only what you are currently reading. You enter your search term or phrase and Device searches in the body of the text in the current item.

## ***Searching All Your Content***

You can alternatively search all the reading material that you have stored on Device, including books, newspapers, magazines, and other items. You enter your search term or phrase and Device searches in the body of the text, in the metadata (for example, the title or author), and in your "My Clippings" file. Additionally, Device also keeps and searches the metadata for the content you have stored on Crocus.

## ***Searching Remotely***

Device can perform remote searches in several different locations using Wireless. Each of these remote location searches are described in the final section of this chapter. See Searching the Device Store, Searching the Web, or Searching Wikipedia.

## ***Searching for Definitions***

You can limit a search to the dictionary. Device searches your default dictionary for definitions of the word you have entered.

## Performing a Search

To perform a search, follow these steps:

1. Type in your search term, the Search line will automatically appear. You can use whole words, and no distinction is made between lower and upper case.
2. To find the word or phrase in the content you are currently reading, move the controller to the right to highlight "find." Or, to choose the type of search, continue moving the controller right. You can search all your items, the Device Store, Google, Wikipedia, or the dictionary.
3. Press the controller to submit your search.

If you select "Search" from the Home page menu, the screen will display a full Search page.

### 4.2 Search Results Page

When searching all your content, Device looks in the reading materials you have on your Device and the metadata (like title and author) of the materials you have in Archived Items. This includes purchased items, personal documents, local reference materials, and annotations that you have created.

The example below shows a typical Search Results page.

The screen shows the titles of the items that contain your search term and indicates how many times the term occurs.

Use the Next Page and Previous Page buttons if there are more results than fit on the current page.

## **Search Results for a Specific Item**

To see the results for one of the items listed:

1. Use the controller to underline the item.
2. Press the controller to view the matches.
3. A page appears showing all instances of the search term in that particular title. Each occurrence lists its location number and is shown in context so you can see how the search term is used.

To go to a specific location in the content where the search term occurs, use the controller to underline the location and press the controller to select.

To close the Search Results page, move the controller to highlight "Close Search Results" and press the controller.

## **Search Results for a Definition**

When you want to look up the meaning of a word, you can limit a search to the dictionary. Device searches your default dictionary for definitions of the word you enter.

To find a definition, follow these steps:

1. Type in the word you want defined.
2. Move the controller right to highlight "dictionary."
3. Press the controller to submit your search.

You will see a complete definition of the word.

## **4.3 Performing Remote Searches**

To search remotely, you must have Wireless switched on. You can select any of the remote searches described in this section.

If Wireless is not already on, press the Menu button. Move the controller to underline "Turn Wireless On" and press the controller to select and turn on Wireless.

## **Searching Wikipedia**

To search Wikipedia, enter your term and move the controller to select "wikipedia." This opens Basic Web and displays the Wikipedia page.

## **Searching the Web**

To search the Web, enter your term and move the controller to select "google." This opens Basic Web and submits your search term to Google.

## **Searching the Device Store**

To search the Device Store, enter your term and move the controller to select "store." Your Device connects to the Device Store and displays the search results page for the store sorted by relevance, as shown in the example below. You can page through the results just like you would content on your Device.

You can narrow results by categories by clicking on the drop-down list located in the upper right corner of the Search Results page.

*Tip:* You can also narrow a search in the Device Store to an author's name by typing "@author" followed by the author's name. For example, to search the Device Store for books by Agatha Christie, enter "@author Agatha Christie" in the Search line. This will narrow your Device Store search to find only books written by Agatha Christie.

\* \* \*

## **CHAPTER 5** **The Device Store**

The Device Store is the place to purchase your Device books, newspapers, magazines, and blogs. Find an item in the store, select "Buy," and you will typically receive your item wirelessly in under a minute. All of your Device purchases use Crocus purchase for easy purchasing and Crocus automatically backs up all of your purchases in case you lose your Device or want to download a title again. To help other Crocus users decide what to buy, you can also add your own ratings and reviews.

## 5.1 Getting Started at the Store

This section tells you how to connect to the Device Store on your Device, and provides some ideas about the best ways to look for content once you are connected.

### Connecting to the Device Store

You connect to the Device Store using your device's built-in Wireless service. To go to the Device Store, follow these steps:

1. If Wireless is not already on, press the Menu button, move the controller up so that "Turn Wireless On" is underlined, and then press the controller to turn on Wireless.
2. Press the Menu button and move the controller down to underline "Shop in Device Store."
3. Press the controller to select "Shop in Device Store."

You will see this icon  in the upper left corner of the page, if you are not already connected. The Device Storefront will appear as shown later in this chapter and serves as a launch point for all of the Device Store services.

## 5.2 Device Store Pages

This section describes the different pages you will find at the Device Store, like the Device Storefront, the Browse pages, and the product detail pages for individual pieces of content.

### The Device Storefront

When you select "Shop in Device Store" from any menu, you will be taken to the Device Storefront. An example is shown below, the storefront you see may be different as we update it often.

**Search Store** — enter your search criteria here and Crocus will search the entire Device Store for matches and return the search results.

Once you are in the Device Store, you can move around using links on the pages of the store such as Reviews or Top Sellers, by using the Store menu, or by searching the Device Store for specific titles.

## The Store Menu

The menu you see while you are connected to the Device Store allows you to go to other places in the store easily and includes the selections listed below.

**Turn Wireless Off** — turns the Wireless connection off. If you turn wireless off, you will not be able to access the Device Store.

**Device Storefront** — takes you to the Device Storefront.

**Books** — displays the books currently available in the Device Store.

**Newspapers** — displays the newspapers currently available in the Device Store.

**Magazines** — displays the magazines currently available in the Device Store.

**Blogs** — displays the blogs currently available in the Device Store.

**Top Sellers** — displays a list of Crocus best sellers. Outside the U.S., customers will see Global Best Sellers instead.

**New & Noteworthy** — displays a list of new or noteworthy content on the Device Store. Outside the U.S., customers will see Global Best Sellers instead.

**Recommended for You** — displays items recommended for you by Crocus based on your previous digital and physical purchases.

**"Save For Later" Items** — displays items you have previously noted as something that might be of interest to you.

## Browsing the Store

Another way to find reading material in the Device Store is to browse through the different content categories such as books or newspapers. Once inside a category, you can further refine your browse by topic. For example, within "Books," you can refine listings to "Fiction," "Nonfiction," "Advice & How-to," etc. Each browse page shows the path that you have taken at the top so you can easily retrace your steps.

## ***Browse Listings Sample***

The example below shows you the type of listings you will see on the Books browse page.

**Browse path** — shows the steps on the path you used to get to the current page.

**Number of titles in the category** — shows the number of items available in the particular category.

**Categories** — groups the content by topics of interest to make browsing easier. Select the category you are interested in to show only items in that particular subject. You can also select subcategories within the main category by selecting “View subcategories within...” in the upper right corner of the screen.

## **Getting the Details**

The product detail page for books and periodicals provides the most pertinent information about an item. To get to the product detail page for a particular item, use the controller to select it.

## ***Product Detail Page Example***

The example below shows you a product detail page for a book available at the Device Store. The features on this page are explained in the list below.

**Author** — searches the Device Store for other books by the author when selected. If more than one author wrote the book, selecting this item will show a menu of the authors from which to choose.

**Description** — describes the item. Select "more" to see the full text.

**Buy** — purchases the item using your default Crocus purchase payment method and sends it wirelessly to your Device for free.

**Reviews** — displays the customer reviews for this item. Provides links to editorial reviews and for writing your own review.

**Try a Sample** — downloads the beginning of the book for free so you can sample it before buying.

**Save for Later** — adds the item to your "Save for Later Items" list so you can peruse or purchase it later.

**Customers who bought this book also bought:** — displays a list of items purchased by Crocus customers who also bought this item.

### ***Additional Details for Periodicals***

The product detail page for newspapers, magazines, and blogs is similar to the product detail page for books, but it contains different purchasing options:

**Subscribe now with 14-day Free Trial** — select this to start your subscription. All newspapers, magazines, and blogs come with a free trial to start your subscription, and you can cancel your subscription on the Manage Your Device page on Crocus at any time during this period. After the trial period, your subscription will automatically be delivered at the regular monthly price.

**Buy Current Issue** — purchases the current issue of the newspaper or magazine and sends it to your Device.

### **Saving Items for Later**

The Device Store provides a "Save for Later Items" page for you to save items that you want to look at or purchase later. This page lists the item's title, author, and average customer rating.

To add an item to your list, select "Save for Later" from the product detail page for the item. You will see a confirmation message that your addition was successful. To see your list of saved items, select "Save for Later Items" from the Store menu. To display the product detail page for this item, select "Details." To remove the item from your list, select "Delete."

## 5.3 Recommendations, Reviews, and Ratings

The Device Store provides several features to help you decide which reading materials you may want to purchase. This section describes the various ways you can find what is available.

### Recommended for You

The Recommendations page provides a list of things that you might enjoy based on the types of materials (digital and printed) you have purchased in the past either on Device or on Crocus. To get to this page, select "Recommended for You" from the Device Storefront or from the Device Store menu.

### Looking Up Reviews

The Reviews page lists Customer Reviews for items. To get to the Reviews page for a specific item, select "Reviews" from the product detail page for that item.

To see Editorial Reviews from publications, select "Editorial Reviews" from the Reviews page. For the complete text of a particular review, select the review excerpt using the controller.

### Writing Your Own Ratings and Reviews

You can share your opinions with other readers by rating and reviewing the materials that you have read. To get to this page, select "Customer Reviews" from the product detail page for the item you want to critique, and then select "Write a Review."

The sample screen below shows you the type of information you can enter.

#### *Entering a Rating and Review*

1. Indicate the rating you think this item deserves by selecting the line with the appropriate number of stars.
2. Select "Title" and enter a title for your review. Select "ok" to submit your title.
3. Select "Review" and type your review on the lines provided. Select "ok" to submit your review.
4. To submit your rating and review, select "Submit." If you want to close this page without submitting your rating or review, select "Cancel."

## 5.4 Making Purchases

This section explains various aspects of purchasing items from the Device Store.

### Trying a Sample Book

Most Device books allow you to download a sample before you decide to buy the item. The end of the sample book has a link to revisit the product detail page for the item or a link to purchase the item directly. In addition, while reading a sample, the Menu shows "Buy this Book Now" so you can purchase the sample at any time during your reading.

### Buying Your Selections

All of your Device Store purchases use Crocus purchase, which allows you to purchase reading materials with a single selection. To make your purchase, select "Buy" from any product detail page for the item you want. Your item will be auto-delivered wirelessly to your Device and also added to the Manage Your Device page on Crocus. You will see an "items downloaded" message at the top of the screen when your item has arrived on your Device.

*Tip:* Once your item has been downloaded, the original is retained in the Manage Your Device page on Crocus. If the download is not successful, or if it is interrupted, Device will attempt to download again without any action required from you.

### Returning an Item

All of your Device Store purchases present an order cancellation feature at the time of purchase in case you change your mind or made a mistake. Just select "Purchase by Accident? Cancel this Order" on the order confirmation page. If you are a U.S. customer, you can also contact Device Support using Crocus's Click-to-Call service on the Web at:

[http://www.\\_\\_\\_\\_\\_.com/Devicesupport](http://www._____.com/Devicesupport)

For customers outside the U.S., Device Support can be reached via e-mail at [Device-support@support](mailto:Device-support@support) or by phone at 1-xxx-xxx-xxxx(charges will apply).

\* \* \*

## CHAPTER 6

### Accessing the Web

Your Device comes with an Experimental application called Basic Web, which is a Web browser optimized to read Web sites that are primarily text-based. It supports JavaScript, SSL and cookies but does not support media plug-ins (Flash, Shockwave, etc.) or Java applets.

#### 6.1 Using Basic Web

There are four ways to open the Basic Web browser. The two main ways are to select "Basic Web" from the Experimental screen or to follow a link from within your reading material. Many of the blogs that you subscribe to from the Device Store have links to Web sites. Selecting these links will open Basic Web and take you to the URL associated with the link. If you select "Basic Web" from the Experimental page, you will open to the last Web site you were viewing in your browser.

One other way of accessing the Basic Web browser is to type in a word anytime from any book, blog, newspaper, or magazine you happen to be reading. When you begin typing, a search box will pop up at the bottom of the screen, and you can move the controller to the right and select "google" or "wikipedia" from the menu to search those sites directly for the word you typed.

You can also enter a URL in the Search bubble from the Home page. Type the URL and move the controller to select "go to" and then press the controller.

#### Entering a URL

To enter the URL for a Web site, navigate to the top of the screen or press Menu and select "Enter URL" from the menu options. Begin typing when the cursor is located in the URL text field. When you are done typing, press the controller to view that Web site.

The URL text field retains the last URL you entered in case you want to quickly edit the same address and submit it again. If you want to enter a secure site with an "https" address, use the backspace key to delete the automatically entered "://" and type the address you want.

The URL text field is embedded in a navigation bar with a few other key shortcuts. To the right of the URL text field there is a button to stop loading or reload the current page. From there, move your controller to the right, and you can select the

Google search engine or Wikipedia for searching on the text entered in the URL text field. Above the URL text field are shortcuts to navigate back and forward one page, an indication of how much of the page has been loaded, whether you are viewing the page in Basic or Advanced Mode, and where you are in the web page.

## **Using Bookmarks and Adding Your Own**

Bookmarks let you easily access a Web page without needing to type the address every time. When you open Basic Web from the Experimental page for the first time, you will see a list of default bookmarks with links to information such as daily news and weather. While browsing, you can also access the same list of bookmarks by selecting "Bookmarks" from the browser menu (just press the Menu button).

To add a Web site to the Bookmarks page, simply navigate to the site that you want to bookmark and press the Menu button. Move the cursor to "Bookmark this page" and press the controller. Any new bookmarks that you select will be added to the existing list on your Device.

You can remove a bookmark by going to your Bookmarks lists and moving the controller until the item you want to delete is underlined. Move the controller left to display "delete bookmark." Press the controller and the site will be deleted from your Bookmarks. From the Bookmarks list, moving the controller to the right lets you edit the name of the bookmark.

## **Using Next Page and Previous Page**

Most Web pages you find on the Internet will have more content than can be displayed on one page. Use the Next Page and Previous Page buttons to move through these pages. This is equivalent to using your mouse on a computer to move up and down through a Web page. You can also move the cursor down with the controller until it reaches the bottom of the page.

## **Selecting Links, Buttons, and Boxes**

You can navigate the links on a Web page by using the controller to move the cursor around the page. Links in Basic Web are shown as underlined words, just like in the Reader. Below is a Web page with multiple selectable links.

Using the controller, highlight the link you want to go to and press the controller. The browser will open that page.

If you want to enter information in an input field in a Web page to search that site, for example, you should move the cursor to that input field and begin typing. When you finish typing, press down on the nearby Go or Enter or Search button to retrieve the results. If there are radio buttons embedded within a Web page, you can change the input by maneuvering the cursor to the button you want to change and press the controller to "push" this button.

## **Using History**

You can easily return to Web sites you recently viewed by pressing the Menu button and selecting "History." You will then see a list of recently visited Web sites to select from. As noted above, you can also use this list to add a site to your Bookmarks by moving the controller to the right.

## **The Basic Web Menu**

The Basic Web menu contains other items you can select, many of which also appear in the Browser's navigation bar. To view the menu, press the Menu button when the Basic Web browser is on the screen.

**Turn Wireless Off** — turns the Wireless connection off. If you turn the wireless off, you will not be able to use the browser.

**Shop in Device Store** — takes you to the Device Storefront.

**Enter URL** — takes you directly to the URL field where you can enter a web address to visit.

**Go to Top** — returns you to the top of the current Web page.

**Bookmarks** — displays your list of Web bookmarks.

**Bookmark This Page** — adds the current page to the bottom of your list of bookmarks.

**History** — displays your History page, which keeps track of the sites you have visited.

**Settings** — displays your list of settings where you can change the options for Basic Web.

**Use Advanced Mode** — for complex Web sites. This mode squeezes pages down to fit the width of the Device screen. In this mode, JavaScript can also be enabled. When this mode is selected, the menu selection then changes to "Use Basic Mode" which optimizes the Device's browser for viewing most pages.

## 6.2 Other Features

As you become more familiar with the Basic Web browser, the following topics may be of interest to you.

### Text Size

Just like when you are reading a book or periodical, you can adjust the size of the text when viewing Web pages. See Chapter 3 for details on how to change text size.

### Downloading Files

Some Web sites may have books or documents you can download and read on your Device. When you select these books or documents using Basic Web, you will be asked to confirm if you want to download these to your Device Home. The types of files you can download include Device content (.XYZ, .XYZ1), Unprotected Files books (.UPF, .UPF) and text files (.TXT).

### Basic Web Settings

You can modify the default browser behaviors and perform simple maintenance procedures using Basic Web Settings. To display the Settings screen, press the Menu button while in the browser and then use the controller to select "Settings."

**Switch to Advanced Mode** — switches between Basic and Advanced modes, when you view Basic Web.

**Clear Cache** — removes temporary Internet files from your Device. Move the on-screen highlight to "Clear Cache" and press the controller to clear the cache.

**Clear History** — removes cached Internet address entries from your Device. Move the on-screen highlight to "Clear History" and press the controller to clear this list.

**Clear Cookies** — removes cookies from your Device. Move the on-screen highlight to "Clear Cookies" and press the controller to remove the cookies.

**Enable Javascript** — enables or disables Javascript to be executed on the pages you visit. Note that if Javascript is disabled, Web pages will load faster. The view mode must be set to Advanced Mode to use this feature.

**Disable Images** — select whether you want images to appear when you load a Web page. Note that if you do not show images, Web pages will load faster.

\* \* \*

## CHAPTER 7

### Settings and Experimental

Use the Device Settings page to personalize items on Device such as the name of your Device, automatic backup, personal information, etc. The Settings page also gives you information about your Device, such as the software version number. The Experimental page contains a number of prototype concepts we are working on.

#### 7.1 Adjusting Your Device Settings

The Settings page is shown below and the features are explained in the list that follows. To go to the Settings page, press the Menu button while on your Home screen. Use the controller to underline "Settings" and press to select.

**Registration** — this is the Crocus account name to which your Device is registered. All Device Store and other charges will be applied to the credit card associated with your purchase account.

**Device Name** — you can change the name of your device to anything you want. This name shows at the top of the Home screen.

**Device E-mail** — this is the e-mail address of your Device. You and your friends can send documents to this address and they will be converted by Crocus and sent to your Device. To edit this e-mail address, go to [http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice).

**Personal Info** — enter any personal or contact information here such as an address or phone number in case you lose your Device.

**Version** — indicates which version of software your Device is using.

#### Registering or Deregistering Device

Your Device needs to be registered with your Crocus account information to use many of the Device features such as purchasing content. If your Device is lost or transferred to another user, you should deregister your Device from your account. The process to register or deregister is described below. You can also register or deregister your Device on the Manage Your Device page on:

[http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)

## ***Registering Your Device***

If your Device is not already registered, follow these steps:

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button. Make sure that Wireless is turned on.
3. Move the controller down until "Settings" is underlined and press to select.
4. Press the controller to select "Register."
5. You will see a text entry box at the bottom of the screen to enter your Crocus user name and password (the e-mail address and password associated with your Crocus account). Use the keyboard to enter in your information.
6. Navigate the controller to select "OK" to finish the registration process or "Cancel" to cancel your registration.

*Tip:* If your Crocus user name or password contains characters not present on the Device keyboard, press the Symbol key on the bottom of the keyboard to see a menu of additional characters and select the character you require.

Once registered, you can make purchases on the Device Store, convert personal documents on Crocus, use Basic Web, and take advantage of other Crocus-sponsored services. If your Device has incorrect registration information, deregister the device and then reregister it.

## ***Deregistering Your Device***

If you want to transfer ownership of your Device or return it for service or recycling, you should deregister it to prevent unauthorized purchases. The process is similar to the registration process described above. Just select "deregister" from the Registration section and select "ok" to confirm. Note that you will not be able to buy or download samples from the store, or use Basic Web if your Device is not registered.

You can also deregister your Device from the Manage Your Device page on Crocus.

## **Personalizing Your Device**

Your Device acquires a default name when it is first registered. This name is based on your Crocus account name, and is displayed at the top of your Home screen. If you want to edit this name on your Device only, follow these steps:

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button.

3. Move the controller down until "Settings" is underlined and press to select.
4. Move the controller down until "Edit name" is underlined. Press the controller to open the text entry box.
5. Use the keyboard to change the device name.
6. When you have finished, move the controller to the right to highlight "Submit" and press the controller to submit the change.

*Tip:* To add any personal information such as your contact information, navigate with the controller so that "Edit personal info" is underlined then press the controller. Use the keyboard to add your information, then select "Submit" when you have finished.

## **Choosing Your Primary Dictionary**

You can choose the dictionary you want to use when you look up words while you are reading. The default is *A dictionary* included on your Device, but you can change your dictionary choice by purchasing a supported dictionary on the Device Store and then following these steps:

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button.
3. Move the controller to underline "Settings" and press to select.
4. Press the Menu button.
5. Move the controller to underline "Change Primary Dictionary" and press to select.
6. Move the controller to underline the dictionary you want to use and press to select.

## **Changing Automatic Backup**

Automatic Backup will backup your last location read, all of your notes, and bookmarks you make to Crocus on any of your purchased content. If you delete an item from your Device or your Device is lost, stolen, or damaged, you can automatically restore your annotations, bookmarks, and the last location you read by downloading the item from the Manage Your Device page on Crocus.

You can enable or disable automatic backup by following the steps below:

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button.
3. Move the controller to underline "Settings" and press to select.

4. Press the Menu button.
5. Move the controller to underline "Disable/Enable Annotations Backup" and press to select.

## **The Settings Menu**

The Settings menu allows you to go to other places on your Device as well as update your software or restart your device. These menu options are defined below. To display the Settings menu, press the Menu button while you are on the Settings screen.

**Turn Wireless Off** — turns off Wireless. When Wireless is off, this option will change to Turn Wireless On.

**Shop in Device Store** — takes you to the storefront of the Device Store.

**Disable Annotations Backup** — by default the last location read on your content and any annotations you've made to Device Store content is backed-up at Crocus. You can disable the automatic backup by selecting this option.

**Change Primary Dictionary** — change the dictionary you are using for the built-in Lookup function. This menu option is only present if you have at least one additional dictionary loaded on your Device.

**Update Your Device** — installs the latest software for your Device. When an update is loaded on your device, this menu option becomes available, otherwise it is grayed out.

**Restart** — restarts your Device.

**Reset to Factory Defaults** — resets your Device to its original factory settings. You should only select this action if instructed to do so by Device Customer Service.

**Legal** — provides trademark, copyright, and other notices about the software installed on your Device.

**Sync & Check for Items** — connects to Crocus to download any newly available items and sync the furthest page read and bookmarks for all the books on your device.

## 7.2 Experimental

The Experimental page is a place for you to try out and experiment with some of the concepts we have under development. We encourage you to send us your feedback to help us decide how to improve the concepts and whether or not you think we should make them part of the Device product. To open Experimental, follow the steps below.

1. If you are not already on the Home screen, press the Home button.
2. Press the Menu button.
3. Move the controller down until "Experimental" is underlined and press the controller to select.
4. Select the concept you would like to try.

To give us feedback on items on the Experimental page, send an e-mail to [Device-feedback@crocus](mailto:Device-feedback@crocus). We are really interested in hearing what you have to say, so type as much as you want. Based on your feedback, we may add or remove content from the Experimental page, so let your thoughts be known.

\* \* \*

## CHAPTER 8

## Device and Your Computer

You can download and read text-based content on your Device without using your computer. However, if you want to access audiobooks or MP3 files, you need to transfer them by connecting Device to your computer over USB. In addition, there are other tasks you can accomplish using your computer as described in this chapter.

### 8.1 Getting Started

This section lists the requirements for connecting Device to your computer. The USB cable you use with your power adapter can also be used to connect your Device to a computer, so there is nothing additional to buy.

### System Requirements

Both Macintosh and Windows users can manage Device files through the USB connection. When your Device is plugged into your computer, your Device will appear as a removable mass storage device. If your computer is Windows-based, you need to be using Windows 2000 or later. If your computer is a Macintosh, you

should be using Mac OS X 10.2 or later. With either computer, you must have an available USB port or an attached USB hub with an available port.

## **Making the Connection**

To connect Device to your computer, follow these steps:

1. Plug the larger end of the USB cable into an available USB port or a powered USB hub connected to your computer.
2. Connect the other end of the USB cable to the micro-USB port on the bottom of your Device.

The illustration below shows a Device and a laptop computer connected through the USB cable.

When you are connected to your PC, your Device will go into USB drive mode and its battery will be recharged by the computer. Your Wireless service is temporarily shut off and you will not receive any of your subscriptions while in this mode. Also, your Device is not usable as a reading device while you are in USB drive mode, but will return right to where you were when you unmount the device from your computer.

*Tip:* If you'd like to continue reading your Device while its battery is being charged by the computer, you will need to release it from USB drive mode by unmounting or ejecting the Device from the computer. Note that it is always best to use your computer to unmount or eject your Device before disconnecting the USB cable. Consult your computer manual for details on how to properly disconnect a USB storage device.

## **8.2 Transferring Files When Wireless is Unavailable**

### **Managing Your Documents**

If your Device is out of Wireless coverage, you can still add content to your device by connecting it to a computer to mount it as a USB drive. After your Device mounts on the computer, you will see three default directories or folders. The one called "documents" contains all of your digital reading materials like books, newspapers, your My Clippings file, etc. The "AudioFile" directory is for your audiobooks, and "music" is for your MP3 files. You can add Device-compatible files to these directories, and you can copy, move, or delete the files that are already there. The computer file formats that you can read or listen to on your Device are listed below:

- Device (.XYZ, .XYZ1)
- Text (.TXT)
- Unprotected Files (.UPF, .UPF)
- AudioFile (.AF, .AFX)
- MP3 (.MP3)

See Managing Your Orders for further information on transferring content you've already purchased to your device.

*Tip:* Mobilefiles files must have no Digital Rights Management (DRM) protection applied to be readable on your Device. If you purchased a Mobilefiles file from a Mobilefiles retailer, you will not be able to open the file on your Device.

## **Transferring Your Clippings**

Your clippings are stored in a file called "My Clippings.txt," which is located in the "documents" directory. If you want to copy the clippings from your Device to your computer so you can edit them, e-mail a passage to a friend, or just archive your clippings, you can drag and drop the "My Clippings.txt" file onto your computer. Clippings and other annotations are described in more detail in Chapter 3.

### **8.3 Converting and Transferring Your Documents**

In addition to reading commercially available materials, you can have Crocus convert your personal documents into a Device-compatible format for reading on your Device. You can have the converted files sent wirelessly to your Device for a fee or to the e-mail address associated with your Crocus account for free.

## Supported Formats for Conversion

In addition to the file formats listed above, you can also convert other personal documents to read on your Device. The supported file formats are listed below:

- Microsoft Word (.DOC, .DOCX)
- RTF
- PDF
- Structured HTML (.HTML, .HTM)
- JPEG (.JPEG, .JPG)
- GIF (.GIF)
- PNG (.PNG)
- BMP (.BMP)
- Compressed ZIP (.ZIP)

**Note:** PDF and DOCX conversion is currently an experimental feature on Device. Some complex PDF and DOCX files might not format correctly on your Device.

*Tip:* ZIP files are automatically opened up by the conversion service if you choose to compress your documents. Any enclosed files listed above inside the ZIP file will be converted and sent to your Device or computer as specified.

## Sending Your Documents for Conversion

Each Device has its own unique e-mail address. When you e-mail personal documents to your Device, they are automatically converted to a Device-friendly format.

To set up your Device e-mail address, follow the steps below:

1. On your computer, open your Web browser and go to [http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)
2. Sign-in to your Crocus account.
3. In the Your Device(s) section, select "Edit Info."
4. In the Device E-mail Address text field, change the first part of the e-mail address to what you would like it to be. The @Device.com will automatically be appended.
5. Select "Update information" to save your changes and close the text entry box.

Your Device will only receive converted files from e-mail addresses you have authorized on the Manage Your Device page to help prevent spam. The default

setting dictates that only items sent from your Crocus account e-mail address will be forwarded. You can add e-mail addresses to the list by visiting [http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)

In Manage Your Device, add the addresses of your friends, co-workers, or anyone else you would like to enable to send you files:

1. In the Your Device approved e-mail list section from [http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice), enter the e-mail address in the blank box.
2. Select "Add Address."

Once you have set up the e-mail addresses, you can send and convert your personal documents by following the steps below:

1. Attach your document to a new e-mail or forward an existing e-mail that has a document attached. A subject is not necessary.
2. Address the e-mail to your Device e-mail address for wireless delivery directly to your Device; a fee will be charged for the wireless delivery.
3. Send the e-mail.

*Tip:* If you would like to avoid the fee, address the e-mail so that the second part of your Device e-mail address is @free.Device.com. After sending to the @free.Device.com address, a link to the converted file will be e-mailed to your Crocus e-mail address. You can then download the file to your Device's documents folder via USB using your computer.

The conversion service on Your Device is meant for the receipt of personal, non-commercial documents only. You may not authorize the sending of documents from automated distribution services.

## **8.4 Audiobooks and MP3s**

You can purchase, transfer, and play audiobooks from AudioFile.com as well as transfer MP3 files to Device to play as background audio while you read.

### **Audiobooks from AudioFile.com**

Device supports the thousands of audiobooks available through AudioFile.com. You can purchase and download one or more of these books from AudioFile.com through your Windows or Mac-based computer and then transfer these books over USB to your Device's "AudioFile" folder, and listen to them on your Device. Once

on your Device, an AudioFile file will be displayed on your Home screen with your other documents. The file will have the word "audio" next to the title to indicate that it is an audiobook.

### ***Audiobook Formats for Device***

AudioFile offers five versions of its audiobook format. Device is compatible with formats 4 and AudioFile Enhanced (AAX). Formats 1, 2, 3 and audiobooks provided from other sources are not supported.

### ***Activation, Purchase, Download, and Transfer***

The first time you play an AudioFile audiobook, you will be prompted to register your Device with AudioFile. Make sure you register with your AudioFile account name and password, not your Crocus account credentials.

To transfer audiobooks to your Device, follow these steps:

1. Connect your Device to your computer, using the USB cable that came with the device.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled "AudioFile." Drag any audiobooks you want to play on your Device into this folder.
4. Using your computer, unmount your Device from your computer. The content you transferred should now appear in Home.

*Tip:* To pause the playing of AudioFile, press the space bar on the keyboard and press the spacebar again to resume.

### **Transferring MP3s**

You can transfer your MP3 files to Device by copying them to the "music" folder on your Device over USB. For more information on connecting your computer over USB, see [Making the Connection](#) earlier in this chapter.

Device only supports MP3 audio files; AAC, WAV and other music file formats are not supported.

To transfer MP3s to your Device, follow these steps:

1. Connect your Device to your computer, using the USB cable that came with the device.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled "music." Drag any MP3s you'd like to play on your Device, into this folder.
4. Using your computer, unmount your Device from your computer.

For more information on playing background music, see Chapter 3.

*Tip:* While there is no limit to the number of MP3 files and audiobooks that you can transfer to your Device, keep in mind that these files are larger, and space may become a consideration.

\* \* \*

## CHAPTER 9

### Your Device and Crocus

In addition to shopping directly from your device, you can acquire the same books, magazines, newspaper subscriptions, and other content you find on the Device Store using a Web browser on your computer. You can also go to the Manage Your Device page on Crocus to manage your Device account, change or cancel a subscription, or look up a past Device order. If you need help, Device Support on Crocus gives you information, e-mail, and phone access to dedicated customer service representatives.

#### 9.1 Shopping for Device Content on Crocus

This section shows you how to purchase content for your Device on Crocus. As with purchases on the Device Store, Device content is auto-delivered wirelessly to your Device.

##### **Browsing the Device Store**

When browsing the Device Store on Crocus, you use categories and sub-categories to find content that suits your interests. Each page shows listings of content relevant to the categories or sub categories you have navigated to and clicked on. Once inside a category, you can further refine your browse by topic. Each page shows the path taken so you can easily retrace your steps.

##### **Searching the Device Store**

When searching the Device Store on Crocus, you use the Crocus search engine to find relevant Device content associated with the keyword or phrase that you type into the search box. The search engine finds and displays lists of content along with descriptive images, titles, authors and ratings. You can narrow down the results by categories by clicking on the link located in the upper right corner of the search results page.

##### **Getting the Details**

The product detail page for Device content provides the most pertinent information to help you make a purchase decision. In addition to cover image, title, author and pricing information, the product detail page gives you insight into the content from other readers. For example, you can read customer reviews and check out "Customers who bought this also bought" to find out what other customers have

enjoyed. From the product detail page you can purchase Device books, newspapers, blogs and other periodicals with Crocus purchase.

## Ordering Content

Ordering content from the product detail page is as easy as the click of a button. Similar to ordering directly from your Device, you can place orders from detail pages on Crocus and receive your content in typically under a minute. Once you make a selection, your order is auto-delivered wirelessly to your Device. You do not need to use your computer to download your content. If you have more than one Device, you can use the drop-down menu below the Buy Box to choose which Device should receive your order.

The following describes the "buy box" actions:

**Buy now with purchase:** — click this button to purchase a Device book or current periodical issue. Your order will be auto-delivered wirelessly to your Device in under a minute.

**Subscribe now with purchase** — click this button to start a newspaper, magazine, or blog subscription with a 14-day free trial. Your subscription will be auto-delivered wirelessly to your Device. You can cancel at any time during your 14-day free trial and you will not be charged.

**Send sample now** — click this button to receive a free sample of a book on your Device. You can read the beginning of the book for free. If you enjoy it, you can make a purchase directly from your Device or return to the Device Store on Crocus if you prefer to purchase from your computer.

## 9.2 Managing Your Device on Crocus

This section gives you instructions on how to find and use the Manage Your Device page on Crocus. The Manage Your Device page is a versatile online tool you can use to view and manage your Device content, personal settings, and account information. It can be found at:

[http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)

Below are some of the tasks you can manage:

## Managing Your Device

### Your Device(s) —

*Edit Info:* manages the same options available on Device's Settings menu such as the name that appears on the top of your Device Home screen; allows you to change your Device e-mail address to which you or others can send e-mail attachments to be read on your Device (see Chapter 8 for more information on converting personal documents).

*Deregister:* disassociates the Device from your account if you transfer ownership of the device to someone else.

*Register a new Device:* registers your Device to your personal Crocus account.

### Your Phone(s) and iPod Touch(es) —

*Edit Info:* allows you to change the current name of your Phone or iPod Touch

*Deregister:* disassociates the Phone or iPod Touch from your account if you transfer ownership of the device to someone else.

**Your Device approved e-mail list** — allows you to maintain a list of e-mail addresses authorized to send e-mail personal documents to your Device.

**Your country** — allows you to change the country associated with your Device account. Due to copyright restrictions, you will only be able to purchase Device titles available in your country. When you move to a new country, you should update the country setting to be able to purchase Device titles available in your new location.

## Managing Your Orders

**Delivery status for** — view the status of recently ordered books and your subscriptions to determine what content has been recently delivered wirelessly to your Device(s).

**Your default purchase payment method** — allows you to update the payment method Device uses to make purchases on Crocus. All Device transactions are completed with purchase. Changes made to your default purchase method will apply

to your future Crocus purchase transactions, but will not change your current active Device subscriptions.

**Your active Device subscriptions** — view which subscriptions are currently active, change payment information, and see billing details, and re-download past issues up to seven issues prior. You can see all of your active and inactive subscriptions by going to "Manage Your Subscriptions," which you access from the Your Account or Manage Your Device pages. Click the "+" located next to the name of the periodical to download individual editions to your computer or to a specific Device.

**Your orders** — view your purchase history and re-download past orders. You can view details of individual orders, including information such as order date. Click the "+" located next to the name of a title to download individual orders to your computer or to a specific Device device.

**Your individual charges** — view a list of charges, including fees charged for document conversions and wireless transfers.

**Manage synchronization between devices.** — allows you to turn Syncing off or on. When Syncing is off, your book will still open to the last page read on that Device, but Syncing will no longer sync its bookmarks or furthest page read with other Devices. If you plan to read the same book on more than one Device at a time, it is recommended that you keep synchronization on.

## Downloading Content from Your Computer

To transfer content downloaded to your computer, over to your Device, follow these steps:

1. Connect the USB cable (provided with your Device) to the Device and your computer.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled "documents."
4. Transfer the downloaded files into the "documents" folder of your Device.
5. Using your computer, unmount your Device from your computer. The content you transferred should now appear in Home.

### **9.3 Contacting Device Support**

If you have problems with your Device, please contact one of our Customer Service members who will be happy to assist you.

#### **From within the U.S.:**

web: [http://www.\\_\\_\\_\\_\\_.com/Devicesupport](http://www._____.com/Devicesupport)

e-mail: [Device-support@support](mailto:Device-support@support)

phone: 1-xxx-xxx-xxxx (toll free)

#### **Outside the U.S.:**

phone: 1-xxx-xxx-xxxx (charges will apply)

\* \* \*

## CHAPTER 10

### Migrating Content to Your New Device

If you already own another Device, this section will help you understand how to transfer your content to your new device. Copies of all your books and recent issues of newspapers and magazines purchased from the Device Store are kept on Crocus.

*Tip:* You can download and share Device books with multiple Devices registered to your Crocus account.

#### 10.1 Transferring Books

To transfer Device books to your new device, follow these steps:

1. Press the Home button.
2. Use the controller to underline "Archived Items" and press the controller to select.
3. Use the controller to underline the book you want to transfer.
4. Move the controller to the right and "add to home" will appear under the title. Press the controller to download the item to your new Device.

You can also transfer books to your device by visiting the Manage Your Device page on Crocus with your computer. From your computer's Web browser, open:

[http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)

Scroll down to the section entitled "Your orders." This lists the Device books you have purchased. Clicking the "+" sign next to a book expands the item's window. On the right side of the window are two boxes, one called "Download to computer" and another with the name of one of your Device devices. (The device name is listed in the upper left corner of the device's Home screen.)

To transfer your purchased Device content using Wireless:

1. Pull down on the box containing the name of one of your Devices and select the Device to which you want to download the content.
2. Select "Go."
3. The content you transferred should now appear in Home.

To transfer your purchased Device content over USB:

1. Select "Download to computer" and the file will appear on your desktop.

2. Connect the USB cable (provided with your Device) to the Device and your computer.
3. Your Device should appear on your computer in the same location you would normally find an external USB drive.
4. Open your Device. You should see a folder entitled "documents."
5. Transfer the downloaded files into the "documents" folder of your Device.
6. Using your computer, unmount your Device from your computer. The content you transferred should now appear in Home.

## 10.2 Transferring Periodical Subscriptions

To transfer a periodical subscription from one Device to another, follow these steps:

1. From your computer's Web browser, open [http://www.\\_\\_\\_\\_\\_.com/manageyourDevice](http://www._____.com/manageyourDevice)
2. Scroll down to the section entitled "Your Active Device subscriptions."
3. Under "Deliver future editions," select the Device to which you'd like the subscription to be transferred and select "Save."
4. Upon the next delivery of your subscription, the periodical will appear in the designated Device.

## 10.3 Transferring Personal Documents

To transfer personal documents you have stored on a Device to another Device, follow these steps:

1. Connect the Device you want to transfer information from to your computer using the USB cable provided for that particular Device.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled "documents." Transfer your personal documents from this folder to the computer's desktop.
4. Using your computer, unmount your Device from your computer.
5. Connect the Device you want to receive the personal documents to your computer using the USB cable provided for that particular Device.
6. Open your Device. Transfer your personal documents from your computer desktop to your Device's "documents" folder.
7. Using your computer, unmount your Device from your computer. The content you transferred should now appear in Home.

## 10.4 Transferring Audiobooks

To transfer audiobooks you have stored on a Device to another Device, follow these steps:

1. Connect the Device you want to transfer an audiobook from, to your computer using the USB cable provided for that particular Device.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled "AudioFile." Transfer this folder to the computer's desktop.
4. Using your computer, unmount your Device from your computer.
5. Connect the Device you want to receive the audiobooks to your computer using the USB cable provided for that particular Device.
6. Open your Device. Transfer the "AudioFile" folder from your computer desktop to your Device. You may receive a message asking if you want to replace the folder already on the Device, select "Replace" or "Yes."
7. Using your computer, unmount your Device from your computer. The content you transferred should now appear in Home.

The first time you play an AudioFile audiobook on your new Device, you will be prompted to register the device with AudioFile. Make sure you register with your AudioFile account name and password, not your Crocus account credentials.

## 10.5 Transferring MP3s

To transfer MP3s you have stored on a Device to another Device, follow these steps:

1. Connect the Device you want to transfer an MP3 from, to your computer using the USB cable provided for that particular Device.
2. Your Device should appear on your computer in the same location you would normally find an external USB drive.
3. Open your Device. You should see a folder entitled "music." Transfer this folder to the computer's desktop.
4. Using your computer, unmount your Device from your computer.
5. Connect the Device you want to receive the music folder to your computer using the USB cable provided for that particular Device.
6. Open your Device. Transfer the "music" folder from your computer desktop to your Device. You may receive a message asking if you want to replace the folder already on the Device, select "Replace" or "Yes."
7. Using your computer, unmount your Device from your computer.

\* \* \*

## APPENDIX

### Safety and Compliance Information

**Use Responsibly.** Read all instructions and safety information before use to avoid injury.

---

**⚠ CAUTION! FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.**

---

### Maintaining Your Device

Do not use your device or its accessories in rain, or near sinks or other wet locations. Take care not to spill any food or liquid in your device. If your device does get wet, unplug all cables, turn off the wireless (go to Menu, and choose Turn Wireless Off) and let the screen revert to the screen saver. Wait for the device to dry completely before sliding the switch to wake again. Do not attempt to dry your device with an external heat source, such as a microwave, oven or hair dryer. Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your device in a bag or briefcase, keep the book cover on to avoid scratches.

Don't expose your device to extreme heat or cold. For example, don't leave it in the trunk of your car in sub-zero or high-heat conditions.

### Servicing Your Device

If your device needs service, consult only \_\_\_\_\_ authorized personnel by contacting us through Customer Support listed at the end of the Tips and Troubleshooting section. Faulty service may void the warranty.

### Battery Safety

The rechargeable battery in your device should be replaced only by an authorized service provider. For more information about batteries, go to: [http://www.\\_\\_\\_\\_\\_](http://www._____)

### Headphone Safety

Listening to audio at high volume for extended periods of time can cause hearing damage. To avoid this problem, consider the tips below:

1. Keep the volume down;
2. Avoid prolonged, continuous listening; and
3. Wear headphones that isolate the wanted audio from background noise.

## Wireless Safety and Compliance

Turn wireless off in areas where wireless use is forbidden or when it may cause interference or danger. Some specific situations are described below. In general, you should not use your device with wireless turned on any place you are not allowed to use a cellular device.

### *Turn Off Wireless When Flying*

To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration regulations require you to have permission from a crew member to use your device's wireless service. If you have your wireless service turned off, you can use your device for reading once a crew member has said it is okay to use electronic devices.

### *Be Careful Around Other Electronic Devices*

Your device generates, uses, and can radiate radio frequency (RF) energy and, if not used in accordance with its instructions, may cause harmful interference to radio communications and electronic equipment. External RF signals may affect improperly installed or inadequately shielded electronic operating systems, entertainment systems and personal medical devices. While most modern electronic equipment is shielded from external RF signals, if in doubt, check with the manufacturer. For personal medical devices (such as pacemakers and hearing aids), consult with your physician or the manufacturer to determine if they are adequately shielded from external RF signals.

### *Steps to Minimize Interference*

If your device does cause harmful interference to radio or television reception (which you can determine by turning your device off and on), you can try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna for the radio or television; increase the separation between the radio or television and your device; connect equipment and receivers to different outlets; or consult the radio or television manufacturer or an experienced radio/TV technician for help.

### *Watch for Signs*

There are some places where RF signals could constitute a hazard, such as health care facilities, and construction sites. If you are not sure, look around for signs indicating that two-way radios or cell phones should be turned off.

### *Exposure to Radio Frequency Energy*

Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). The exposure standard for wireless devices employs a unit of measurement known as the specific absorption rate, or SAR. The SAR limit set by the FCC is 1.6 watts per kilogram (W/kg). Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR

is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base-station antenna, the lower the power output. The highest measured SAR value for this model device as reported to the FCC when held at least 0.39 of an inch (1.0 cm) from the body is 1.25 W/kg. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on the FCC ID for this device. The FCC ID number for this device can be found on the back of the device.

This device may exceed FCC RF exposure guidelines if positioned closer than 0.39 of an inch (1.0 cm) from the body while wireless is on. If you place this device on your lap or against your body while wireless is on, you should place at least 0.39 of an inch (1.0 cm) of non-metallic material between the device and your body or use a \_\_\_\_\_-branded book cover designed for the device to be sure that human exposure to RF energy does not exceed the FCC guidelines.

## **FCC Compliance Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

This device meets the FCC Radio Frequency Emission Guidelines and is certified with the FCC as the FCC ID number found on the back of the device.

## **Compliance Information for Device Users Outside the US**

You can see additional information for users outside the US by clicking [here](#). You can also access the information online at [http://www.\\_\\_\\_\\_\\_](http://www._____)

## **Recycling Device Properly**

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of or recycle the device in accordance with your local laws and regulations. For information about recycling the device, go to:

http://www.\_\_\_\_\_.



## UL Certification Number

The UL Certification Number for this device can be found on the back of the device.

## Product Specifications

**Model Number** —

**Display** —

**Size** —

**Weight** —

**Storage** —

**Audio** —

**Power** —

**Connectivity** —

**Operating temperature** —

**Storage temperature** —

## ONE-YEAR LIMITED WARRANTY

This Warranty is provided by \_\_\_\_\_, \_\_\_\_\_, for the device (the “Device”).

We warrant the Device against defects in materials and workmanship under ordinary consumer use for one year from the date of original retail purchase. During this warranty period, if a defect arises in the Device, and you follow the instructions for returning the Device, we will, at our option and to the extent permitted by law, either (i) repair the Device using either new or refurbished parts, (ii) replace the Device with a new or refurbished Device, or (iii) refund to you all or part of the purchase price of the Device.

This limited warranty applies to any repair, replacement part or replacement Device for the remainder of the original warranty period or for ninety days, whichever period is longer. All replaced parts and Devices for which a refund is given shall become our property. This limited warranty applies only to hardware components of the Device that are not subject to accident, misuse, neglect, fire or other external causes, alterations, repair, or commercial use.

**Instructions.** Please contact Customer Service for specific instructions about how to obtain warranty service for your Device:

email:

phone: within the U.S.:

outside the U.S.:

In general, you will need to deliver your Device in either its original packaging or in equally protective packaging to the address specified by Customer Service. Before you deliver your Device for warranty service, it is your responsibility to back up any data, software, or other materials you may have stored or preserved on your Device. It is possible that such data, software or other materials will be lost or reformatted during service, and we will not be responsible for any such damage or loss.

**Limitations.** TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND AGAINST HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY US IN OUR SOLE DISCRETION. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENCE ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

This limited warranty gives you specific legal rights. You may have additional rights which vary from jurisdiction to jurisdiction and this limited warranty does not affect those rights.

### **Patent Notices**

The device and/or methods used in association with the device may be covered by one or more patents or pending patent applications.

### **Copyright and Trademark Notices**

The device software, the device Quick Start Guide, and the device User's Guide ©

2004 - 2009 \_\_\_\_\_ or its affiliates. All rights reserved.

\_\_\_\_\_ and \_\_\_\_\_ are trademarks of \_\_\_\_\_ or its affiliates.

All other brands, product names, company names, trademarks, and service marks are the properties of their respective owners.

### **Other Language Versions**

You can see a version of the *Device License Agreement and Terms of Use, One-Year Limited Warranty* and other Device information in other languages by clicking [here](#). You can also access the information online at [http://www.\\_\\_\\_\\_\\_.](http://www._____.)

\* \* \*