

Package Contents

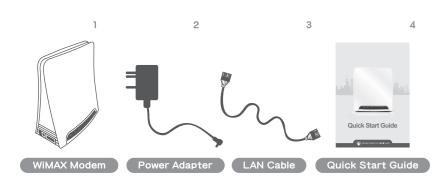

Device Body

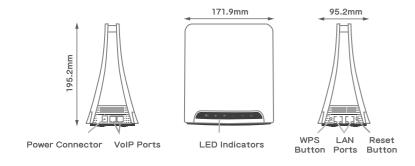


LED Indicators



Set up WiMAX Connection

Power On

Connect your WiMAX CPE to power with the power cord and plug. Then, the LEDs will blink for a few seconds and go off.

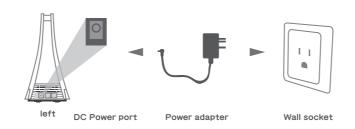

Establish WiMAX Connection

Once powered on, the CPE will automatically connect to your subscribed WiMAX service. The operation to setting up connections takes place in the following orders:



Note: Do not disconnect power during this process.

It may take a few minutes to complete modem initialization.

 
Modem Placement

Adjust the location of the WiMAX CPE for optimized signal reception.

- One green LED: the signal is weak.
- Two green LEDs: the signal is good.
- Three green LEDs: the signal is excellent.

Tip: You can try several spots in the house for an optimal location.


Usually, it is recommended to place the indoor modem next to window, facing the base station.



Network and Connectivity

Use the LAN cable to connect the modem and your laptop/PC.

 Once connected, the Ethernet port LED lights up in green. If the Ethernet port blinks in yellow, it indicates data transmission is in process.




Click on the Internet Browser Now you are able to connect to the Internet.



If you have Wi-Fi devices in your home, you can connect them to the Internet with your WiMAX modem. When the Wi-Fi LED lights up it indicates that Wi-Fi is enabled. When the Wi-Fi LED starts blinking, it indicates that data is being transmitted.

 Switch on Wi-Fi on Your Laptop



Find the Wireless Network

Right-Click on the Wireless Network Connection icon at the bottom right of the screen and select "View Available Wireless Networks".

Enter security password

In the list of available networks, choose the one that matches the SSID Key. Click "Connect". You will be prompted to key in the WEP password. *The SSID key and WEP password are printed at the bottom of your modem.



Click on your Internet browser

Now you will be able to connect to the Internet.



If you want to change the default SSID or WEP key, open any Internet browser and type in the URL address to access the "Graphic User Interface" at http://10.1.1.254, click on the "Networking" to start the further setting.



1 2